

U N I V E R S A L

**RCA**

## Remote



TV



DVD or CD



VCR



CABLE



DBS



AUDIO

**Consolidates  
up to 6 remotes**

**Home Theatre™ Keys**  
take full advantage  
of your Home  
Theatre equipment  
with Surround  
Sound Control

**Compatible with  
today's most  
popular brands.**

remote


**Multi-  
Brand Use**

**See back  
for most  
popular brands.**

**RCU600M**

## Table of Contents

Product Diagram .....	2
Introduction .....	3
Battery Information and Installation.....	3
Key Descriptions .....	3
Primary Key Descriptions for VIDEO Operations.....	4
Secondary Key Descriptions for AUDIO Operations .....	5
Program for TV—Direct Entry Method .....	5
Program for VCR—Direct Entry Method .....	6
Program for DVD/CD Systems—Direct Entry Method.....	6–7
Program for SATELLITE—Direct Entry Method .....	7
Program for CABLE BOX—Direct Entry Method .....	8
Program for AUDIO Systems—Direct Entry Method.....	8–9
Operating AUDIO System Functions .....	9
Code Search Methods .....	10
Manual Code Search.....	10
Auto Code Search .....	10
Code Retrieval .....	11
Sleep Feature .....	11
Programming the Sleep Timer .....	11
Canceling the Sleep Timer .....	11
On-screen Menus .....	12
Accessing a Menu System .....	12
Highlighting and Selecting Menu Items.....	12
Exiting a Menu System.....	12
Troubleshooting.....	13–14
Limited 90-Day Warranty .....	15

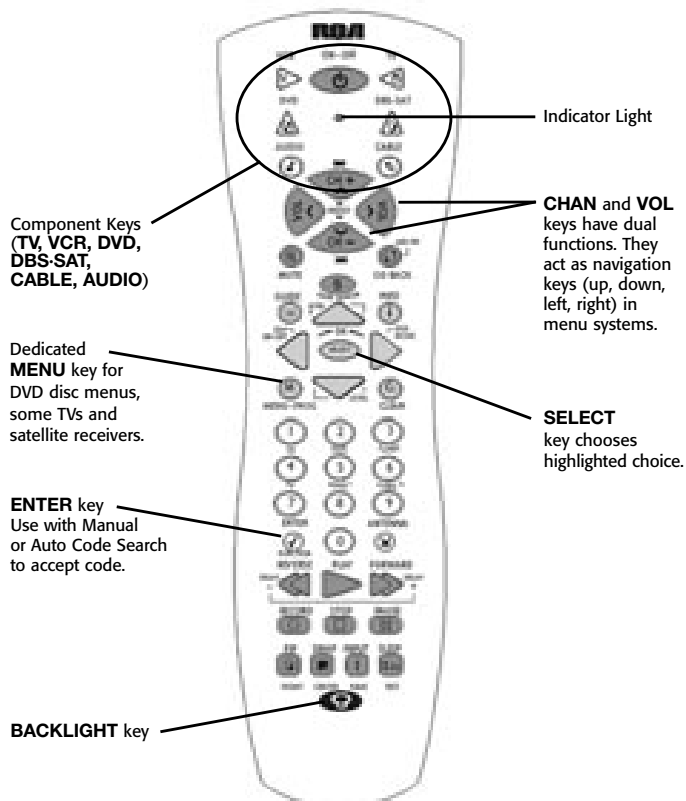




## 6 Component Universal Remote

Congratulations on your purchase of the six-component universal remote by RCA. This universal remote controls up to six electronic components and makes juggling remote controls a thing of the past. You can program this RCA universal remote to operate most models of most brands of infrared, remote-controlled components manufactured after 1990. (See enclosed Code List for a complete list of brands.) The six-component universal remote is easy to use, easy to program and gives you control at the touch of your fingertips.

**Note:** The six-component universal remote is already programmed to operate most RCA, GE and PROSCAN branded TVs, VCRs, DVD players and SATELLITE receivers (DBS). Just press the corresponding component key—**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**—and your six-component universal remote is ready to go!

### Battery Information and Installation


Your universal remote requires two new AA alkaline batteries (batteries may or may not be included, depending on the model). To install the batteries:

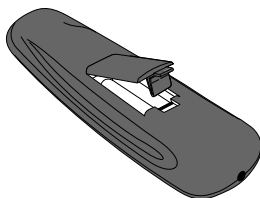

1. Remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.
3. Replace the battery cover.

**Note:** Reprogramming may be required after batteries are replaced.

### Key Descriptions

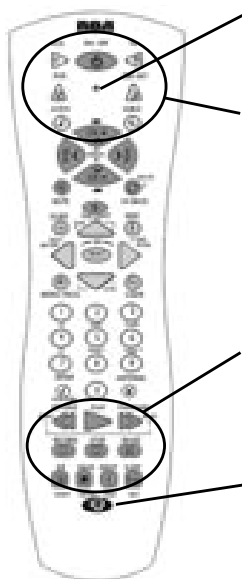

**Indicator Light**—flashes when a valid key is pressed to indicate the remote is working. Status of this light is important when you are programming the remote.

**Component Keys (TV, VCR, DVD, DBS•SAT, CABLE, AUDIO)**—selects the component you want the remote to operate.

For example, after you've programmed the remote to operate your TV, you must press the **TV** key first to put the remote in TV Mode. While in TV Mode, the **CHAN** keys change the channel on the TV, the **VOL** keys adjust the TV's volume, etc.

**Transport Keys—REVERSE, PLAY, FORWARD, STOP, PAUSE, RECORD**—operate the same as your original VCR or DVD remote control, although key labels may vary (**REWIND, FAST FORWARD**).

**Backlight Key (select models only)**—turns backlighting on and off. Backlighting remains on for approximately six seconds after the last keypress to conserve battery life.

## Primary Key Descriptions For VIDEO Operations

### Other Keys (Listed Alphabetically)

Certain keys on the six-component universal remote have dual functions. Primary functions are printed in black. Secondary key functions are printed in blue on the remote and are used for AUDIO operations.

**0-9 (Number Keys):** operate the same as number keys on your original remote and are used to enter component codes when programming the remote control with Direct Entry method.

**ANTENNA:** in TV Mode, switches between the signal coming from a satellite receiver or cable box and an off-air antenna. In VCR Mode, switches between the signal coming from a VCR and a TV.

**CH+ and CH- (CHANNEL UP and CHANNEL DOWN):** goes to the next highest or lowest channel number in the component channel list, respectively, except for DVDs. In DVDs, the **CH+** and **CH-** keys refers to the **NEXT/PREVIOUS** chapter.

**CLEAR:** removes the on-screen display to return to normal viewing.

**CODE SEARCH:** use to program the remote.

**ENTER:** use with Manual or Automatic Code Search method to accept code (See Code Lists enclosed). Also, some brands require you to press the **ENTER** key after you enter a channel number. In some menu systems, you must press the **ENTER** key to select a highlighted item.

**GO BACK:** switches back to previous channel—operates the same as **PREV CH**, **LAST CHANNEL** or **RECALL** keys found on some brands of remote controls.

**GUIDE:** brings up the on-screen TV program guide, if your TV is equipped with that feature.

**INFO:** shows program information, if your component is equipped with this feature. Functions the same as a **DISPLAY** key.

**INPUT:** selects the video inputs of your TV, if equipped with this feature.

**MENU•PROG:** accesses DVD disc menus when playing a DVD disc. Accesses menu systems of some TVs, a few RCA brand VCRs and satellite receivers. (For more information, refer to the On-screen Menus section on page 12).

**MUTE:** lowers the TV's volume to its minimum level.

**NAVIGATION KEYS & SELECT:** used to move through on-screen menus and guides. Use the **NAVIGATION** keys to move the highlighted choice up, down, left or right.

**ON•OFF:** turns component on and off.


**Note:** Some RCA, GE and PROSCAN models require that you press the component key to turn the component on and the **ON•OFF** key to turn the component off.

**PIP:** (Picture-in-Picture) and **SWAP** operate your TV's Picture-in-Picture, if your TV is equipped with this feature.

**RECORD:** use with VCR to record programming. You must press the **RECORD** key twice to start recording.

**SLEEP:** allows you to set a time to turn off your TV automatically.

**VOL:** increases or decreases the TV or AUDIO system's volume level.

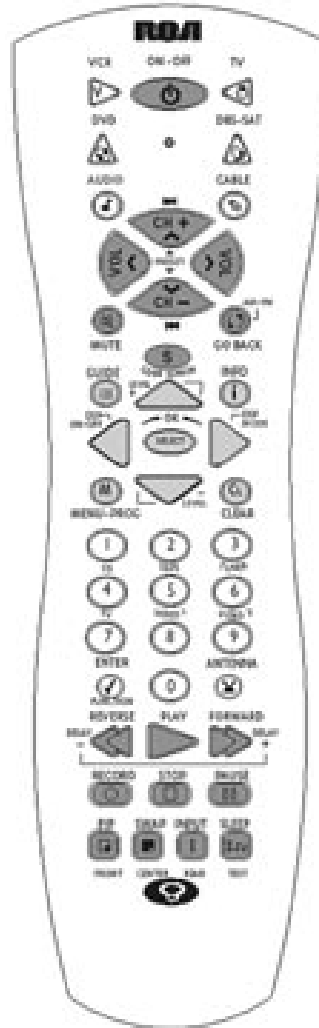

## Secondary Key Descriptions For AUDIO Operations

Certain keys on the six-component universal remote have dual functions. Secondary key functions are printed in blue on the remote and are used for AUDIO operations. Not all functions work for all brands. Experiment with your AUDIO system to determine which functions work with your components. See the enclosed AUDIO Code List to operate your brand of equipment.

### Press the AUDIO key to enable the Audio Mode.

**AM•FM:** allows you to select the AM•FM band on your AUDIO receiver.

**CD, TAPE, TUNER, TV, VIDEO 1, VIDEO 2:** For some AUDIO systems, these keys will select the corresponding component input.

**DELAY, ON, DELAY+:** increases or decreases the delay between the surround and main speakers when the receiver is in the Surround Sound Mode.

**DSP ON•OFF:** enables the receiver's Digital Signal Processing Mode.

**DSP MODE:** When the DSP mode is enabled, pressing this key allows the user to cycle through the various DSP Modes.

**FRONT, CENTER, REAR, TEST:** adjusts the levels of the front, center, and rear speakers used with **LEVEL+ / LEVEL-**. The test tone must be enabled first by pressing the **TEST** key.

**FUNCTION:** selects the different AUDIO input components. The number keys also select the function labeled below the keys when in Audio Mode.

**LEVEL+ / LEVEL-:** sets the level of the speakers during Test Tone Mode.

**PRESET:** cycles through preset channels while the Tuner input on your AUDIO system is active.

## Program for TV—Direct Entry Method

In order for the six-component universal remote to control your TV, you must program it with the TV code that matches your TV. These instructions explain the preferred method of programming the remote—the Direct Entry method. To program your remote to control your TV, follow these steps:

1. Manually turn on the TV.
2. Locate the enclosed TV Code List. Find your brand of TV.  
**Note:** If your brand is not listed, use one of the Code Search methods to program this remote control. (See section on Code Search.)
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **TV** key. The indicator light blinks and then remains lit.
5. Use the number keys to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.  
**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.
6. Aim the remote at your TV and press the **ON•OFF** key. If your TV turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your TV doesn't turn off, repeat steps 3-6 above, entering the next code for your brand.


If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 10.)

**CODE SEARCH** **INDICATOR LIGHT**



**TV**

**(BLINK)**

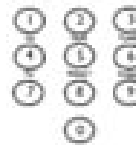

**(OFF)**

**ON•OFF**



**TV CODE**

--	--	--

## Program for VCR—Direct Entry Method

In order for the six-component universal remote to control your VCR, you must program it with the code that matches your VCR. To program your remote to control your VCR, follow these steps:

1. Manually turn on the VCR.
2. Locate the enclosed VCR Code List. Find your brand in the VCR Codes.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 10).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **VCR** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.  
**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.
6. Aim the remote at your VCR. Press the **ON•OFF** key. If your VCR turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your VCR does not turn off, repeat steps 3-6 above, entering the next code for your brand.


If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 10).

### CODE SEARCH INDICATOR LIGHT



### VCR

(BLINK)

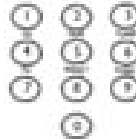

(OFF)

### ON•OFF



VCR CODE		

## Program for DVD/CD Systems—Direct Entry Method

In order for the six-component universal remote to control your DVD or CD systems, you must program it with the code that matches your component. To program your remote to control your DVD/CD system, follow these steps:

1. Manually turn on the DVD/CD system.
2. Locate the enclosed DVD or CD Code List. Find your brand in the DVD or CD Codes.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 10).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **DVD** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

### CODE SEARCH INDICATOR LIGHT



### DVD

(BLINK)



(OFF)

6. Aim the remote at the component.  
Press the **ON•OFF** key. If your DVD/CD system turns off, you have found the correct code.
  7. Enter the code in the box provided on this page for future reference.
  8. If your DVD/CD system does not turn off, repeat steps 3-6 above, entering the next code for your brand.
- If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 10).

**ON•OFF**



DVD OR CD CODE		

## Program for SATELLITE—Direct Entry Method

In order for the six-component universal remote to control your DBS system, you must program it with the code that matches your SATELLITE receiver. To program your remote to control your DBS system, follow these steps:

1. Manually turn on the satellite receiver.
  2. Locate the enclosed SATELLITE Code List. Find your brand in the SATELLITE Codes.
- Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 10).

**CODE SEARCH      INDICATOR LIGHT**



**DBS•SAT      (BLINK)**



3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **DBS•SAT** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.



**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

6. Aim the remote at the SATELLITE receiver. Press the **ON•OFF** key. If your SATELLITE receiver turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your SATELLITE receiver does not turn off, repeat steps 3-6 above, entering the next code for your brand.

If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 10).

**ON•OFF**



DBS (SATELLITE) CODE		

## Program for Cable Box—Direct Entry Method

In order for the six-component universal remote to control your CABLE box, you must program it with the code that matches your CABLE box.

To program your remote to control your CABLE box, follow these steps:

1. Manually turn on the CABLE box.
2. Locate the enclosed CABLE box Code List. Find your brand in the CABLE box Codes.

**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 10).

3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **CABLE** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

6. Aim the remote at the CABLE box. Press the **ON•OFF** key. If your CABLE box turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your CABLE box does not turn off, repeat steps 3-6 above, entering the next code for your brand.


If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 10).

**CODE SEARCH**    **INDICATOR LIGHT**



**CABLE**

**(BLINK)**

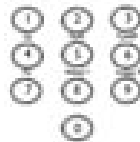

**(OFF)**

**ON•OFF**



**CABLE BOX CODE**

--	--	--

## Program for AUDIO Systems—Direct Entry Method

This remote control will operate many features found in AUDIO systems. To program your remote to control your audio component, follow these steps:

**Note:** CD systems need to be programmed using the DVD component key.

1. Manually turn on the AUDIO component you wish to control.
2. Locate the enclosed AUDIO system Code List. Find your brand in the AUDIO Codes.

**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 10).

3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **AUDIO** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.


**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

**CODE SEARCH**    **INDICATOR LIGHT**



**AUDIO**

**(BLINK)**

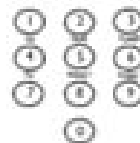

**(OFF)**



6. Aim the remote at the AUDIO component. Press the **ON•OFF** key. If your AUDIO component turns off, you have found the correct code. If your AUDIO component does not turn off, repeat steps 3-6 above, entering the next code for your brand.
7. With your AUDIO component on, press the **VOL+ (VOLUME UP)** key. If the AUDIO component responds, no further programming is required.
8. Enter the code in the box provided on this page for future reference.
9. If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 10).

**ON•OFF**



**VOL+**



AUDIO SYSTEM CODE		

## Operating AUDIO System Functions

The following is a list of instructions for operating Audio functions. Not all functions work for all brands. Experiment with your AUDIO system to determine which functions work with your components. See the enclosed AUDIO Code List to operate your brand of equipment.

### TURNING ON THE RECEIVER OR MINI-SYSTEM

Point the remote control at the receiver and press the **AUDIO** key and then the **ON•OFF** key to turn the system on.

### SELECTING A COMPONENT INPUT

Component inputs such as a DVD player or VCR may be selected depending on the features of your receiver or mini-system. Input selection may be made either by pressing the labeled number key or pressing the **FUNCTION** key to toggle through the inputs available on your system.

**Note:** You may need to experiment with your system since manufacturers' products do not all work in the same manner.

### USING THE NUMBER KEYS TO CHANGE AUDIO INPUTS

To select a component, press the number key (1-6) that corresponds with the component you want to operate (**CD, TAPE, TUNER, TV, VIDEO 1, or VIDEO 2**).

### USING THE FUNCTION KEY TO CHANGE AUDIO INPUTS

To select a component, press the **FUNCTION** key until the input you want to operate appears on your system.

### OPERATING THE AM-FM TUNER

1. Press the **AUDIO** key and then the **ON•OFF** key to turn the system on.
2. Press the **TUNER (3)** key.
3. Press the **AM•FM** key to toggle between AM and FM.
4. Use the Preset (**CH+/CH-**) keys to move up and down channel presets.

### OPERATING A HOME THEATER SURROUND SOUND SYSTEM

1. Turn the TV on.
2. Press the **AUDIO** key and then the **ON•OFF** key to turn the system on.
3. Select the AUDIO input either by using the labeled number keys or the **FUNCTION** key.
4. Press the **VOL+** or **VOL-** keys to control volume.

**Note:** The **VOLUME** keys may operate both TV and receiver volume at the same time. If this presents a problem, it may be resolved by entering the TV menu and disabling the TV speakers.

### CONTROLLING THE SURROUND SOUND FEATURE

1. Press the **DELAY+** or **DELAY-** key to achieve the desired delay effect.
2. Press the **DSP ON•OFF** key to turn DSP (Digital Signal Processing) on or off.
3. Press the **DSP MODE** key until the desired effect is achieved.
4. Press the **TEST** key to listen to speaker levels.
5. Press **FRONT, CENTER, or REAR** keys to select speakers.
6. Press the **LEVEL+** or **LEVEL-** keys to adjust the speaker levels.

## Code Search Methods

If your component's brand is not listed in the Code List or you have tried all the codes for your brand and the remote does not operate your component, use one of the Code Search methods below—Manual Code Search or Auto Code Search. Both Code Search methods search all of the codes since your component's code may be listed under another brand in the Code List.


**Note:** The Code Search method may take a long time because the remote searches all of the codes in its memory for the code that operates your component. Therefore, if your brand is listed in the Code List, use the Direct Entry method described on pages 5-9.

### Manual Code Search

1. Manually turn on the component you want the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
3. Press and release the component key that corresponds to the component you want the remote to operate (**TV, VCR, DVD, DBS-SAT, CABLE, AUDIO**). The indicator light blinks once and then remains lit.
4. Aim the remote at the component. Press the **ON•OFF** key continuously until the component turns off.


**Important:** Because there are so many codes, you may have to press the **ON•OFF** key many times—possibly up to 200 times.

5. When the component turns off, press the **ENTER** key to store the code.
6. Use the Code Retrieval section on the next page to identify the code for your component for future reference.

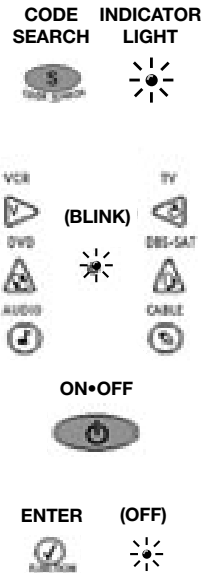

### Auto Code Search

1. Turn on the component you want the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
3. Press and release the component key that corresponds to the component you want the remote to operate (**TV, VCR, DVD, DBS-SAT, CABLE, AUDIO**). The indicator light blinks once and remains lit.
4. Aim the remote at the component and press the **ON•OFF** key once. The remote automatically sends every code for the specified component one at a time, with the three-second delay between each code. Keep the remote aimed at the component throughout this process.
5. As soon as the component turns off, you must press the **ENTER** key immediately so the remote stores the correct code. If you do not press the **ENTER** key within three seconds, the remote sends the next code in the list, and you will have to start over from step 2.
6. Use Code Retrieval section on the next page to identify the code for your component for future reference.

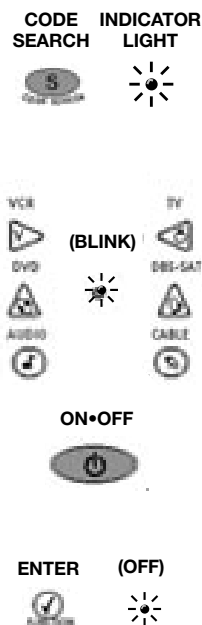


## Code Retrieval

If you used one of the Code Search methods to program your remote, follow the steps below to find out which code is compatible with your component. Finding the actual code and writing it down will save you time if you ever need to program the remote again (e.g., if programming is lost when you change the batteries).

1. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
2. Press and release the component key that matches the component's code you are retrieving (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**). The indicator light blinks once and then remains lit.
3. Press and release the **CODE SEARCH** key. The indicator light turns off.
4. Starting with 0 on the keypad, press the number keys in order (0-9) until the indicator light blinks.
5. The number that causes the indicator light to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers of the code.
7. Refer to the code box to write down the code for your component within the Direct Entry section (page 5-9) for the component just programmed.


### CODE SEARCH INDICATOR LIGHT

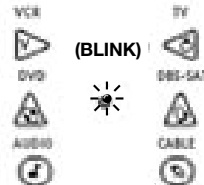

### CODE SEARCH



(OFF)

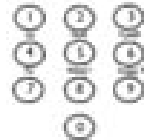


## Sleep Feature

The Sleep feature turns off your TV automatically at a duration you choose from 1 to 99 minutes. To program your remote to control the Sleep feature, follow these steps:

### Programming the Sleep Timer

1. Press and hold the **SLEEP** key until the indicator light illuminates. Release the **SLEEP** key.
2. Enter time in minutes using the numerical keypad. The indicator light should turn off. (Minute 1 thru 9: press 0 before the actual number. Maximum: 99 minutes).
3. Leave remote aimed at television. (**IMPORTANT:** The Sleep feature will not work unless remote is left aimed at television.)

### SLEEP INDICATOR LIGHT

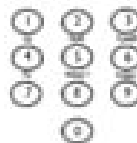

### Canceling the Sleep Timer

The Sleep Timer program can be cancelled and reset to zero by either of the following:

1. Press and hold the **SLEEP** key until the indicator light blinks.
- OR
2. Press the **ON•OFF** key, turning the TV off.

### SLEEP



(BLINK)

### ON•OFF



## On-screen Menus

This remote cannot access every menu system of all models and brands of consumer electronics components. However, if you've successfully programmed the **DVD•AUX** key to operate a DVD player, you can access DVD disc menus with the **MENU** key.

The **MENU** key will access TV menu systems for most RCA, GE and PROSCAN TVs, as well as some other popular brands. In addition, some RCA VCR menus are supported by this remote's **MENU** key. This remote also supports select SATELLITE receiver menus.


If this remote's **MENU** key doesn't access the menu system for your component, you'll need to use the original remote to change menu settings.

**Note:** This remote's **MENU** key doesn't support CABLE box menu systems and some VCR menu systems.

## Accessing a Menu System

To access a menu system, follow these steps:

1. Make sure your components are turned on and your TV is set to the component's input.
2. Press the component key on the remote (**TV**, **DVD**, **DBS•SAT**) for the desired menu screen.
3. Press the **MENU** key.
4. The menu for the component you have chosen should be visible on your television.

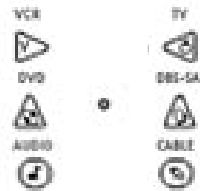

**MENU•PROG**




## Highlighting and Selecting Menu Items

To navigate on-screen menus, use the **ARROW** keys.

**Note:** For RCA, GE or ProScan TVs, press the **MENU** key to select the highlighted item. If menu items have numbers next to them, you can use the number keys to select an item. Additionally, the **SELECT** key can be used to select menu choices.

- For users of RCA, GE and PROSCAN DBS products, older DBS models require that the **INFO** or **MENU** key on this remote be used to make program selections. Use the **SELECT** key for making program selections on newer RCA, GE and PROSCAN DBS models.
- For Sony products, pressing the **ENTER** key while in Menu Mode returns you to the previous menu.
- In some menu systems, you must press the **ENTER** key to select the highlighted item.
- All functions in competitive models and brands of products may not be fully supported.
- Because of the wide variety of menu formats, some experimenting may be required.

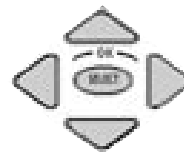

**MENU•PROG**



**SELECT**



**ENTER**



This is an example of a DVD disc on-screen menu. English is the menu choice highlighted. Using this remote control, you would press the **SELECT** key to choose English.

To highlight another language, press the **DOWN ARROW** key. (In the example above, the highlight would move to Español.)

**CLEAR**



## Troubleshooting

### Problem: The remote can't be programmed to operate your component.

- You may be too far away from the component or at a wrong angle. This remote uses IR (infrared) technology to communicate with components. The remote sends the code and the component's IR sensor reads the code.  
Therefore, there must be an unobstructed path between the remote and the IR sensor on the component. Move closer and make sure you point the remote at the component (VCR when programming the **VCR** key; DVD when programming the **DVD** key; TV when programming the **TV** key; CABLE box when programming the **CABLE** key; SATELLITE receiver when programming the **DBS•SAT** key).
- If you've entered all of the codes for your brand that are in the enclosed Code Lists and followed the instructions, try one of the Code Search methods (See Code Search on page 10).
- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) so the remote knows which component you want to operate.
- To program the six-component universal remote to operate a combination unit (TV/VCR or TV/DVD), first try the VCR or DVD codes for your brand. Some units, however, require that you program both the **TV** key (using the TV codes) and the **VCR** or **DVD** key (using the VCR or DVD codes) for full operation.
- To program the six-component universal remote to operate a combination unit (VCR/DVD), program the **VCR** key using the VCR codes and then program the **DVD** key using the DVD codes.

### Problem: The indicator light does not light when you press a key.

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) so the remote knows which component you want to operate.
- You may have pressed an invalid key for the mode the remote is in (e.g., the **RECORD** key only works in VCR Mode).
- Make sure the batteries are properly installed. (See Battery Installation on page 3).
- Replace the batteries with two new AA batteries. Reprogramming may be required.

### Problem: The remote does not operate your component.

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) so the remote knows which component you want to operate.
- Remove any obstacles between the remote and the component. Make sure to aim the remote at the IR sensor on the component.
- Make sure the batteries are properly installed. (See Battery Installation on page 3).
- Replace the batteries with two new AA batteries. Reprogramming may be required.
- Reset the remote. Remove the batteries. Then press and hold the number 1 key on the remote for several seconds to reset the microprocessor inside the remote. Release the number 1 key, reinstall the batteries, and try the remote again. Reprogramming will be required.

### Problem: The remote is not performing commands properly.

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) so the remote knows which component you want to operate.
- Make sure the component is "ready" (e.g., DVD player has disc loaded; VCR has tape loaded, etc.).
- You may have pressed an invalid key for the mode the remote is in (e.g., the **RECORD** key only works in VCR Mode).
- If you are trying to turn on an RCA, GE or PROSCAN component, press the component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) instead of the **ON•OFF** key.
- If operating a VCR to record, you must press the **RECORD** key twice.
- If you're trying to change channels, try pressing the **ENTER** key after entering the channel number as this is a requirement of certain models and brands.
- There is a possibility that a programmed code may only be able to control some of your component features (e.g., only turns a component on and off). Follow the steps provided for programming the remote (See Programming sections on pages 5-9). If the component can be turned on and off, make sure you press the **CH+/CH-** key to see if the component responds. If not, try the next code from the list.

## Troubleshooting (continued)

### **Problem: The VCR won't record.**

 
- As a safety feature, you must press the **RECORD** key twice to begin recording.
- Make sure the tape is properly loaded in the VCR.
- Make sure the tape is not write-protected. If the safety tab is removed, the tape is write-protected and you cannot record onto that tape.

### **Problem: The remote will not change channels.**


- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) so the remote knows which component you want to operate.
- Press the **ENTER** key after you enter a channel number.

### **Problem: The component's menu doesn't appear on the TV screen.**

- The TV must be tuned to the Video Input that matches the manner in which you connected the component to the TV.  
For example, if you connected your DVD player to your TV by connecting audio/video cables (usually color-coded yellow, red and white) to the TV's Input 1 jack, you must tune the TV to its Video 1 Input channel. Remember, different manufacturers label these jacks differently. Consult the instruction manual that came with the TV for more information.
- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**) so the remote knows which component you want to operate.
- Menu access isn't supported for all brands. If that's the case, you need to use your original remote control to access menu functions for these components.





**If you have further questions, please visit [www.rca.com](http://www.rca.com).**

 

## Limited 90-Day Warranty

THOMSON INC. warrants that, for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage paid to the Product Exchange Center address for prompt, no-charge replacement with a current equivalent. This replacement is THOMSON INC.'s sole obligation under this warranty. THOMSON INC. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

  Product Exchange Center  
11721 Alameda Avenue  
Socorro, TX 79927



# Consolidate Six Remote Controls Into One!



## Home Theatre™ Keys

- Take full advantage of your Home Theatre equipment with Surround Sound Control

Your RCA Universal Remote is compatible with most brands (of infrared remote controlled components manufactured after 1990). Below is a list showing some of those brands. Check the enclosed Code List for a complete listing along with their corresponding popular setup codes for quick and easy reference. **The remote already operates most RCA, GE and PROSCAN products without any programming!**

TV	VCR	DVD	CD	SATELLITE	CABLE	AUDIO
Apex	Allegro	Aiwa	Aiwa	Alphastar	ABC	Aiwa
Audiovox	Broksonic	Allegro	ADC	Bell	Antronix	Denon
Broksonic	Canon	Apex	ADO	ExpressVu	Archer	Harman
Citizen	Curtis	Broksonic	Akai	Chaparral	Cableview	Kardon
Curtis	Mathes	Daewoo	Denon	Dish	Century	JBL
Mathes	Daewoo	Emerson	Dynatech	Network	Citizen	JVC
Daewoo	Emerson	Funai	Emerson	Drake	Contec	Kenwood
Emerson	<b>GE</b>	<b>GE</b>	Fisher	Echostar	Garrard	Koss
<b>GE</b>	Go Video	Go Video	<b>GE</b>	General	<b>GE</b>	Onkyo
Hisense	Hitachi	Hitachi	Hitachi	Instruments	Gemini	Optimus
Hitachi	JC Penney	JBL	Inkel	GE	General	Panasonic
JC Penney	JVC	JVC	JVC	Hitachi	Instruments	Philips
JVC	Kenwood	Kenwood	Luxman	Hughes	Hitachi	Pioneer
Kenwood	LG	Konka	NEC	Network	Jasco	Sherwood
KLH	(Goldstar)	Koss	Marantz	Systems	Jerrold	Technics
LG(Goldstar)	LXI	Lasonic	MCS	JVC	Magnavox	Venturer
LXI	Magnavox	Magnavox	Mitsubishi	Magnavox	Motorola	<b>RCA</b>
Magnavox	Matsushita	Memorex	Nakamichi	Motorola	NEC	Sony
Mitsubishi	Mitsubishi	Mintek	Onkyo	Panasonic	Panasonic	Yamaha
Montgomery Ward	Montgomery Ward	Mitsubishi	Optimus	Philips	Philips	
NEC	NEC	NAD	Panasonic	Pioneer	Pioneer	
Orion	Panasonic	Onkyo	<b>RCA</b>	<b>PROSCAN</b>	<b>PROSCAN</b>	
Panasonic	Philco	Oritron	Sanyo	<b>RCA</b>	<b>RCA</b>	
Philco	Philips	Panasonic	Sears	Realistic	Realistic	
Philips	Pioneer	Philips	Sherwood	Sony	Regency	
Pioneer	<b>PROSCAN</b>	Pioneer	Sony	Star Choice	Samsung	
Prima	Quasar	<b>PROSCAN</b>	Teac	Toshiba	Scientific	
<b>PROSCAN</b>	RadioShack/Realistic	Qwestar	Technics	Uniden	Atlanta	
Quasar	<b>RCA</b>	<b>RCA</b>	Toshiba		Standard	
RadioShack/Realistic	Samsung	Samsung	Yamaha		Component	
<b>RCA</b>	Sanyo	Sansui			Starcom	
Sampo	Sears	Sanyo			Stargate	
Samsung	Sharp	Sharp			Starquest	
Sanyo	Sony	Sony			Tocom	
Sears	Sylvania	Sylvania			TV86	
Sharp	Tandy	Venturer			United	
Sony	Teknika	Xbox ®*			Cable	
Sylvania	Toshiba	Yamaha			Universal	
Tandy	Victor	Zenith			View Star	
Teknika	Wards				Zenith	
Toshiba	Yamaha					
Victor	Zenith					
Wards						
Yamaha						
Zenith						

\*Requires Xbox ® DVD playback kit.



No setup required for most models of these brands

**Requires two AA batteries (sold separately)**

©2004 THOMSON INC.  
10330 North Meridian Street  
Indianapolis IN 46290  
Made In Indonesia

**RCU600M NA IB REV A**

Trademark(s) ®Registered Marca(s) Registrada(s)  
[www.rca.com](http://www.rca.com)