 
 


**A**

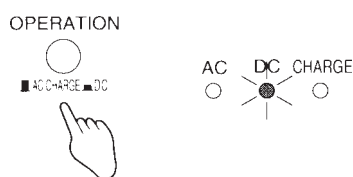

 
**B**

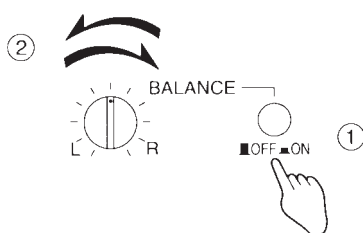


**C**



**D**

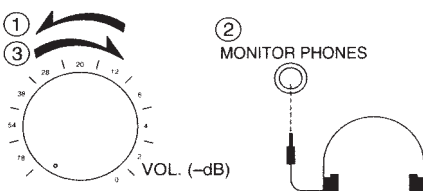

**E**

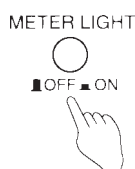 

## Switching between AC and DC operation **A**

AC operates the unit on regular household power, DC operates the unit by the battery.

### To change to DC

Press [OPERATION] to select **DC**.  
DC indicator illuminates.

### To change to AC

Press [OPERATION] to select **AC/CHARGE**.  
AC indicator illuminates.

Ensure **AC/CHARGE** is selected if the battery is not installed.

Sound is interrupted for about 3 seconds when the power source is changed.

A fully charged battery can operate the unit for a maximum of 6 hours.

The unit automatically switches to AC when battery voltage falls below about 10.5 V.

## To adjust the sound balance **B**

- 1 Press [BALANCE] button to select **ON**.
- 2 Turn [BALANCE] control to adjust the left/right sound balance.

**When balance adjustments are unneeded**  
Press [BALANCE] button to select **OFF**.

## To listen in the monaural mode **C**

Press [MODE] to select **MONO**.

The left and right sounds will be mixed, and the same sounds will be heard from both speakers.

Leave [MODE] in the **STEREO** position for normal operation.

## To listen through headphones **D**

- 1 Set the volume control [VOL. (-dB)] to the "∞" position.
- 2 Connect the headphones.  
Plug type: 6.3 mm stereo
- 3 Adjust the volume.

### Note

Avoid listening for prolonged periods of time to prevent hearing damage.

## To turn on the meter light **E**

Press [METER LIGHT].

Press again to turn off.