

TV SERVICE MODES IN GENERAL SERVICE MODE ENTRY FOR CHINESE TV

Because the Chinese are multibrand TVs entering service mode may vary or be common among these brands as JWIN, OLIMPO, Kenix, Kalley, SILVER, ETECH, SANYO, APEX, RCA, Symply, parquer, PILOT, ECOS, SIGMA and others.

METHOD 1

Click on the TV VOL-key until the volume is turned down.

1. Press the MENU button on the remote control and select PICTURE

2. Press the sequence 6 5 6 8 to enter the FACTORY mode

3. Pressing Sleep. Go to the next screen B / W BALANCE

FACTORY

4. This menu adjusts white balance and black or color temperature, using the CH + and CH-, you can choose the item and the VOL + and VOL-data can be modified.

5. To exit the service mode and save the settings by using the REVIEW button or the MENU key.

6. To change to B / W BALANCE ADJUST MENU OR, press on the remote control SLEEP key.

Moving to the next screen:

7. With this menu, you can make adjustments to geometry using the CH + and CH-, you can choose the item and the VOL + and VOL-data can be modified.

8. To exit this menu, press MUTE and so goes the ADJUST MENU ADJUST menu or one that allows us to adjust AGC, RF levels and color difference angles.

9. To exit this menu, press MUTE and thus passes from the ADJUST ADJUST MENU 1 MENU 2, which allows adjustment of the horizontal width and position of the characters.

METHOD 2

Service mode for TV Kenix and Olympus with the remote.

It uses a service control or failing to uncover the original remote at the bottom there is a contact for a hidden key with this key enters the service mode.

Pressing the key contact enters service once FACTORY mode.

By pressing this key moves to the next submenu SET.

Pressing this key again passed to SETUP submenu.

□ , P ◀ To navigate the submenus are used in the P

◀ , + ▶ And to vary the sub keys are used -

To record press the service button and then the SETUP mode.

Off with the remote control.

METHOD 3

1. Turn on the TV

2. DSP MEN U ◀ ◀ ◀ MUTE With remote control, run the following sequence SLEEP

3. The screen should display the service menu (Test mode).

4. With the CH (+) or CH (-) on the remote control parameters are changed

5. With the VOL (+) or VOL (-) on the remote control parameters are modified.

6. To exit the service menu or press SLEEP DSP.

Method 4

Method for entering the operating modes of micro TMPA8823 TV (For TV 14 "to 21") TMPA8859 (for TV 25 "to 34")

Note: The letter "S" means factory modes and can only be some tweaking. With letter "D" can adjust all parameters.

1. Follow these steps to enter the mode "S".
2. Press the VOL (-) on the TV panel and without releasing press DISPLAY on the remote control and so enters the service mode "S".
3.) 60 VP choice this option must be set to "00". ⌘) or CH (⌘ To enter service mode "D" after entering the service mode "S" select with CH (
4. Then press the VOL (-) on the TV panel and without releasing press DISPLAY on the remote control and so enters the service mode "D".
5. To review the current different channels without leaving the service mode, press the "DISPLAY", the disappearance of service parameters can change and change user settings.

Method 5

Operating mode for some models Kenix, Olympus and JWIN

1. Press the MENU button on the remote control then the sequence 6862 or 6483.
2.) Can be varied items. ⌘) or CH (⌘ With the CH (
3.) Can vary the parameters. ⌘) or VOL (⌘ With the VOL (
4. Press DISPLAY or MENU to change the menu.
5. Press DISPLAY or MENU several times and after the last drop out of service.
6. Off with the remote control to record.

Method 6

For TVs PREMIER

1. MUTE. ⌘ ⌘ Q VIEW on the remote Press the following sequence: MENU
2. Item To change press PROG (+) or PROG (-).
3. To change the parameter value with the VOL (+) or VOL key (-).
4. To change all menu keys.
5. To exit and save, press MENU.

Method 7

For TVs JWIN

1. Press VOL (-) to achieve minimum volume and hold VOL (-)
2. Press DISPLAY or MENU exits the menu and service.
3. In case you do not get away with DISPLAY or MENU press each of the keys and hold VOL (-) until you exit the service menu.
4. Item To change press PROG (+) or PROG (-).
5. To change the parameter value with the VOL (+) or VOL key (-).
6. To exit, press MENU and turn off the TV with the remote control.

Some TV JWIN TV work like Olympus and Kenix and they work with a hidden button on the remote control to see Method 2.

Method 8

For TVs RCA Chinese

1. Turn on the TV 20 minutes before making adjustments.
2. With lower the volume control until "00".
3. With the remote press MUTE MUTE to display on the screen.
4. Press and hold MUTE on the remote control.
5. Simultaneously press MENU on the TV's front panel and remain that way for 3 seconds until you enter the service mode.
6.) (Item ^ To change use keys (
7.) (To change the parameter value using the keys (
8. To complete and record press the power key on the remote control or the front panel.

Method 9

For other models Chinos RCA TVs

1. Follow these steps to enter the mode "S".
2. Press the VOL (-) on the TV panel and without releasing press DISPLAY on the remote control and so enters the service mode "S".
3. To enter the mode "D" after entering the service mode "S" key to select OK.
4.) To select menu 1 to 22. ^) (Press the (
5. Press OK to enter the menu.
6.) To select the parameter. ^) (Press the (
7.) To adjust the parameter ^) (^ Press the (
8. Then press the VOL (-) on the TV panel and without releasing press DISPLAY on the remote control and so enters the service mode "D". To leave the factory.

Method 10

For TVs RCA Chinese

1. To enter the service mode disassemble the remote and find the key hidden under the plastic membrane as shown in Fig.
2. Press this button and enters the service mode.
3.) Can be varied items. ^) or CH (^ With the CH (
4.) Can vary the parameters. ^) or VOL (^ With the VOL (
5. To exit and save your settings and turn the TV off, reconnect to verify the adjusted data.

Method 11

To enter Test Mode

In some Chinese TV RCA and other brands are instructed in Test Mode setting (when the TV set is the optimal state factory) should not be adjusted. Except when you change the screen, or an integrated memory. To enter Test Mode follows:

1. Tune to a channel.
2. Press the following sequence SLEEP, MUTE, DSP, MENU.
3. The display shows TEST MODE MENU.
4. Follow the menu instructions.
5. Press SLEEP DSP or to exit the Test Mode.

Method 12

5 different ways to multi Chinese TV

- a. Place minimum volume to 0 then press the number 3
- b. Press MENU then the sequence 1, 9, 7, 6.
- c. Then press MENU Sequence 6, 4, 8, 3.
- d. Place minimum volume to 0, then 3 times DISPLAY and MUTE.
- e. With the TV on V-press in front of the TV and DISPLAY on the remote control.
- f. To remove the lock when the TV is locked press the remote control DISP key while holding it down for a few seconds, and is unlocked.

Method 13

Chinese TV chassis 3Y03

The following brands: Fisher PC-R20R2, ETV-2091 Emerson, BLUESKY, ETV21F1 Emerson, Emerson EKV29F1, other brands NAOKY, MITSUI, COLUMBIA, AUDIOVOX.

1. Turn on the TV wait 20 minutes.
2. Press the MENU key.
3. On the remote press Q.VIEW. In other models called RECALL.
4. Press MUTE.
5. Once in the service mode, press TIMER on the remote control changes the page.
6. With the PROG + and PROG-parameter changes.
7. With the VOL + and VOL-fit parameters.
8. Press MENU to exit Service Mode and record the new parameters.

Method 14

For TV brand JWIN

AGC settings, FOCUS and sensitivity.

1. Press VOL-on the front of the TV until minimum volume.
2. Press the MENU button on the remote to get on screen menu display (PICTURE).
3. Press the sequence 6, 5, 6, 8 with the remote key.
4. Thus enters the service mode (FACTORY).
5. Pressing the SLEEP mode change: FACTORY, B / W BALANCE ADJUST.
6. In each of these modes by pressing P + and P-selected items.
7. Pressed the VOL + and VOL-items are adjusted.
8. Being in the ADJUST mode Press the mute button to select the menu.
9. If you are in the ADJUST MENU 2, Go to OPTION SELECT item if in Option 1 can enter the menu later.
10. Select Menu 1 and find the item 0 to check the setting that has the AGC (0 to 63).
11. To increase the sensitivity adjust 1 o2 which is a high sensitivity.
12. Select the appropriate value until the mist disappears (recommended values are 21, 23 or 25).
13. To exit the Service Mode press REVIEW.

Method 15

For TV Kalley, Sigma and Olympus

1. On the remote press both keys RECALL VOLUME -.
2. FACTORY appears on the screen.
3. To enter Mode B / W or White Balance again pressing RECALL keys and VOLUME -.
4. To make adjustments in color and geometry again pressing RECALL keys and VOLUME -.
5. To return to the original position of the TV press RETURN on the remote control and turn off the TV with the remote control.
6. Balance Settings of Black and White (B / W).
7. While in Online Mode can adjust RGB polarization, thus:
 - a. S-BRI, with the (0) key on the remote control and it decreases with the key (1) it increases.
 - b. R-BIAS, with key (2) low, and the (3) values rise.
 - c. G-BIAS, with the key (4) low and the (5) values rise.
 - d. B.BIAS, with the key (6) and the low (7) values rise.
 - e. After adjusting the polarization RGB press MUTE on the remote control to return the Mode B / W ADJUST.
8. Geometry settings in the ADJUST mode can be adjusted for height, image position, the status of the sub image, character position (OSD), AGC status, etc. With the CH-and CH + item is selected and the VOL + and VOL-adjusts the value of the item.
9. SETUP mode setting options can be selected AV / TV, OSD, POWER ON / OFF. With the CH-and CH + item is selected and the VOL + and VOL-adjusts the value of the item.