




CAMSHAFT
POSITION 11 (CMP11)
SENSOR

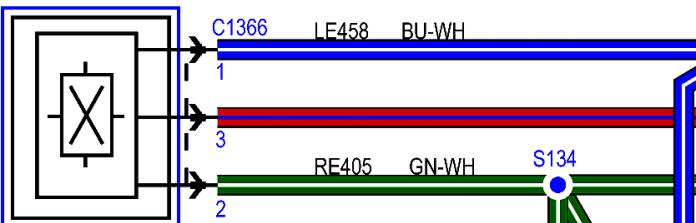


CAMSHAFT
POSITION 12 (CMP12)
SENSOR

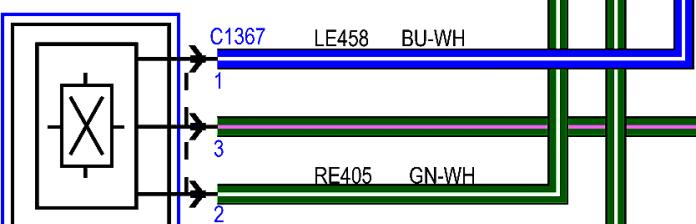


CRANKSHAFT
POSITION (CKP)
SENSOR

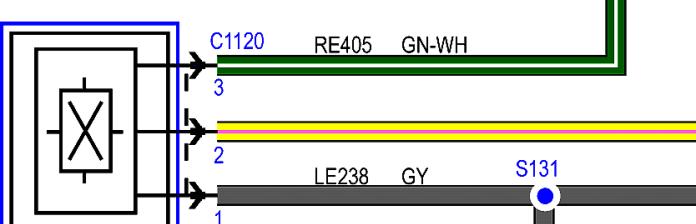




FUEL RAIL
PRESSURE (FRP)
SENSOR

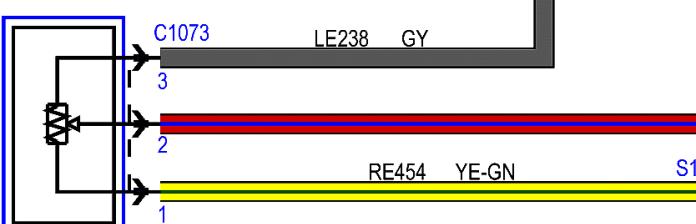



POWERTRAIN
CONTROL
MODULE (PCM)

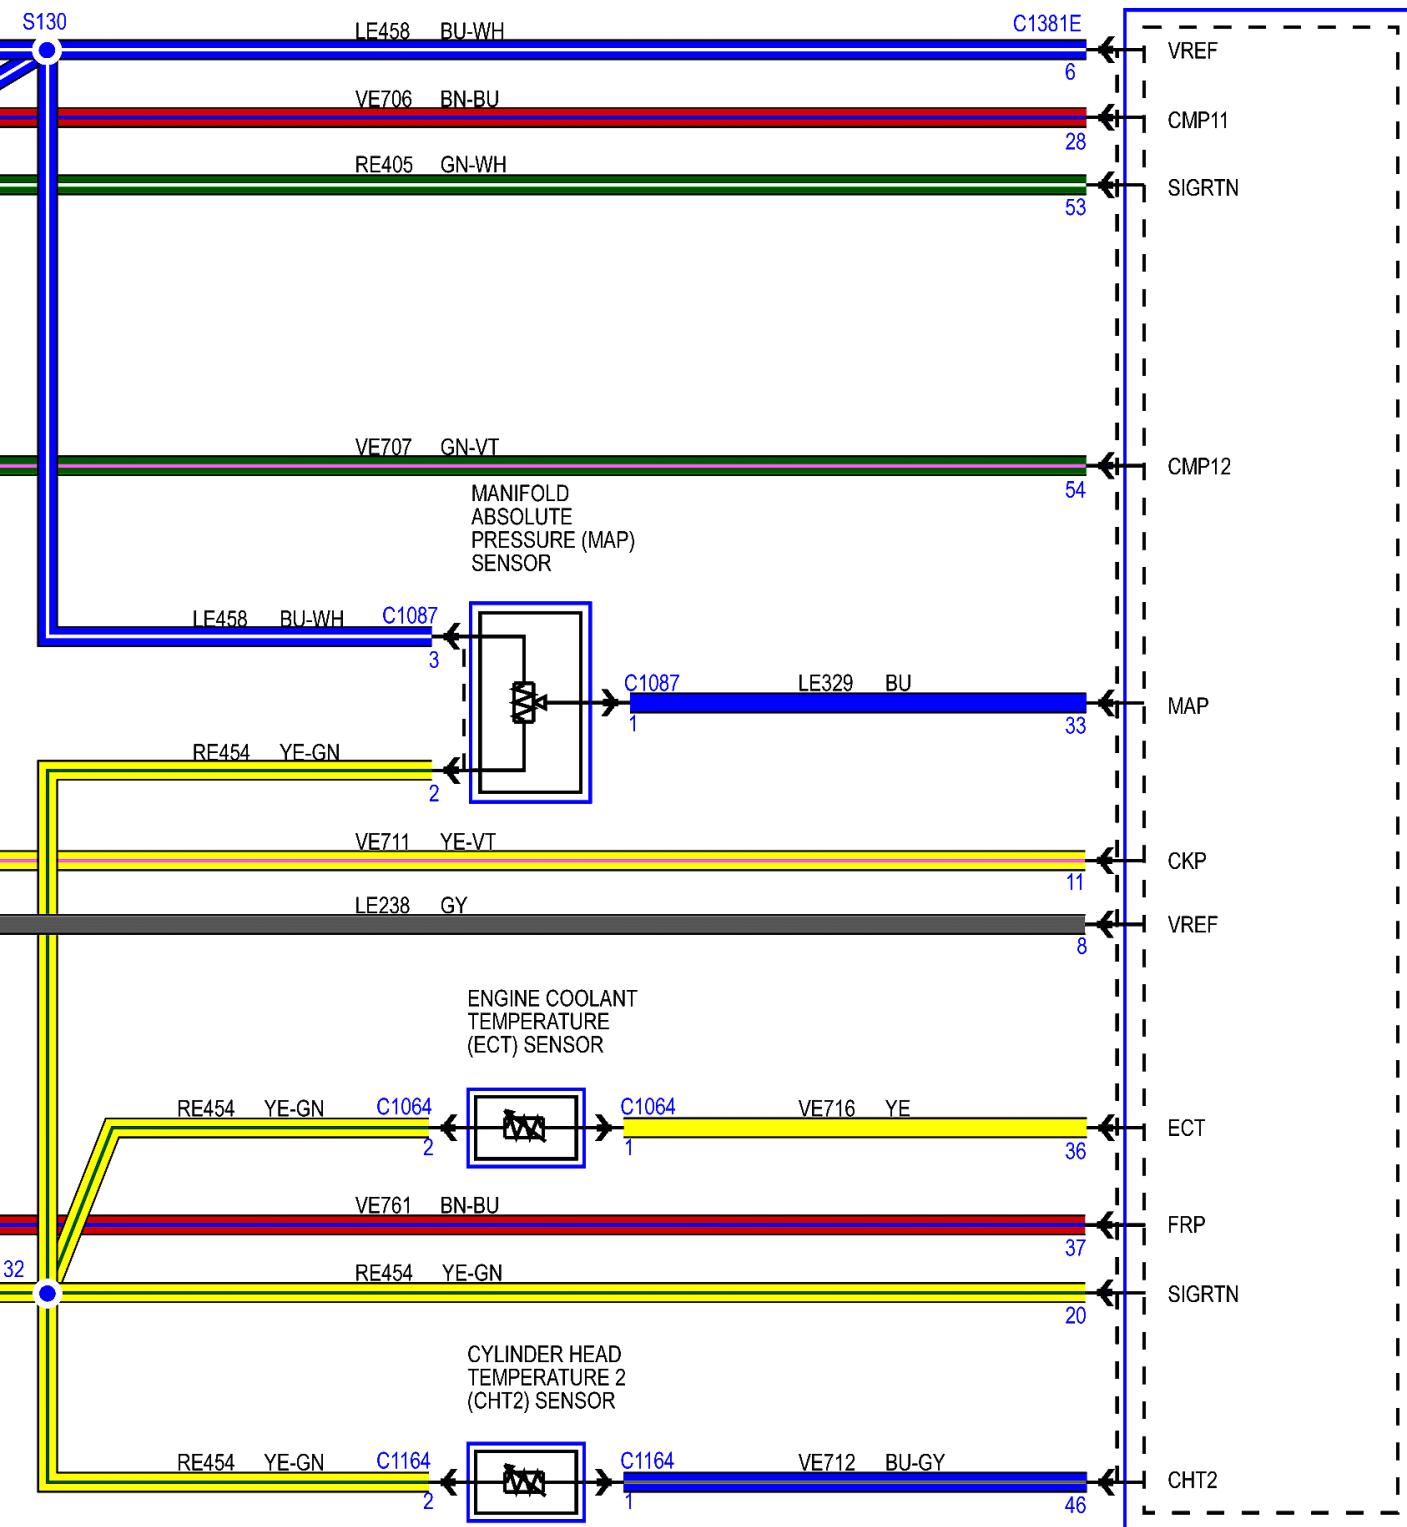

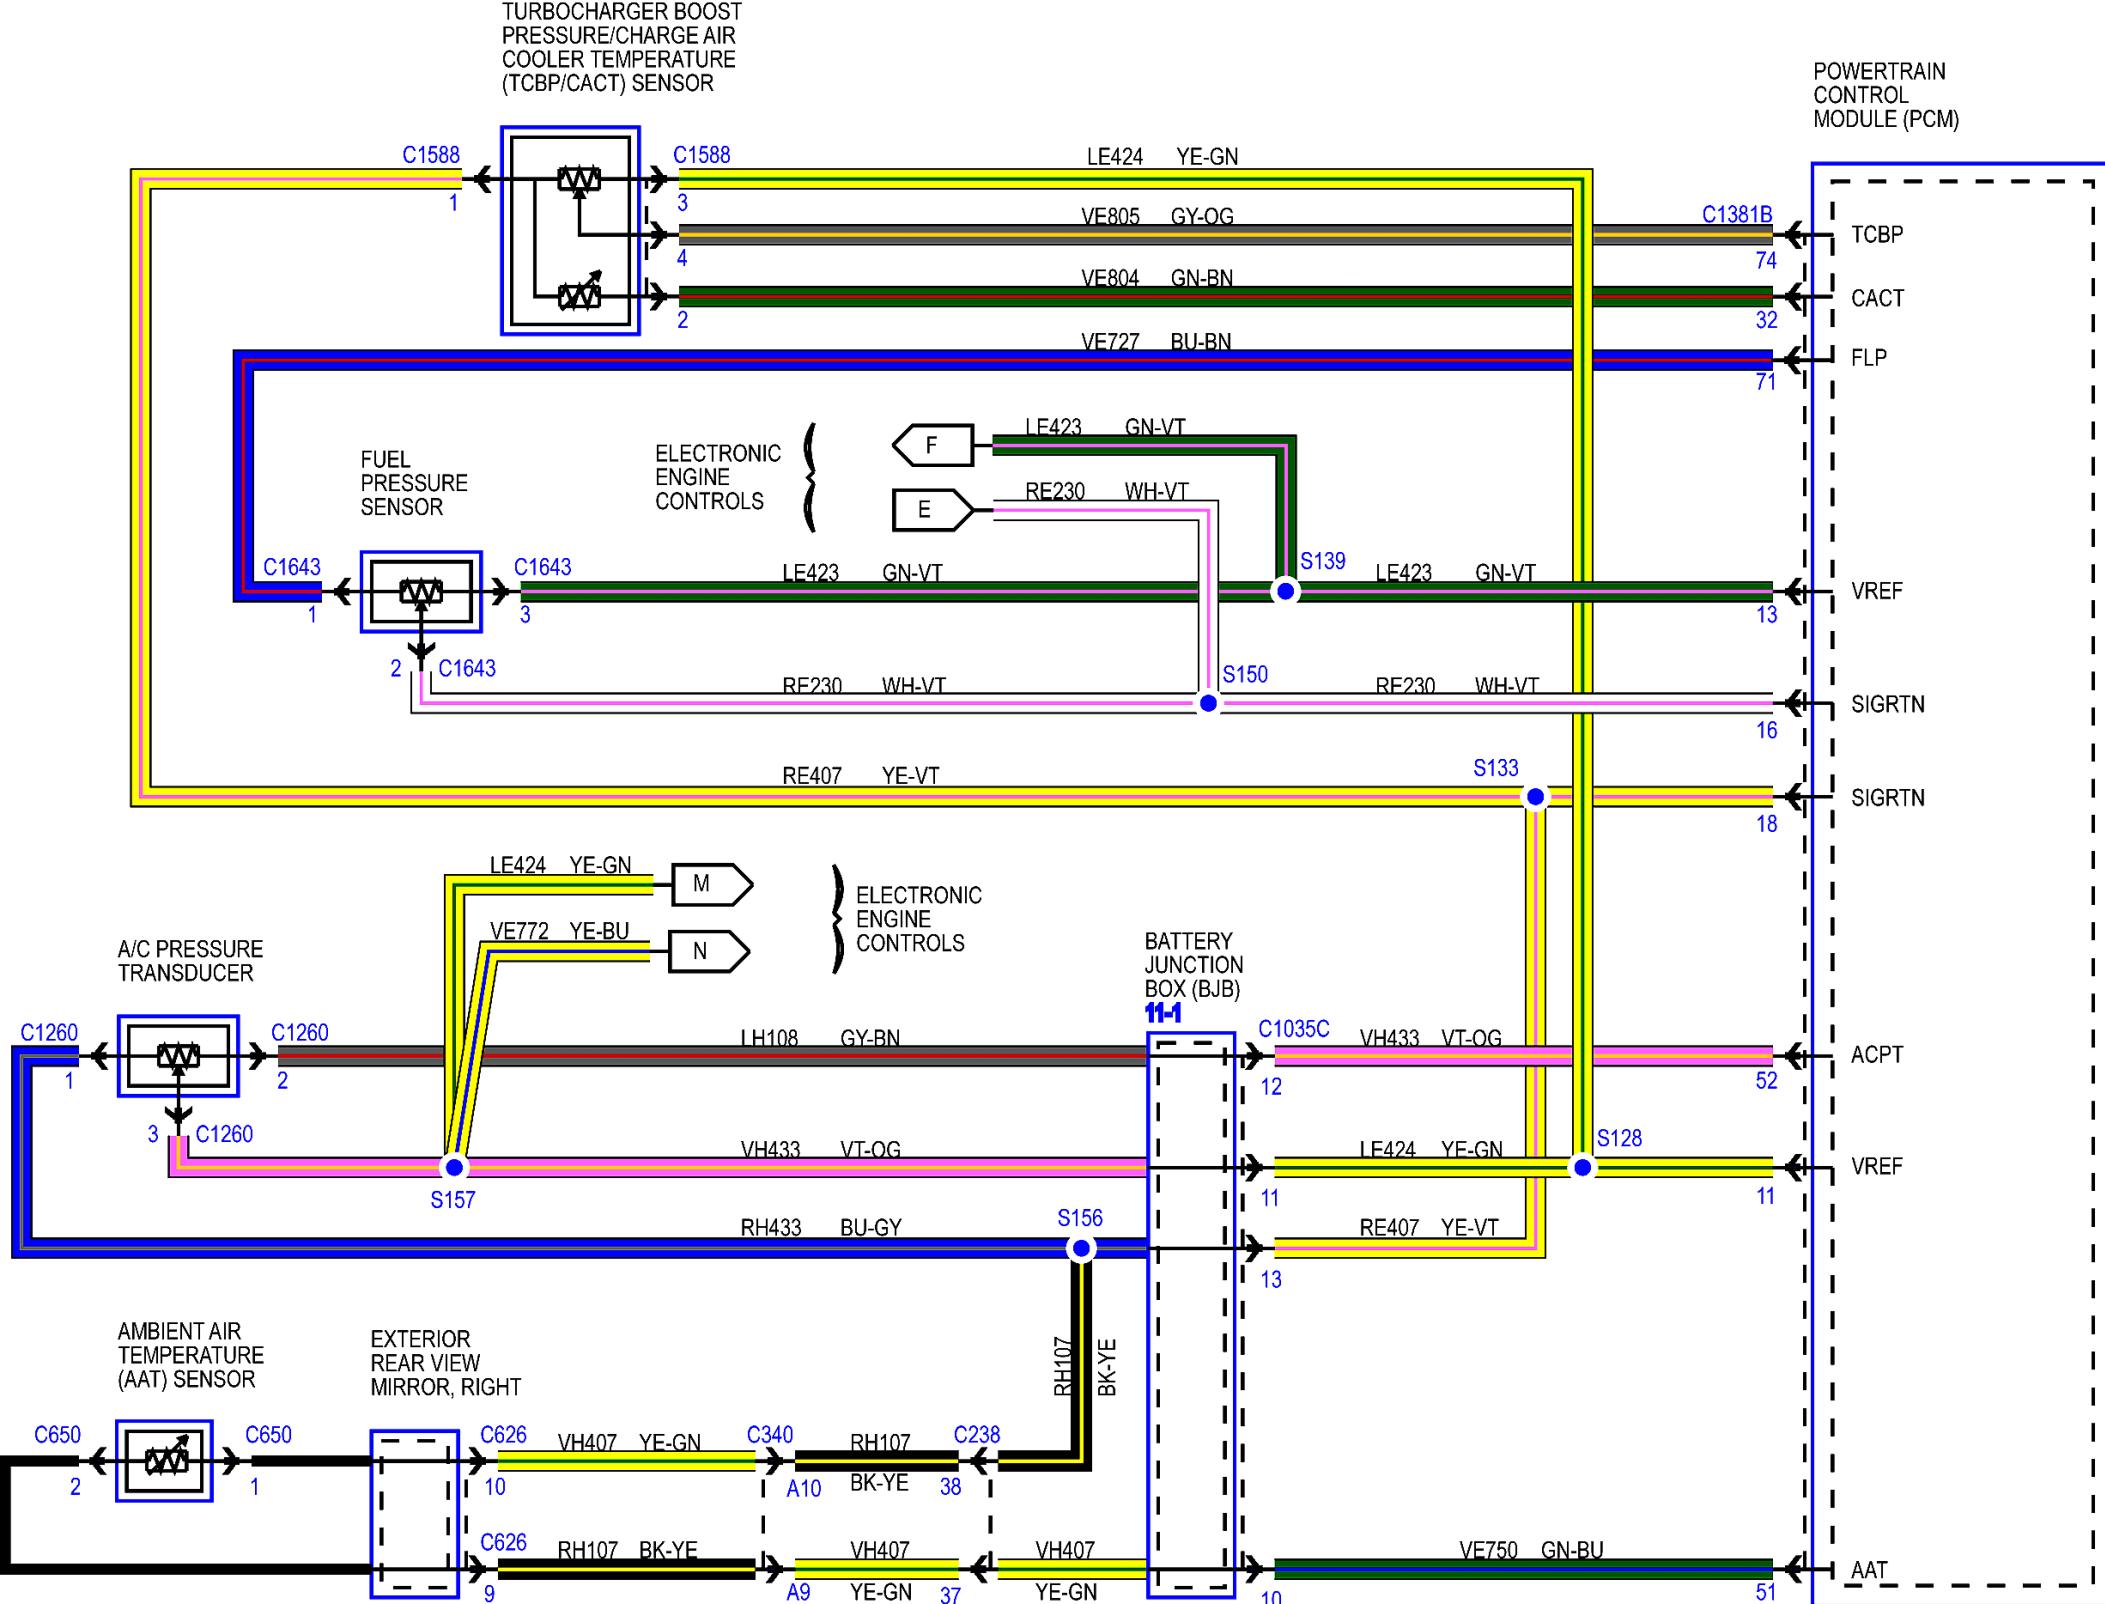

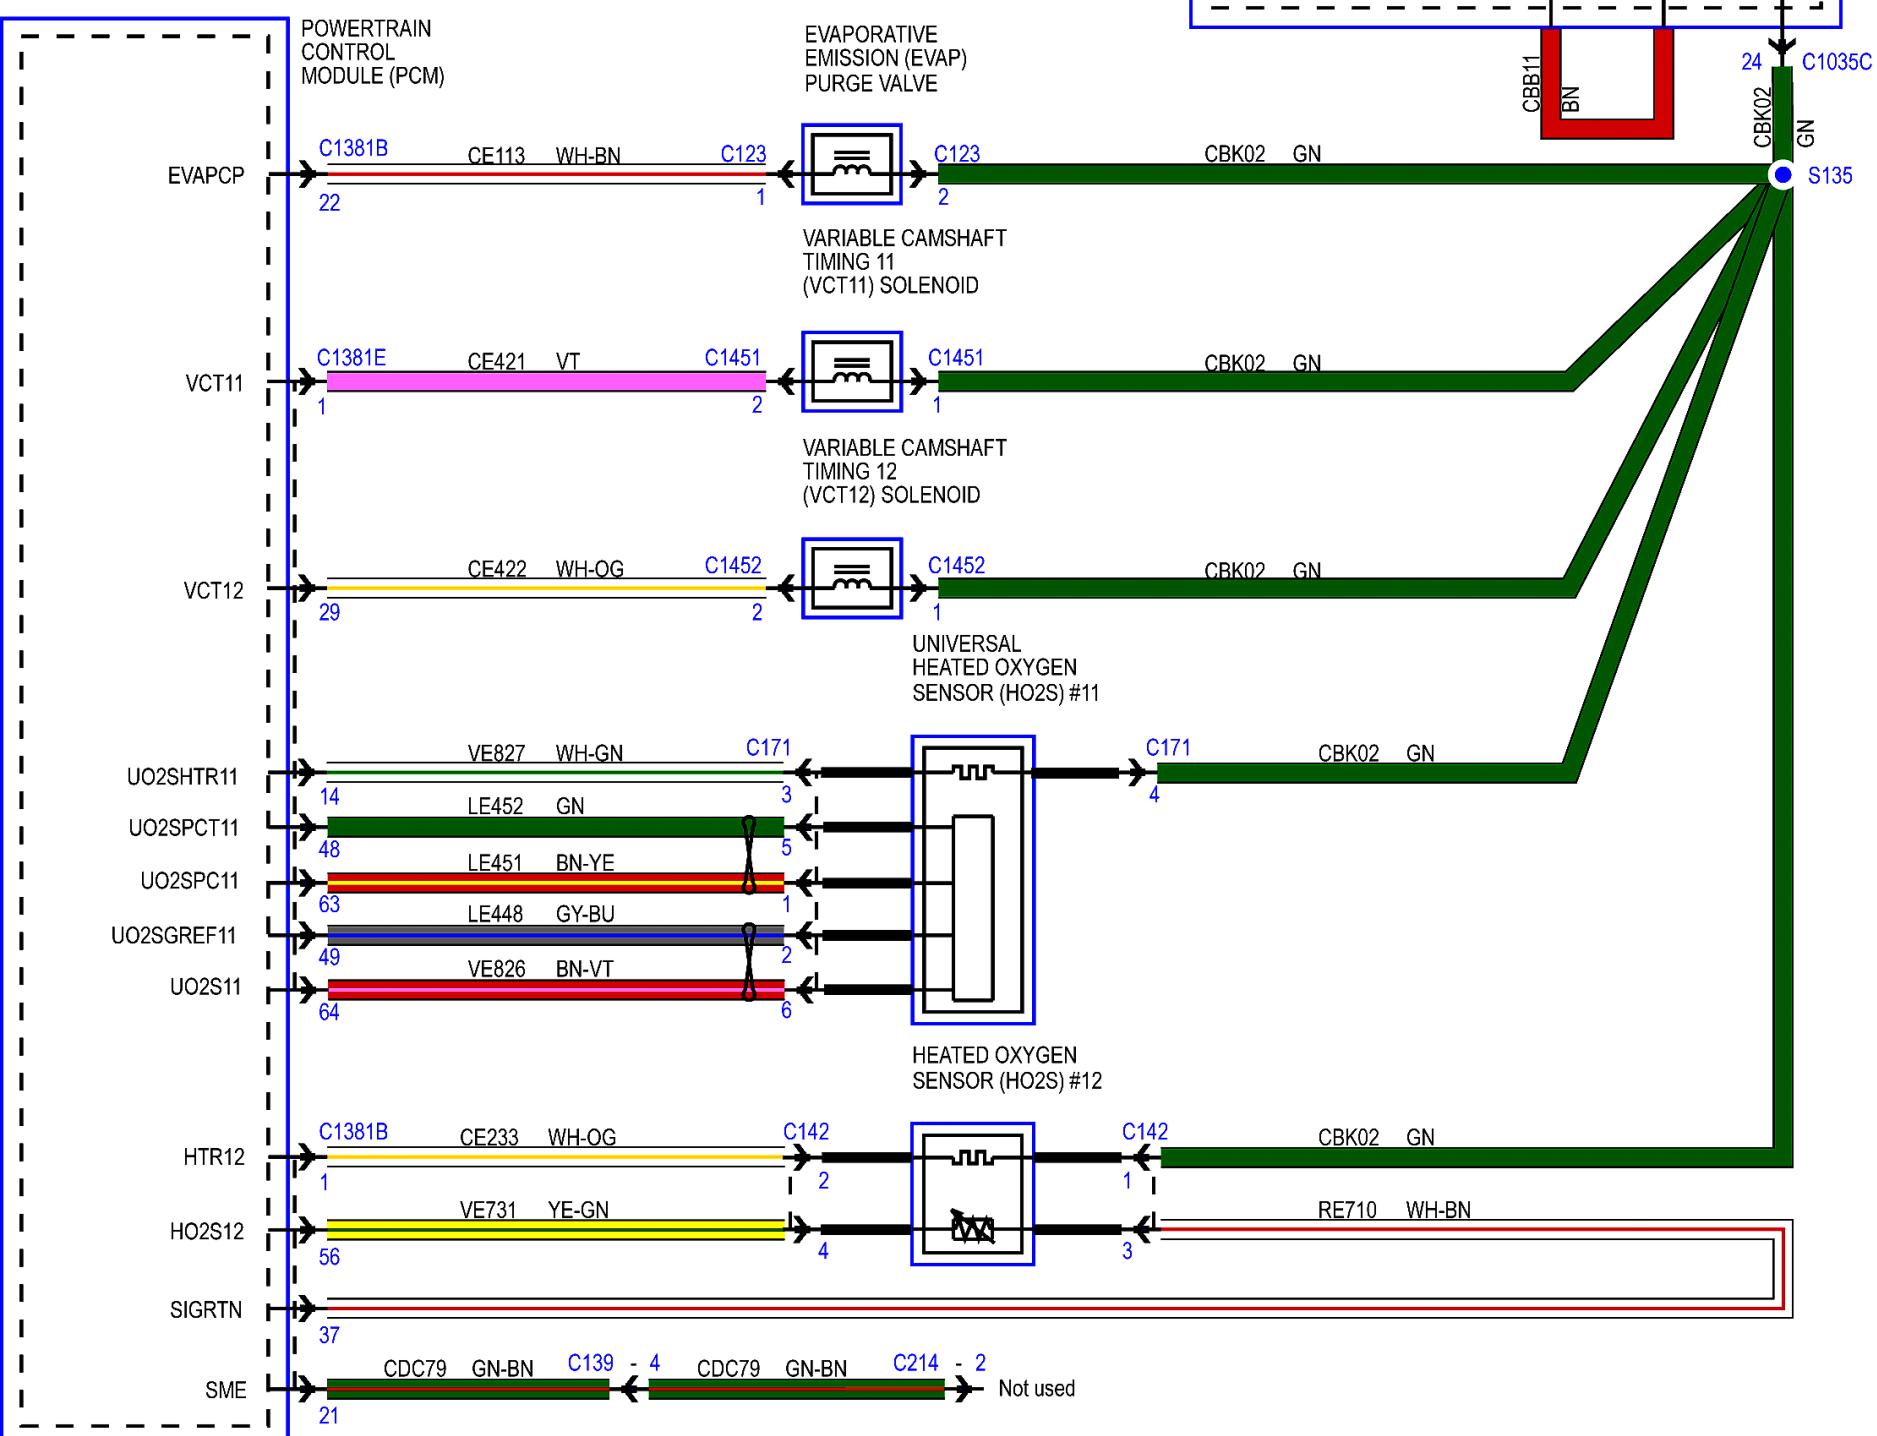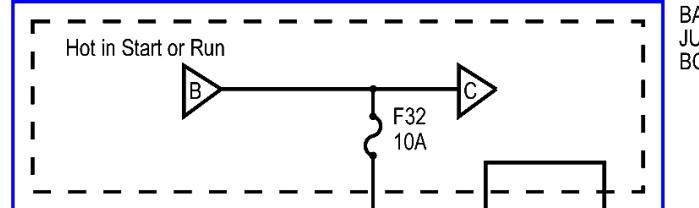


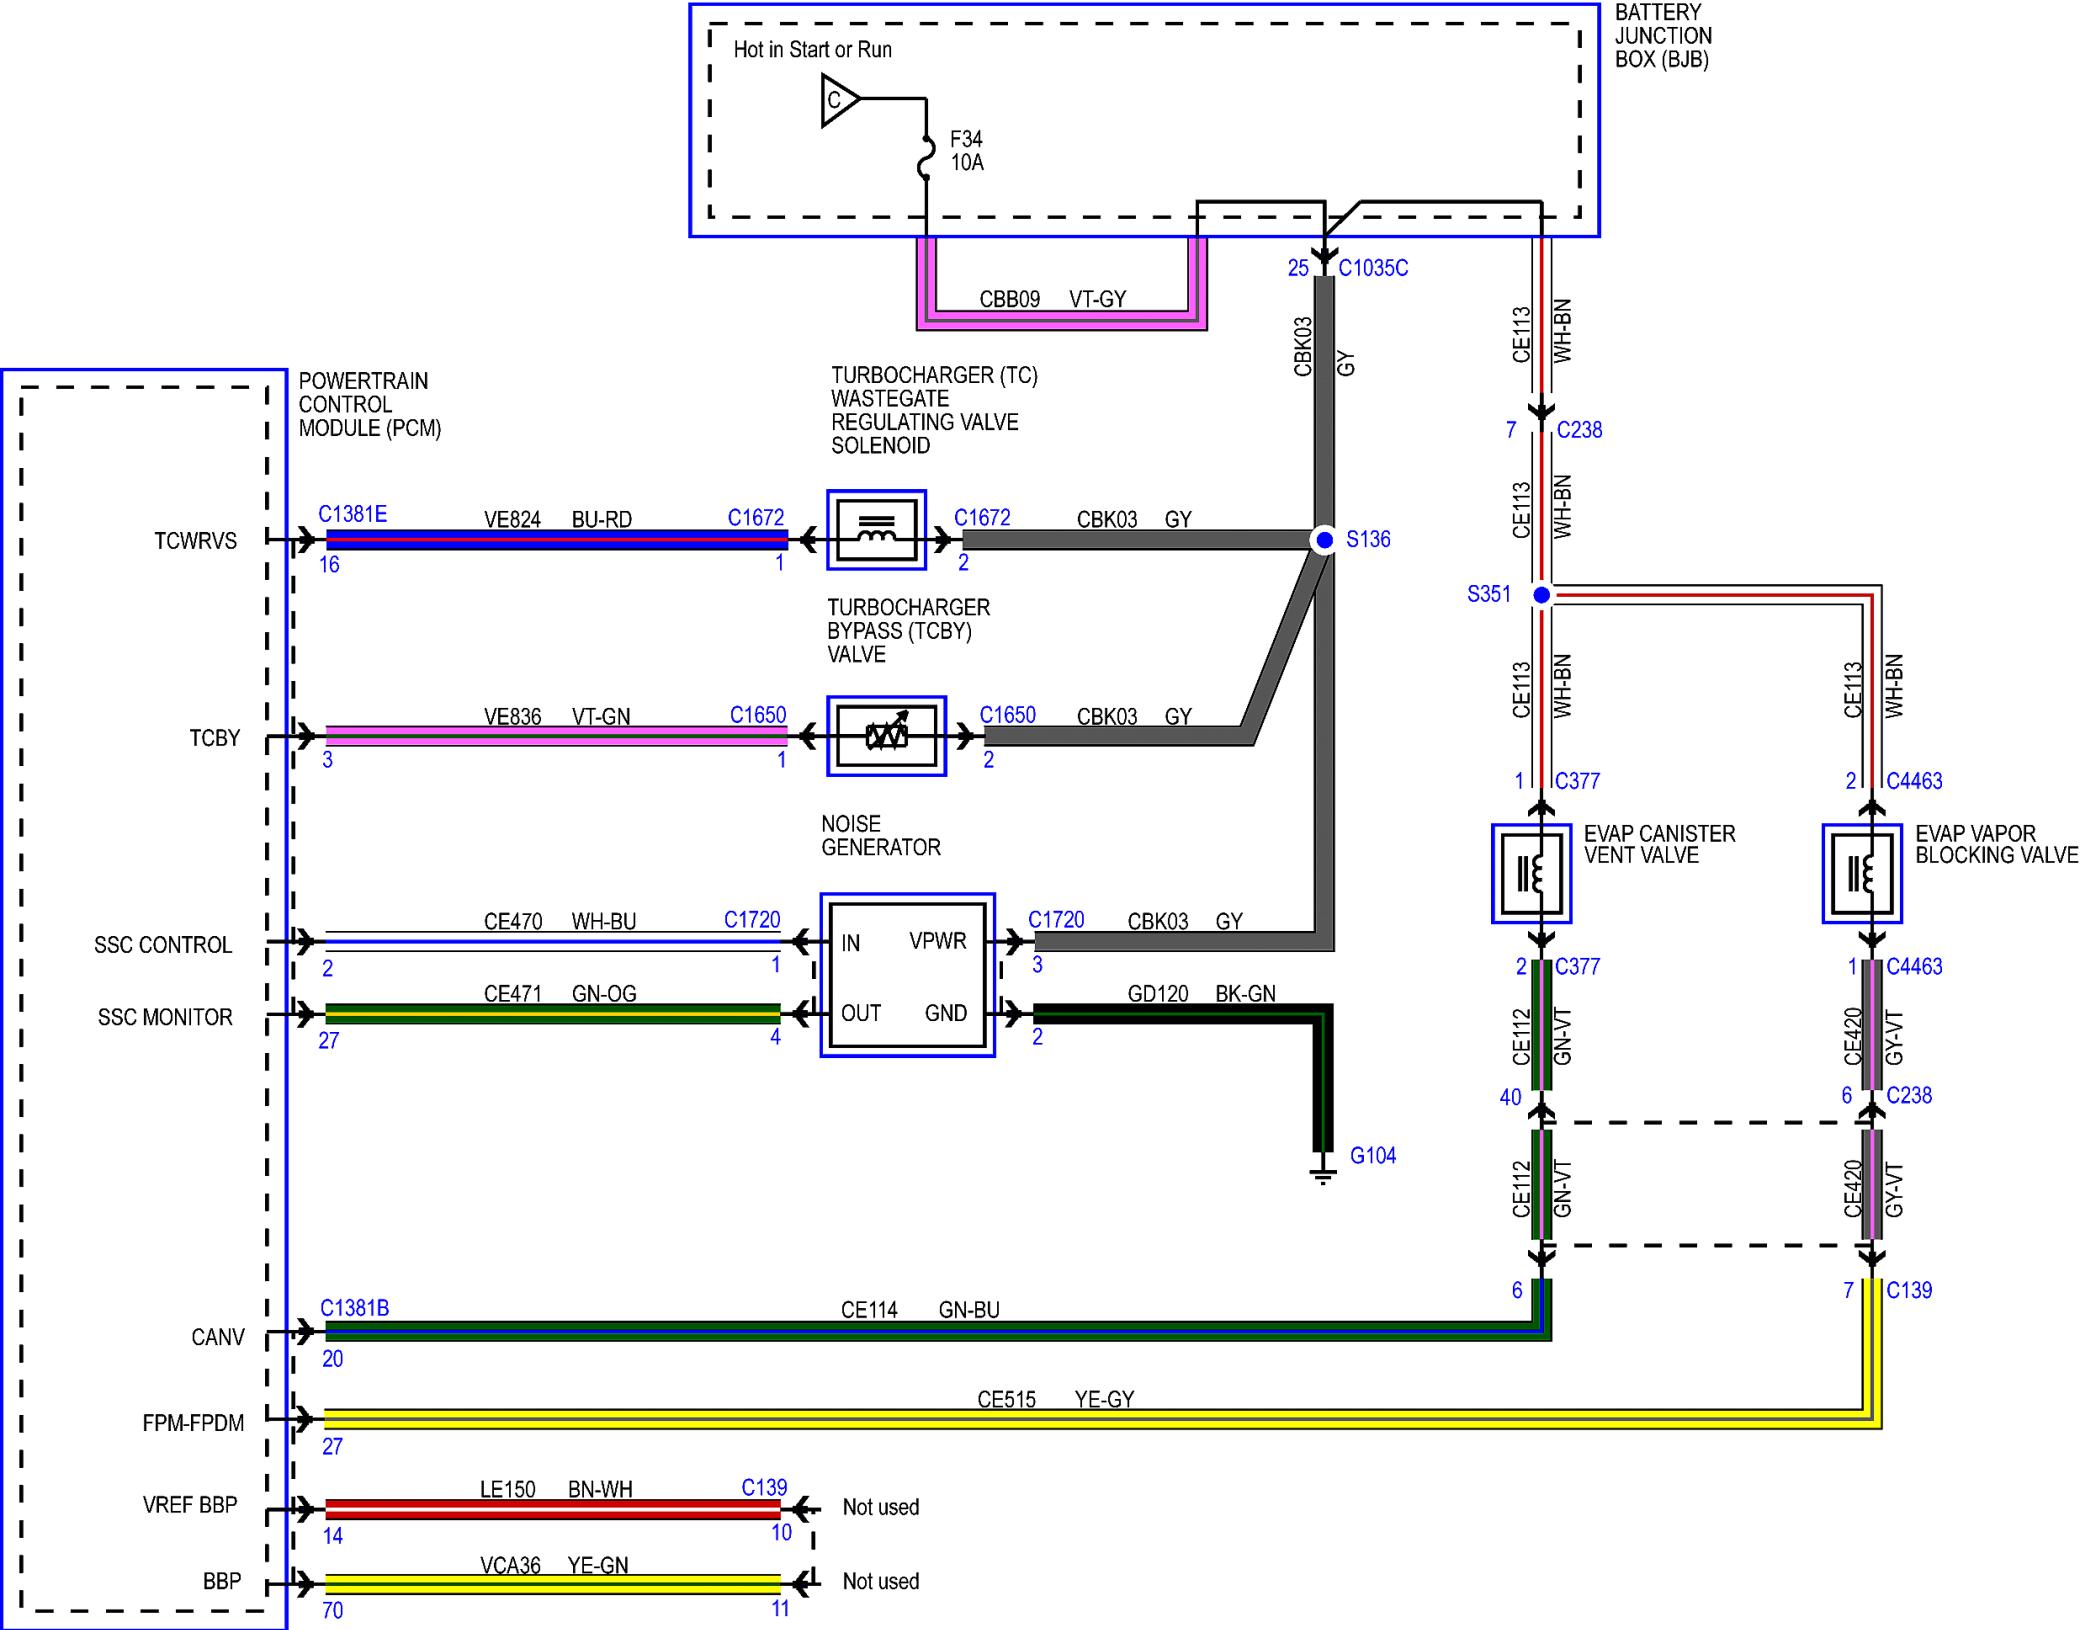

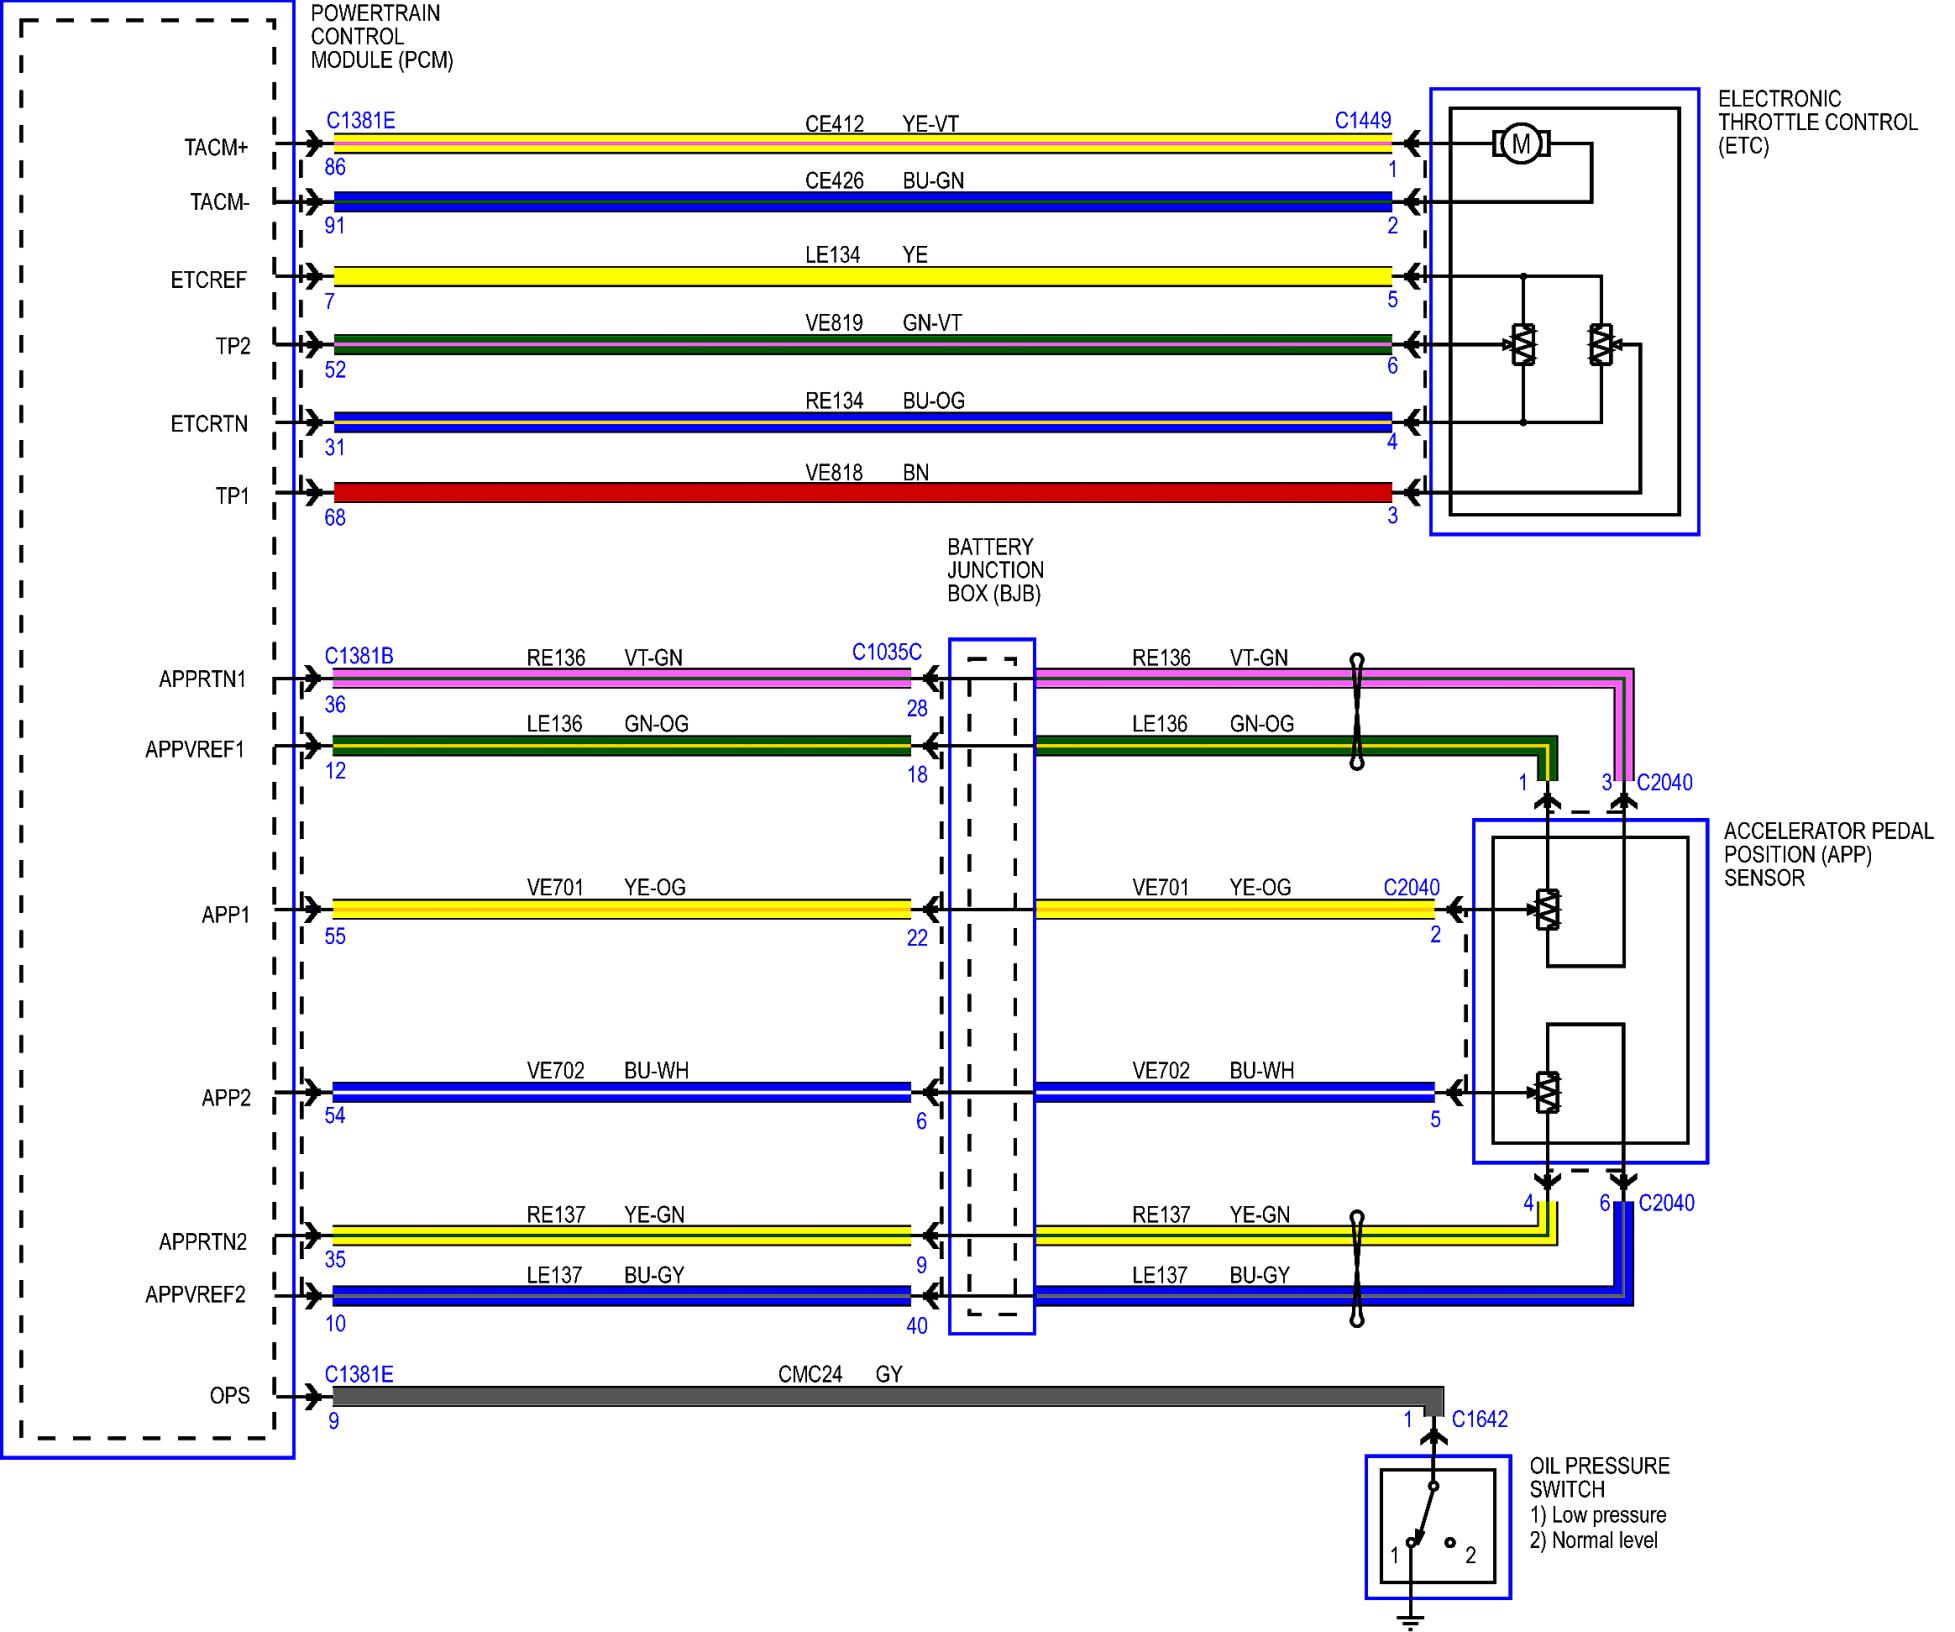

POWERTRAIN
CONTROL
MODULE (PCM)

 ELECTRONIC ENGINE CONTROLS




FTP → C1381B → VE922 VT-GN → 73 → 3 → 8 → 1 → VE922 VT-GN → C3123 → FUEL TANK PRESSURE (FTP) SENSOR → 2 → C3123

ELECTRONIC ENGINE CONTROLS




FPM → CE515 YE-GY → 27 → 7 → 1 → VE518 BN-WH → 5 → VE518 BN-WH → H

BATTERY JUNCTION BOX (BJB)

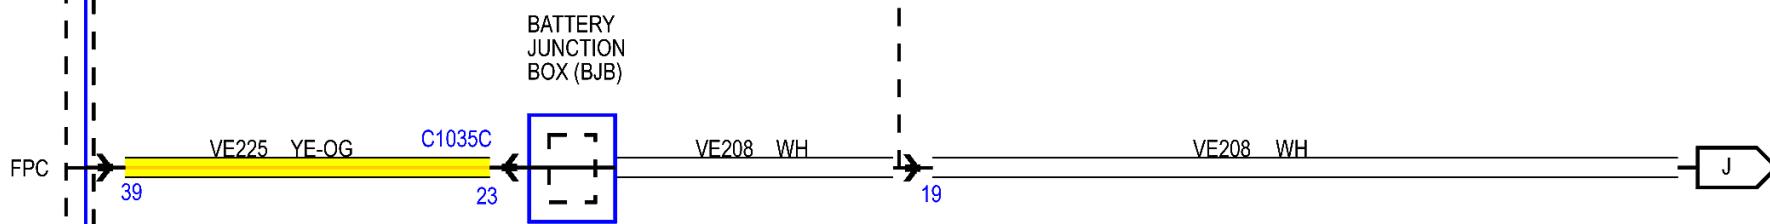


BATTERY JUNCTION BOX (BJB)

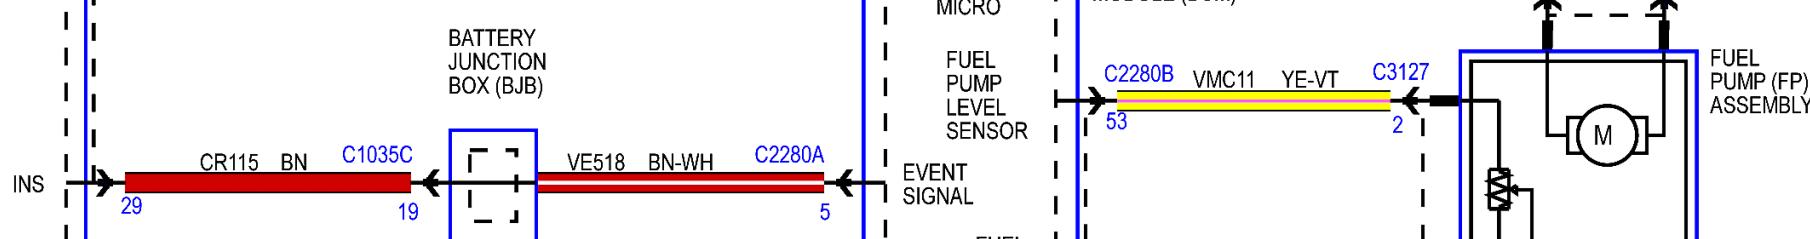


ELECTRONIC
ENGINE
CONTROLS

FUEL PUMP (FP)
ASSEMBLY

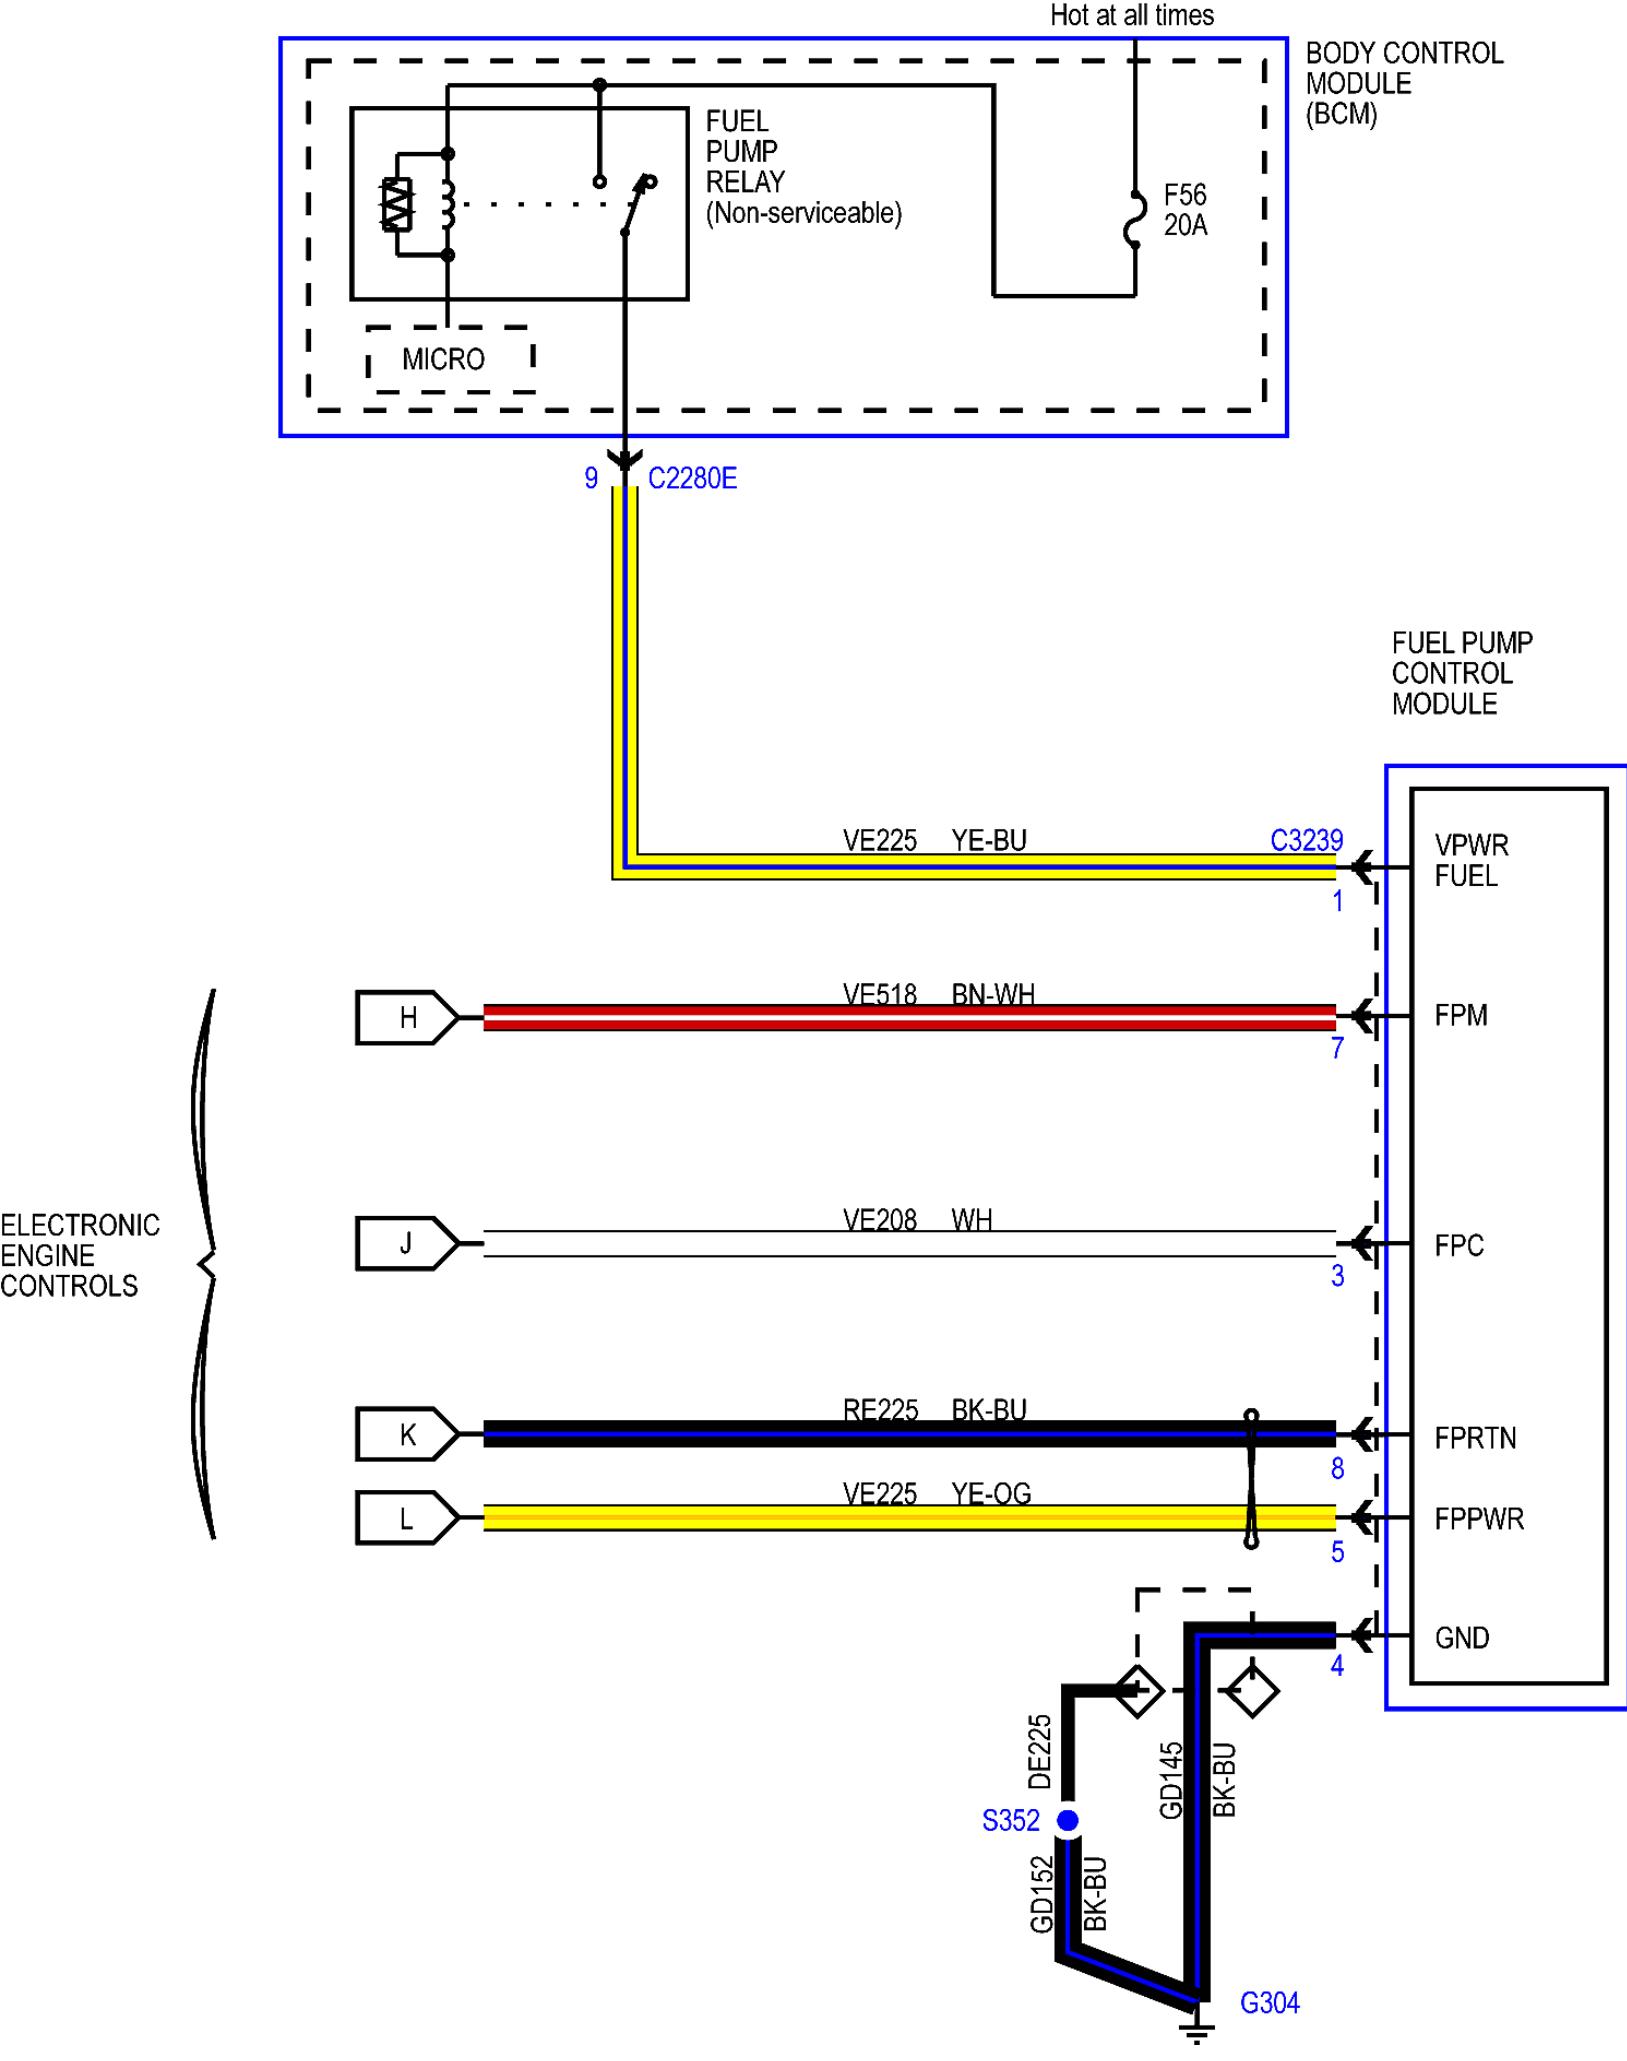


POWERTRAIN
CONTROL
MODULE (PCM)

CLUTCH MASTER
CYLINDER PUSH ROD
POSITION SENSOR

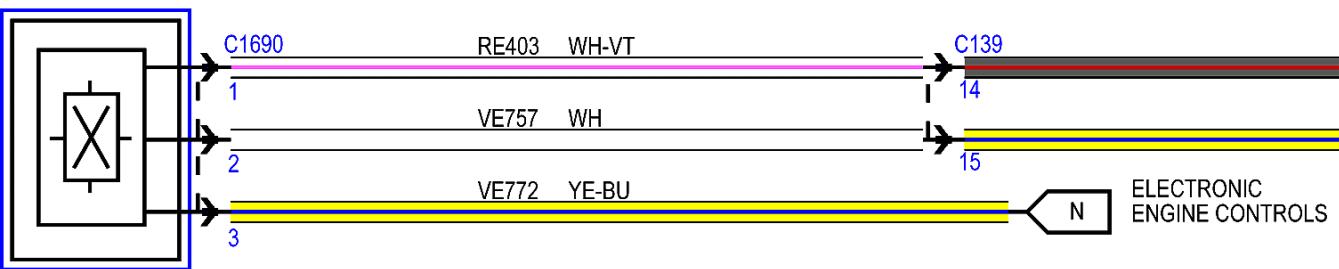

CRANKCASE
VENTILATION MONITOR

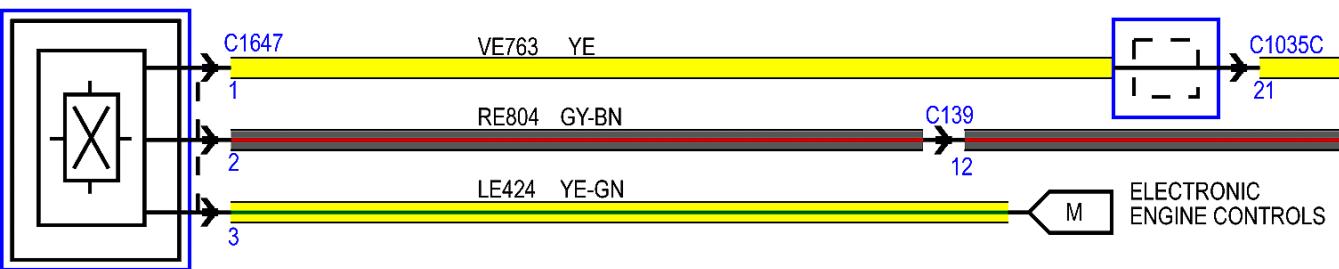

INTAKE AIR
TEMPERATURE (IAT)
SENSOR

