

SERVICE mode

model 88

1. Press the VOL(-) button on the TV control panel, until the volume reduced to "0", do not release the button, press the Diaplay button on the remote control at the same time, entering S mode.
2. Press Display button again on the remote control
3. Press both VOL(-) on TV control panel and DISPLAY button on remote control at the same time, entering D mode.

D mode is service mode.

any more questions, let me know.

regards