

TROUBLESHOOTING

BR0BX-03

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspect Area	See page
Low pedal or spongy pedal	<ol style="list-style-type: none"> 1. Fluid leaks for brake system 2. Air in brake system 3. Piston seals (Worn or damaged) 4. Master cylinder (Faulty) 5. Booster push rod (Out of adjustment) 	DI-407 BR-4 BR-25 BR-35 BR-12 BR-21
Brake drag	<ol style="list-style-type: none"> 1. Brake pedal freeplay (Minimum) 2. Parking brake lever travel (Out of adjustment) 3. Parking brake wire (Sticking) 4. Rear brake shoe clearance (Out of adjustment) 5. Pad (Cracked or distorted) 6. Piston (Stuck) 7. Piston (Frozen) 8. Tension or return spring (Faulty) 9. Booster push rod (Out adjustment) 10. Vacuum leaks for booster system 11. Master cylinder (Faulty) 	BR-6 BR-8 — BR-46 — BR-22 BR-32 BR-25 BR-35 BR-25 BR-35 BR-46 BR-21 BR-18 BR-12
Brake pull	<ol style="list-style-type: none"> 1. Piston (Stuck) 2. Pad (Cracked or distorted) 3. Piston (Frozen) 4. Disk (Scored) 5. Pad (Cracked or distorted) 	BR-25 BR-35 BR-22 BR-32 BR-25 BR-35 BR-25 BR-35 BR-22 BR-32

BRAKE – TROUBLESHOOTING

Hard pedal but brake inefficient	<ol style="list-style-type: none"> 1. Fluid leaks for brake system 2. Air in brake system 3. Pad (Worn) 4. Pad (Cracked or distorted) 5. Pad (Oily) 6. Pad (Glazed) 7. Disk (Scored) 8. Booster push rod (Out of adjustment) 9. Vacuum leaks for booster system 	<p>DI-407 BR-4 BR-22 BR-32 BR-22 BR-32 BR-22 BR-32 BR-22 BR-22 BR-25 BR-35 BR-21 BR-18</p>
Noise from brakes	<ol style="list-style-type: none"> 1. Pad (Cracked or distorted) 2. Installation bolt (Loose) 3. Disk (Scored) 4. Pad support plate (Loose) 5. Sliding pin (Worn) 6. Pad (Dirty) 7. Pad (Glazed) 8. Tension or return spring (Faulty) 9. Anti-squeal shim (Damaged) 10. Shoe hold-down spring (Damaged) 	<p>BR-22 BR-32 BR-25 BR-35 BR-25 BR-35 BR-35 BR-35 BR-35 BR-22 BR-32 BR-32 BR-32 BR-46 BR-22 BR-32 BR-46</p>