


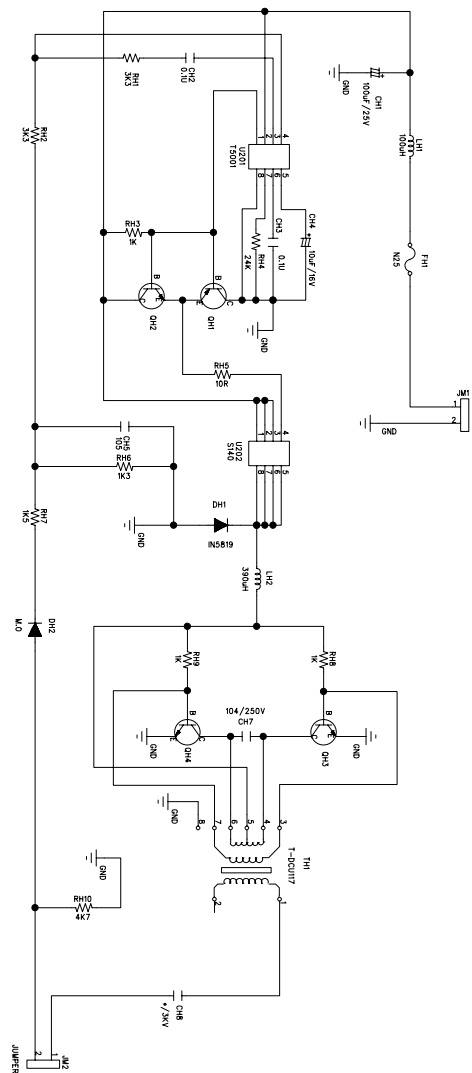

Schematic Diagram


Model: DTX720-04-HV01




Schematic Diagram


Model: DMP00

-MTK-01

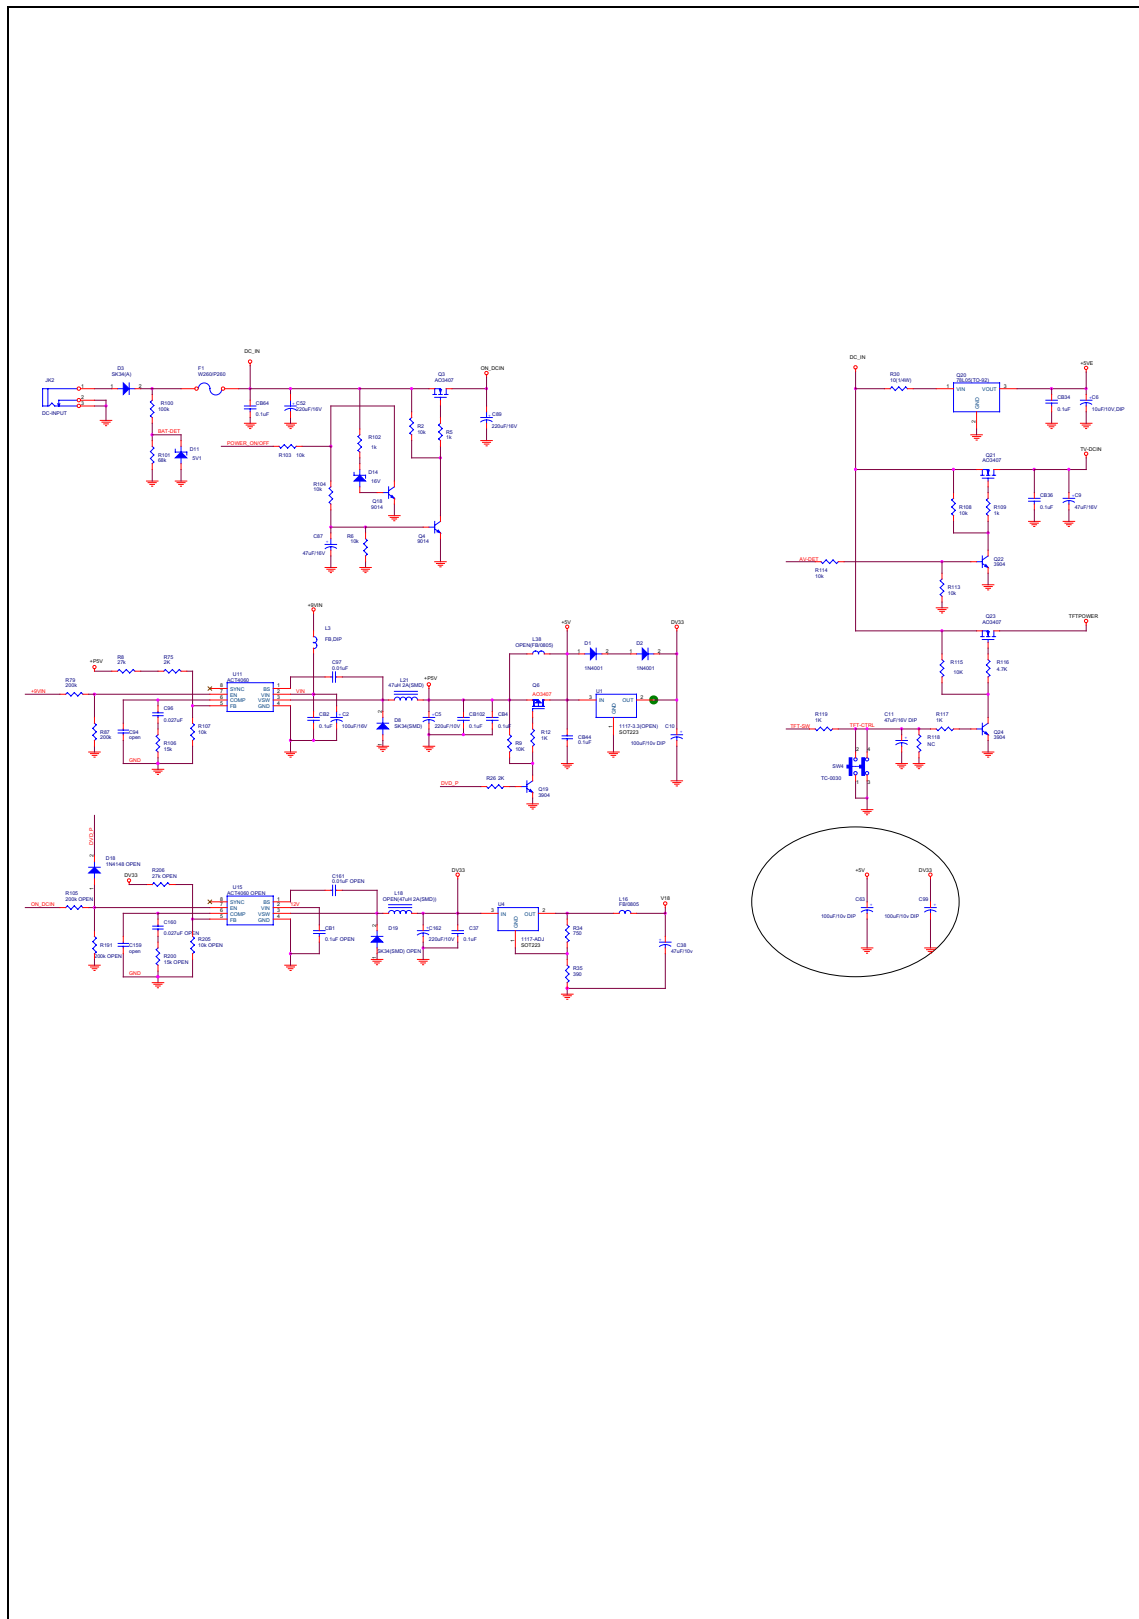


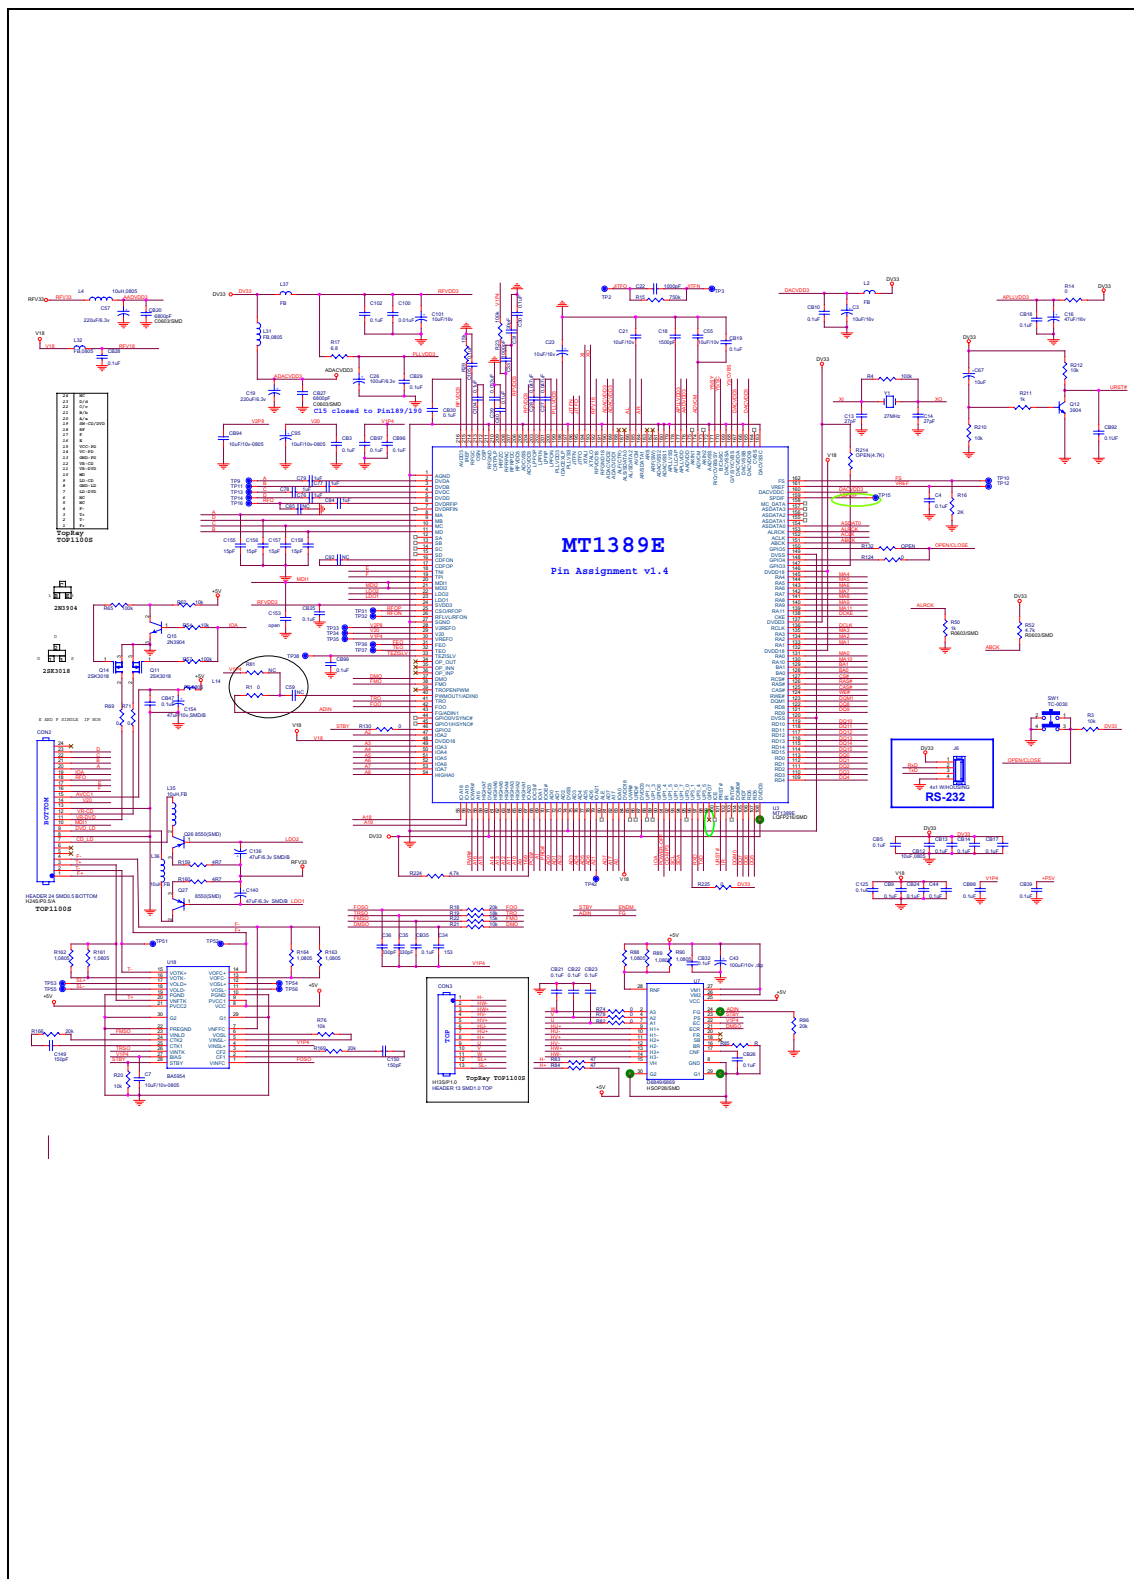

Model: DDP-00-MTK-01

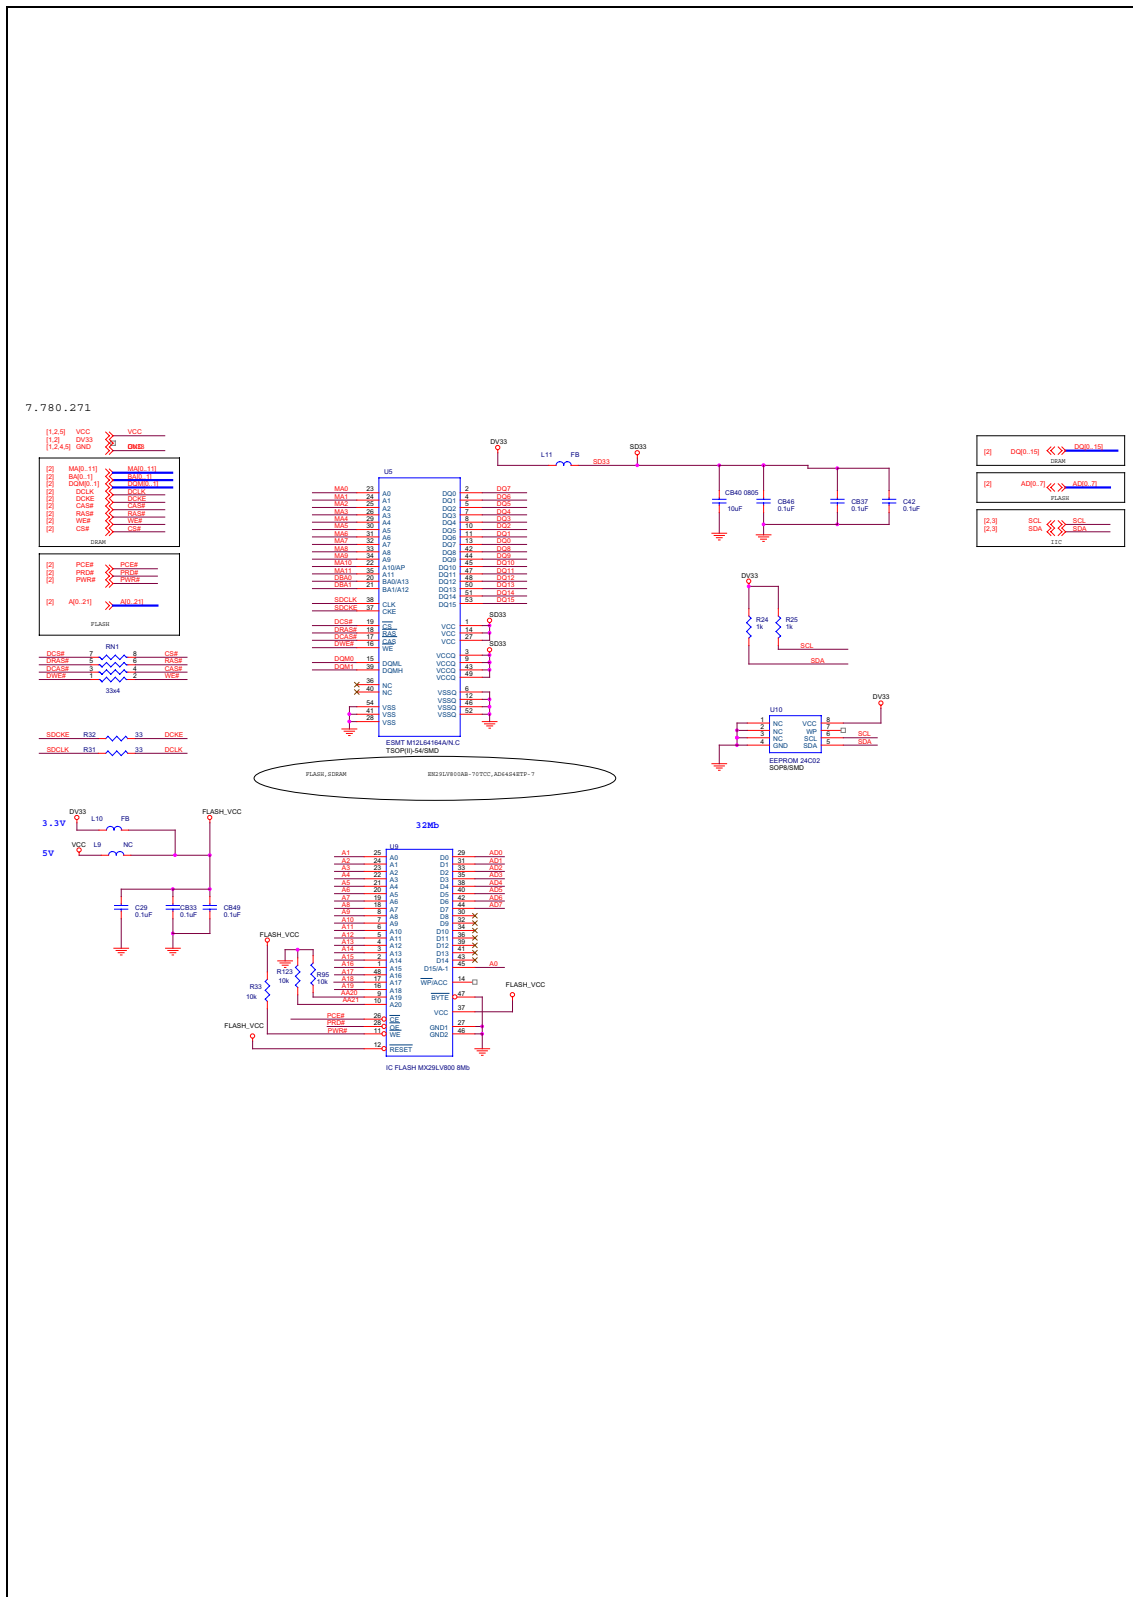


Model: DDP3-MTK-01

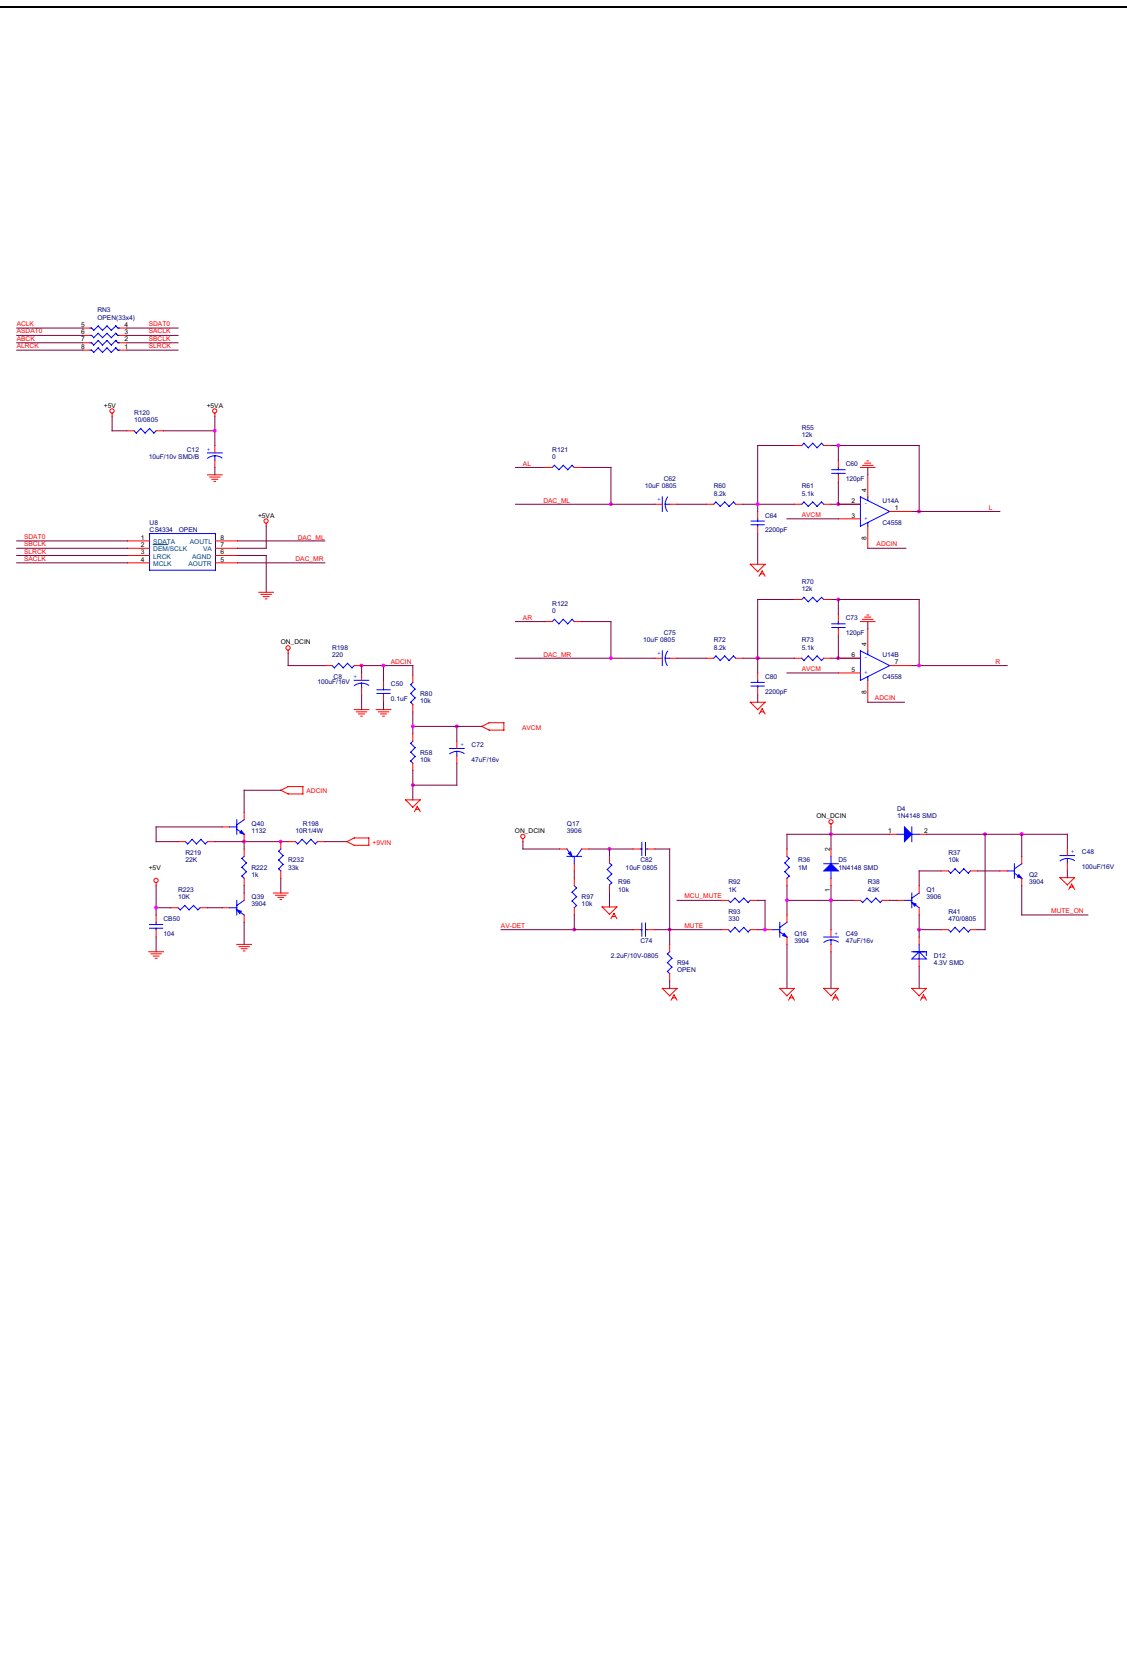


Schematic Diagram

Model: DMP0-MTK-01

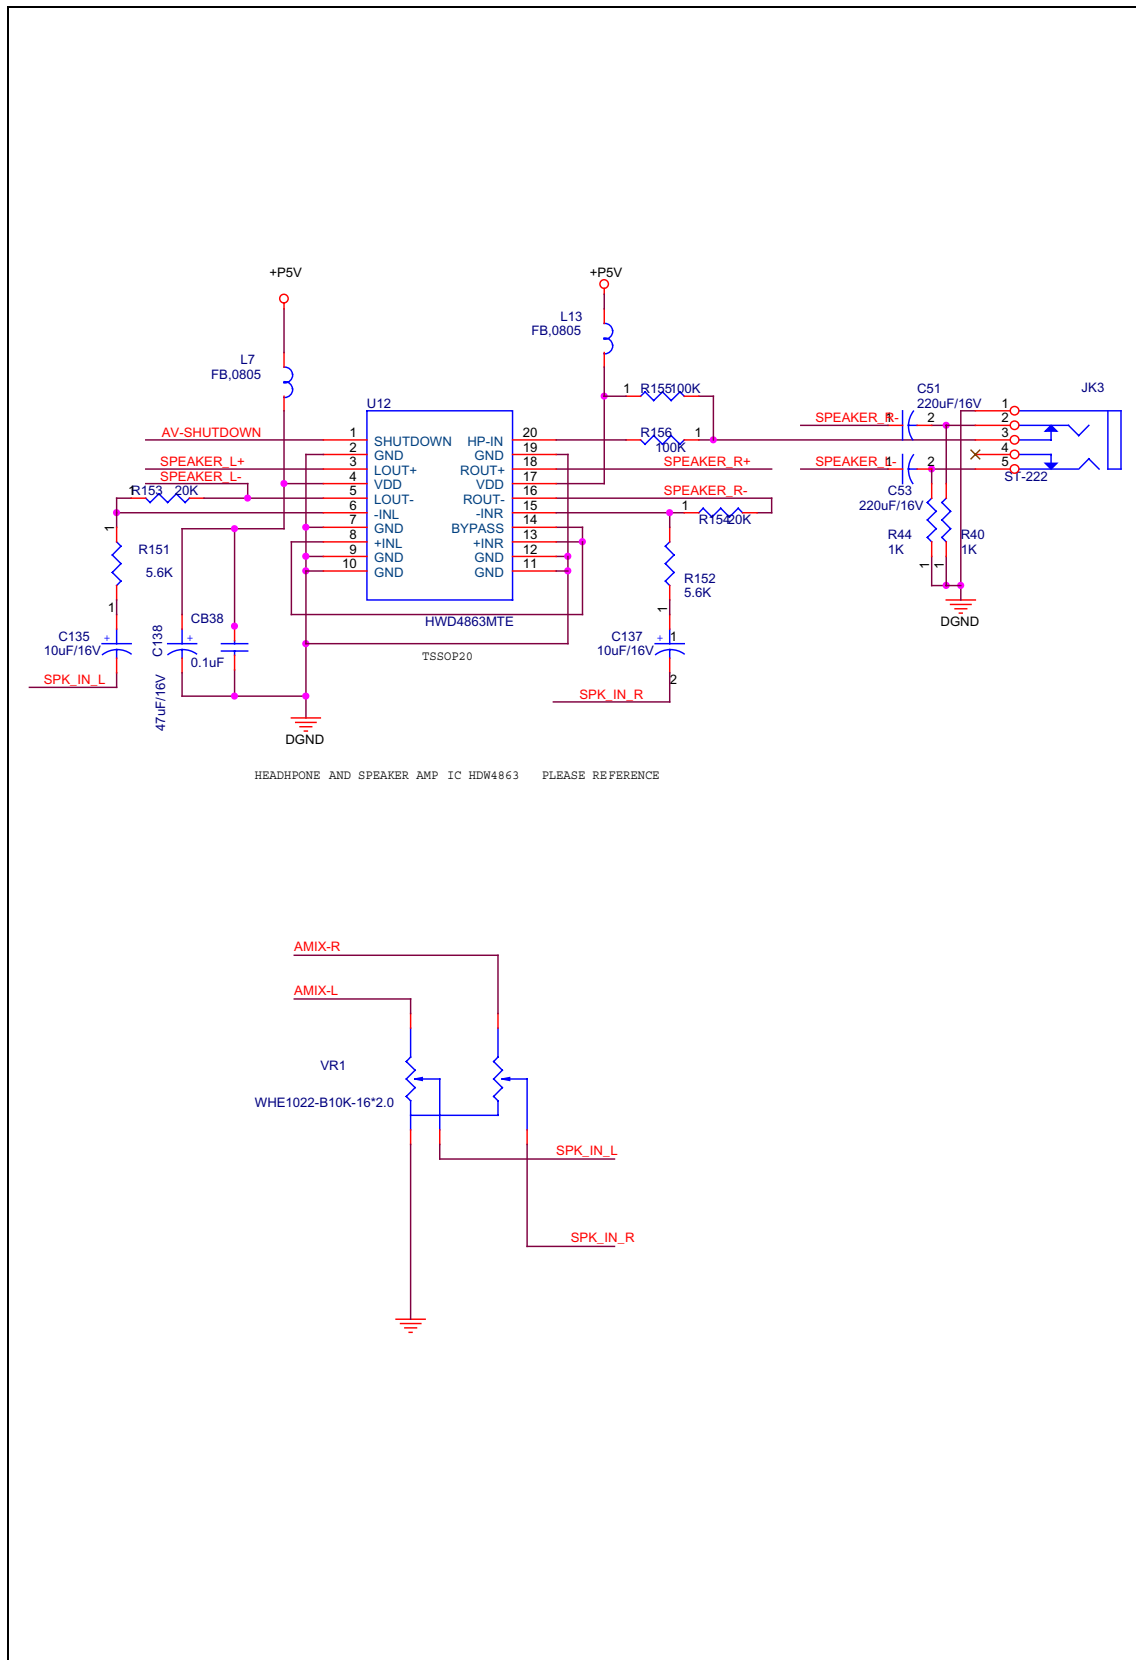


Schematic Diagram


Model: DMP0-MTK-01

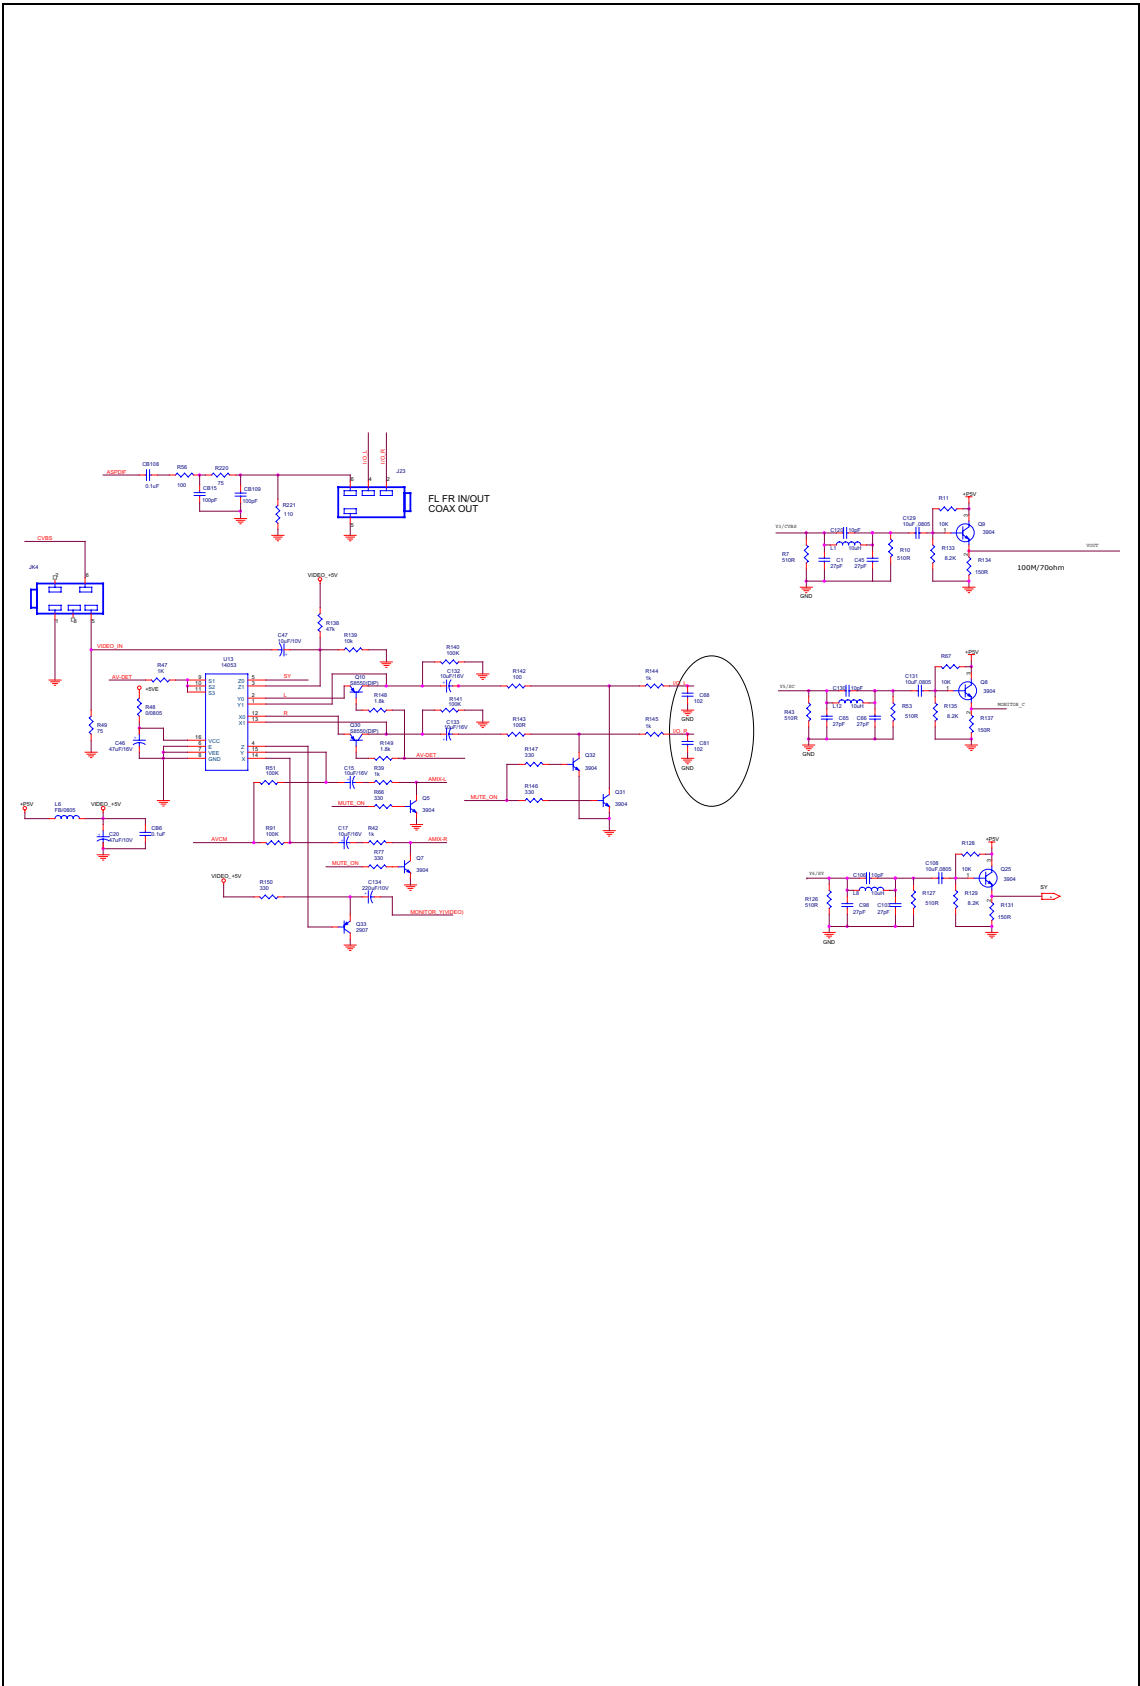

Model: DDP-00-MTK-01

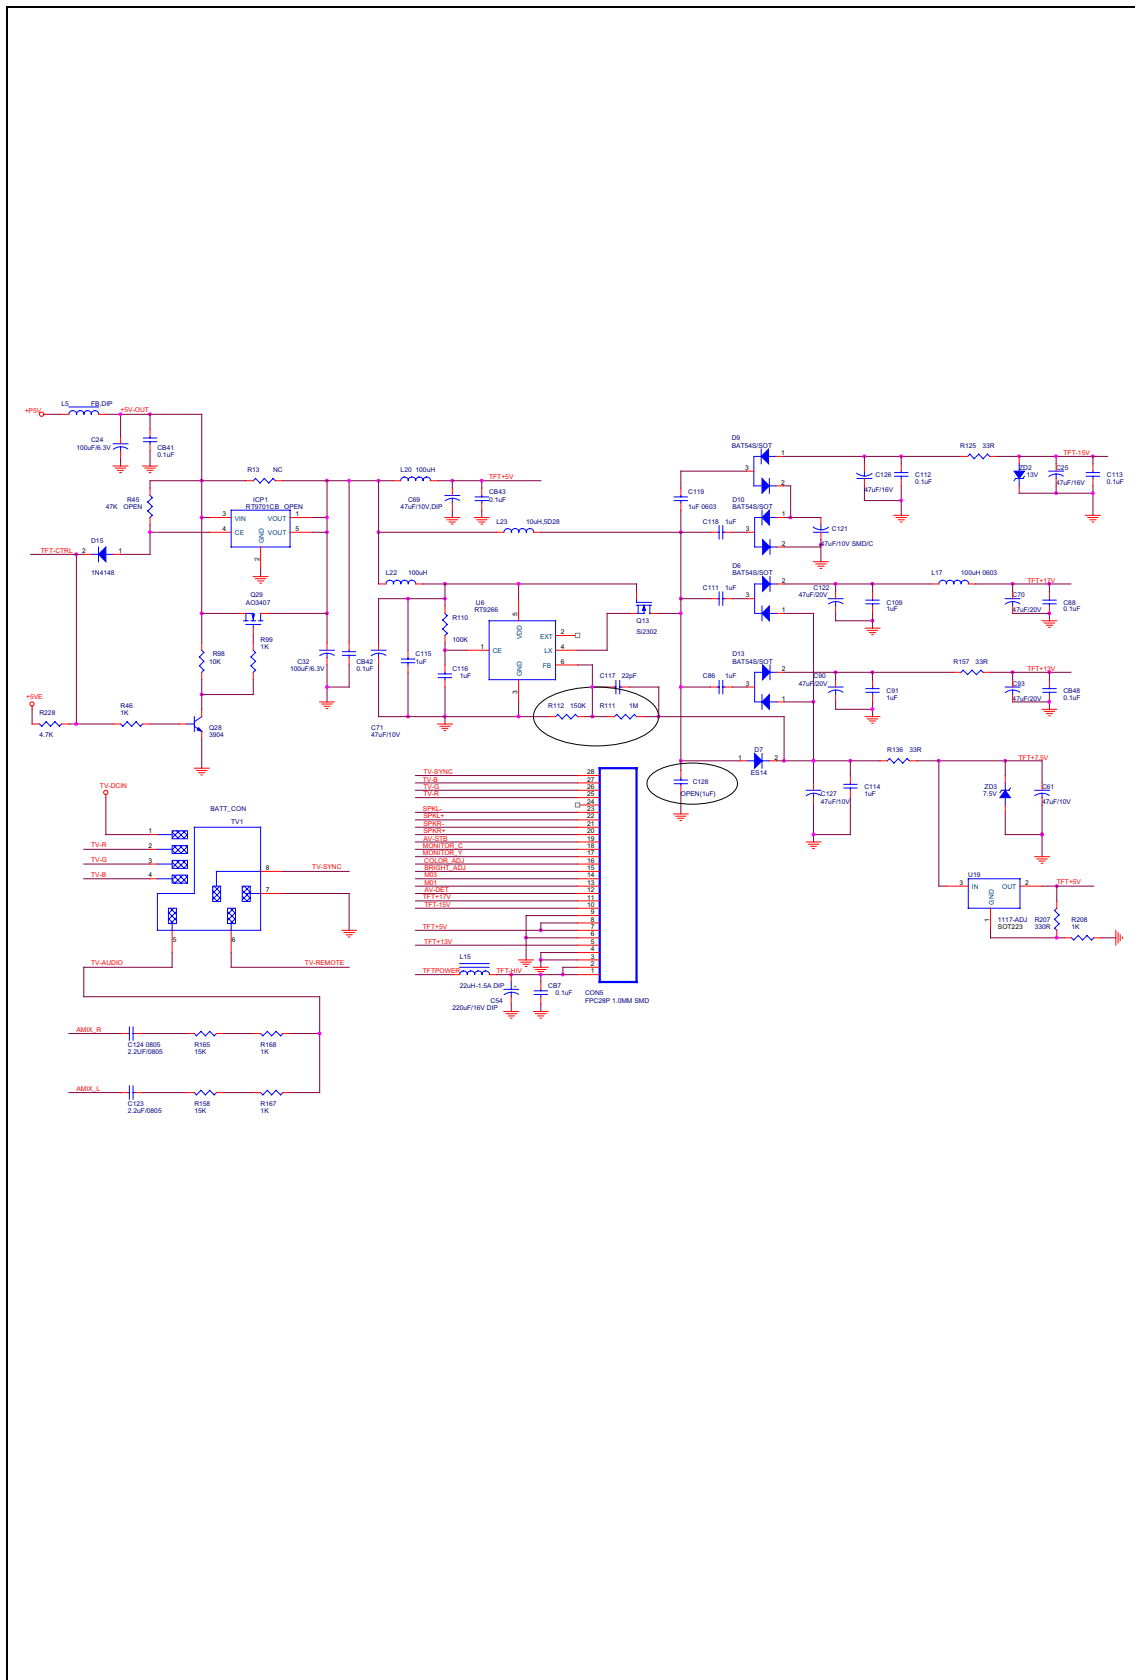


Model:DP30-MTK-01

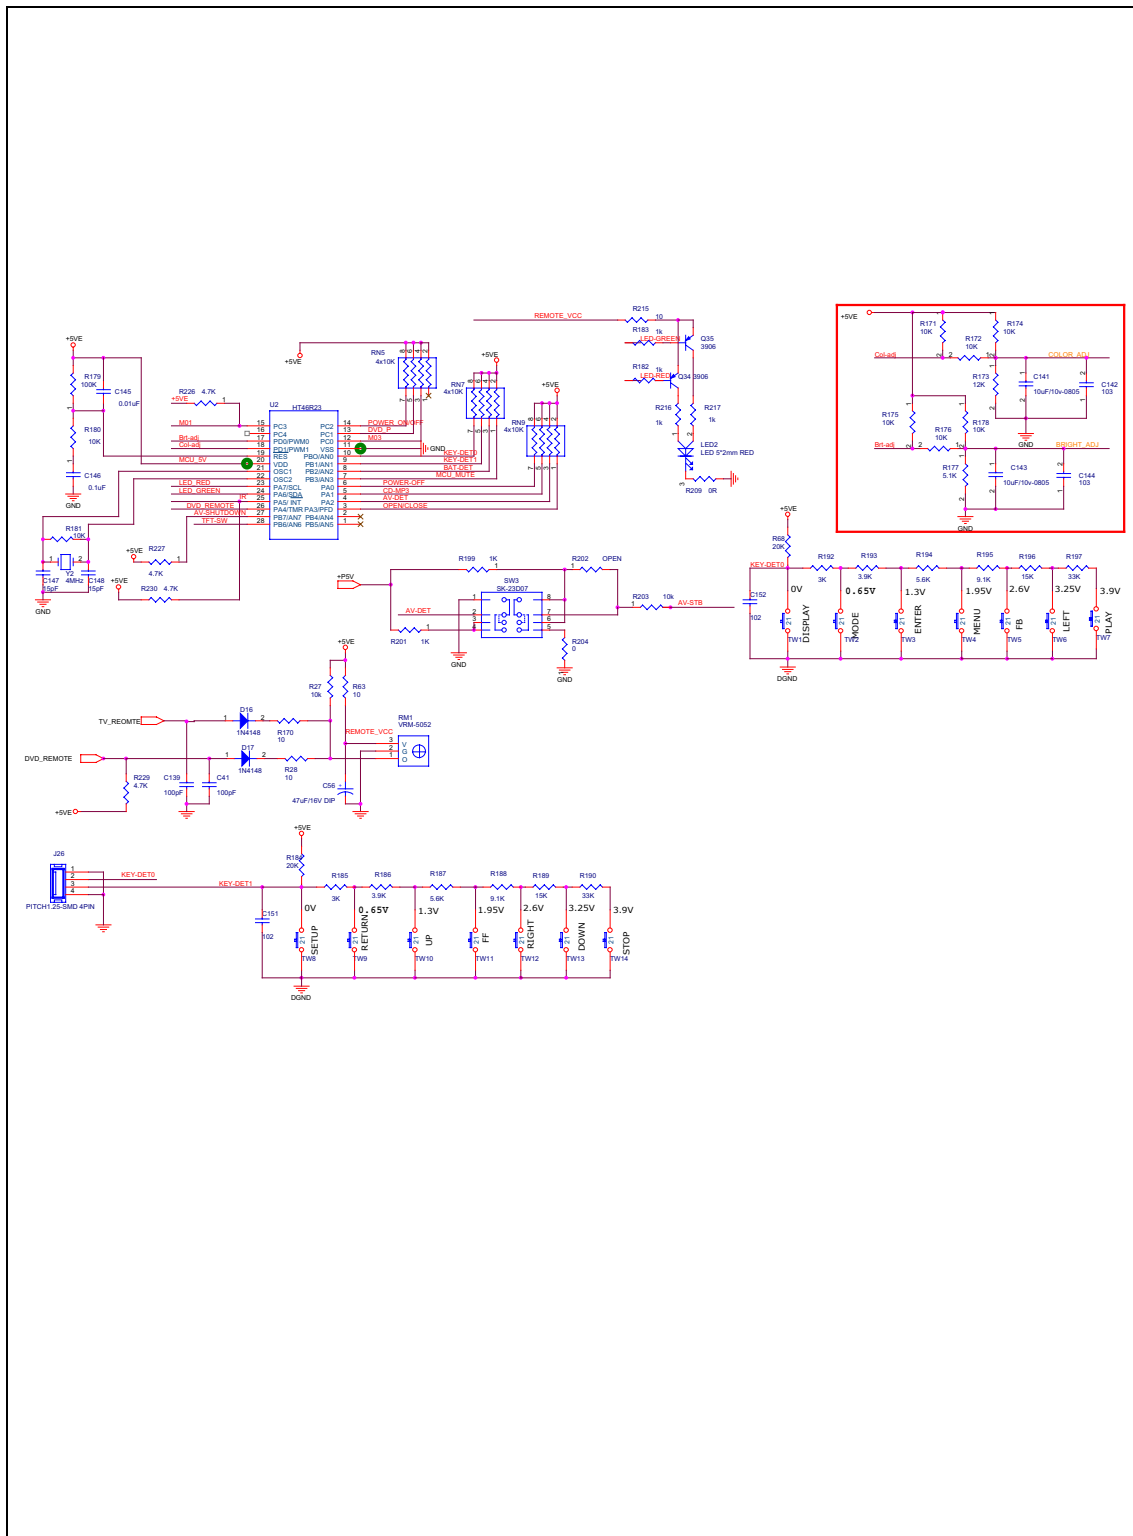


Schematic Diagram

Model: DTX720-NIBATT

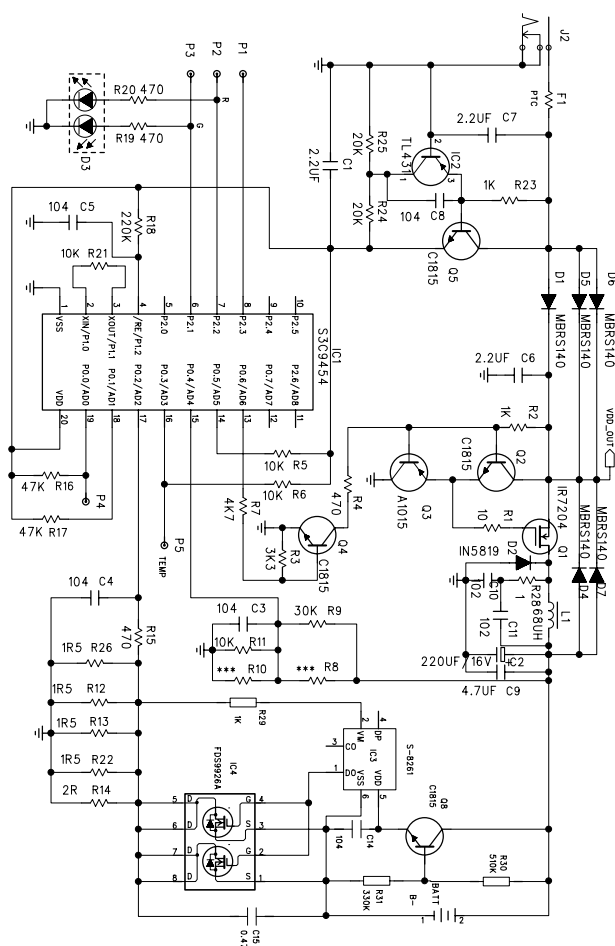

Model: DTX720TV-3104



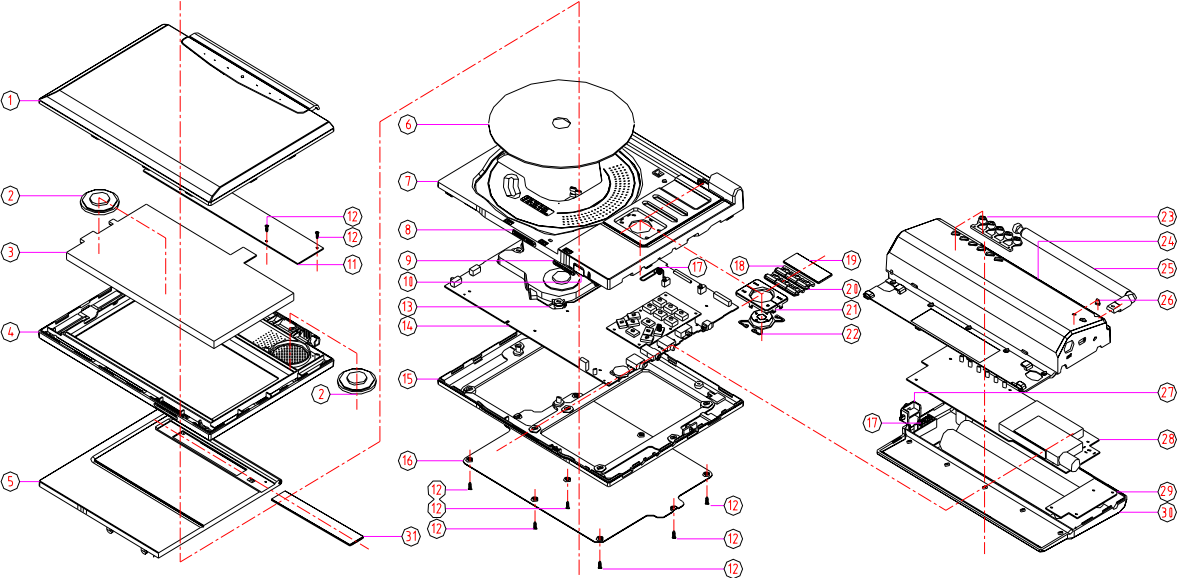

31	CD LENS	1
30	BATTERY BOX BOTTOM COVER	1
29	BATTERY BOX LED PCB	1
28	BATTERY BOX PCB	1
27	BATTERY BOX BUTTON	1
26	LED	1
25	ANTENNA	1
24	BATTERY BOX TOP COVER	1
23	BATTERY BOX BUTTON	1
22	MAIN BUTTON	1
21	MAIN BUTTON	1
20	BUTTON	1
19	LED LENS	1
18	BUTTON	1
17	SPRING	2
16	IRON BOARD	1
15	BOTTOM CABINET	1
14	MAIN PCB	1
13	DVD recordable	1
12	KA 2X6	12
11	TFT PCB	1
10	REMOTE LENS	1
9	TOP CABINET SWITHC	2
8	CD-DOOR SWITCH	1
7	MIDDLE CABINET	1
6	CD	1
5	CD-DOOR	1
4	FRONT CABINET	1
3	7" TFT LCD	1
2	SPEAKER	2
1	TOP CABINET	1
NO.	DESCRIPTION	UNIT