


S210627R-S50/

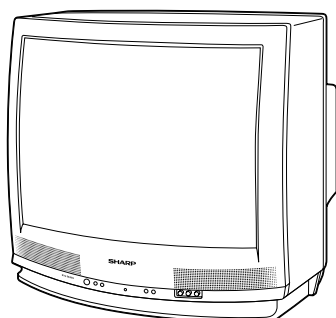

COLOR TELEVISION

Chassis No. SN-010

MODEL

27R-S50

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

CONTENTS		Page
● ELECTRICAL SPECIFICATIONS		1
● IMPORTANT SERVICE SAFETY PRECAUTION		2
● LOCATION OF USER'S CONTROL		4
● INSTALLATION AND SERVICE INSTRUCTIONS		5
● CHASSIS LAYOUT		11
● BLOCK DIAGRAM		12
● SCHEMATIC DIAGRAMS		13
● PRINTED WIRING BOARD ASSEMBLIES		18
● REPLACEMENT PARTS LIST		23
● PACKING OF THE SET		31

ELECTRICAL SPECIFICATIONS

POWER INPUT	120 V AC 60 Hz
POWER RATING	105 W
PICTURE SIZE	2,187cm ² (339sq inch)
CONVERGENCE	Magnetic
SWEEP DEFLECTION	Magnetic
FOCUS	Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES	
Picture IF Carrier Frequency	45.75 MHz
Sound IF Carrier Frequency	41.25 MHz
Color Sub-Carrier Frequency	42.17 MHz
	(Nominal)
AUDIO POWER	
OUTPUT RATING	1.5W + 1.5W (at 10% distortion and Dual CH Operate)

SPEAKER
 SIZE 8 cm (Round)
 VOICE COIL IMPEDANCE 32 ohm at 400 Hz

ANTENNA INPUT IMPEDANCE
 VHF/UHF 75 ohm Unbalanced

TUNING RANGES
 VHF-Channels 2 thru 13
 UHF-Channels 14 thru 69
 CATV Channels 1 thru 125

(EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjustment is required.

To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket.

Now, the TV set is switched on and enters the service mode.

To exit the service mode, turn the television off by pressing the power button.

1. Service mode.

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer control are in their proper (reset) position.

2. Service number selection.

In the service mode, you will see the window screen as window ①. There are 4 adjustment categories ②DEF, ③SIGNAL, ④FEATURE, ⑤FIX VALUE as show in **Figure A**.

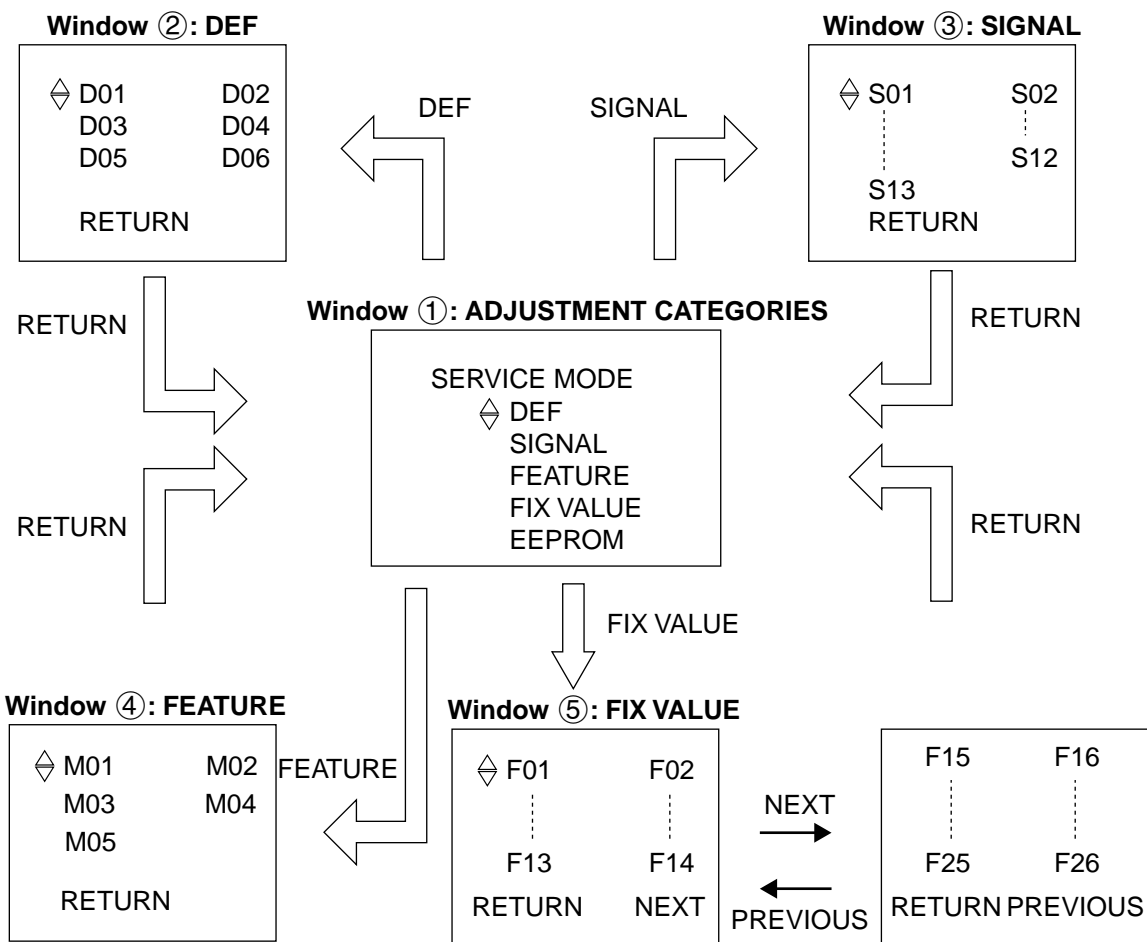


Figure A: ADJUSTMENT CATEGORIES

Press CH UP/DOWN button for selection and enter by VOL UP or VOL DOWN.

Press CH UP/DOWN button to select the adjustment item and VOL UP/DOWN to adjust the data number for each categories.

(OSD disturbance can be erased by R/C display key)

(Note: EEPROM - factory used only)

Below are the adjustments ranges and initial values for FIX VALUE category.

FIX VALUE

SERVICE POSITION	ADJUST ITEM	DATA		
		RANGE	INITIAL VALUE	(Hex)
F01	OPTION 1	00-FF	B0	B0
F02	OPTION 2	00-FF	04	05
F03	E-SAVE	00-3F	23	2A
F04	TUNER SETUP	00, 01	00	00
F05	R-TONE RD	00-7F	19	03
F06	R-TONE BD	00-7F	00	7C
F07	B-TONE RD	00-7F	00	00
F08	B-TONE BD	00-7F	12	04
F09	FM LEVEL	00-1F	0C	16
F10	AFC GAIN	00, 01	00	00
F11	G DRIVE	00, 0F	00	0F
F12	FBT BLK SW	00, 01	01	01
F13	V COMP	00-07	07	07
F14	OSD CONT	00-03	02	01
F15	SHARPNESS	00-3F	19	*1
F16	FLT SYS	00-07	00	01
F17	KILLER OP	00-07	04	02
F18	PRE SHOOT	00-03	03	00
F19	CORING	00-03	04	04
F20	DC REST	00-03	02	02
F21	BS START	00-03	01	01
F22	BS GAIN	00-03	01	01
F23	ABL START	00-07	00	00
F24	R/B ANGLE	00-0F	08	08
F25	H BLK R	00-0F	04	03
F26	H BLK L	00-0F	04	00

*1: type of tuner

TUNER TYPE	(Hex)
VTUVTST5UF770	13
VTUENV56D82-1	18
VTUENV56DA1G3	18
VTUVTST5UF670	13
VTUVTST5UF740	13

Table - A

Below are the ranges and initial values for each adjustment and in each categories.

DEF

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
D01	H-PHASE	00-1F	0C	
D02	V-SIZE	00-7F	40	
D03	V-POSITION	00-3F	20	
D04	CC-POSITION	00-FF	1A	
D05	V-LINEARITY	00-1F	10	Must be "13"
D06	V-S-CORRECTION	00-1F	10	Must be "14"

Table - B

SIGNAL

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
S01	RF AGC	00-3F	14	
S02	VIDEO LEVEL	00-07	03	
S03	Y-MUTE	00-03	00	"01": Y-MUTE, "02": V-STOP & Y-MUTE "03": Activate color killer circuit.
S04	SUB BIAS	00-FF	40	Must be "30"
S05	R-BIAS	00-FF	00	
S06	G-BIAS	00-FF	00	
S07	B-BIAS	00-7F	00	
S08	R-DRIVE	00-7F	40	
S09	B-DRIVE	00-7F	40	
S10	CONTRAST	00-7F	5A	
S11	TINT	00-7F	40	
S12	COLOR	00-7F	40	
S13	BRIGHTNESS	00-7F	40	

Note: Refer to the SERVICE ADJUSTMENT for each corresponding values.

Table - C**FEATURE**

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
M01	MS LEVEL	00-0F	0A	
M02	MTS-VCO	00-3F	20	
M03	FILTER	00-3F	1C	
M04	LOW SEPARATION	00-3F	20	
M05	HIGH SEPARATION	00-3F	1B	

Note: Refer to the SERVICE ADJUSTMENT for each corresponding values.

Table - D

Holding down both the Vol-up/Ch-down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2102.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2102.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201.
IC2102	X		Holding down both the Vol-up/Ch-down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2102.
CRT	X		Adjust items related to picture tube only.

Table - E

■ SERVICE ADJUSTMENT

Note: Before making the service adjustment, make the bus data settings.

+B Adjustment

(1) For the chassis with the +B adjustment control

1. Receive a good local channel.
2. Select VIDEO ADJUSTMENT RESET on the menu to get the video reset.
3. Connect a DC voltmeter between the +B line (at SW transformer) of R611 and the ground terminal.
4. Adjust R738 so that the voltmeter should read $128.5 \pm 0.5V / -0.25V$.

(2) For the chassis without the +B adjustment control

1. Receive a good local channel.
2. Select VIDEO ADJUSTMENT RESET on the menu to get the video reset.
3. Connect a DC voltmeter between the +B line (at SW transformer) of R611 and the ground terminal.
4. Make sure that the voltmeter reads $128.5 \pm 1.5V$.

Video Level (TV Det Video Level)

Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S02".
3. Set the data value to "02" first, then adjust the data to "04". (If out of spec, readjust the data in the range of "00" to "07" to obtain a normal contrast level.)

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S01".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.

Note: You have to exit the service mode first to select another channel.

Screen Adjustment

1. Connect to oscilloscope probe between TP854 and ground of the CRT unit.
2. Receive a good local channel.
3. Enter the service mode Signal category and set the service adjustment "S04" to step 30. Then select the service adjustment "S12" and set the data value to "00" to set the color level to the minimum level. (record the original data first). You may skip this step, if you selected a B/W picture or monoscope pattern. Set also the "S05/S06/S07" data to minimum level ("00").

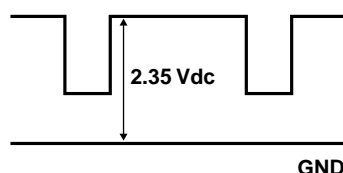


Figure B: WAVEFORM FOR SCREEN ADJUSTMENT

4. Select the service adjustment "S03" and set the data value to "01" to turn off the luminance signal (Y-mute).
5. Select the service adjustment "S14" and adjust the data value to obtain 2.35 volts as shown in **Figure B**.
6. Adjust the master screen control until the raster darkens to the point where raster is barely seen.
7. Adjust the service adjustment "S05" red, "S06" green, "S07" blue to obtain a good grey scale with normal white at low brightness level.
8. Select the service adjustment "S03" and reset data to "00". Select the service adjustment "S12" and reset data to obtain normal color level.
9. Remove probe and reset the master screen control to obtain normal brightness range.

White Balance Adjustment

1. Receive a good local channel.
2. Select the service adjustment "S12" and set the data value to "00" to set the color level to the minimum. You may skip this step, if you selected a B/W picture or monoscope.
3. Alternately adjust the service adjustment data of "S08" and "S09" until a good grey scale with normal white is obtained.
4. Select the service adjustment "S12" and reset data to obtain normal color level.

Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Receive a good local channel.
2. Set the customer tint control to the center of its range.
3. Enter the service mode and select the service adjustment "S11".
4. Adjust "S11" data value to obtain normal fresh tones.

Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position.
3. Enter the service mode and select the service adjustment "S12".
4. Adjust "S12" data value to obtain normal color level.

Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S13".
4. Adjust "S13" data value to obtain normal brightness level.

Vertical-Size, V-Linearity and V-S Correction Adjustments

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D02" for Vertical Size, "D05" for V-Linearity and "D06" for V-S Correction Adjustment.
3. Set in order "D05" for V-Linearity, "D06" for V-S Correction and set the data to get the best linearity.
4. Then adjust "D02" data until it become a proper vertical size.

Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D01".
3. Adjust "D01" data value to center the picture.

Vertical-Phase Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D03".
3. Adjust "D03" bus data to get the most acceptable vertical position.

**Note: The step range is 20 (32)+12 (3 steps)/
-20 (5 steps).
(Push once move 4 steps.)**

Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D04".
3. A black text box will appear on the screen. (see **Figure C.** below)
4. Adjust "D04" data value to balance the text box position in the center. (A=B).

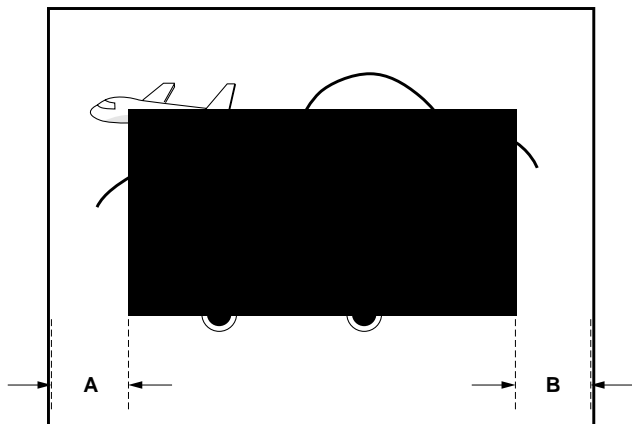


Figure C.

■ MTS ADJUSTMENT

MTS Level Adjustment

1. Feed the following monaural signal to pin (14) of IC3001.
Monaural signal: 300Hz, 245mVrms
2. Connect the rms voltmeter to pin (39) of IC3001.
3. Enter the service mode and select the service adjustment "M01".
4. Adjust the data so that the rms voltmeter reads $490 \pm 10\text{mVrms}$.

MTS VCO Adjustment

1. Keep the unit in no-signal state.
2. Connect the frequency counter to pin (39) of IC3001.
3. Connect a capacitor (100 μ F, 50V) in between positive(+) side of C3005 and ground.
4. Enter the service mode and select the service adjustment "M02".
5. Adjust the data so that the frequency counter reads $62.94 \pm 0.75\text{kHz}$.


Filter Adjustment

1. Feed the following stereo pilot signal to pin (14) of IC3001.
Stereo pilot signal: 9.4kHz, 600mVrms.
2. Enter the service mode and select the service adjustment "M03".
3. Adjust the data at the point where "OK" appears on the screen. The "OK" represents the approximate center of the adjustable range of the data.

Separation Adjustment

1. Connect the rms voltmeter to pin (39) of IC3001.
2. Receive the following composite stereo signal 1.
Composite stereo signal: 30% modulation, left channel only, noise reduction on, 300Hz
3. Enter the service mode and select the service adjustment "M04".
4. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
5. Receive the following composite stereo signal 2.
Stereo signal: 30% modulation, left channel only, noise reduction on, 3kHz
6. Enter the service mode and select the service adjustment "M05".
7. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
8. Take the above steps 1 thru 7 again for fine adjustment.

BLOCK DIAGRAM

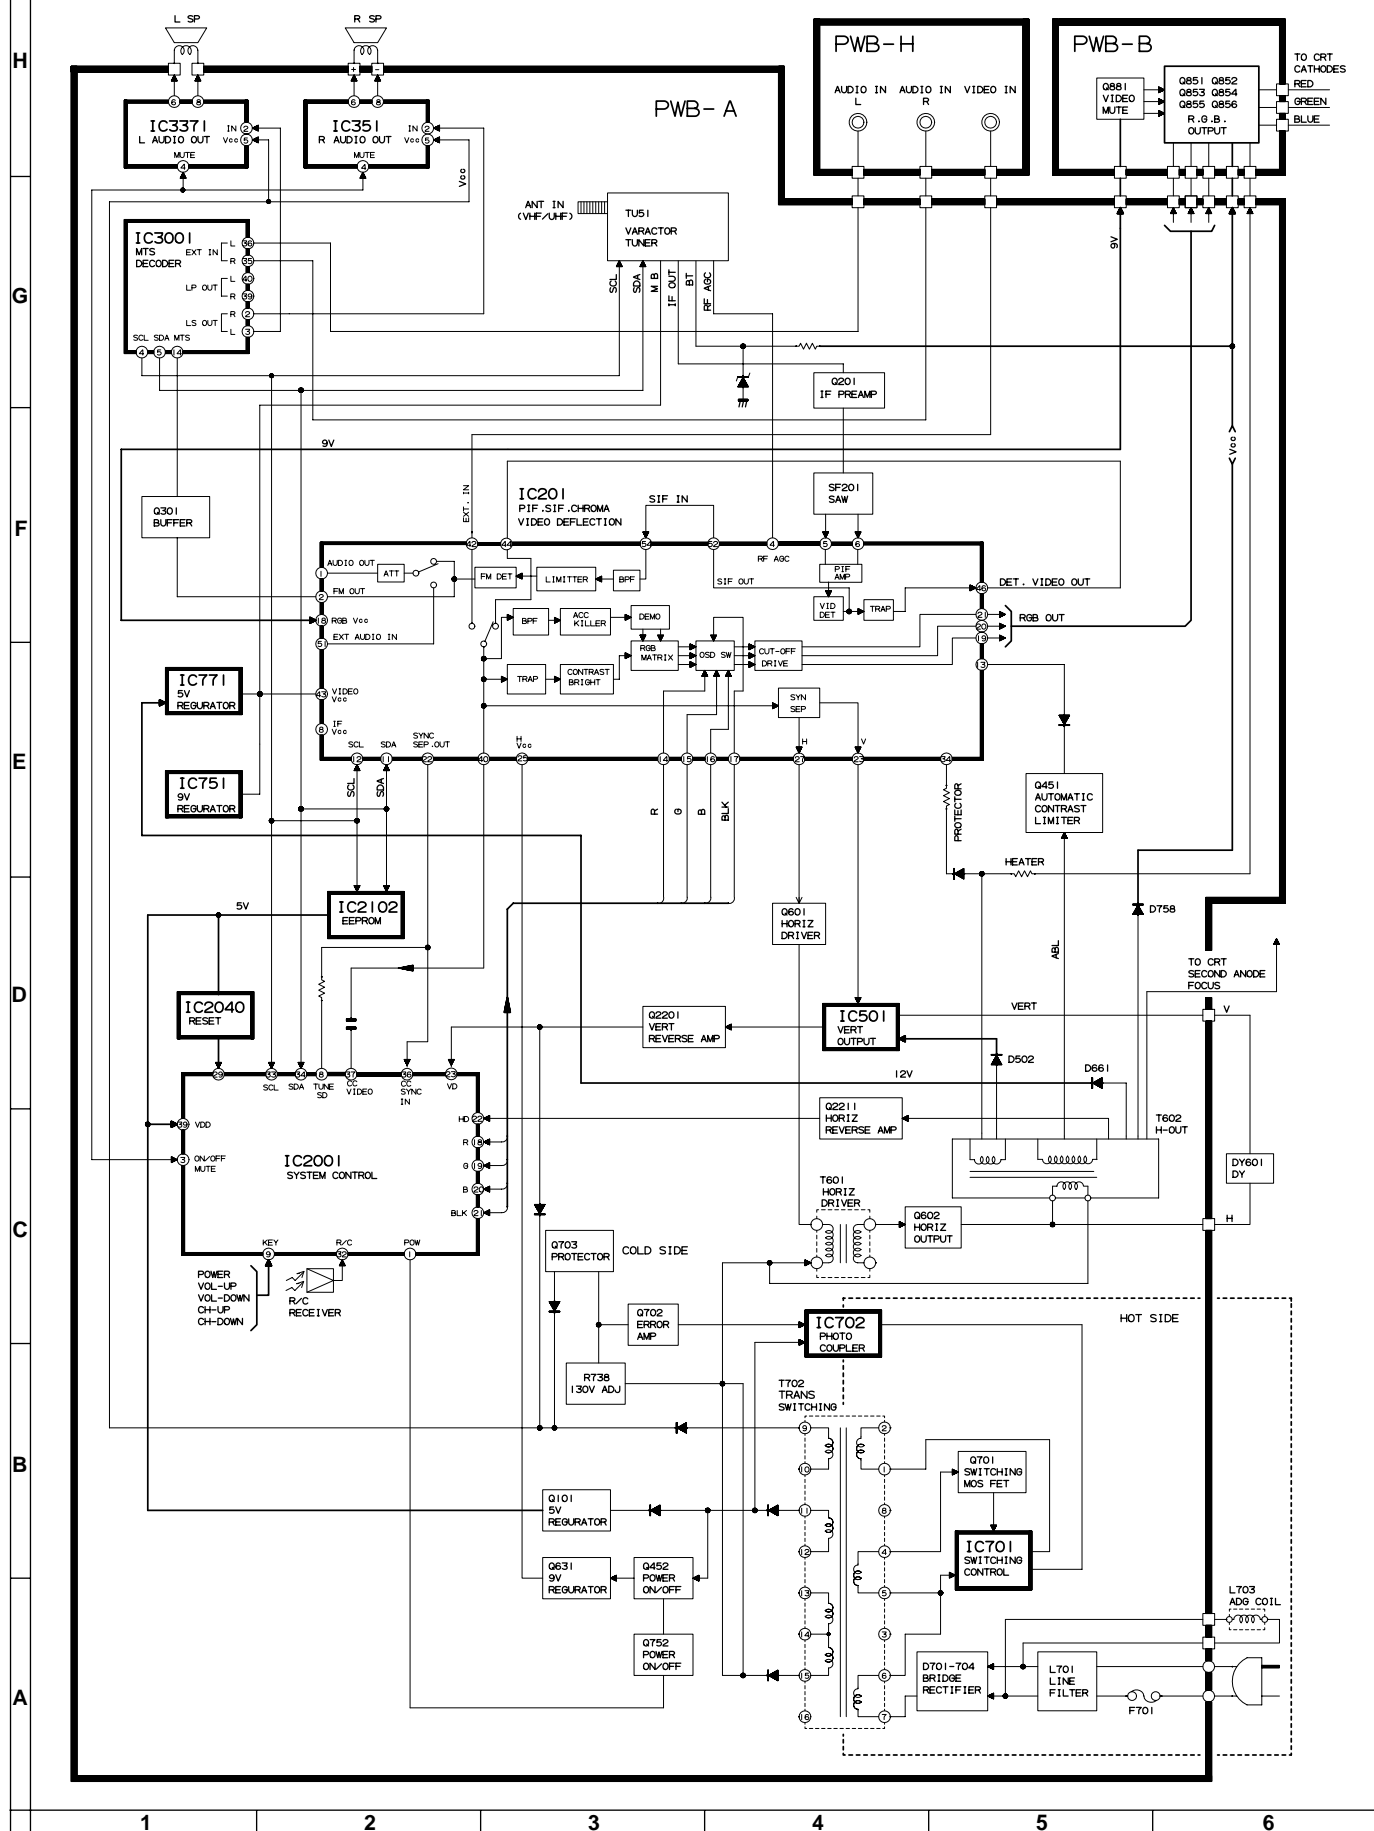

DESCRIPTION OF SCHEMATIC DIAGRAM


NOTES:

1. The unit of resistance "ohm" is omitted.
($K=k\Omega=1000\Omega$, $M=M\Omega$)
2. All resistors are 1/10 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted.
($P=pF=\mu\mu F$)
4. (G) indicates $\pm 2\%$ tolerance may be used.
5. $\overline{\text{---}}$ indicates line isolated ground.

VOLTAGE MEASUREMENT CONDITIONS:

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with $1000\mu V$ B & W or Color signal.

WAVEFORM MEASUREMENT CONDITIONS:


1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2.  indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)

 AND SHADED () COMPONENTS = SAFETY RELATED PARTS.

 MARK= X-RAY RELATED PARTS.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

WAVEFORMS

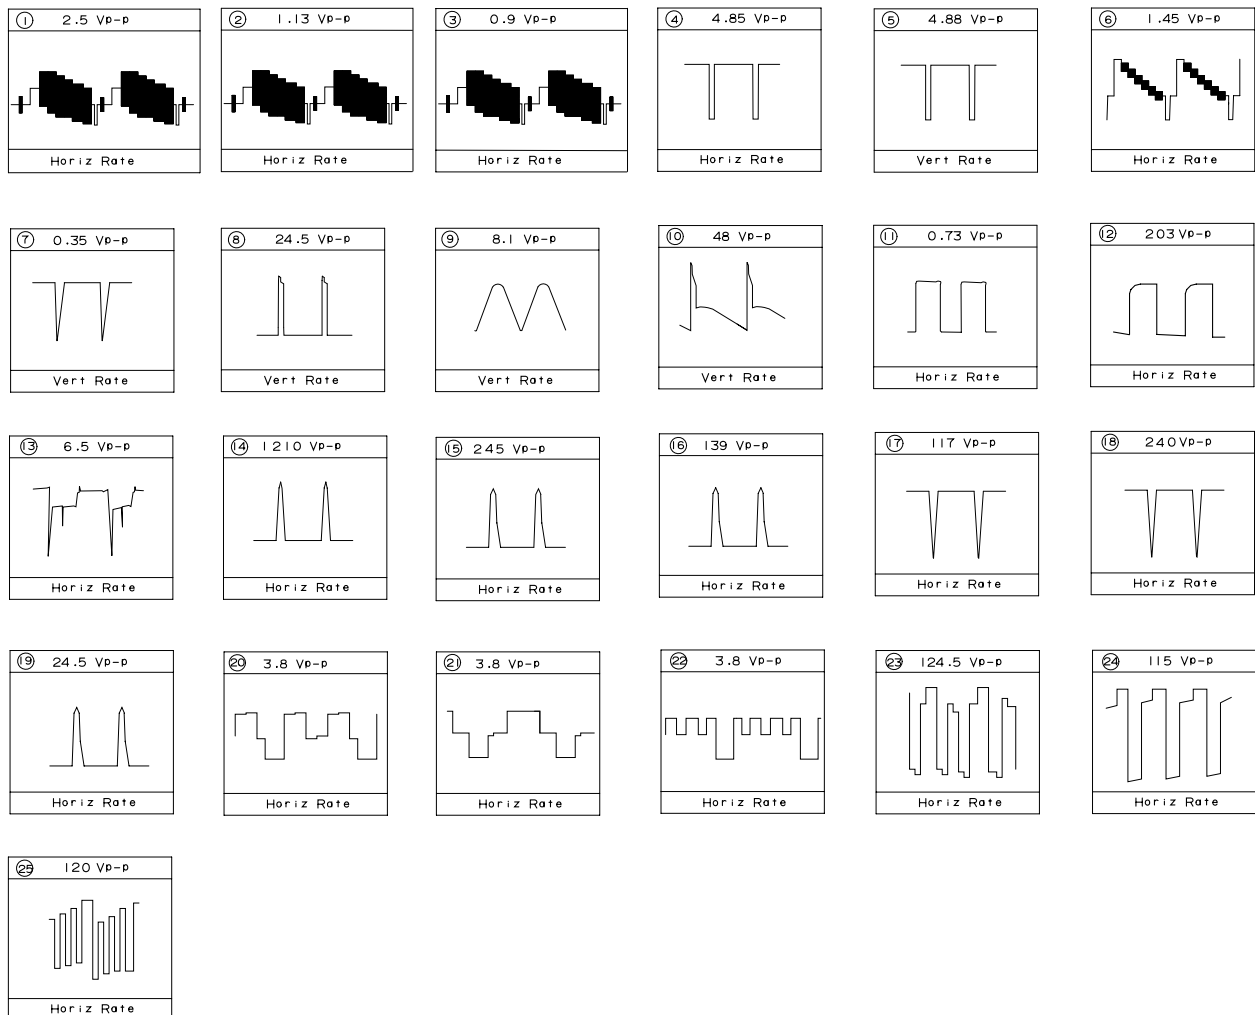

SCHEMATIC DIAGRAM: MAIN-1 Unit

