



**55L1**

## Enter factory mode:(by remote control)

- Press "V-" key. until the volume is "0".
- Press "MENU" key→display picture manual→push digital key 6568→display "FACTORY".
- Press "MENU" key→display picture manual→push digital key 6568→display "B/W BALANCE".
- Press "MENU" key→display picture manual→push digital key 6568→display "ADJUST MENU 0".
- Press "REC" key,exit factory mode.
- Press "MUTE" key:loop select next menu page.

ADJUST MENU	0
H.PHASE	11
V.SIZE	56
V.LINE	21
V.POSITION	31
V.SC	0
NT.H.PHASE	+06
NT.V.SIZE	+01
NT.V.LINE	00
NT.V.POSI	+06
NT.V.SC	0

ADJUST MENU	1
FORCE 60Hz	0
CROSS B.W	0
R-Y/B-Y G.BL	8
R-Y/B-Y ANG	8
B-Y DC LEVEL	8
R-Y DC LEVEL	8
SECAM B-Y DC	8
SECAM R-Y DC	8

ADJUST MENU	2
RF.AGC	25
VOLUME OUT	127
ZOOM SIZE	100
WIDE SIZE	35
H.BLK.LEFT	4
H.BLK.RIGHT	4
OSD.H.POSI	28
OSD.V.POSI	16
SCR.H.POSI	2
SETUP SELECT	0