

| | | | | | | | | | | | | | | | | | | | | |
|---------|-------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Ref No. | IC502 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | | | | | | |
| CD PLAY | 0 | 5.2 | 5.2 | 0 | 3.3 | 5.2 | 5.2 | 5.2 | | | | | | | | | | | | |
| STANDBY | 0 | 0.3 | 0.3 | 0 | 0.1 | 0 | 0 | 0 | | | | | | | | | | | | |
| Ref No. | IC551 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | | | | |
| CD PLAY | 2.6 | 2.6 | 0 | 2.6 | 0 | 5.2 | 3.3 | 0 | 1.2 | 1.6 | 1.6 | 1.6 | 3.3 | 3.3 | 0 | 0 | | | | |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0.2 | 0.1 | 0 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0 | 0 | | | | |
| Ref No. | IC552 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | | | | |
| CD PLAY | 1.6 | 1.6 | 0 | 1.6 | 3.3 | 0 | 0 | 5.1 | 5.1 | 2.6 | 2.6 | 2.6 | 0 | 5.2 | 0 | 5.2 | | | | |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0.4 | 0.5 | 0.2 | 0 | 0.1 | 0 | 0.1 | | | | |
| Ref No. | IC701 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 3.3 | 3.3 | 0 | 3.3 | 0.1 | 0 | 0 | 0 | 0 | 0 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0.1 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC701 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 0 | 0 | 0 | 0 | 0 | 3.3 | 0 | 3.3 | 3.2 | 0.1 | 3.2 | 0.1 | 3.3 | 0.1 | 3.2 | 0.1 | 3.3 | 3.3 | 0.1 | 3.3 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0 | 0.1 | 0 | 0.1 | 0 | 0.1 | 0.1 | 0 | 0.1 | 0 |
| Ref No. | IC701 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | | | | | | | | | | | | |
| CD PLAY | 0.1 | 3.3 | 0.1 | 3.3 | 0 | 0 | 0 | 0 | | | | | | | | | | | | |
| STANDBY | 0.1 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0 | | | | | | | | | | | | |
| Ref No. | IC751 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 3.3 | 0.1 | 3.3 | 0.1 | 0.1 | 0 | 0.1 | 1.1 | 3.3 | 0.2 | 1.2 | 0 | 0.1 | 3.3 | 3.2 | 3.3 | 3.3 | 0 | 3.3 | 0 |
| STANDBY | 0.1 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC751 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 3.1 | 0 | 0 | 0 | 0 | 0 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 3.3 | 1.5 | 3.3 | 0 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC751 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | | | | | | |
| CD PLAY | 0 | 0 | 3.3 | 3.3 | 0 | 0 | 0 | 0 | 3.3 | 0 | 0 | 0 | 0 | 0 | | | | | | |
| STANDBY | 0 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0 | 0.1 | 0 | 0 | 0 | 0 | 0 | | | | | | |