

Ref No. MODE	IC6601																			
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0	0	0	1.8	1.2	0.4	0	2.5	0	0	0	3.3	-14	-14	-20	-22.3	-24	-20.6	-20.6
STANDBY	0	0	0	0	1.9	1	0	3.4	2.6	0	0	0	3.3	-14	-14	-18.5	-22.6	-22	-22.6	-20
Ref No. MODE	IC6601																			
	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	-16.7	-24.5	-24.6	-22.6	-14.7	-22.6	-16.7	-22.7	-22.7	-25.1	-23.3	-22.8	-23.1	-22.8	-22.8	-22.9	-22.7	-22.8	-22.7	-22.9
STANDBY	-16.7	-24.5	-22.6	-22.2	-20.7	-22.6	-23	-22.6	-24.6	-25	-22.3	-21	-22	-22.8	-22.4	-23	-22	-22.2	-22.8	-22.8
Ref No. MODE	IC6601					Q6600				Q6641										
	41	42	43	44		E	C	B		E	C	B								
CD PLAY	-22.9	-22.5	3.3	0		3.2	-0.1	2.8		-0.3	3	-0.3								
STANDBY	-22.2	-22.8	3.3	0		3.3	0	2.9		0	3.1	0								
SA-AK770EB/EG PANEL P.C.B.																				