 


Stereo connection cable


White (L)
Red (R)

**Connecting other audio components****PHONO terminals**

Connect to a turntable only. Do not connect any other sound source to these terminals.

The short-pin

The short-pin in the PHONO jacks is there to prevent noise. Leave it inserted when not using these jacks. Do not insert into any of the other jacks, as this can cause damage.

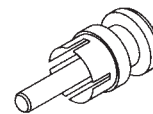**LINE 1 and LINE 2 terminals**

Connect to extra components, such as a tuner, second CD player, etc.

When connecting a graphic equalizer

Connect it between the PRE OUT terminals of this unit and the INPUT terminals of the power amplifier. **B**

If sound quality is not satisfactory, connect it between this unit's TAPE terminals and the tape deck. **C**

