



Refer to the numbers in parentheses for chapter references.

1 Standby/on switch [⏻], [⏻/I]

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

2 Alphanumeric buttons

To set a 2-digit number
Example: 16: [≥ 10] → [1] → [6]
To set a character
Example: B: [2] → [2]

3 Delete a programmed track

Delete a selected track in a playlist

4 Select source

[MEMORY, USB]: Select internal memory or USB
[MEMORY]: Select internal memory
[USB]: Select USB
[CD]: Select disc
[RADIO, EXT-IN]: Select radio, USB, music port or AUX

5 Basic operation

[▶/II]: Playback or pause operation
[■]: Stop playback or recording
[◀◀], [▶▶]: Skip track
Select preset radio station
[◀◀], [▶▶]: Search track
Tune in to the radio station
[◀◀/◀◀], [▶▶/▶▶]: Skip and search track
Select preset radio station

6 Select the sound effects

7 Start the title search

8 View the information shown on the display panel.

Decrease the brightness of the display panel

Press and hold the button to use this function. To cancel, press and hold the button again.

9 Recording operation for USB and internal memory

[CD HI-SPEED REC]: CD high-speed recording
[●/II, USB REC]: USB recording
[●/II, MEMORY REC]: Internal memory recording
[REC MODE]: Set the record mode

10 Set the play timer and record timer

11 Set the clock and timer

12 Set the sleep timer

Automatically switch off the system

When you are in disc or USB source, the auto off function switches off the system if you do not use the system for 30 minutes. Press and hold the button to use this function. To cancel, press and hold the button again.

13 Set the program function

14 Adjust the volume of the system

15 Mute the sound of the system

Press the button again to cancel. "MUTE" is also canceled when you adjust the volume or when you switch off the system.

16 Set the play menu item

Set the radio menu item

17 Make playlist

18 [▲, ▼]: Skip album

Adjust clock setting
[◀, ▶]: Select the item in the menu
[OK]: Confirm the setting

19 Set the edit mode for USB or internal memory