

## **Factory menu adjustment methods**

### **3.1 Enter/exit factory adjustment method**

Use remote control, press "MENU" button, then press 6483, "M" will appear on screen to show that you have entered the factory adjustment method, press "STANDBY" to exit it. Use factory remote control, press the "PRESET" and "TEST" button, then the screen display "M" which means you have entered into the factory adjustment mode, press the "TEST" to exit.

### **3.2 select adjustment item and adjust data**

After entering factory adjustment mode, press 1-4 number buttons to select menu 1- menu 4; to enter into MENU0, MENU5-MENU9, you may return to MENU1-MENU4 or just after you enter into "M" interface, quickly press "CHILD LOCK" button and then the number button (0,5-9) to enter into relative menus. Press "CH+" and "CH-" to select and "V+" and "V-"to adjust.

At "program" item of MENU1, press "V+", "V-" or the number button 0-9 to switch channel, only after exit the "program" item you can do other operation.

### **3.3 User purview**

a). Factory adjustment mode menu1-menu4: only debugging worker, service checker, craftwork technician, designer may operate.

b). Factory adjustment mode menu0, menu5-menu9: only craftwork technician, designer may operate.