


6.2. Main Unit Key Button Operation

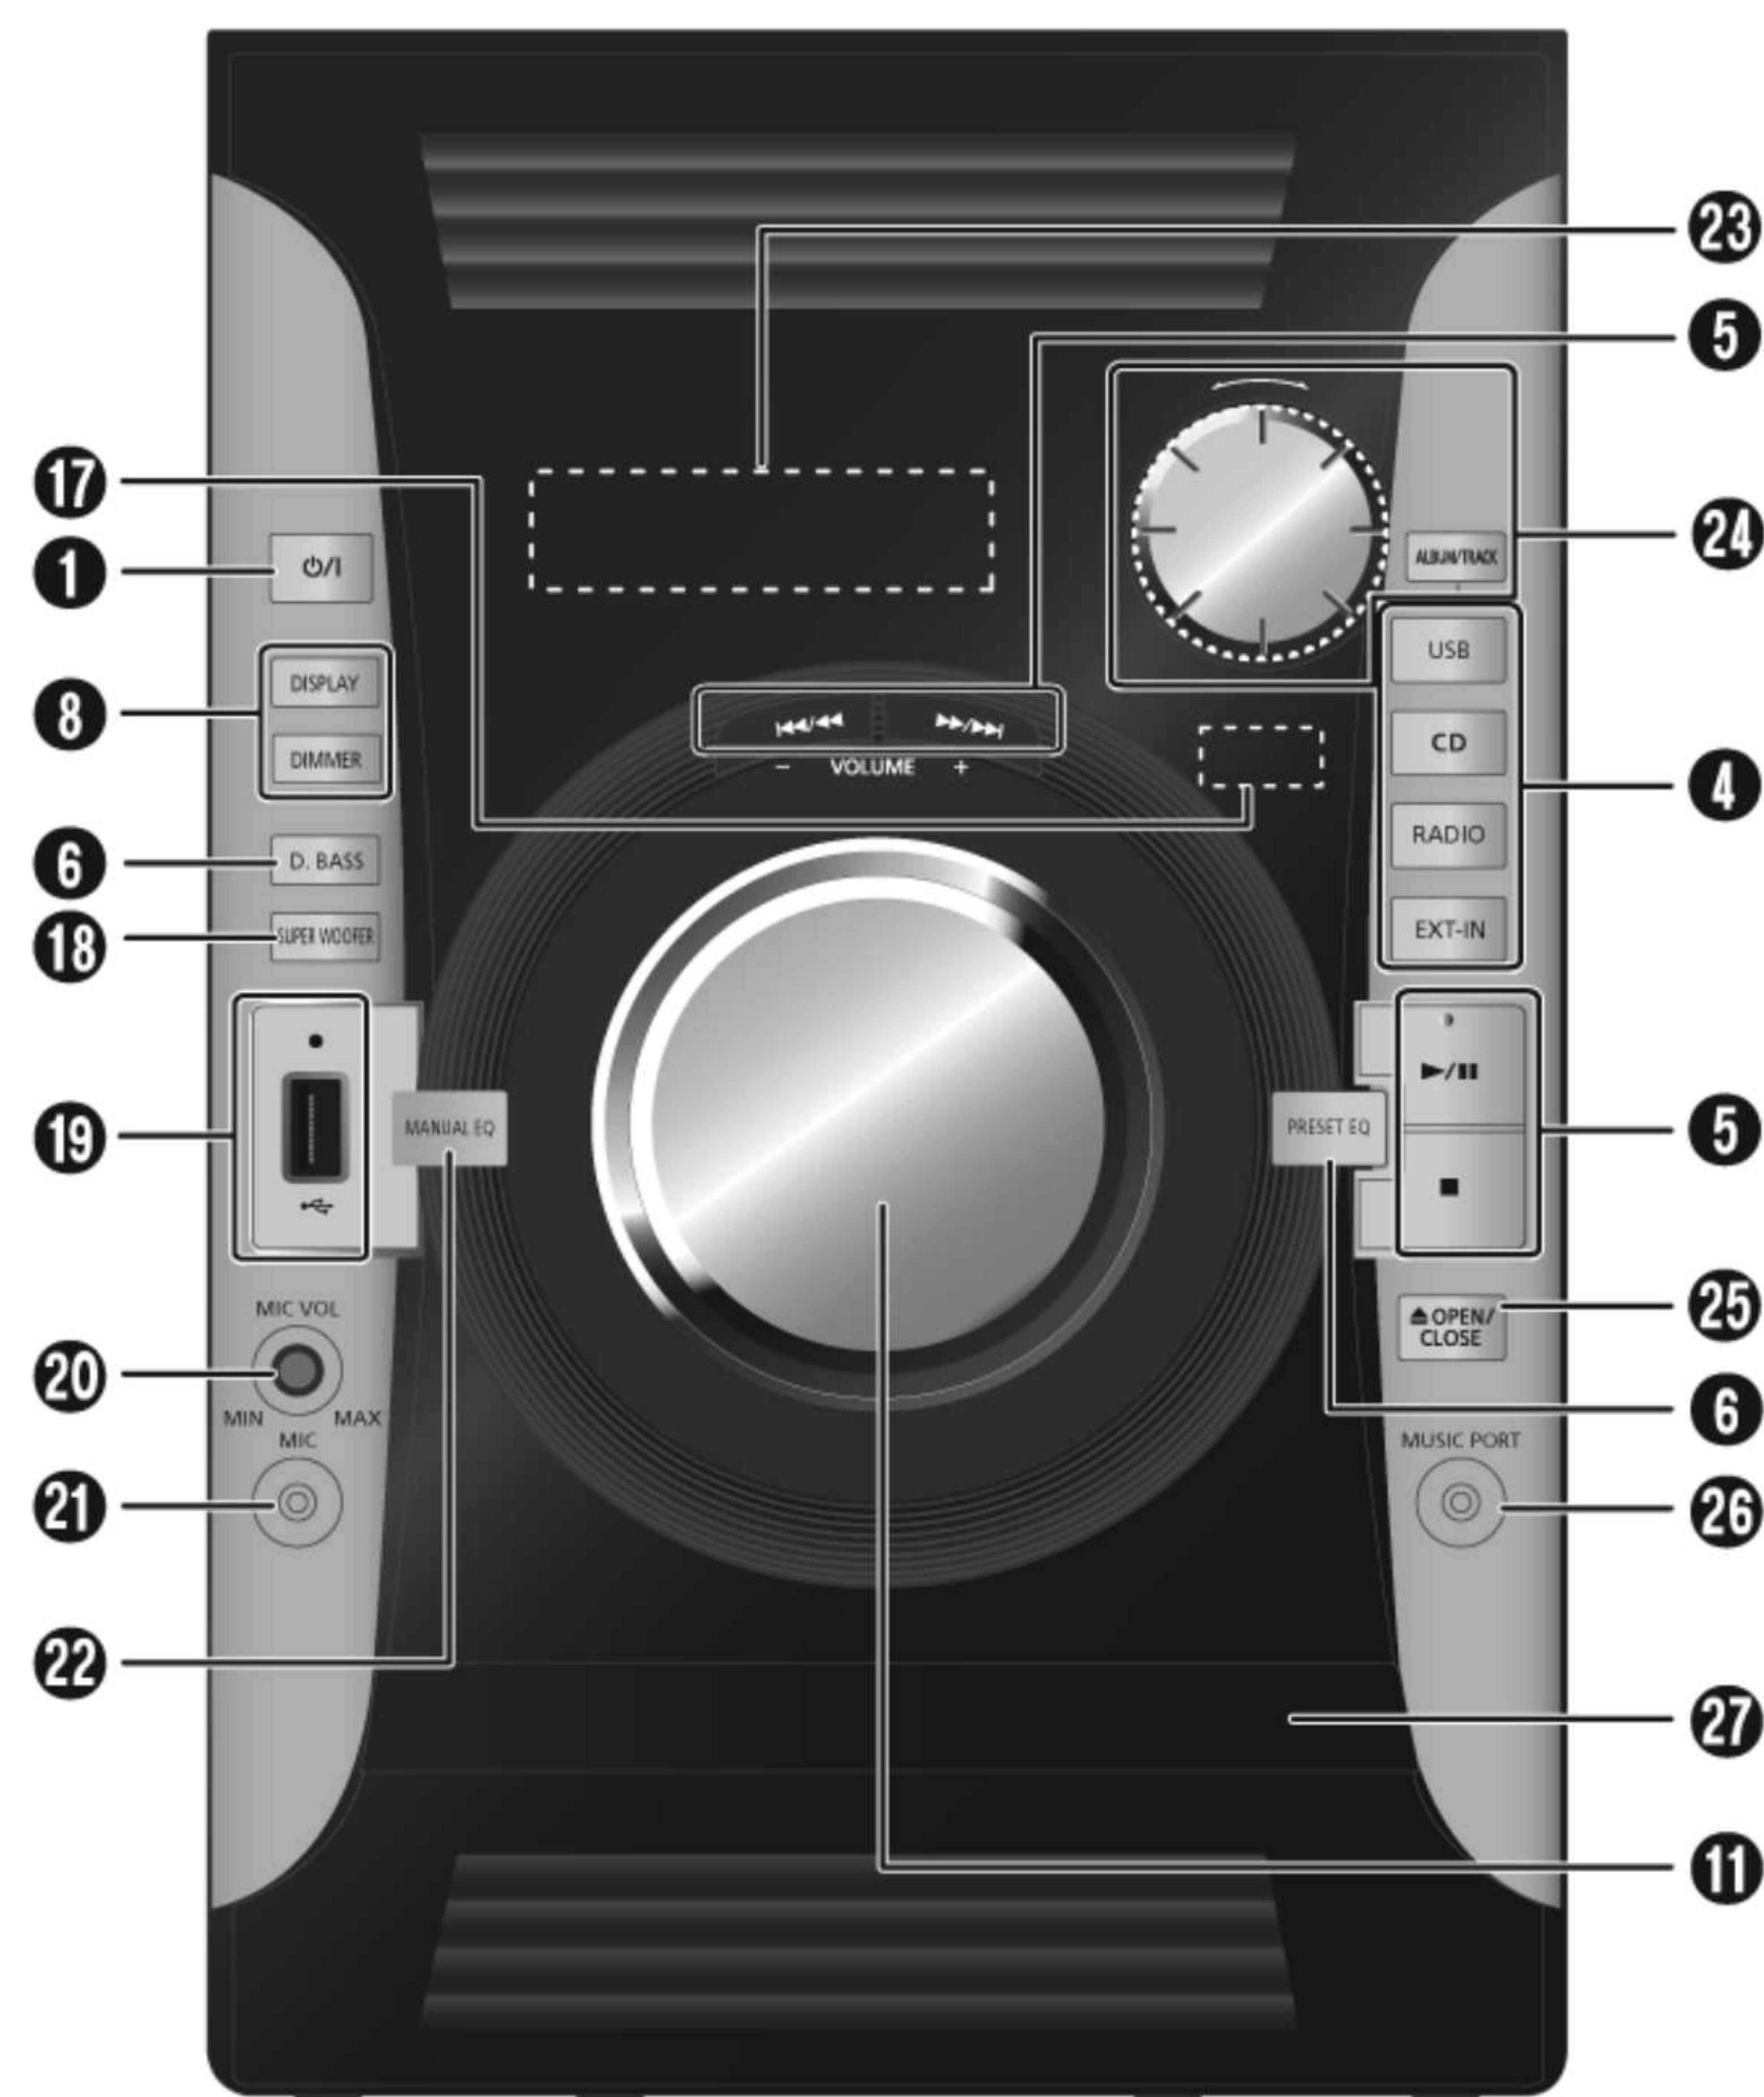

- 1 Standby/on switch** [⏻], [⏻/⏶]
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- 4 Select audio source**
- 5 Basic playback control**
- 6 Select the sound effects**

- 8 View content information**
Decrease the brightness of the display panel
Press and hold the button to use this function.
To cancel, press and hold the button again.
On main unit, press the button to use this function or press again to cancel.
- 11 Adjust the volume of the system**
- 17 Remote control sensor**
Distance: Within approximately 7 m (23 ft)
Angle: Approximately 20° up and down, 30° left and right
- 18 Set Super Woofer function**
- 19 USB port** (USB icon)
- 20 Adjust the volume of the microphone**
- 21 Microphone jack**
- 22 Select the bass, mid or treble effect**
- 23 Display panel**
- 24 Browse tracks or albums**
CD
Turn the knob to browse the track.
Press [▶/⏸] to start playback from the selection.
MP3
Press [ALBUM/TRACK] to select album or track and then turn the knob to browse.
Press [▶/⏸] to start playback from the selection.
- 25 Open or close the disc tray**
- 26 Music port jack**
- 27 Disc tray**