

SCHEMATIC DIAGRAM - 4


— : +B SIGNAL LINE ▨ : PLAYBACK SIGNAL LINE ▩ : AUX SIGNAL LINE
 - - : -B SIGNAL LINE ▧ : RECORD SIGNAL LINE ▤ : MAIN SIGNAL LINE

TO **C**
 PANEL CIRCUIT
 (CP601) ON
 SCHEMATIC DIAGRAM-10

B MAIN CIRCUIT

TO **J**
 DECK
 CIRCUIT
 (CN1001) ON
 SCHEMATIC
 DIAGRAM-14

TO **H**
 CD LOADING
 CIRCUIT
 (CN1) ON
 SCHEMATIC
 DIAGRAM-11

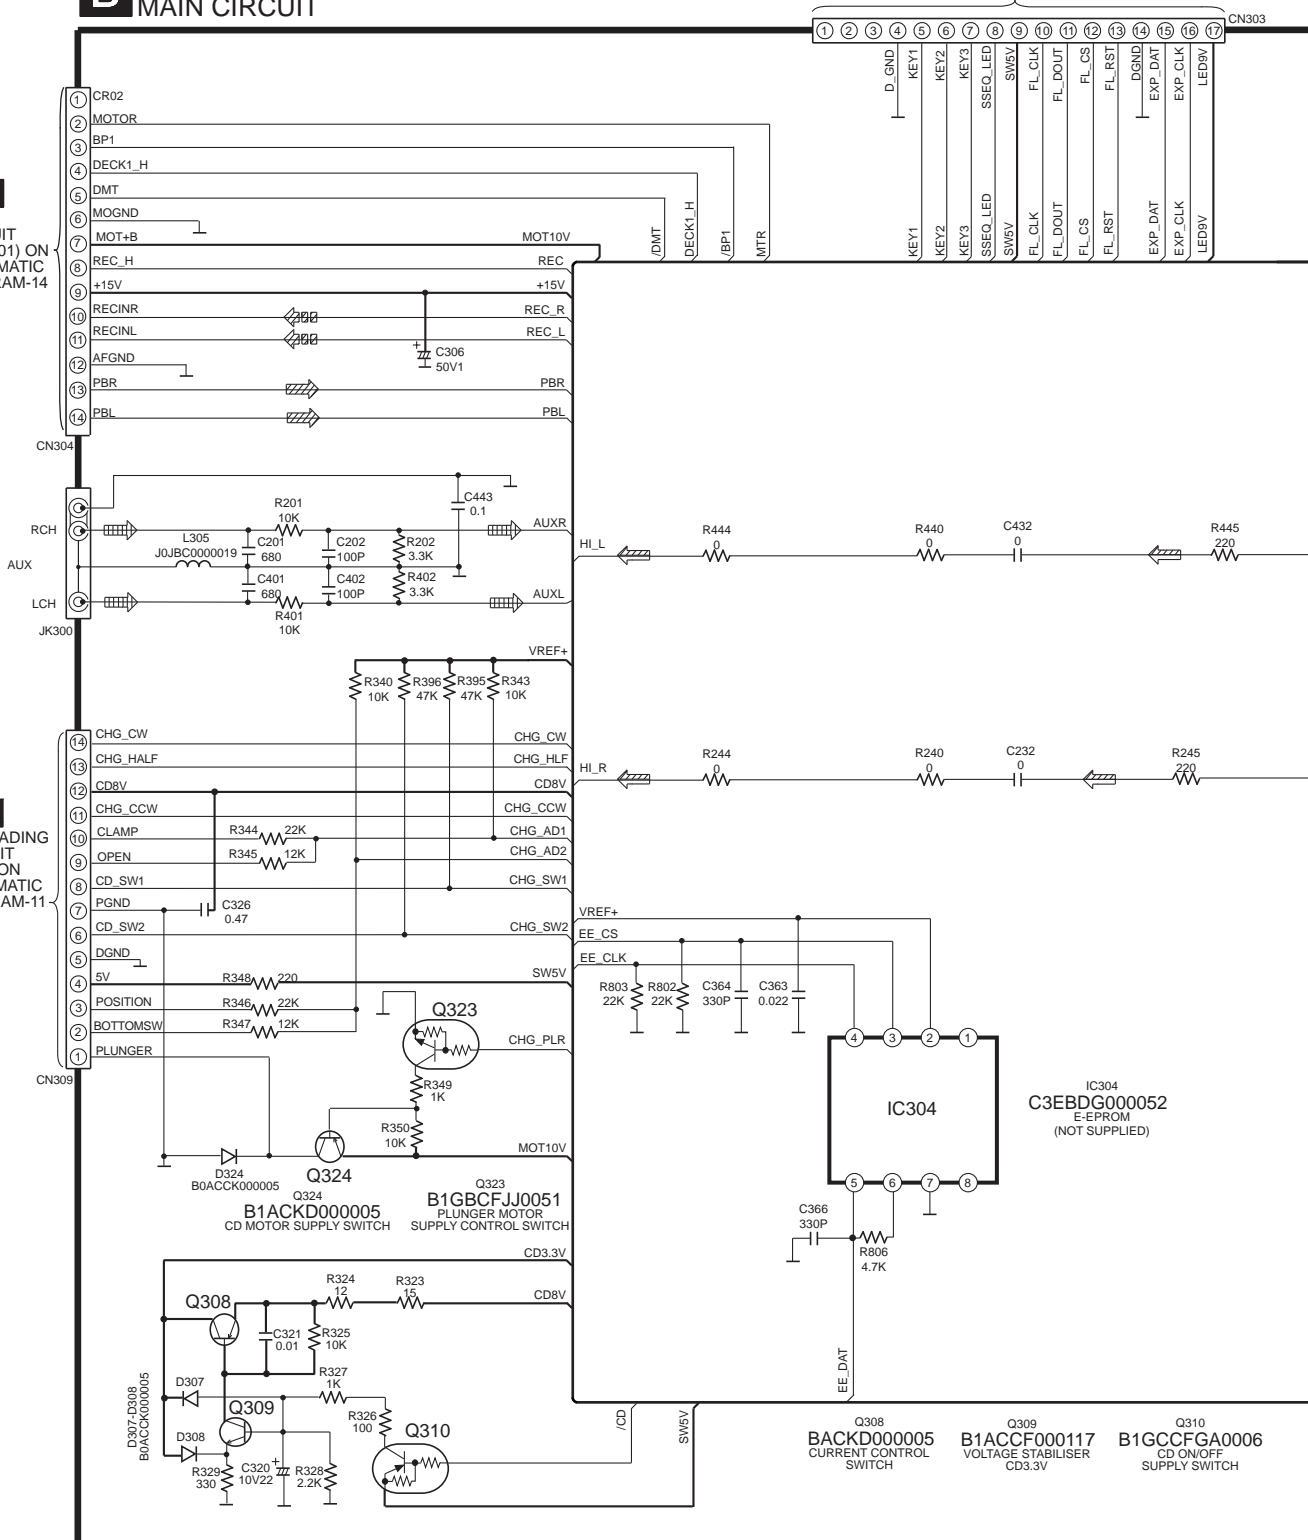


— : +B SIGNAL LINE
- - : -B SIGNAL LINE

 : MAIN SIGNAL LINE

TO **C**
PANEL CIRCUIT
(CP602) ON
SCHEMATIC DIAGRAM-10

B MAIN CIRCUIT

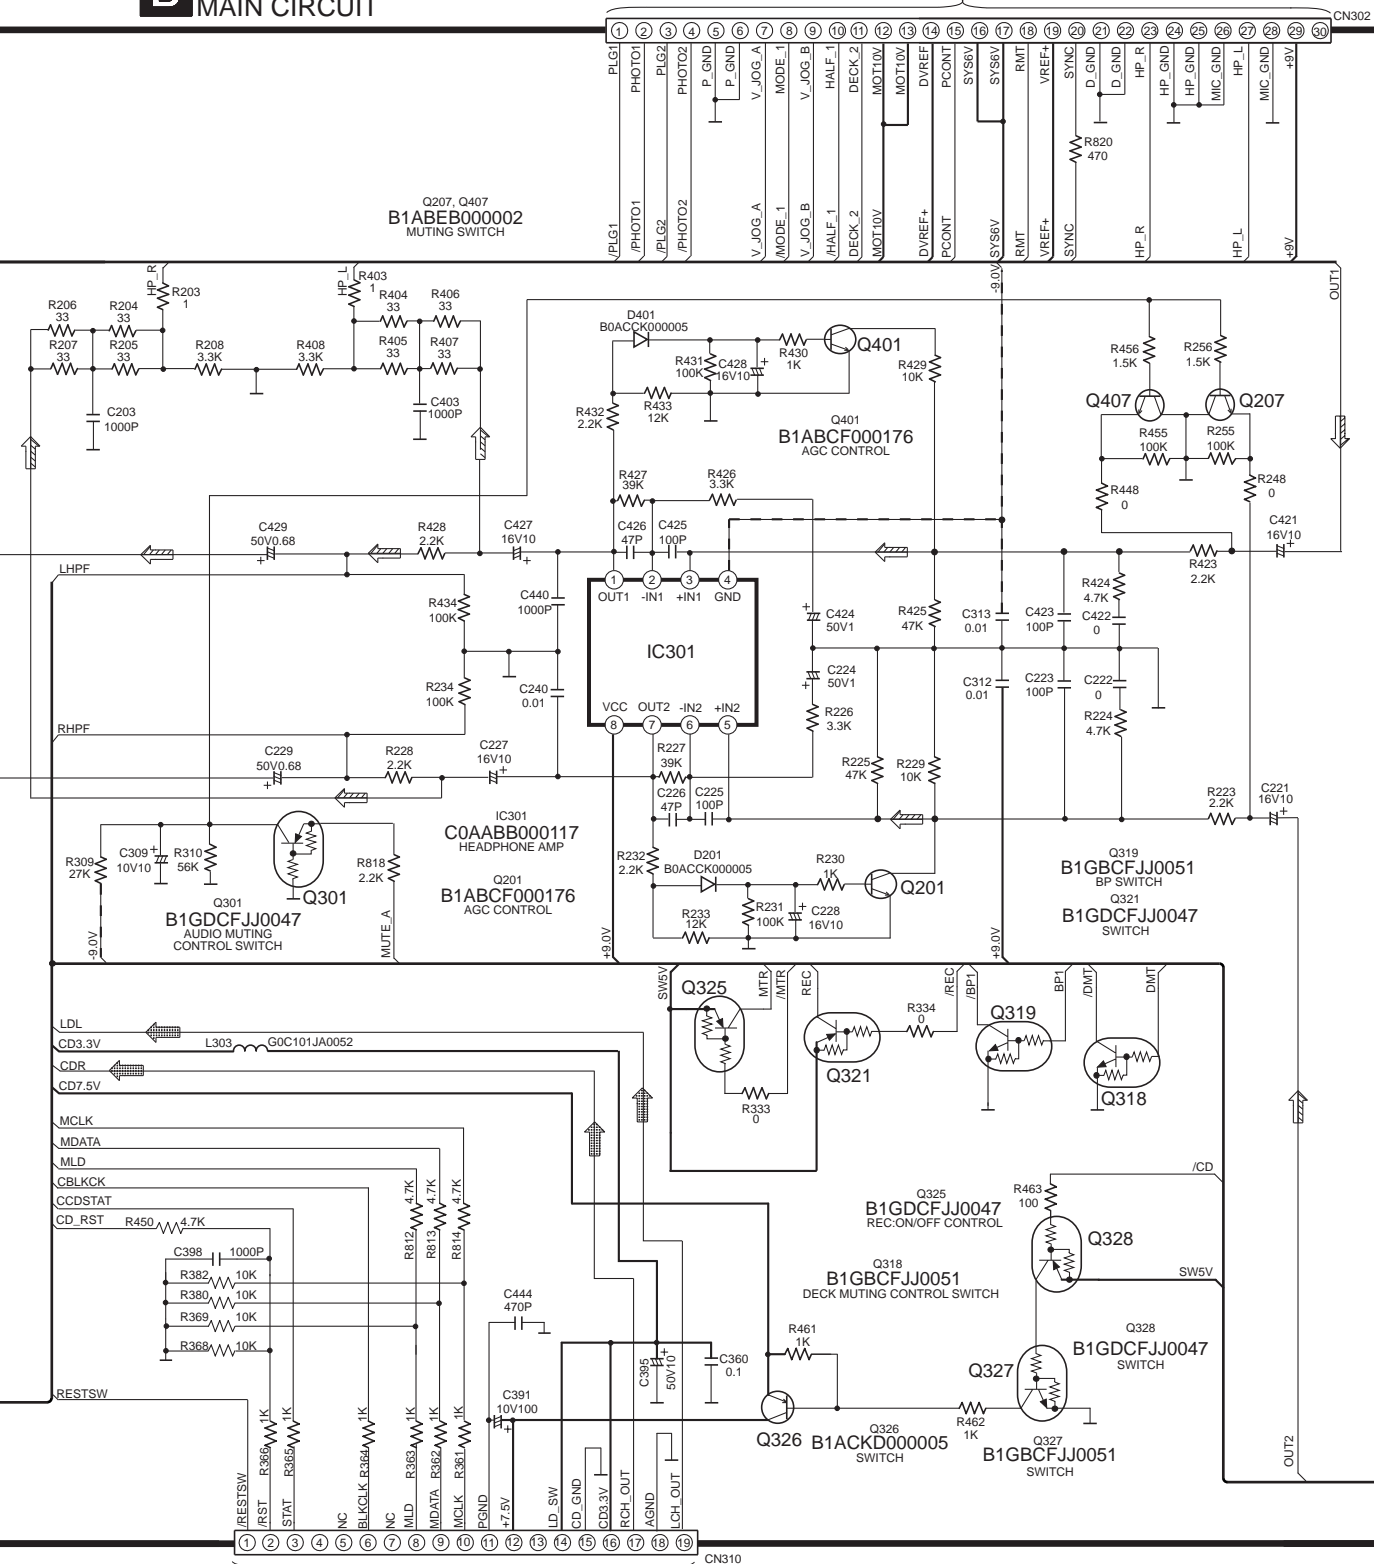


TO **A**
SERVO CIRCUIT
(CN702) ON
SCHEMATIC DIAGRAM-2

B MAIN CIRCUIT


Q316
B1ACCF000094
SWITCH

Q312
B1GBCFJJ0051
PCONT SWITCH

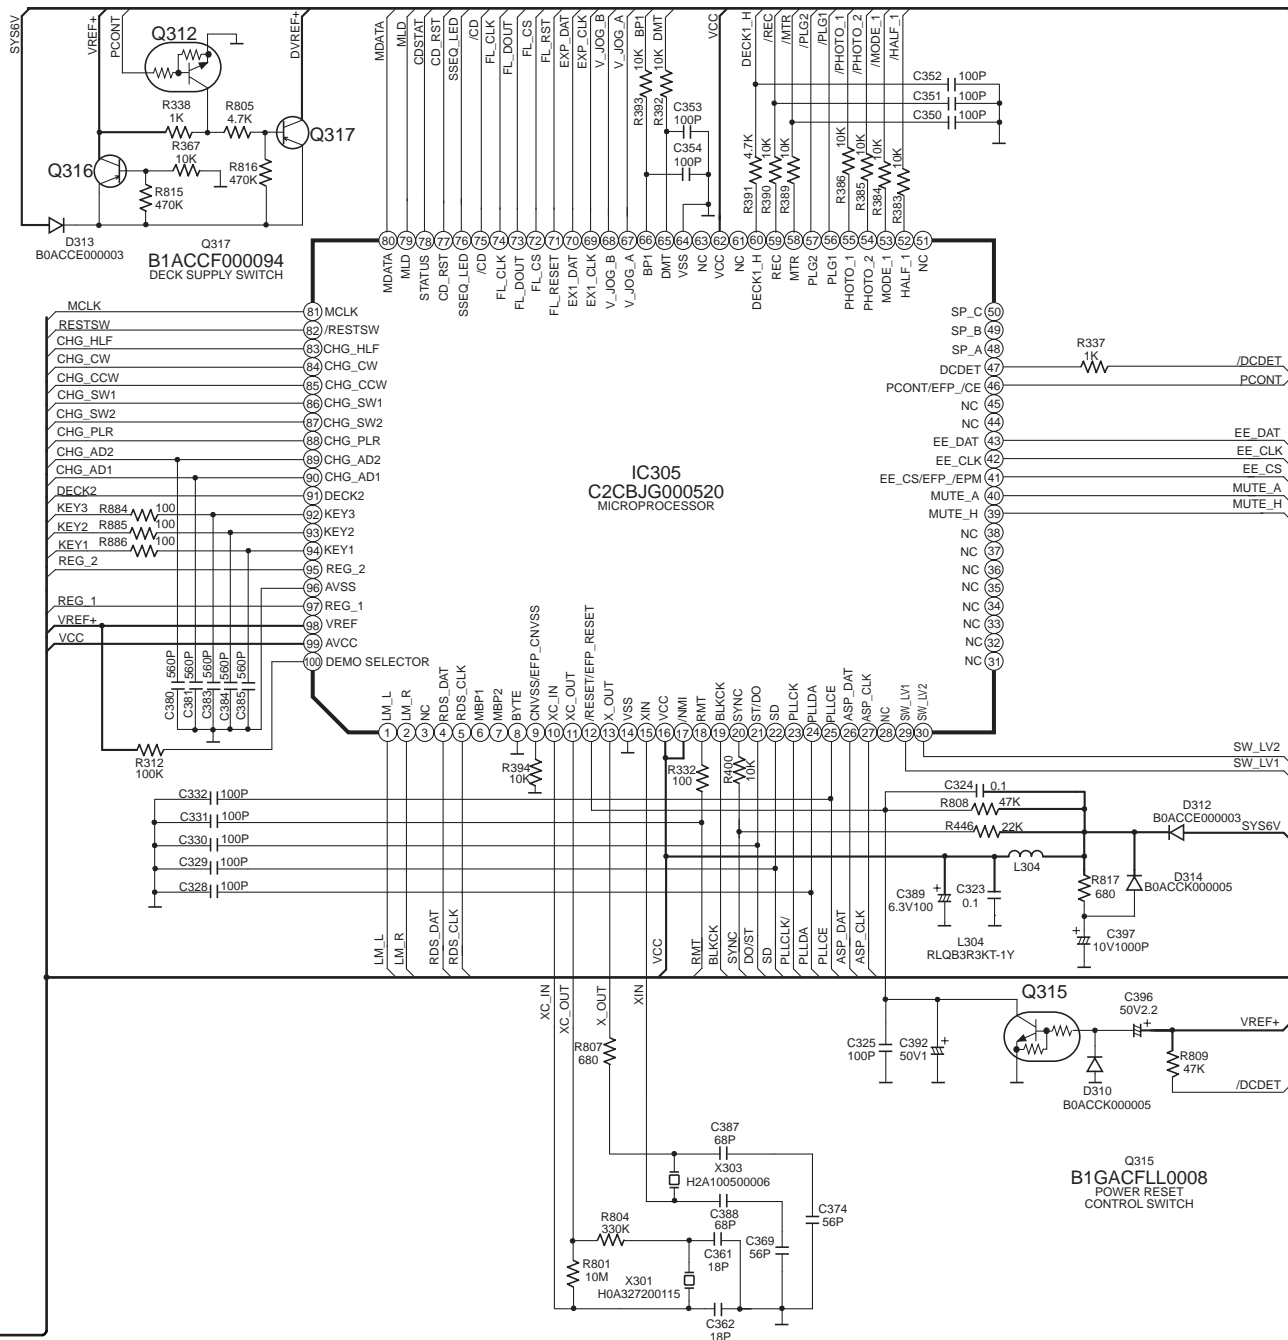

B MAIN CIRCUIT

— : +B SIGNAL LINE

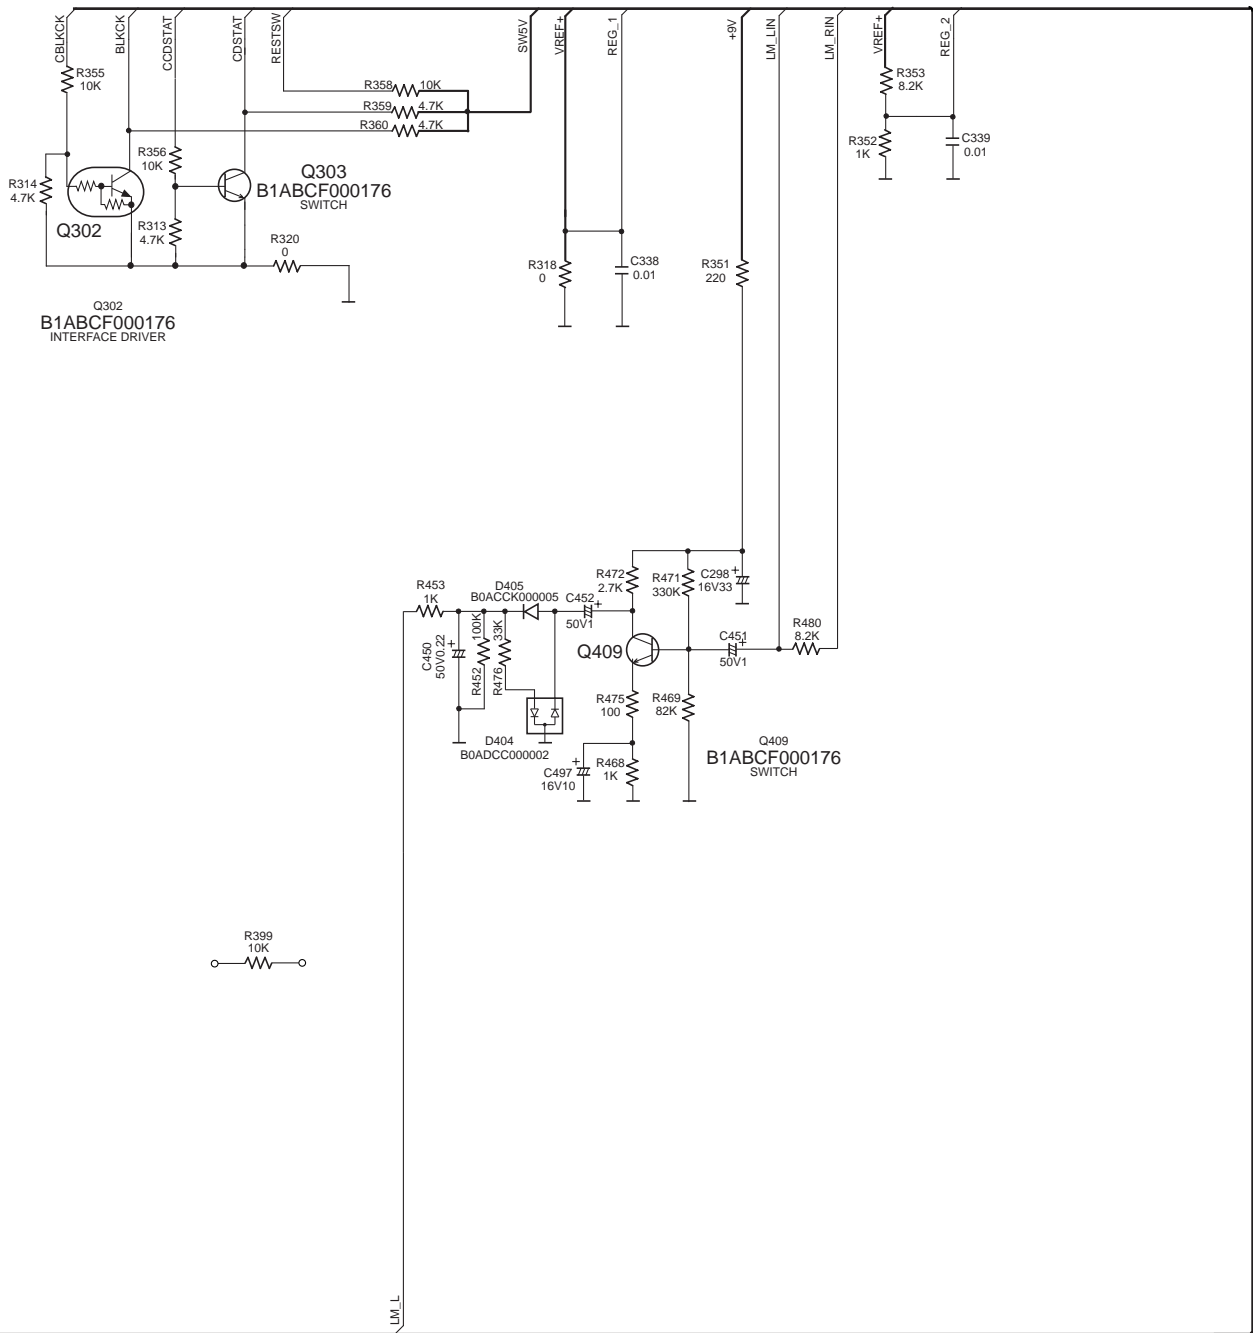

B MAIN CIRCUIT

— — : -B SIGNAL LINE

 : CD SIGNAL LINE

 : PLAYBACK SIGNAL LINE

 : RECORD SIGNAL LINE

