



Cooling Fan

A47(A), A48(B)
FC Control ECU

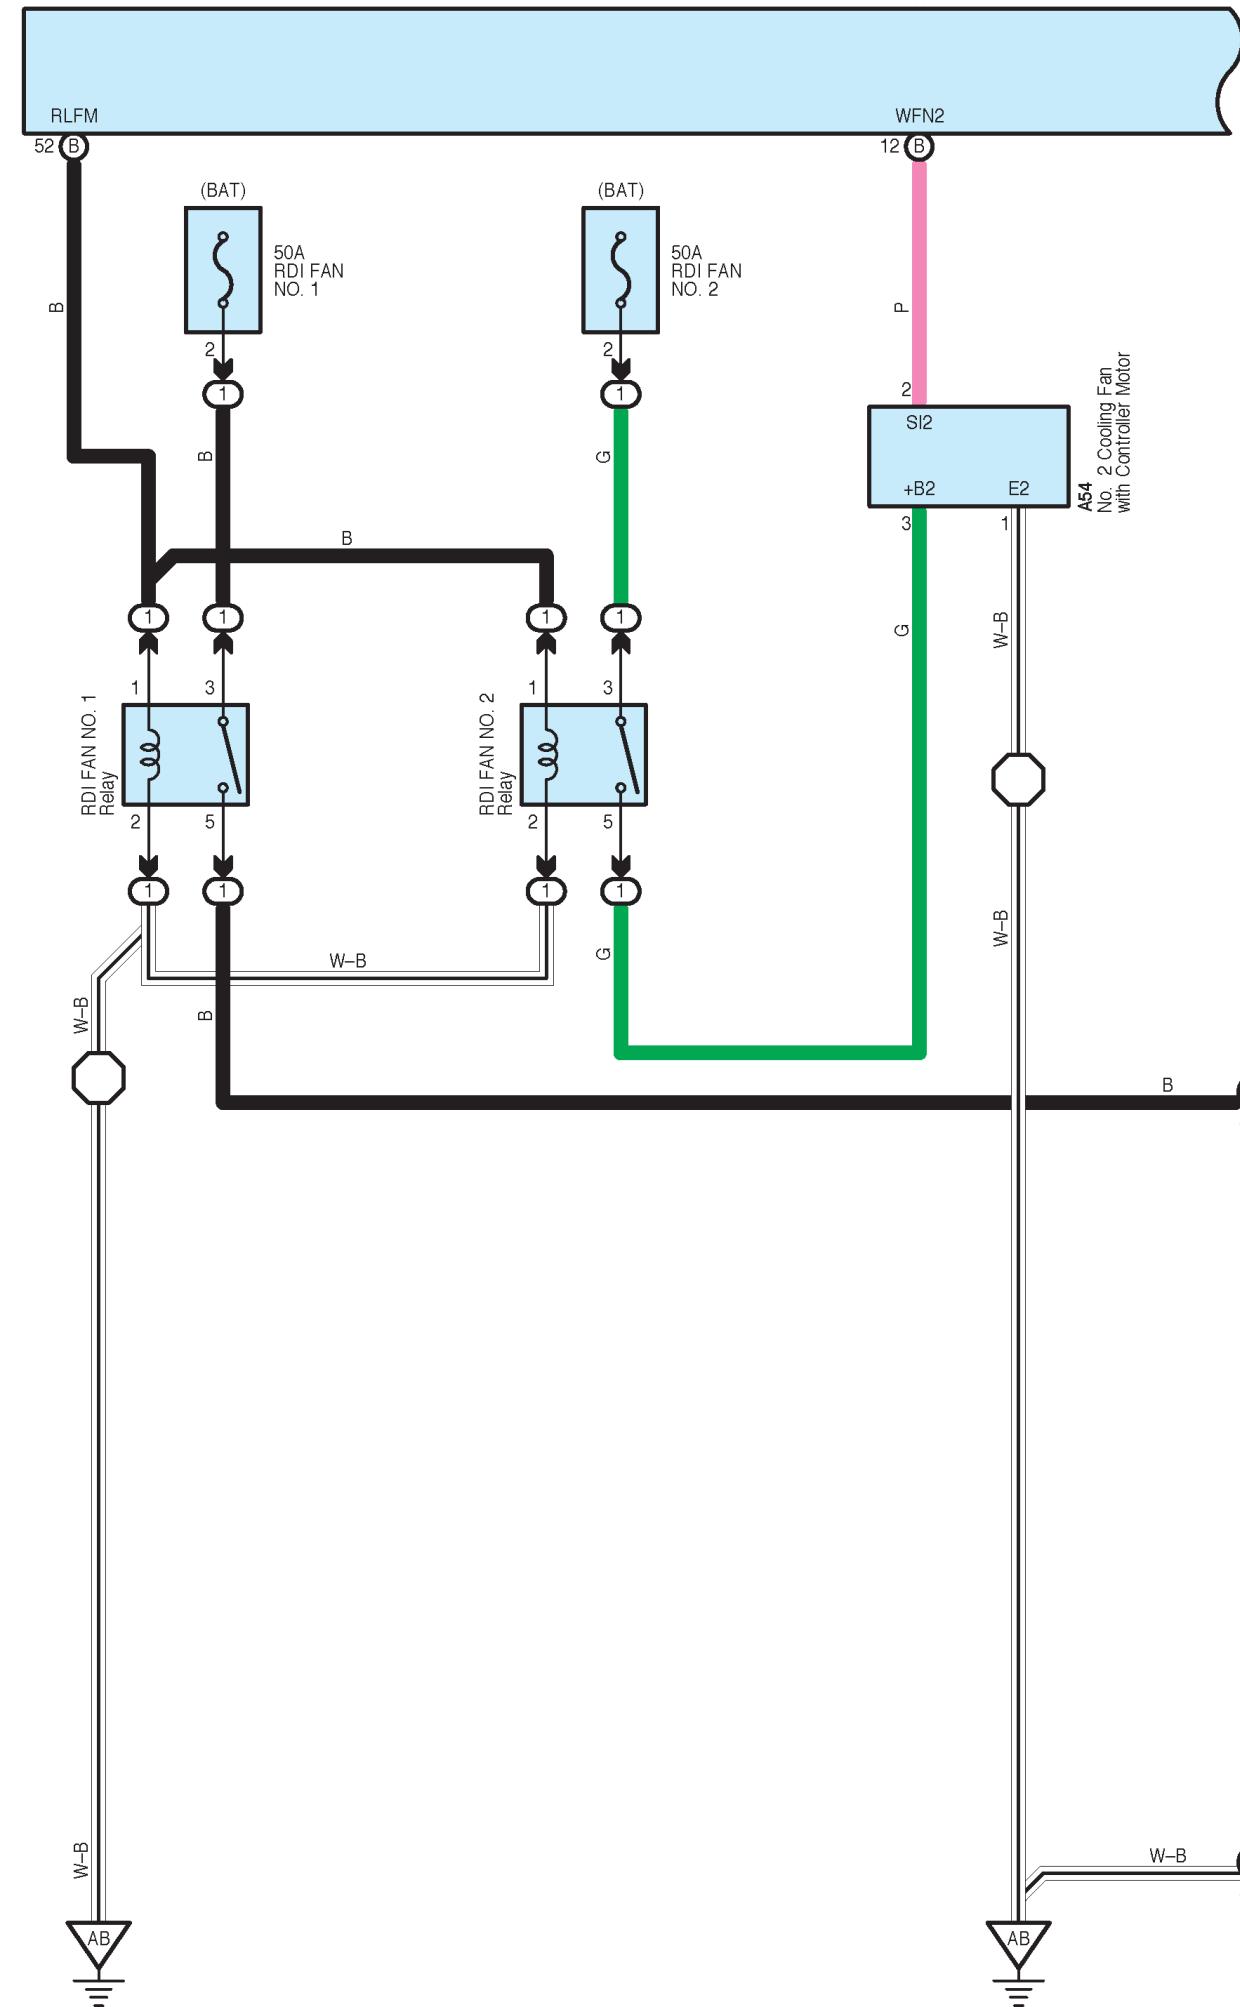


Cooling Fan

A47(A), A48(B)
FC Control ECU

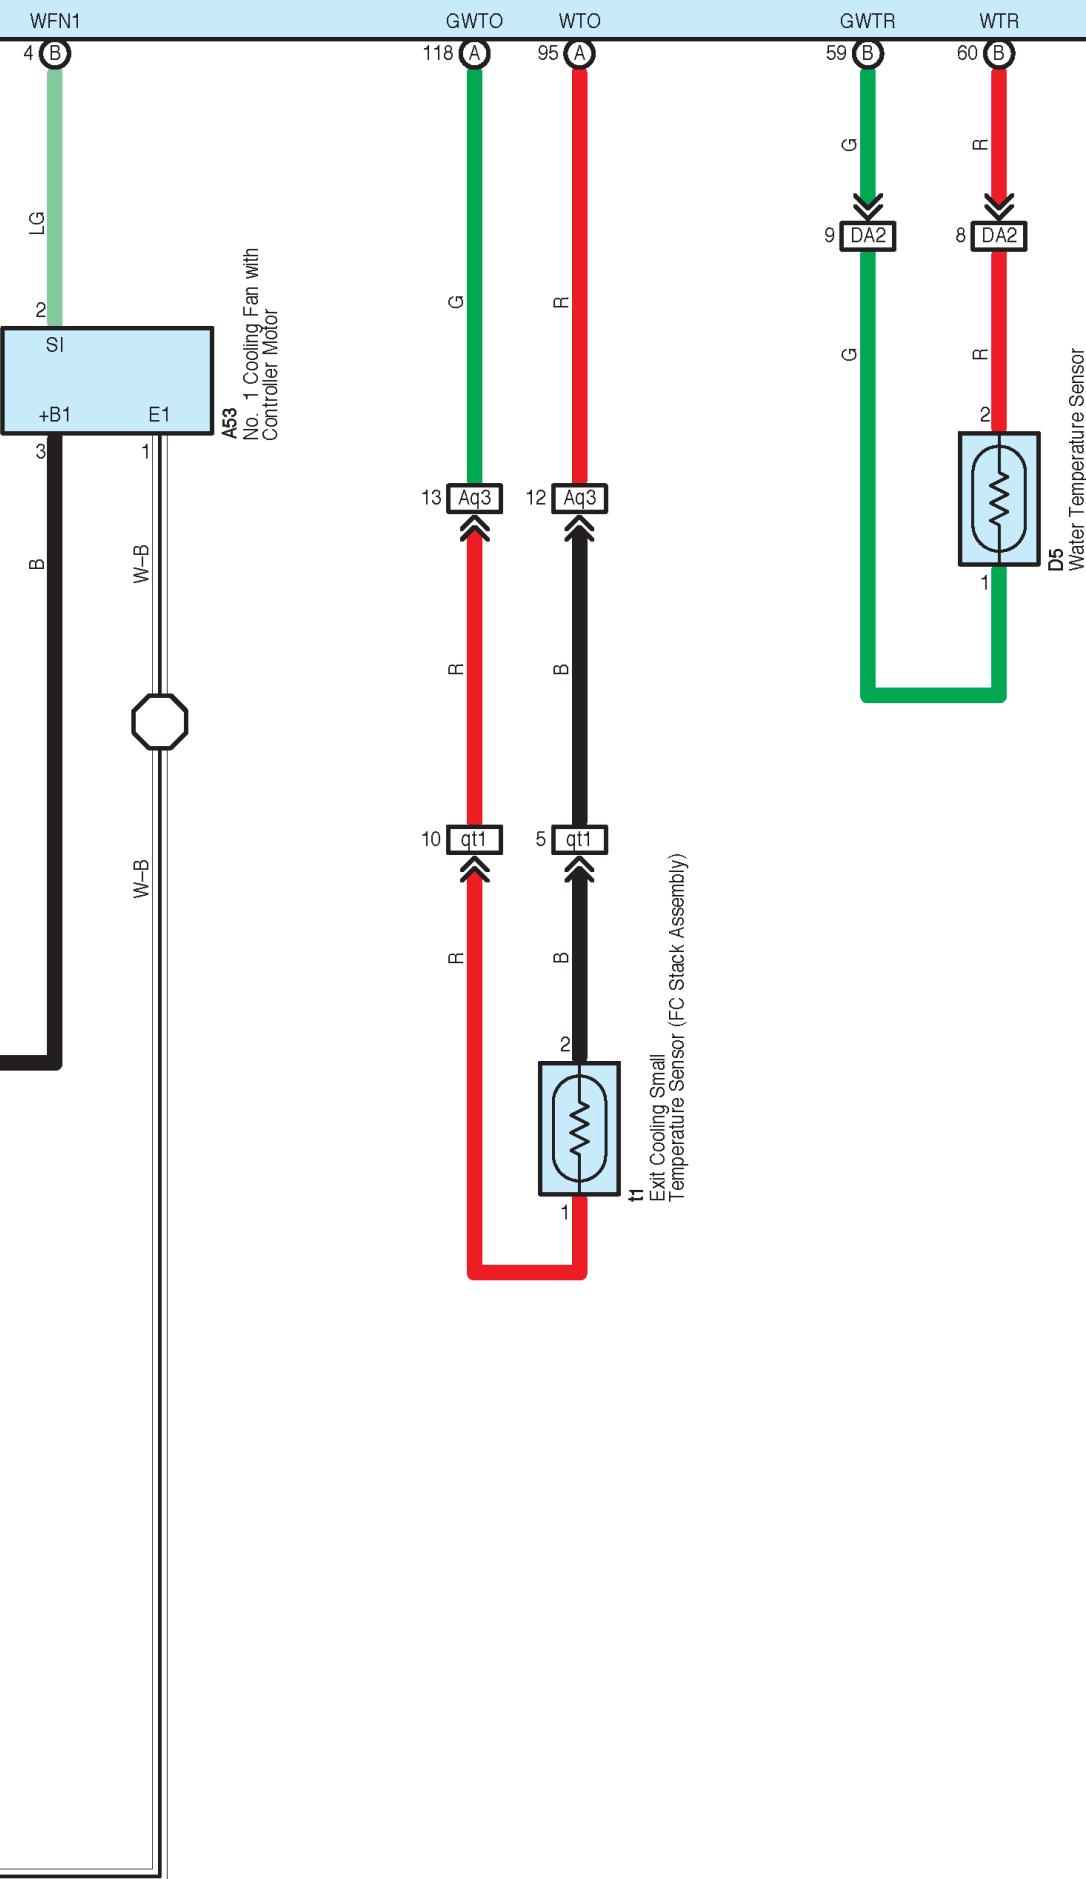

Cooling Fan


A47(A), A48(B)
FC Control ECU

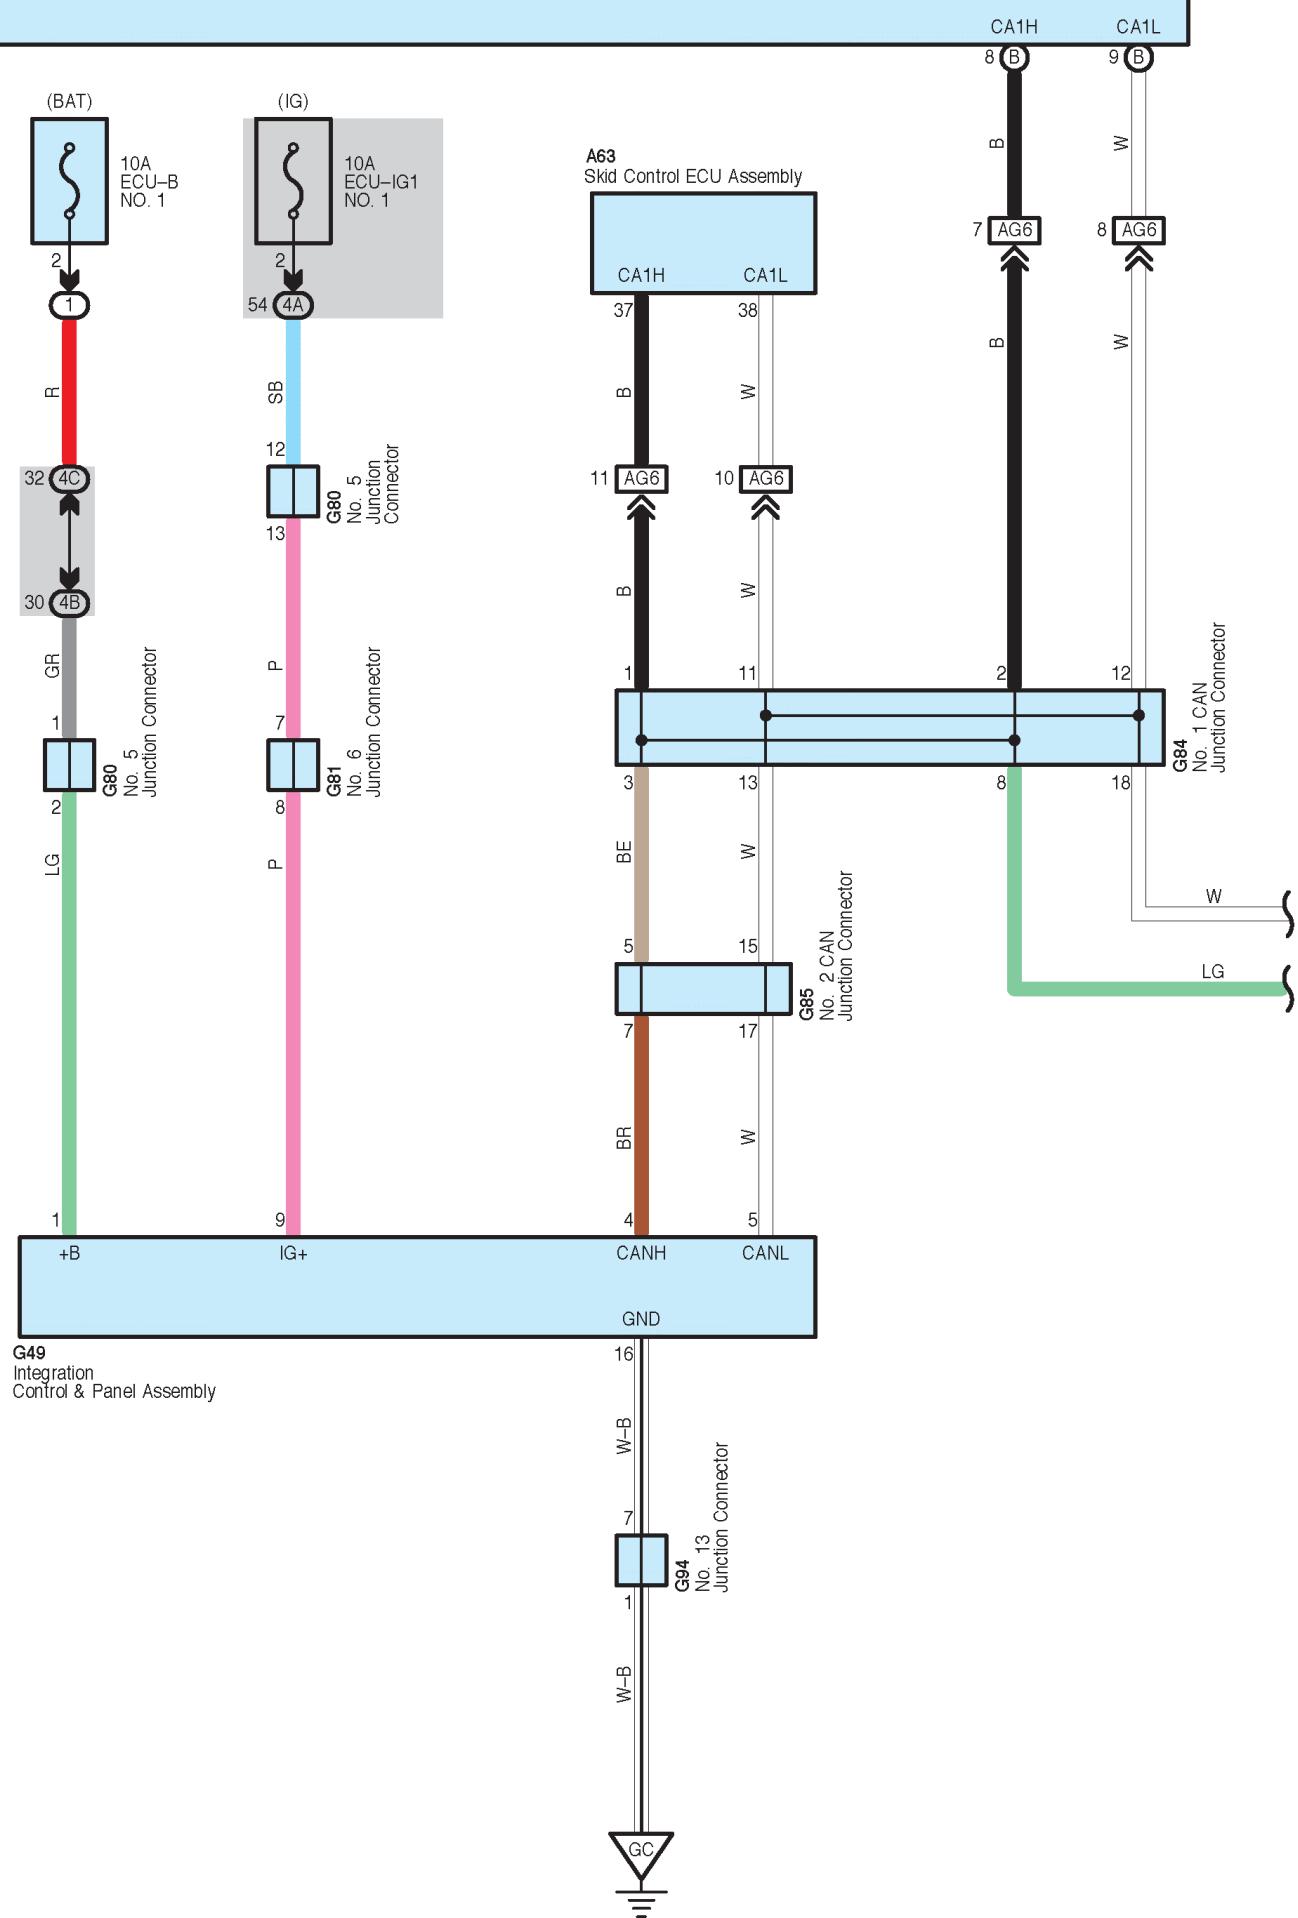

Cooling Fan

G43(B)


Air Conditioning Amplifier Assembly

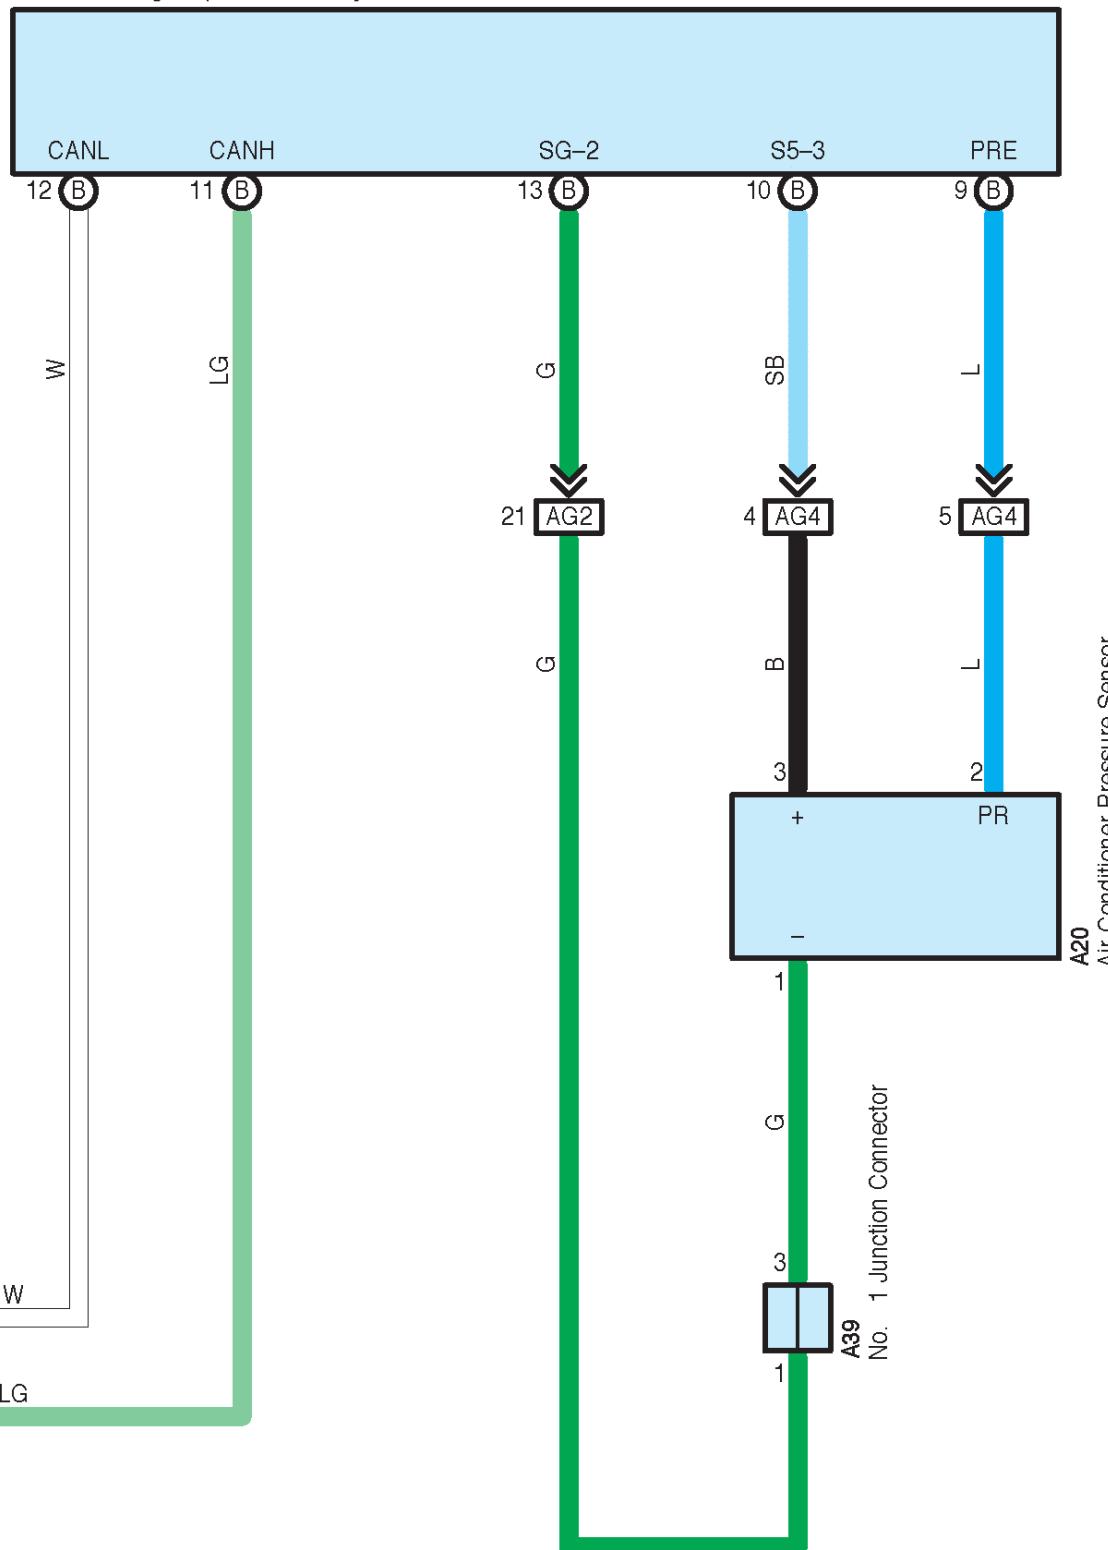

Note :


Please refer to the Multiplex Communication System (CAN) section for information regarding the shielded communication lines.

Dynamic Radar Cruise Control

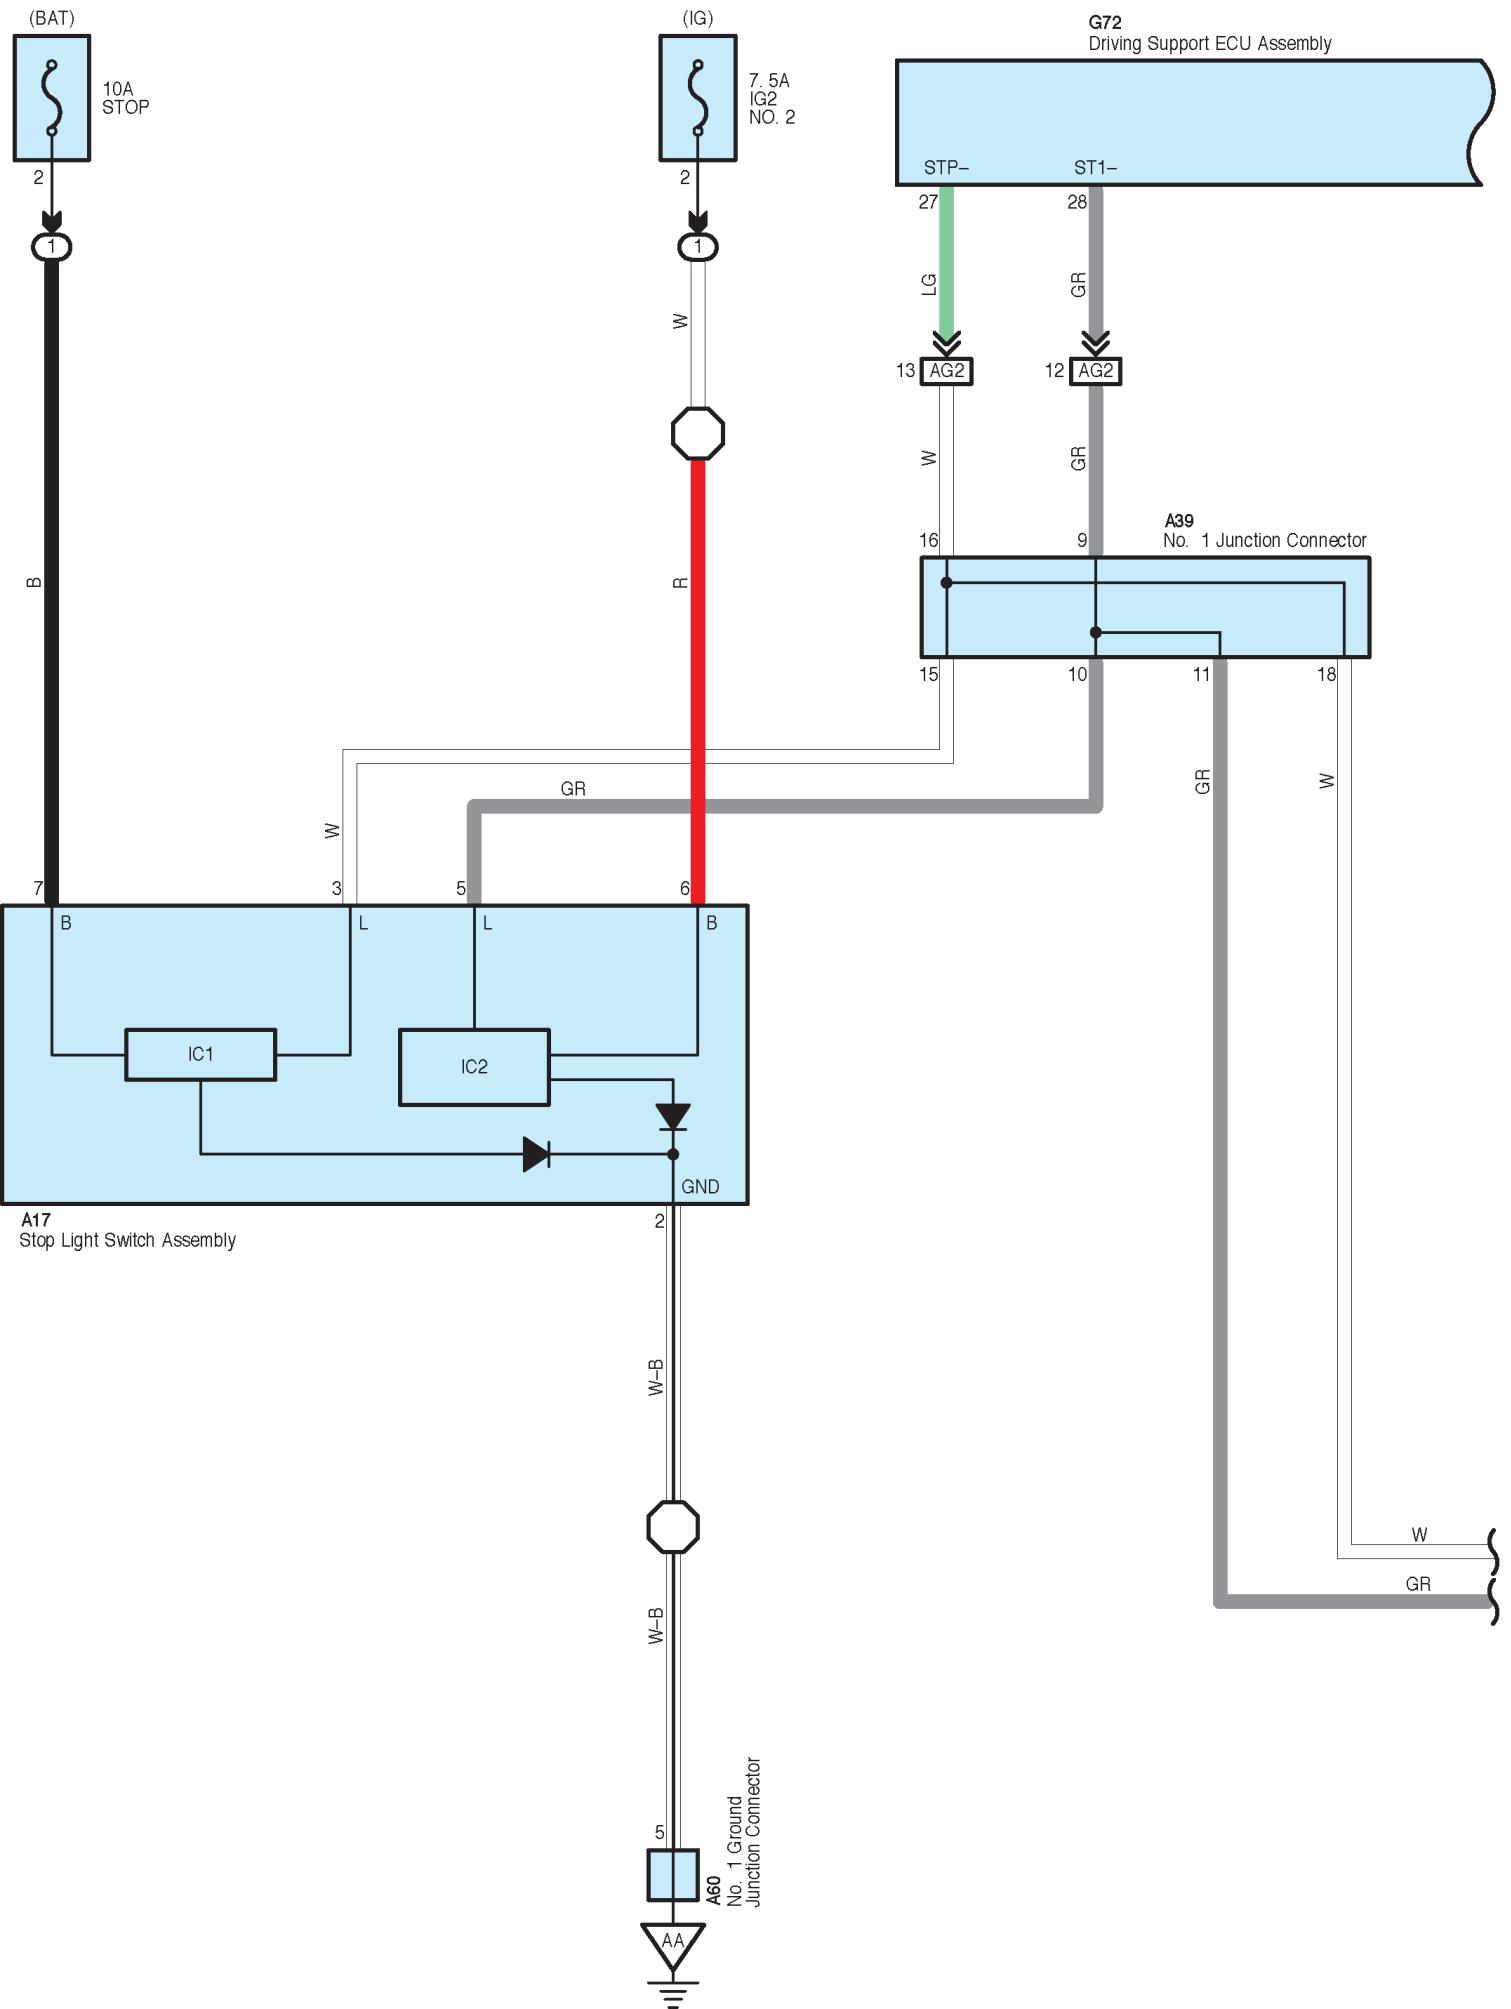


Dynamic Radar Cruise Control

G72
Driving Support ECU Assembly

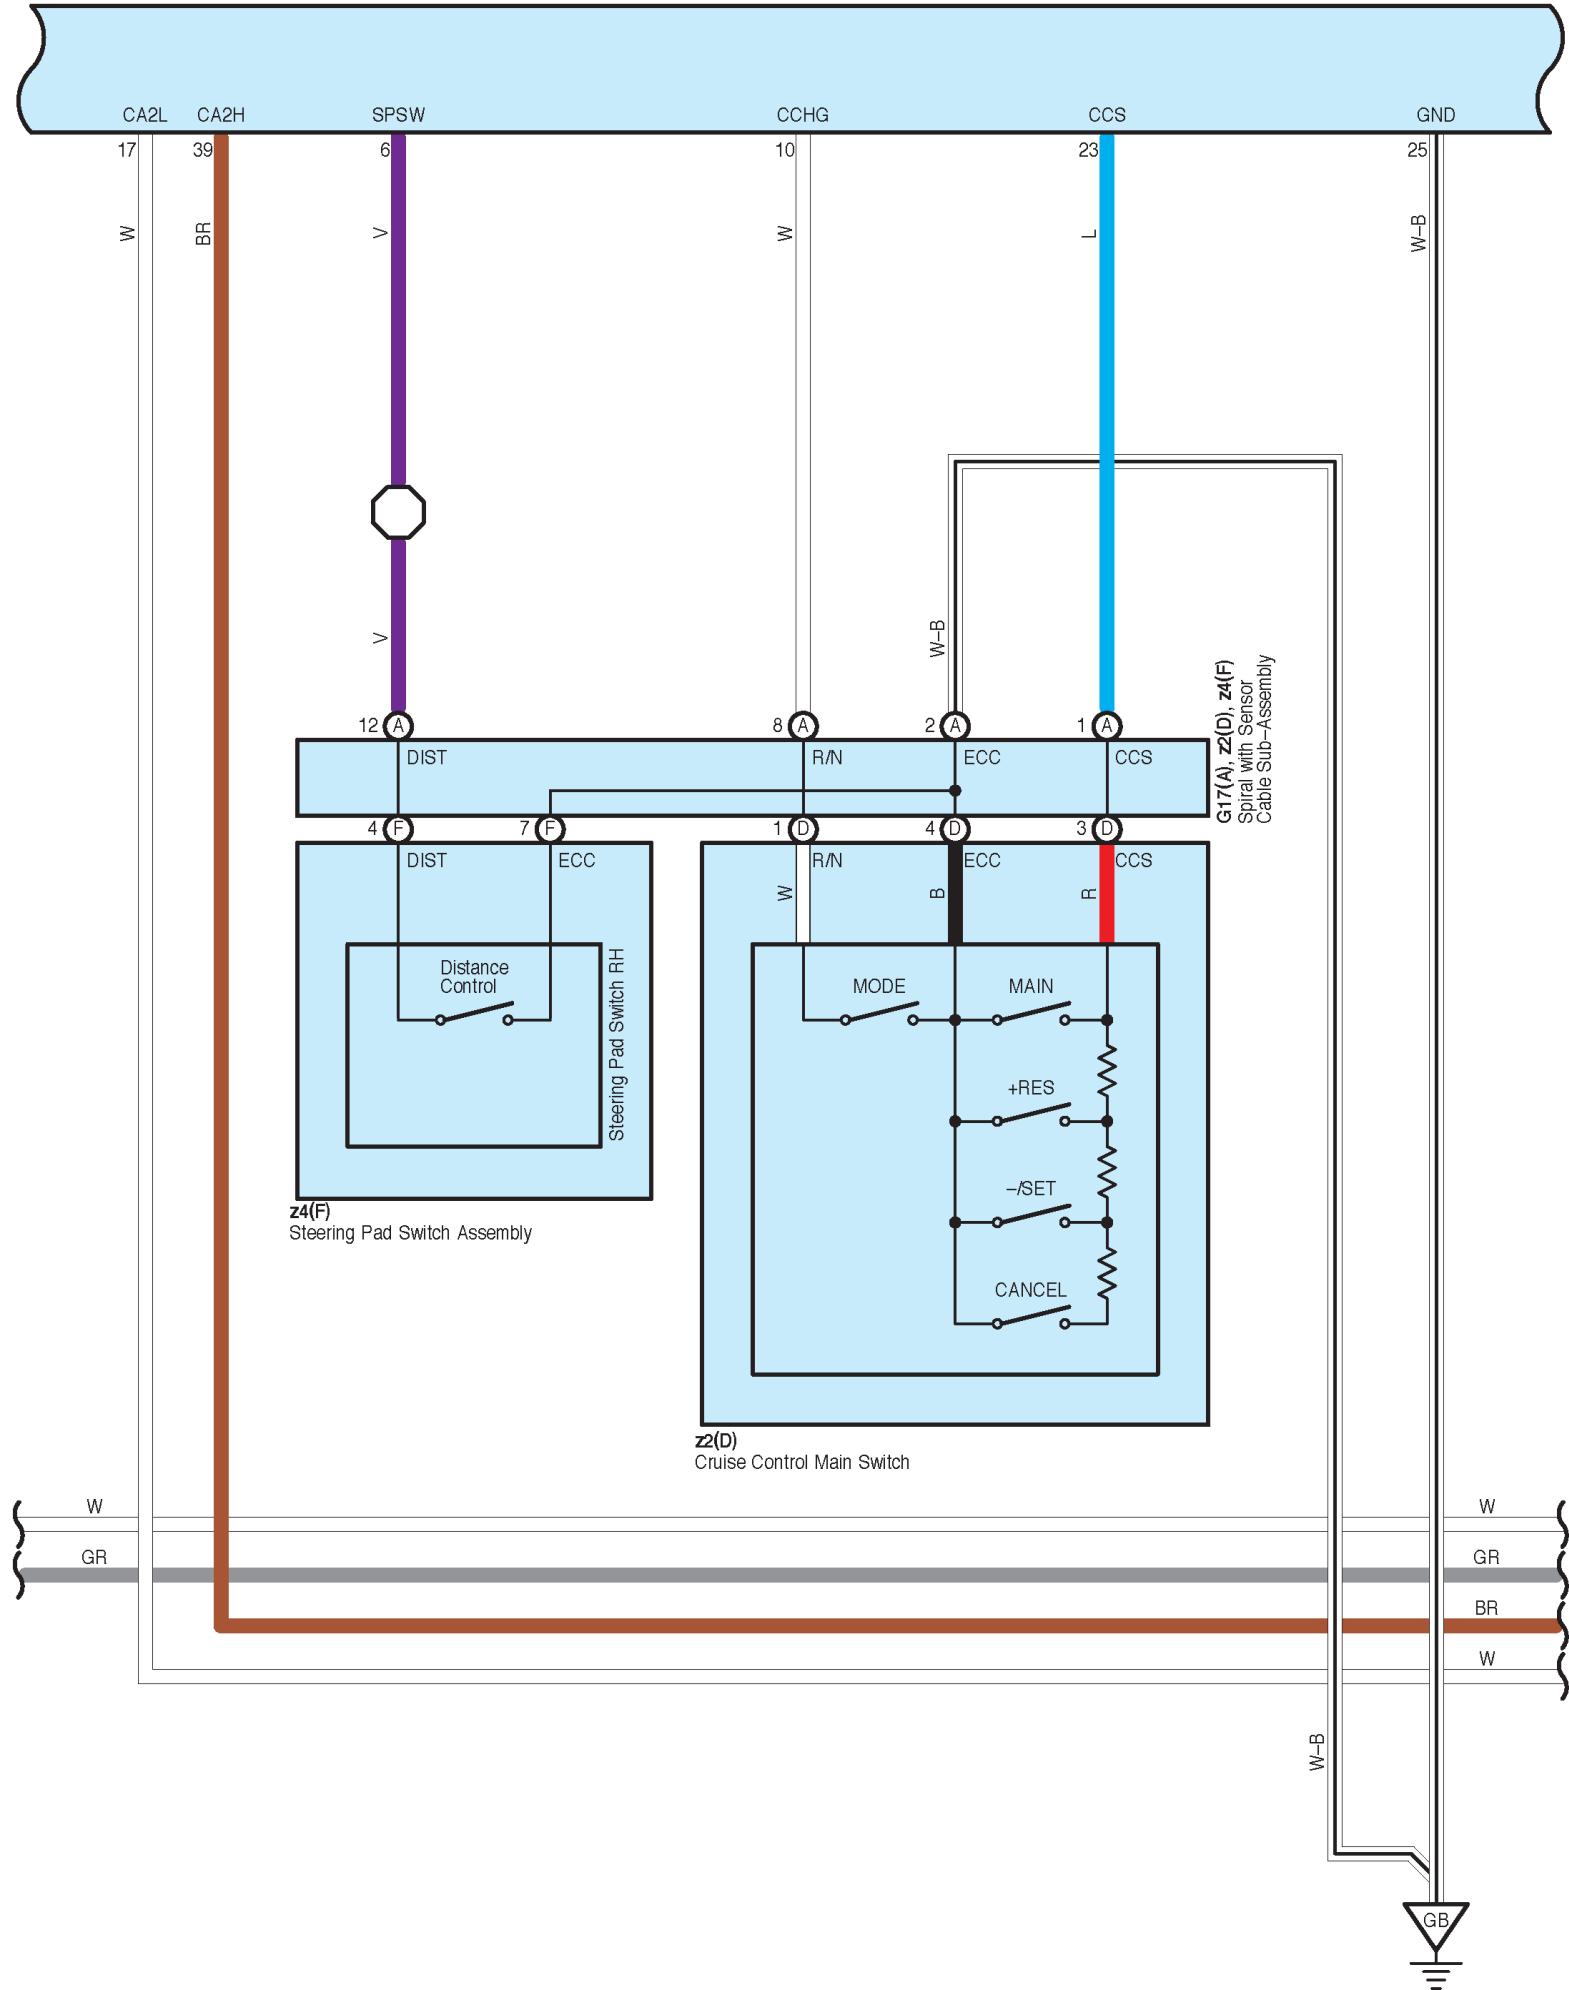


Dynamic Radar Cruise Control

G72
Driving Support ECU Assembly

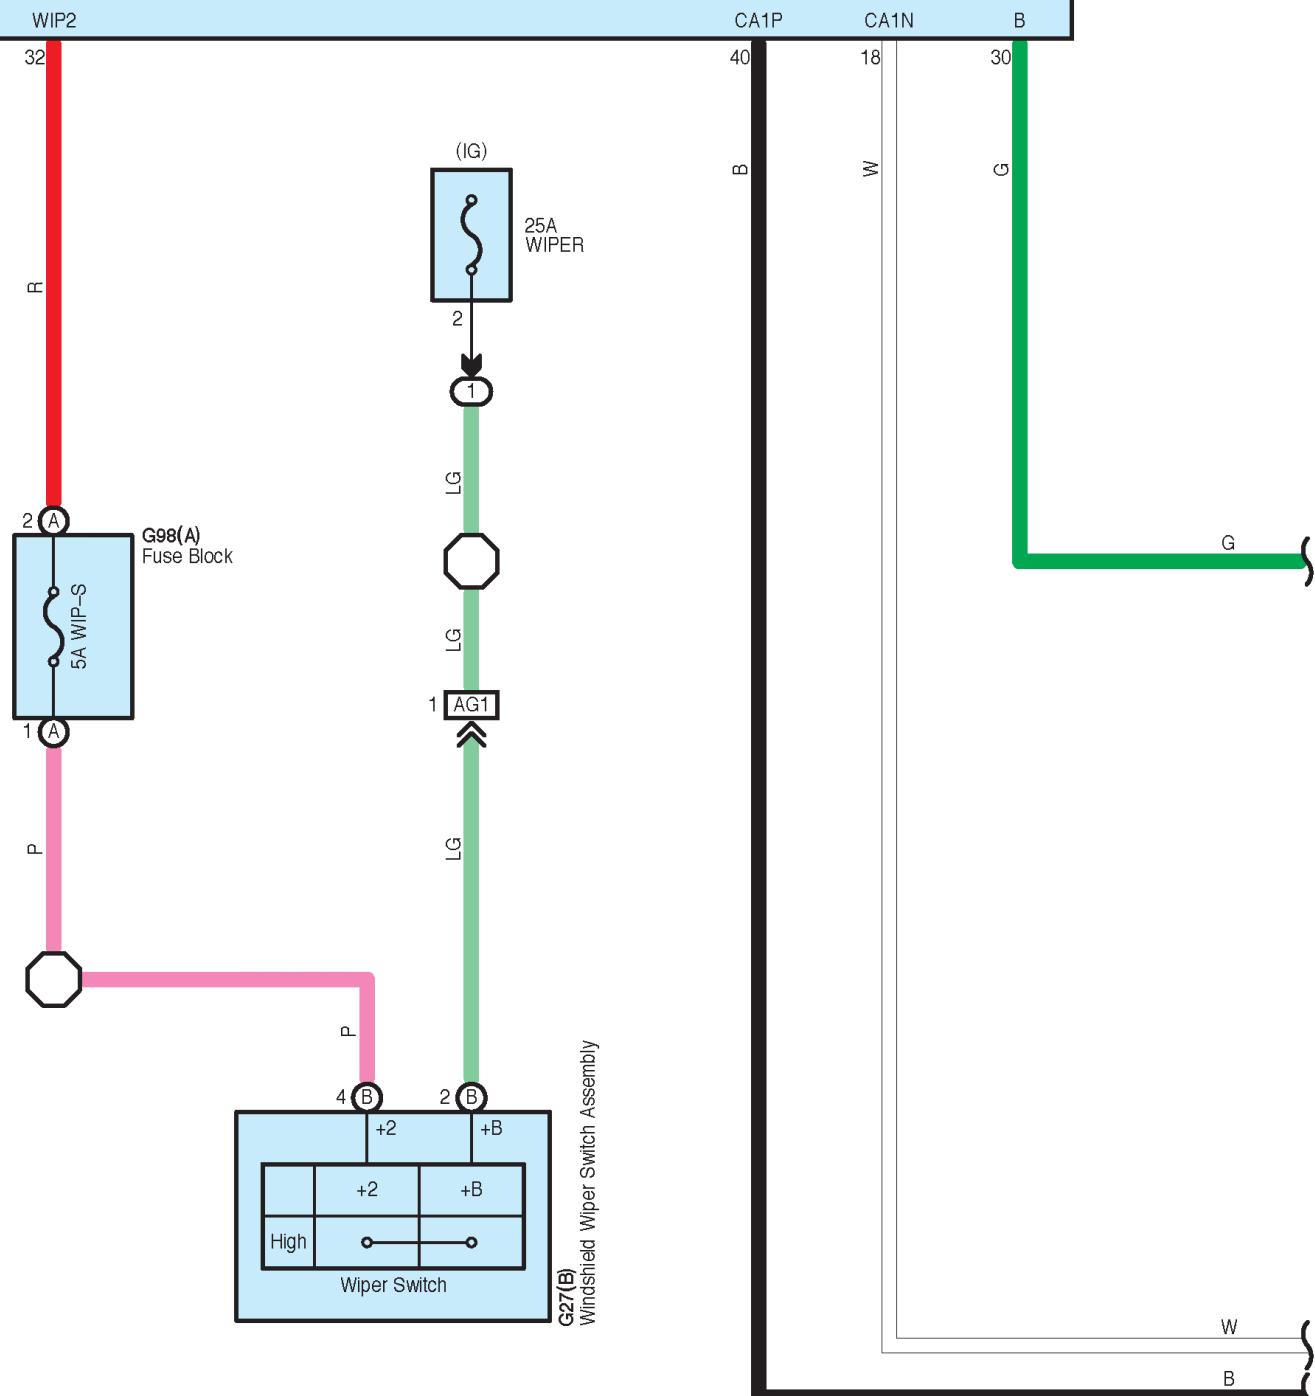


Dynamic Radar Cruise Control

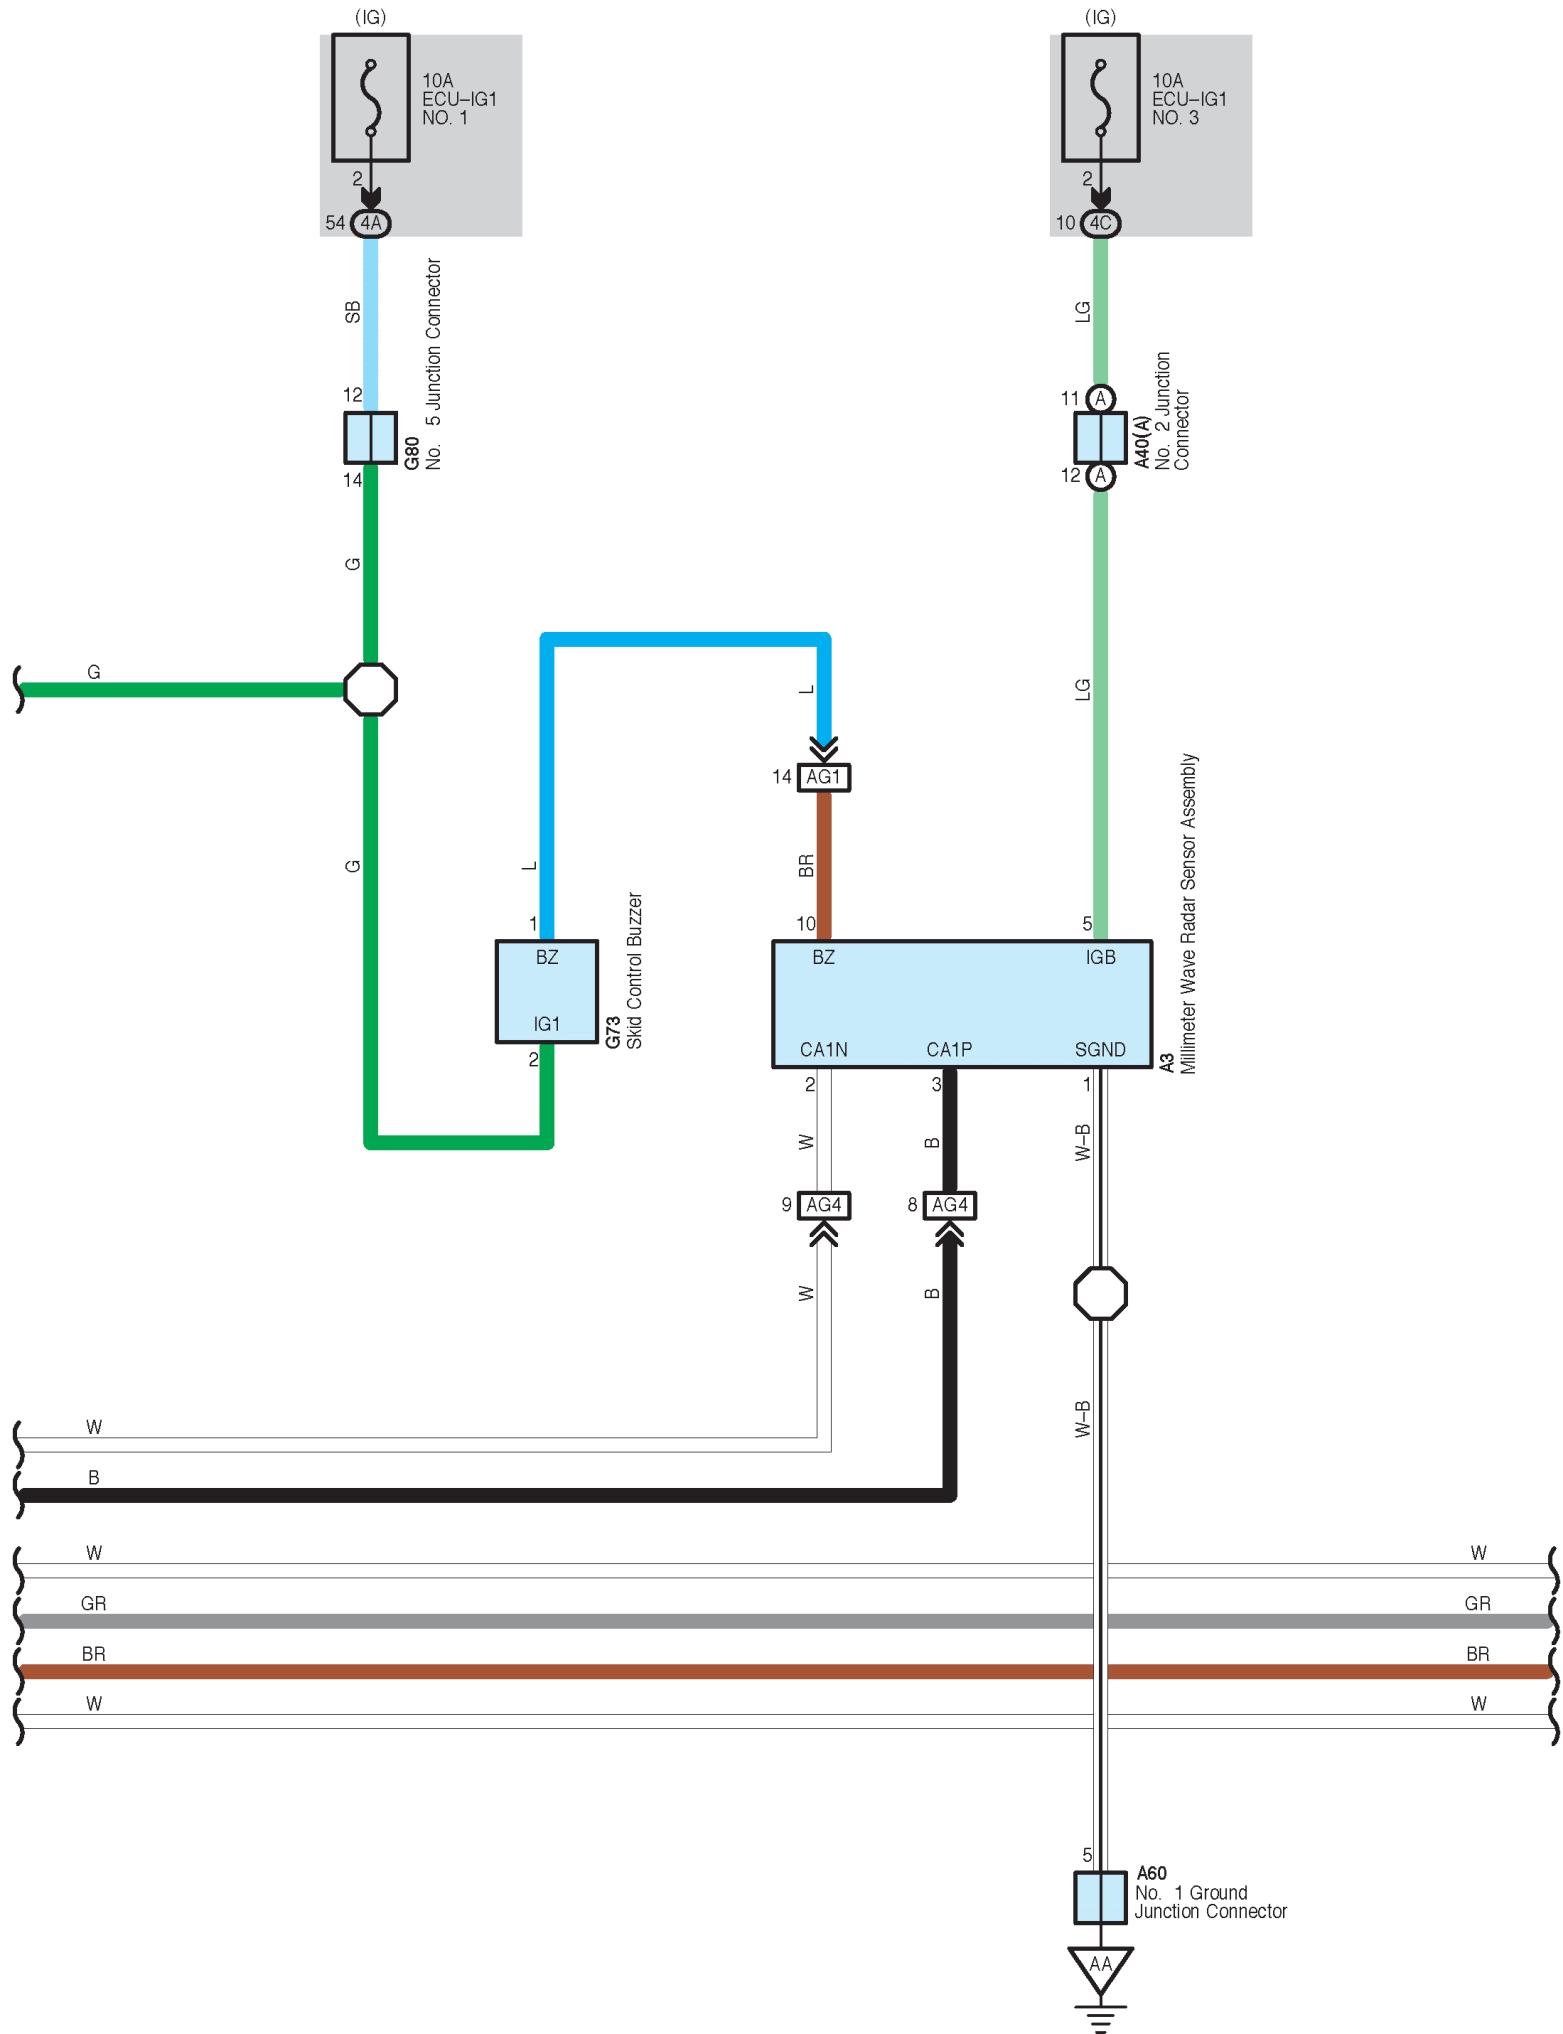

Dynamic Radar Cruise Control


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

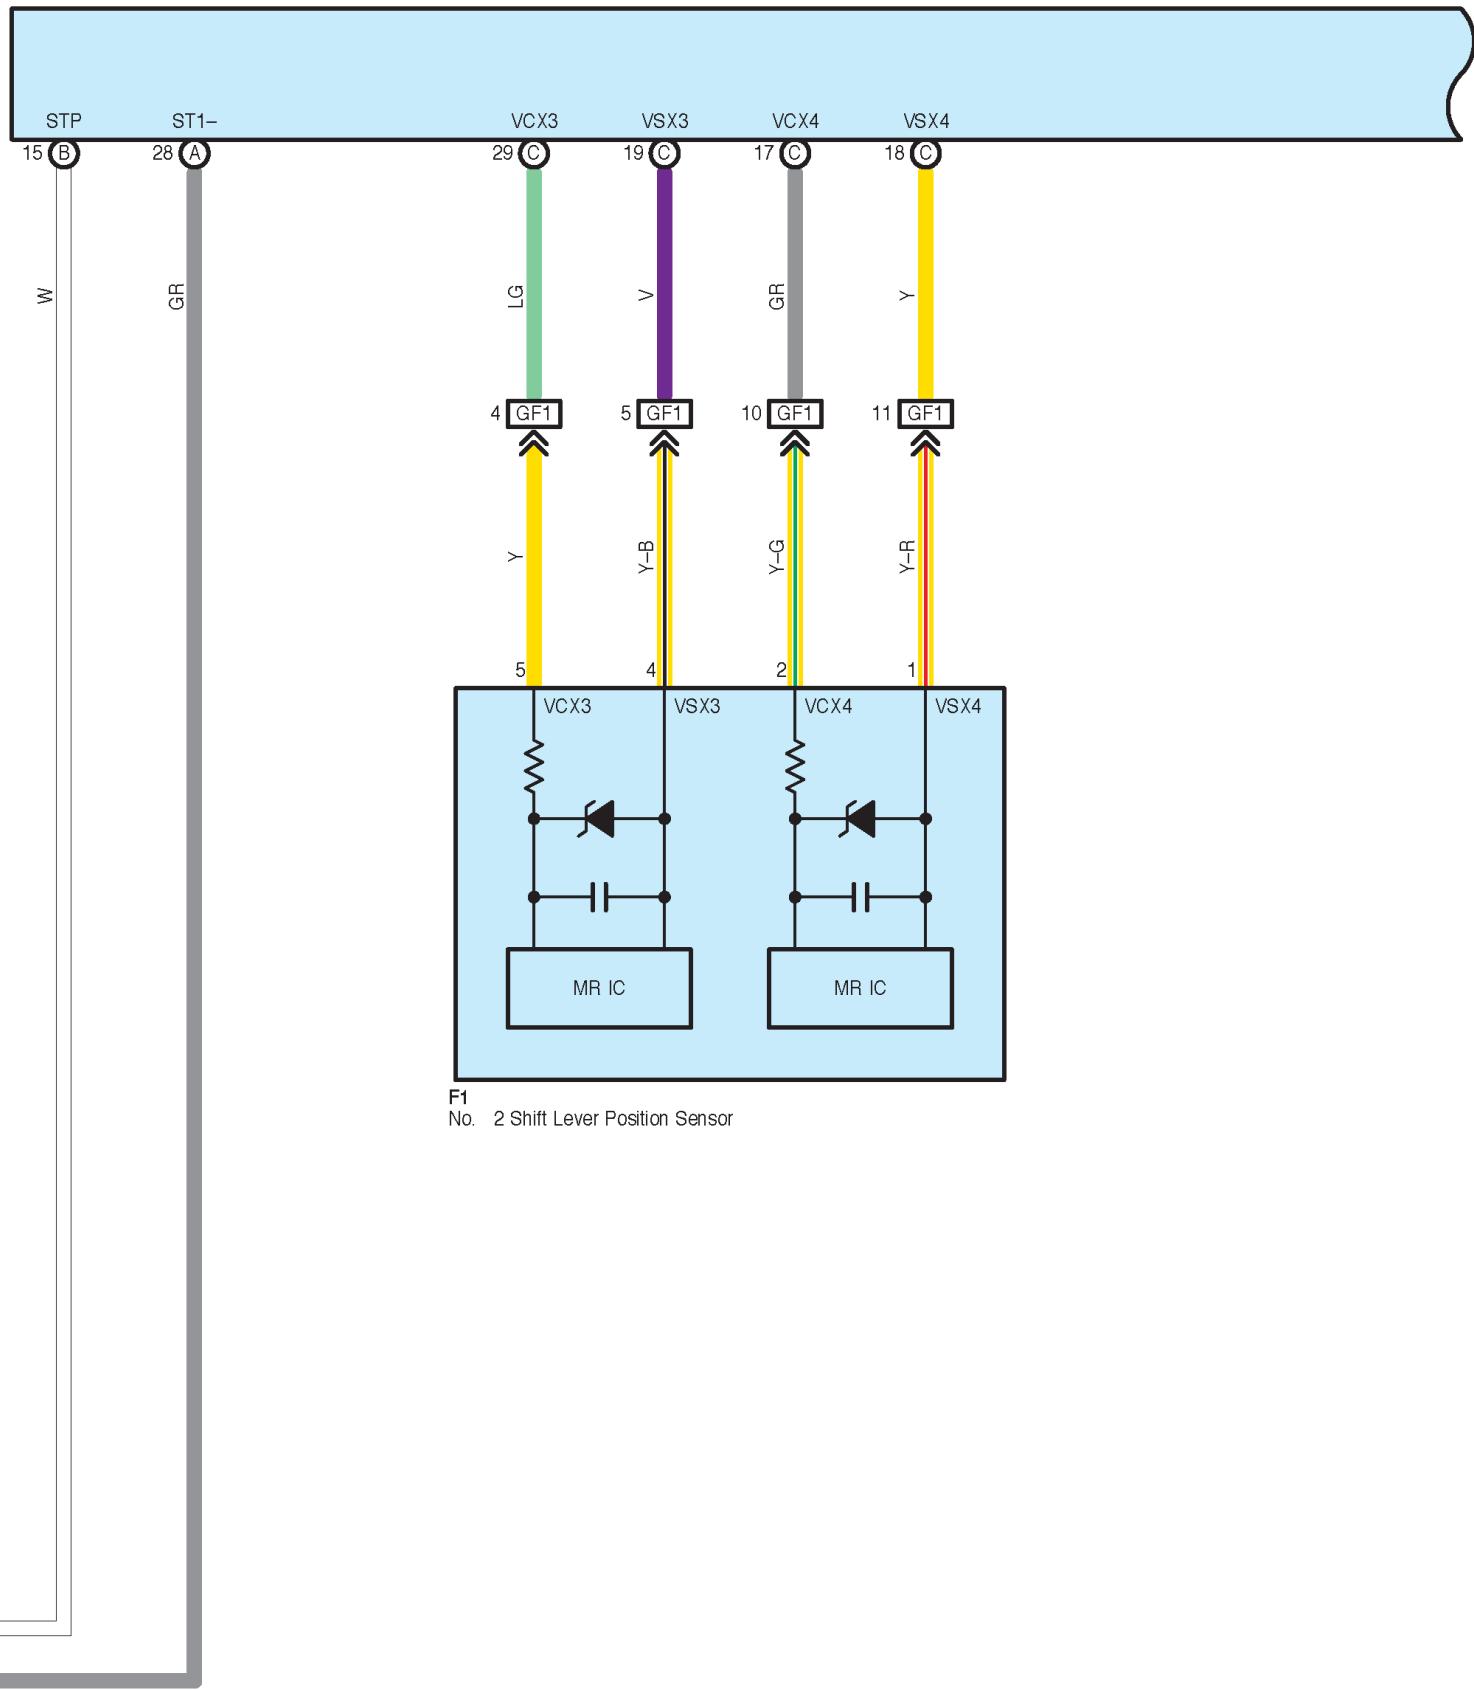


F1
No. 2 Shift Lever Position Sensor

Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

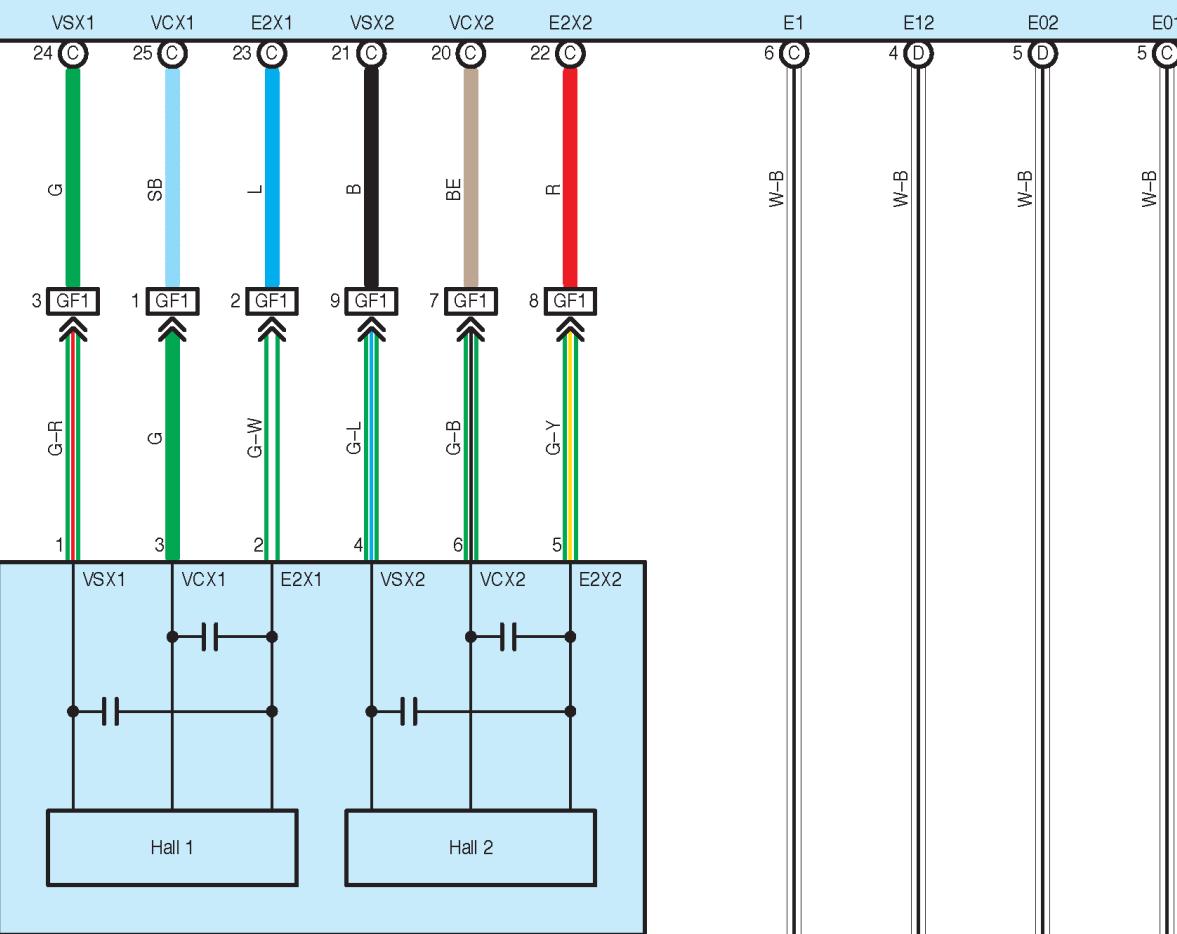


F2
Shift Lever Position Sensor

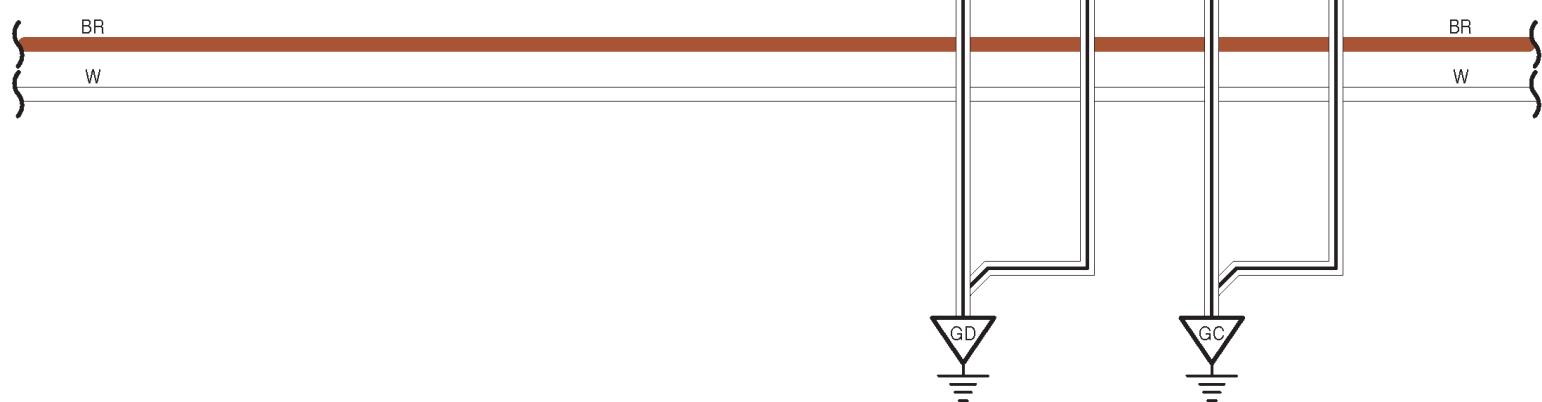

Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

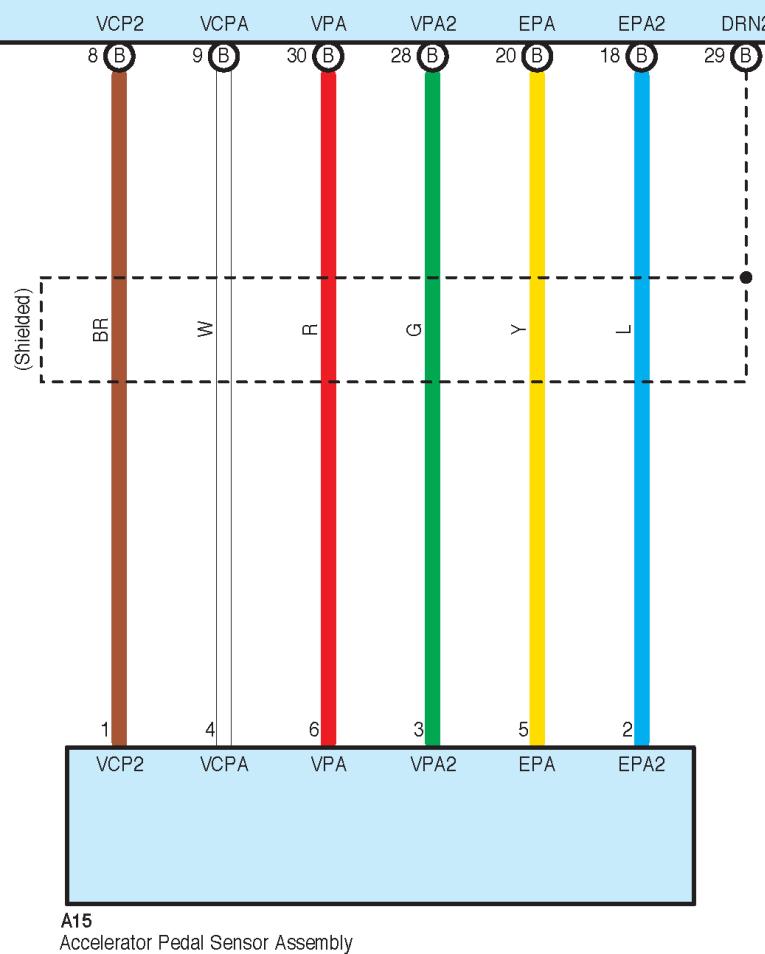

BR


W

BR

W


Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

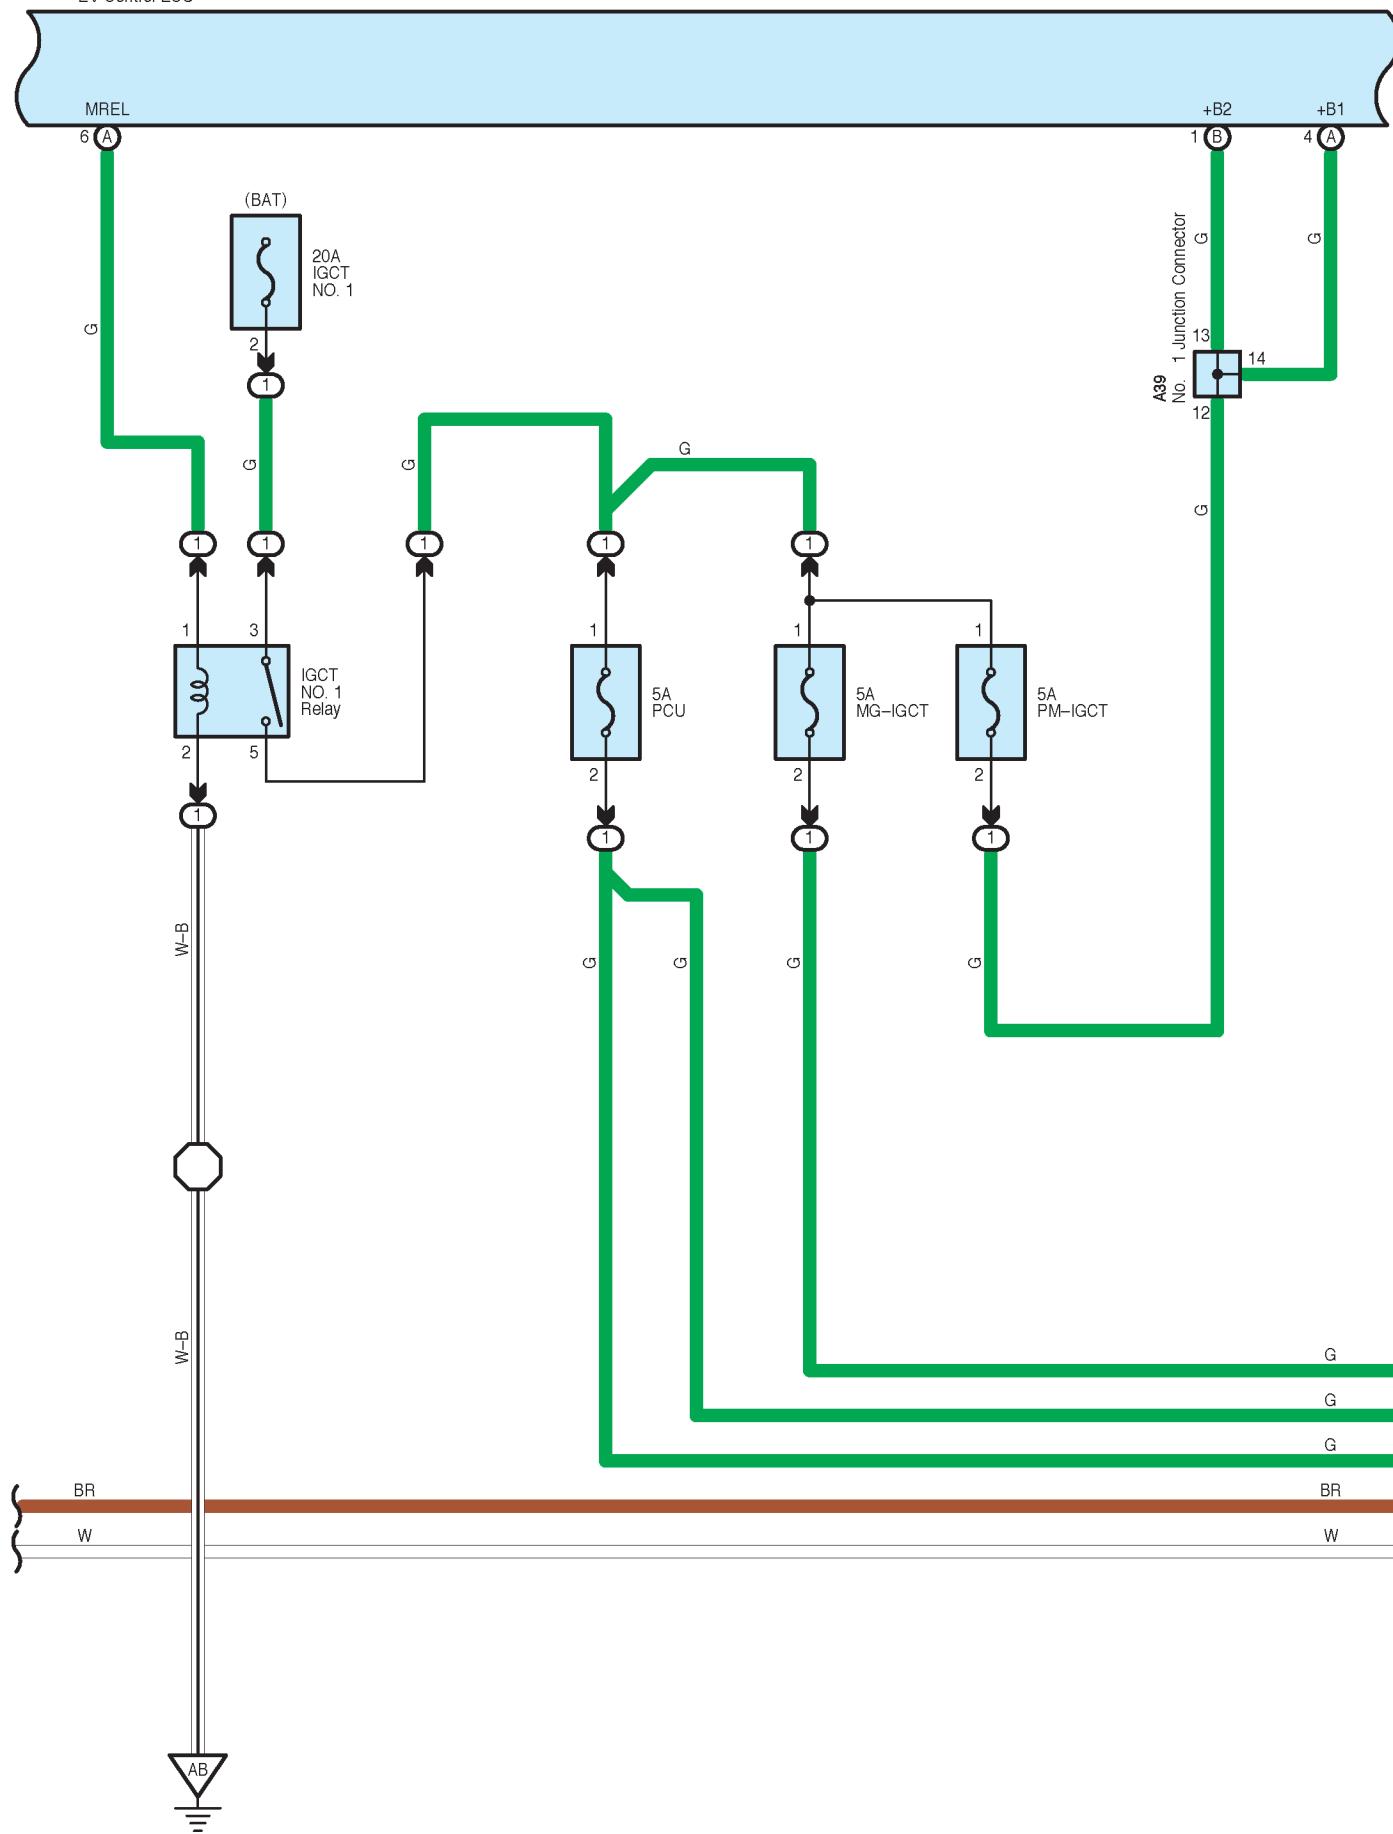


Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

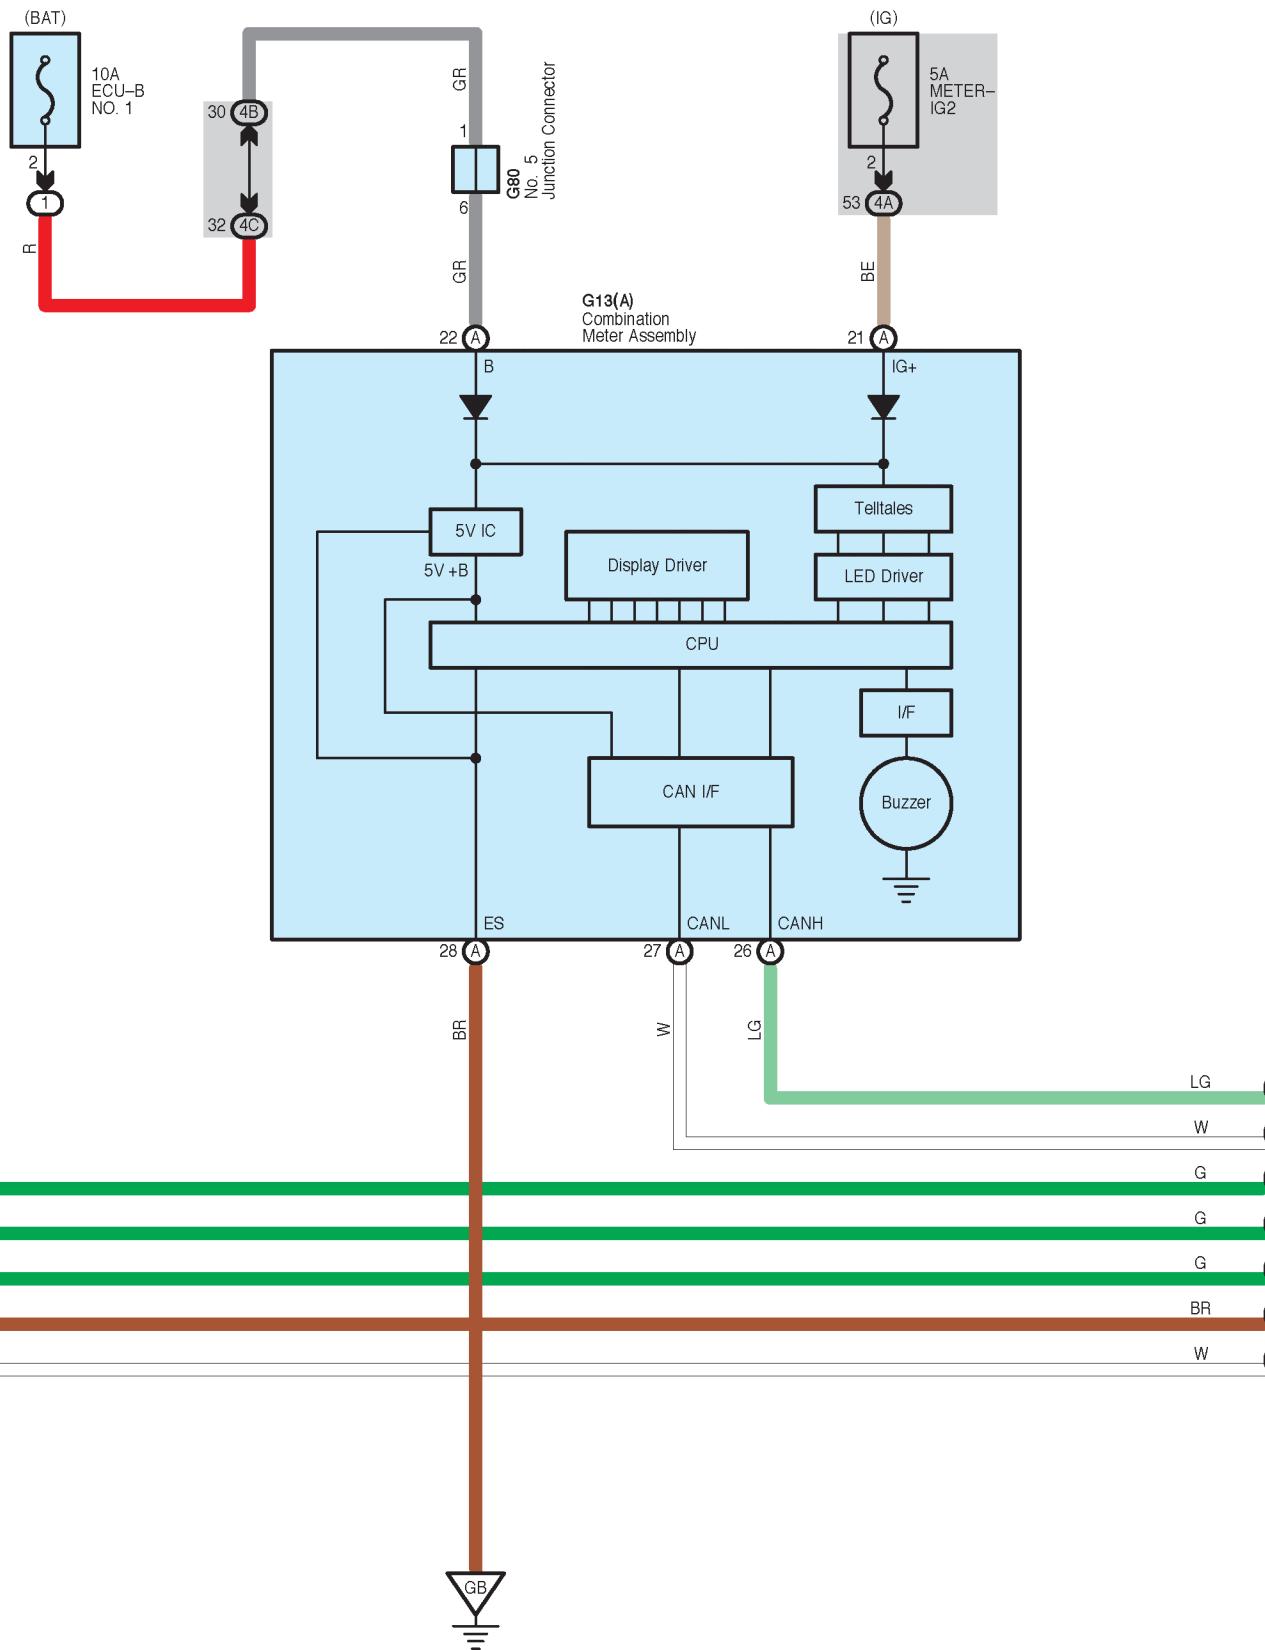


Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

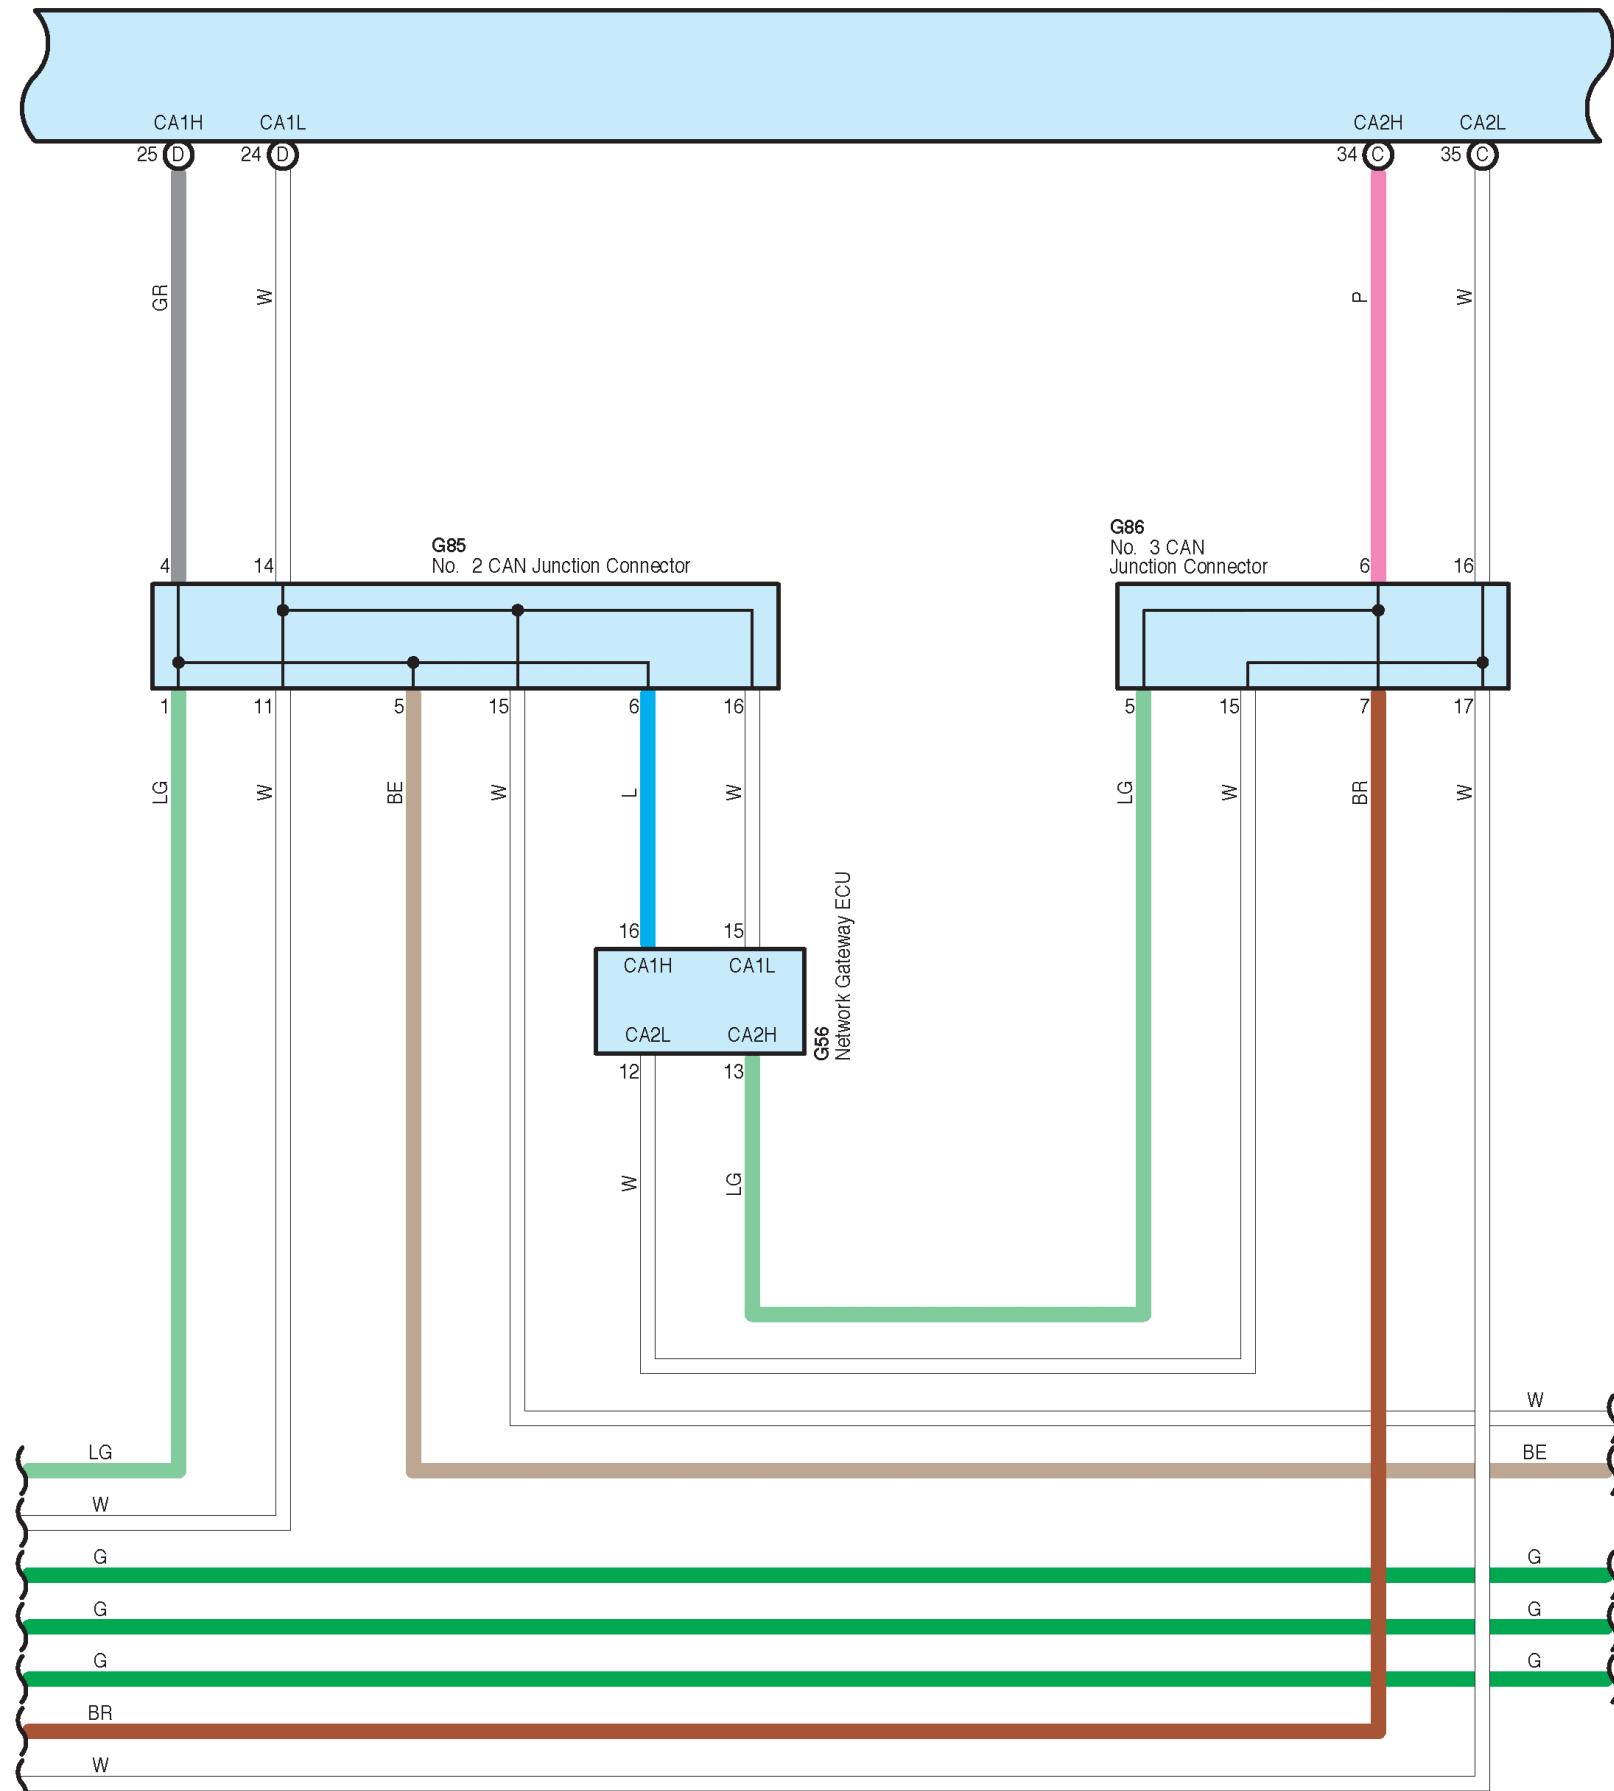

Dynamic Radar Cruise Control


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

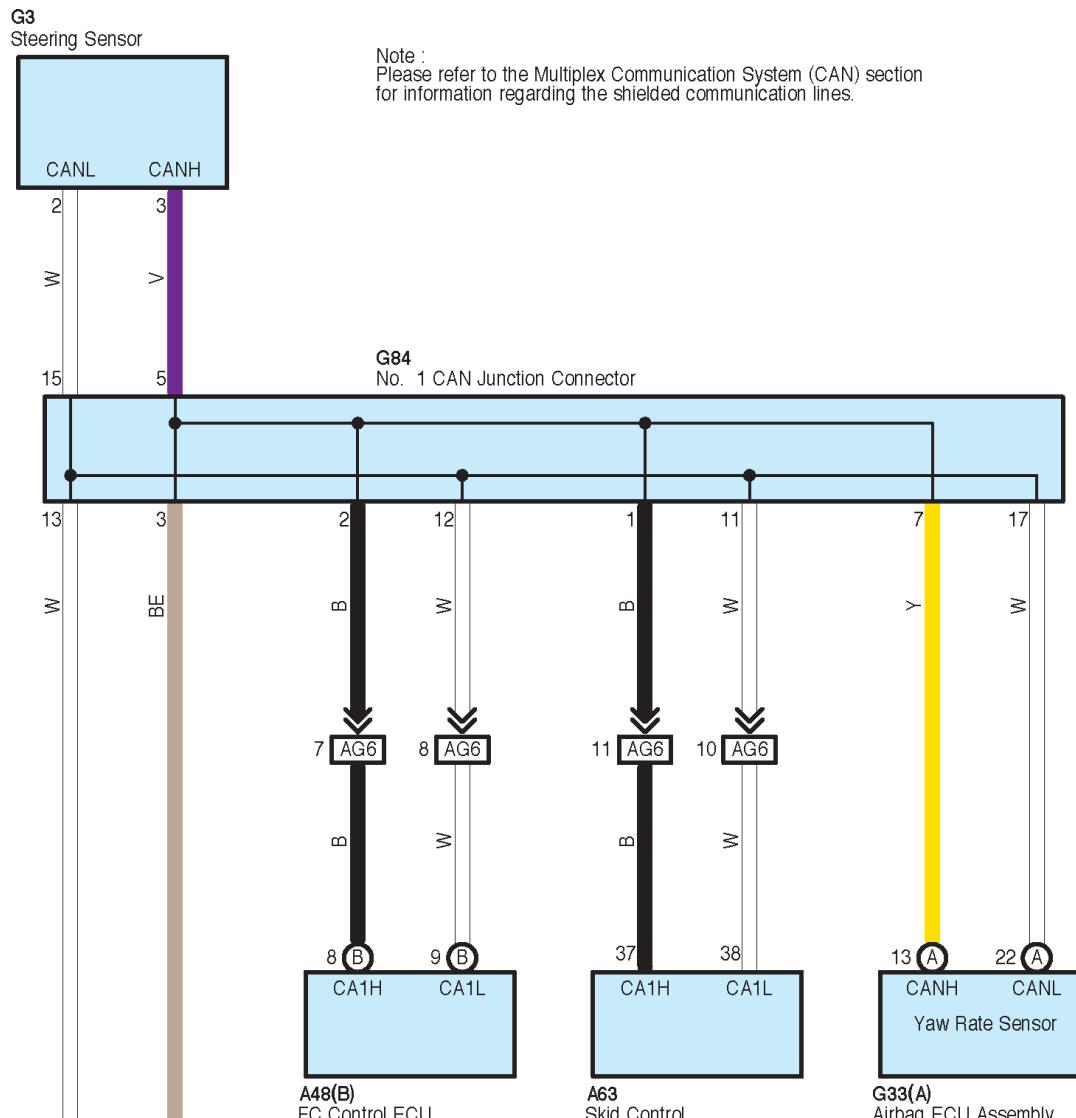

W
BE
G
G
G


Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

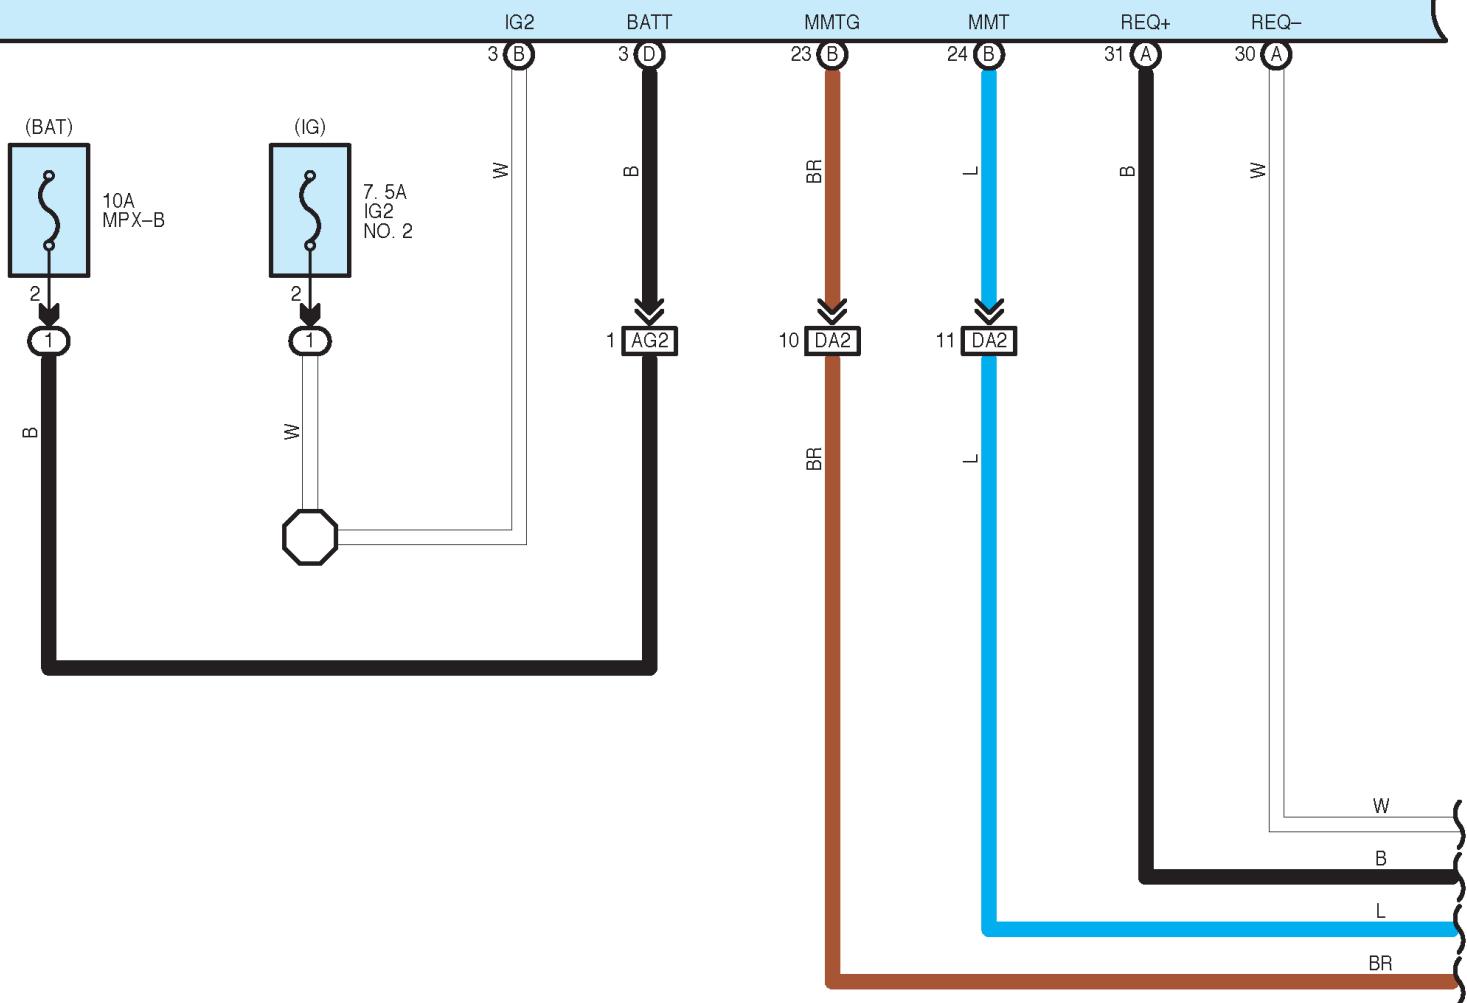


Dynamic Radar Cruise Control

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

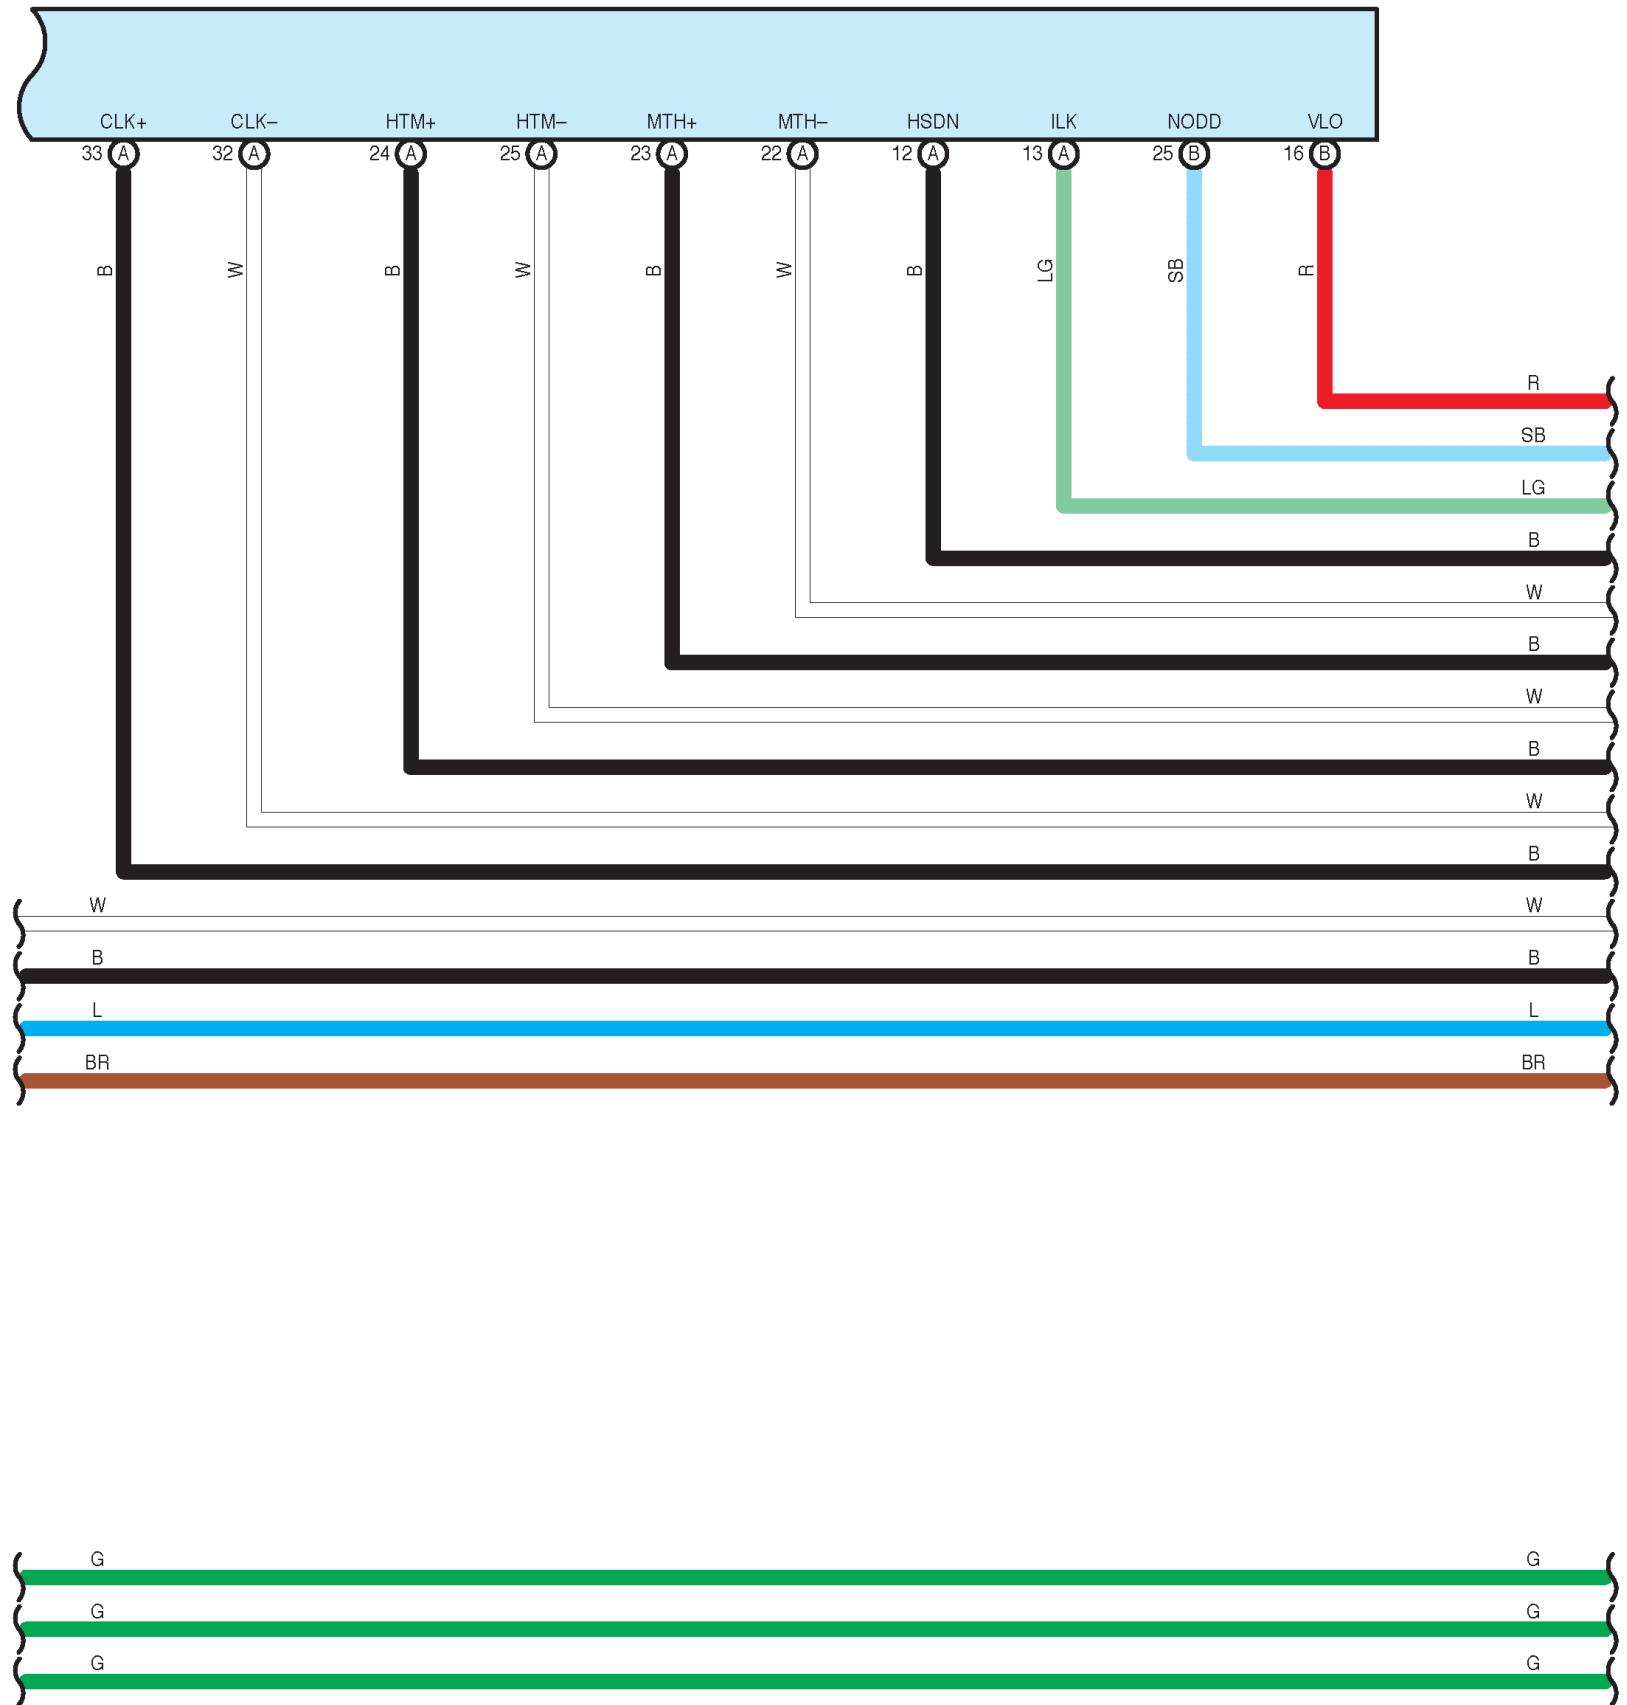


Dynamic Radar Cruise Control

A10(A), B1(B), D1(C), I2(D)
Converter with Inverter Assembly

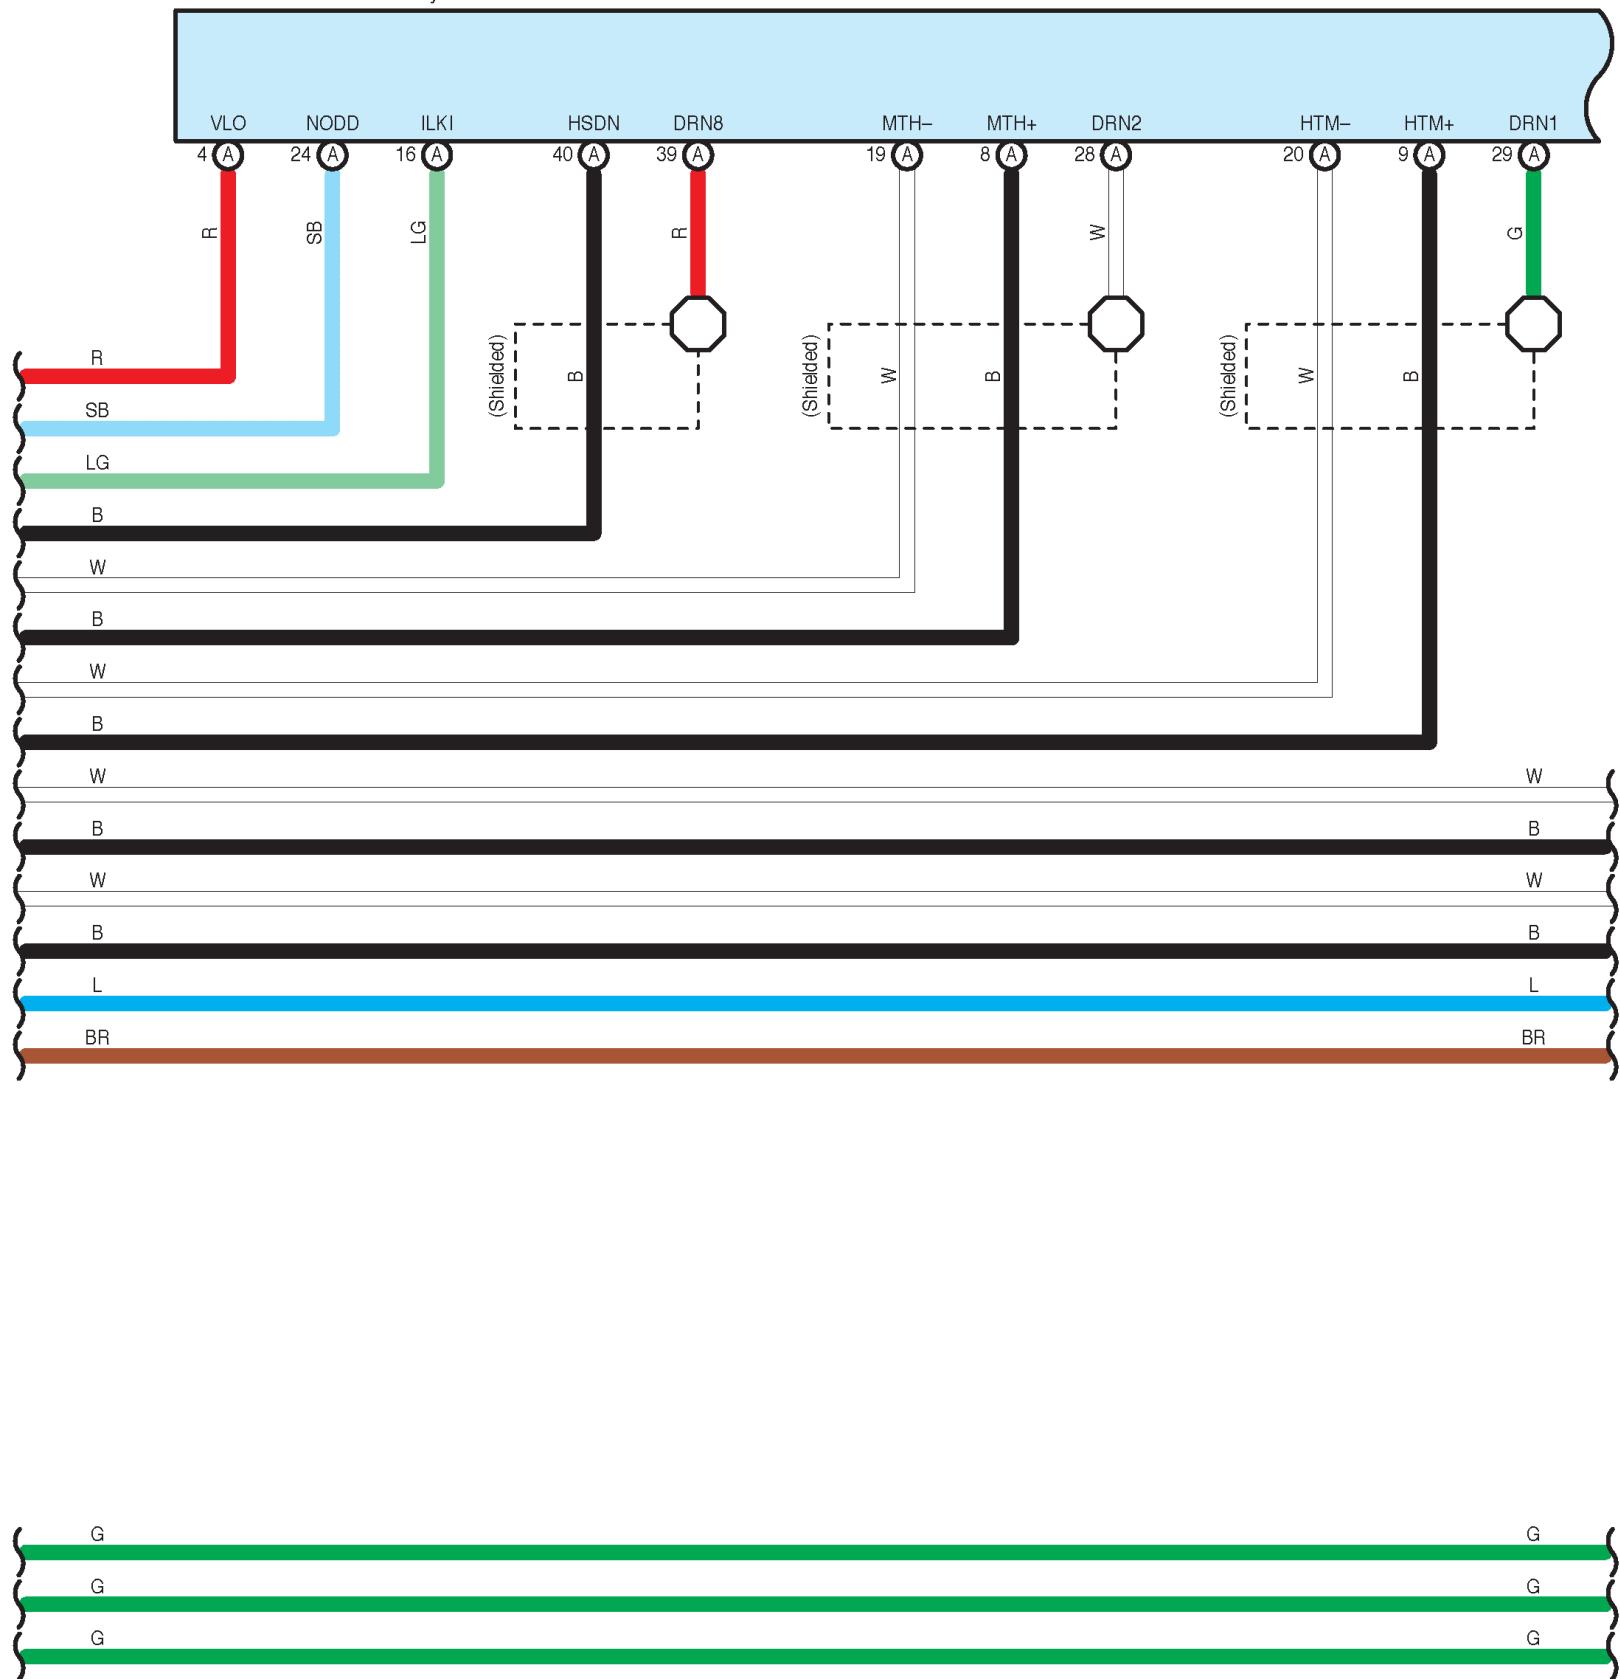


Dynamic Radar Cruise Control

A10(A), B1(B), D1(C), I2(D)
Converter with Inverter Assembly

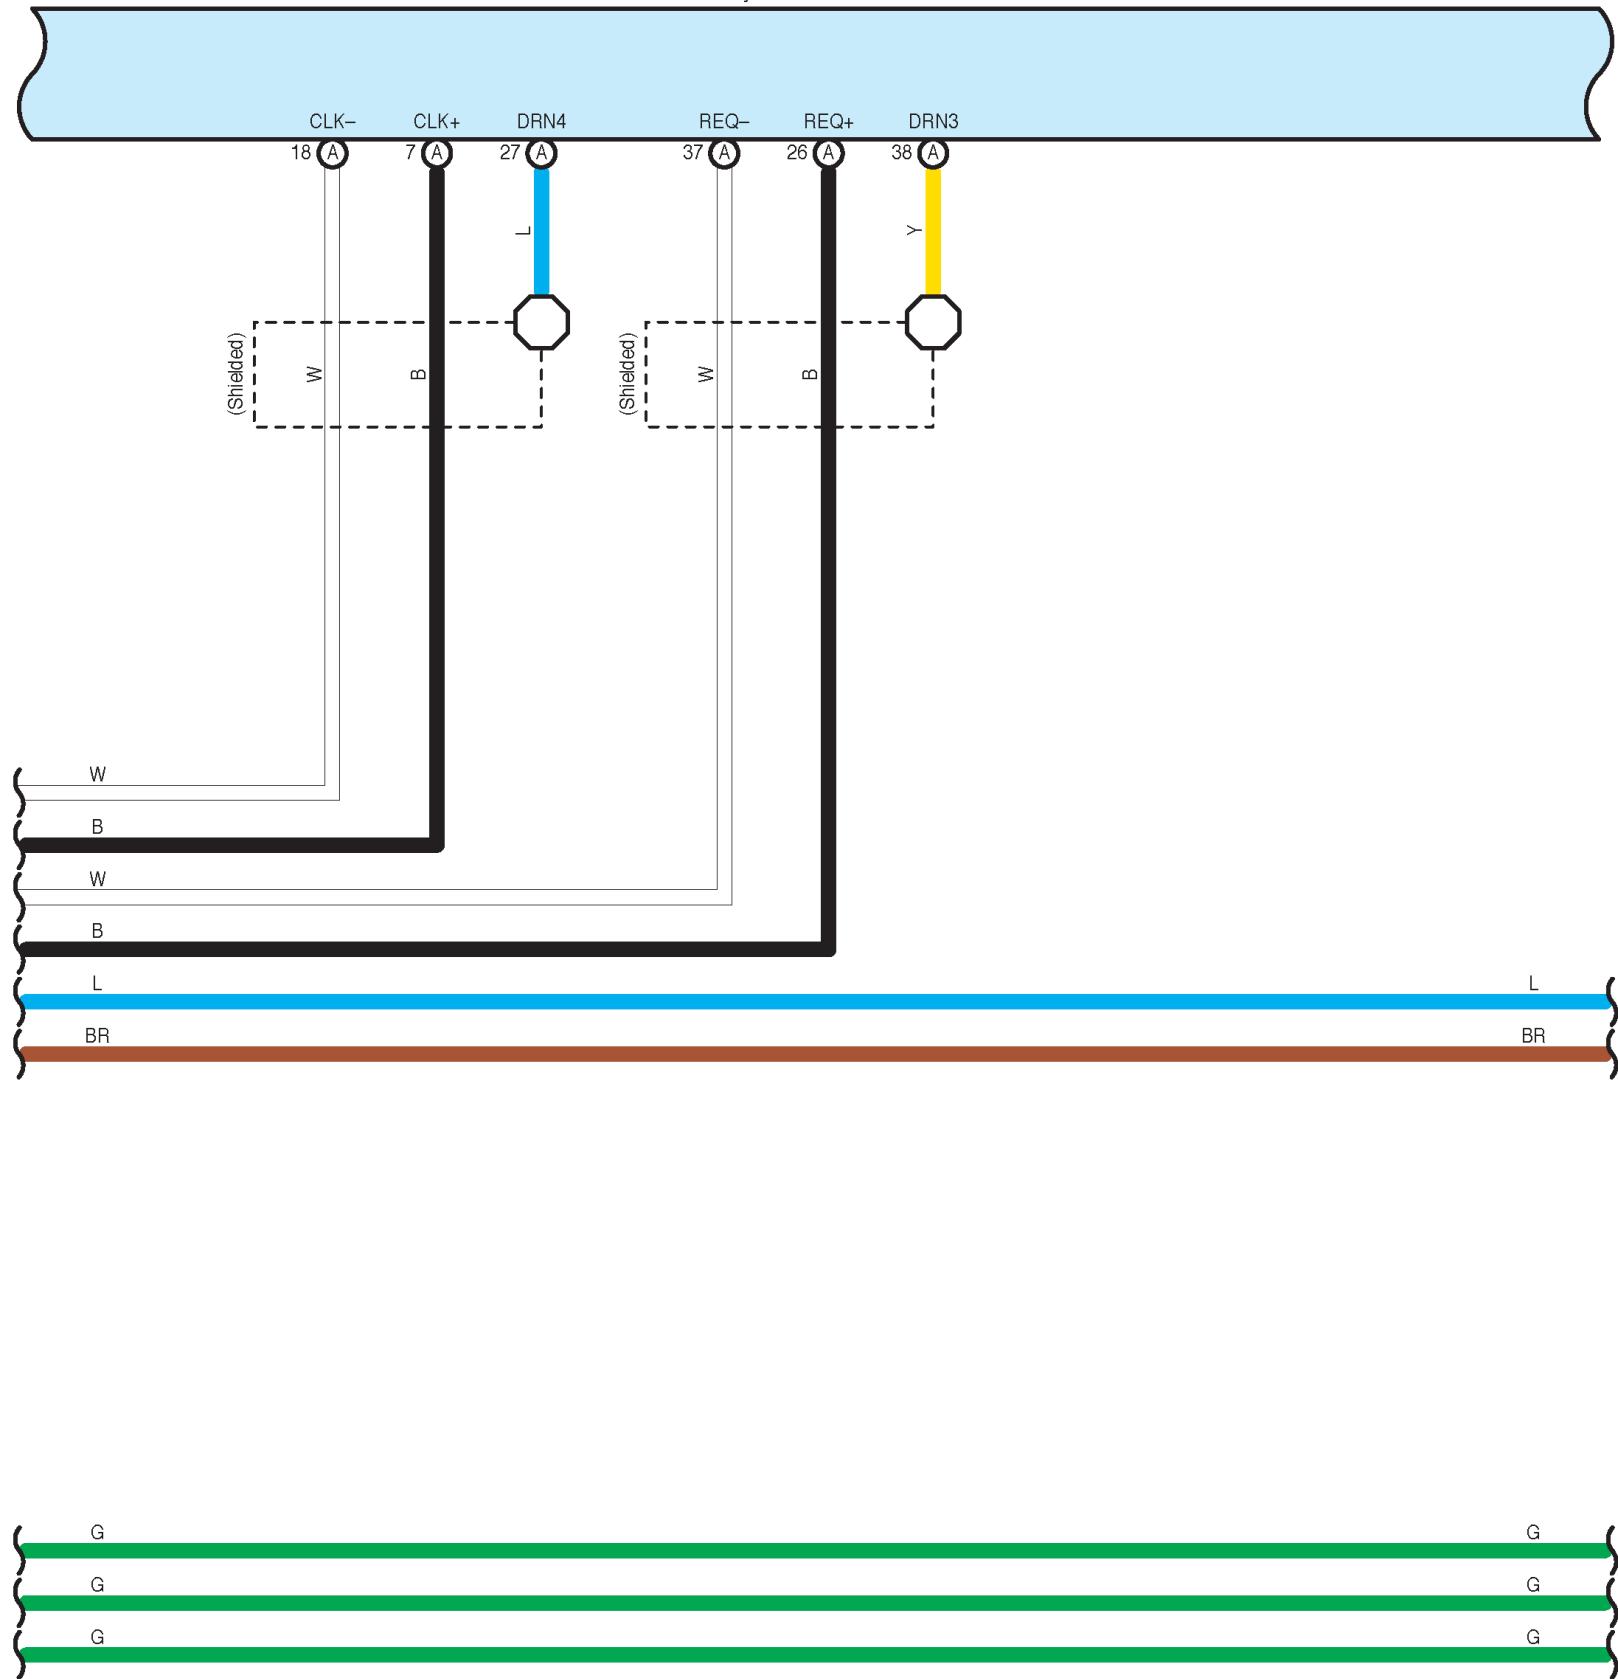


Dynamic Radar Cruise Control

A10(A), B1(B), D1(C), I2(D)
Converter with Inverter Assembly

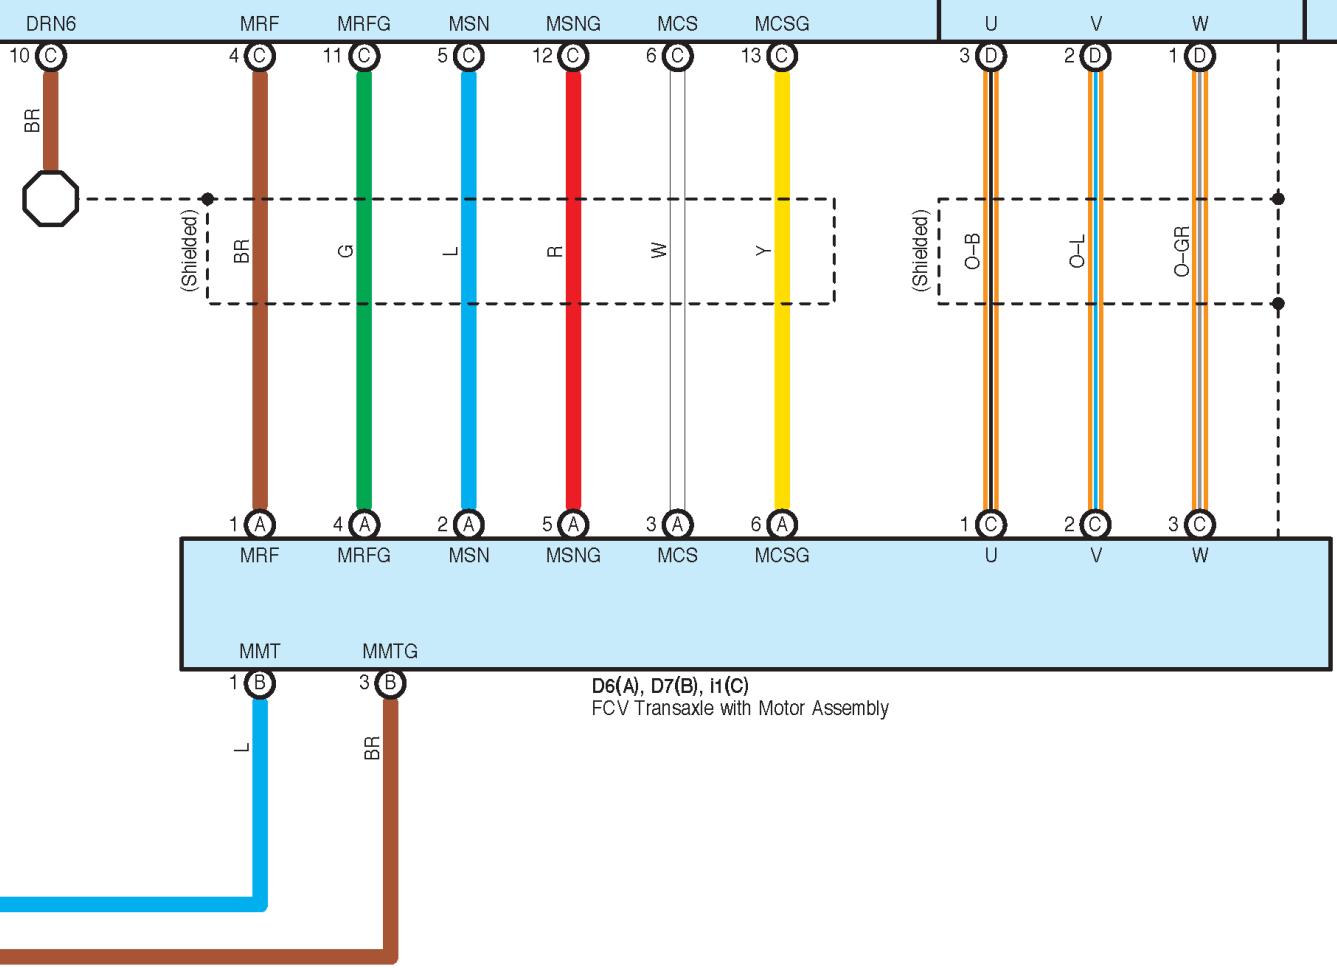


Dynamic Radar Cruise Control


A10(A), B1(B), D1(C), i2(D)
Converter with Inverter Assembly

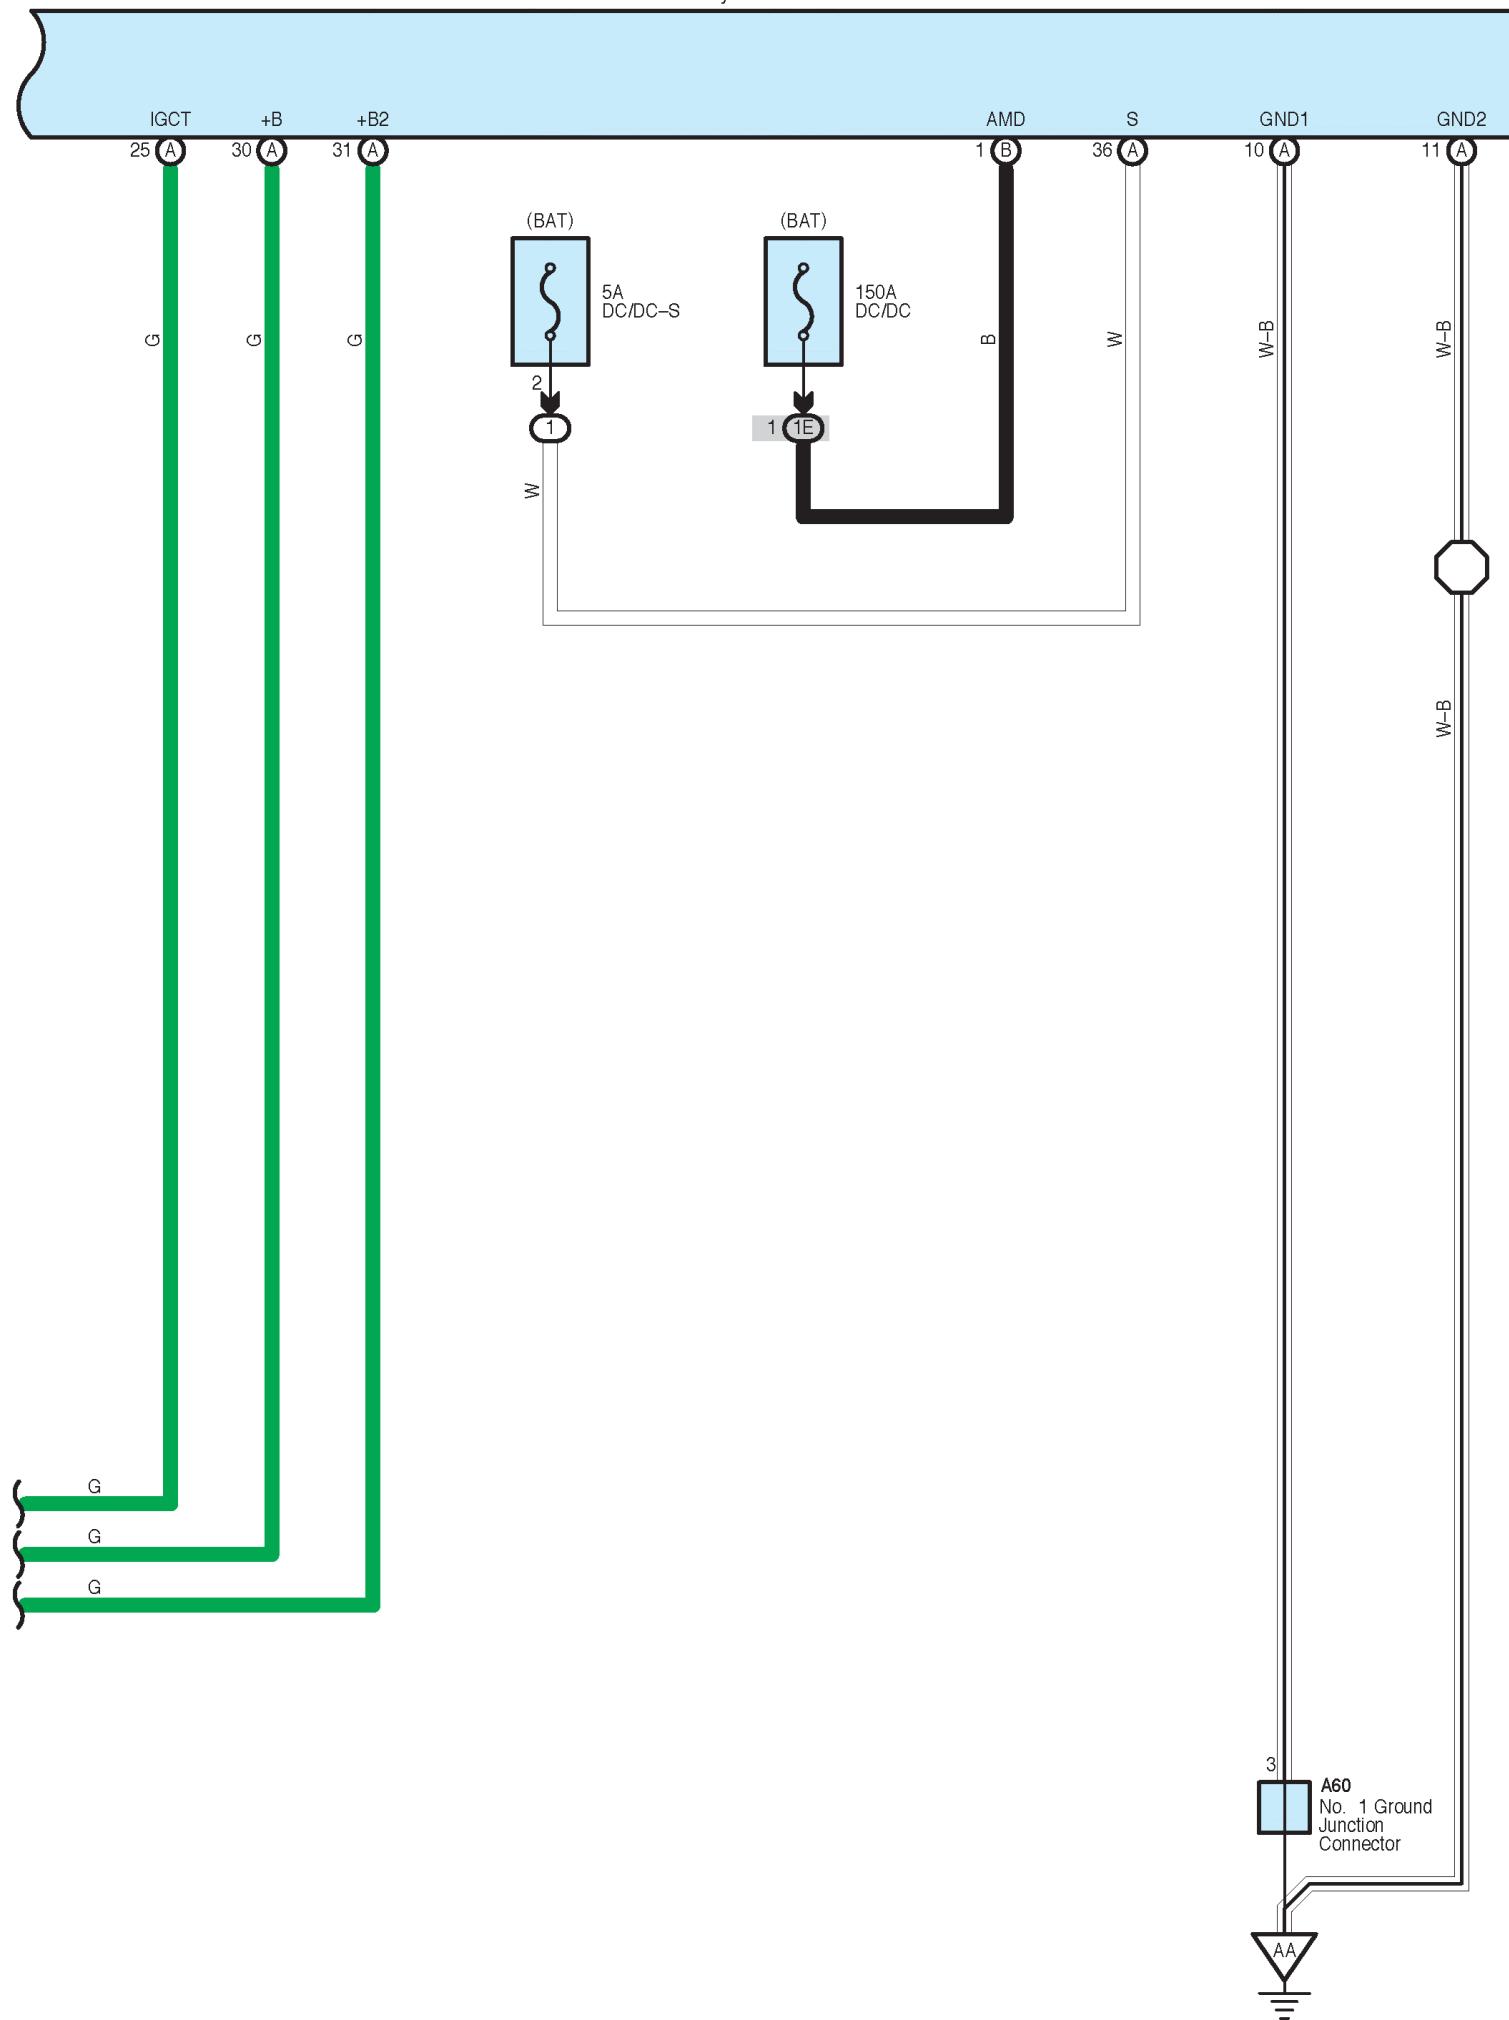



EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

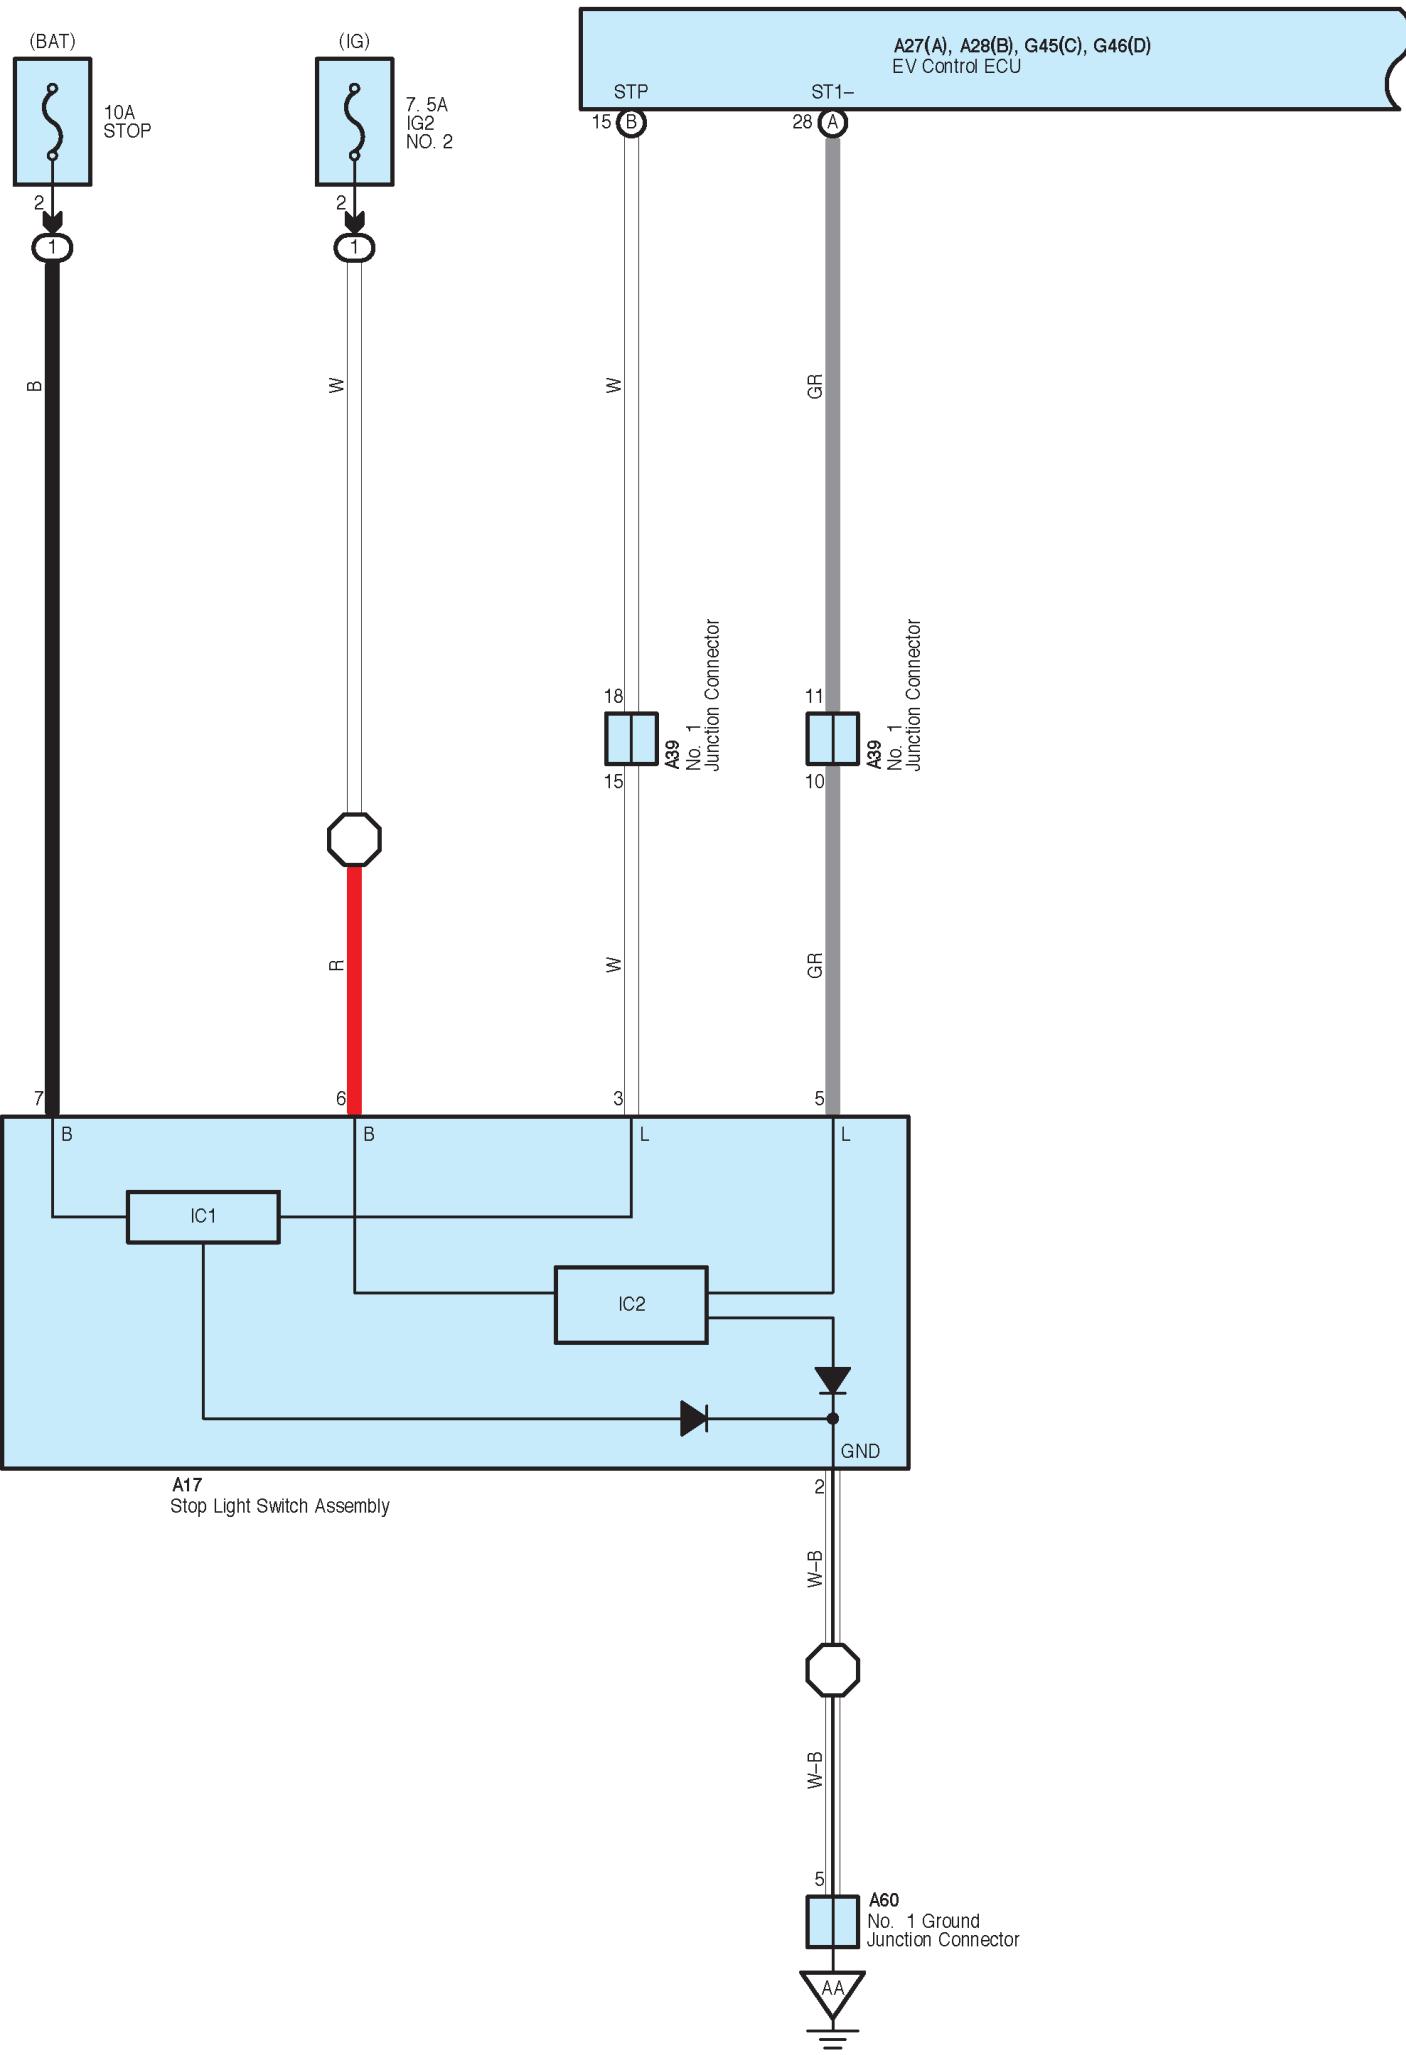


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

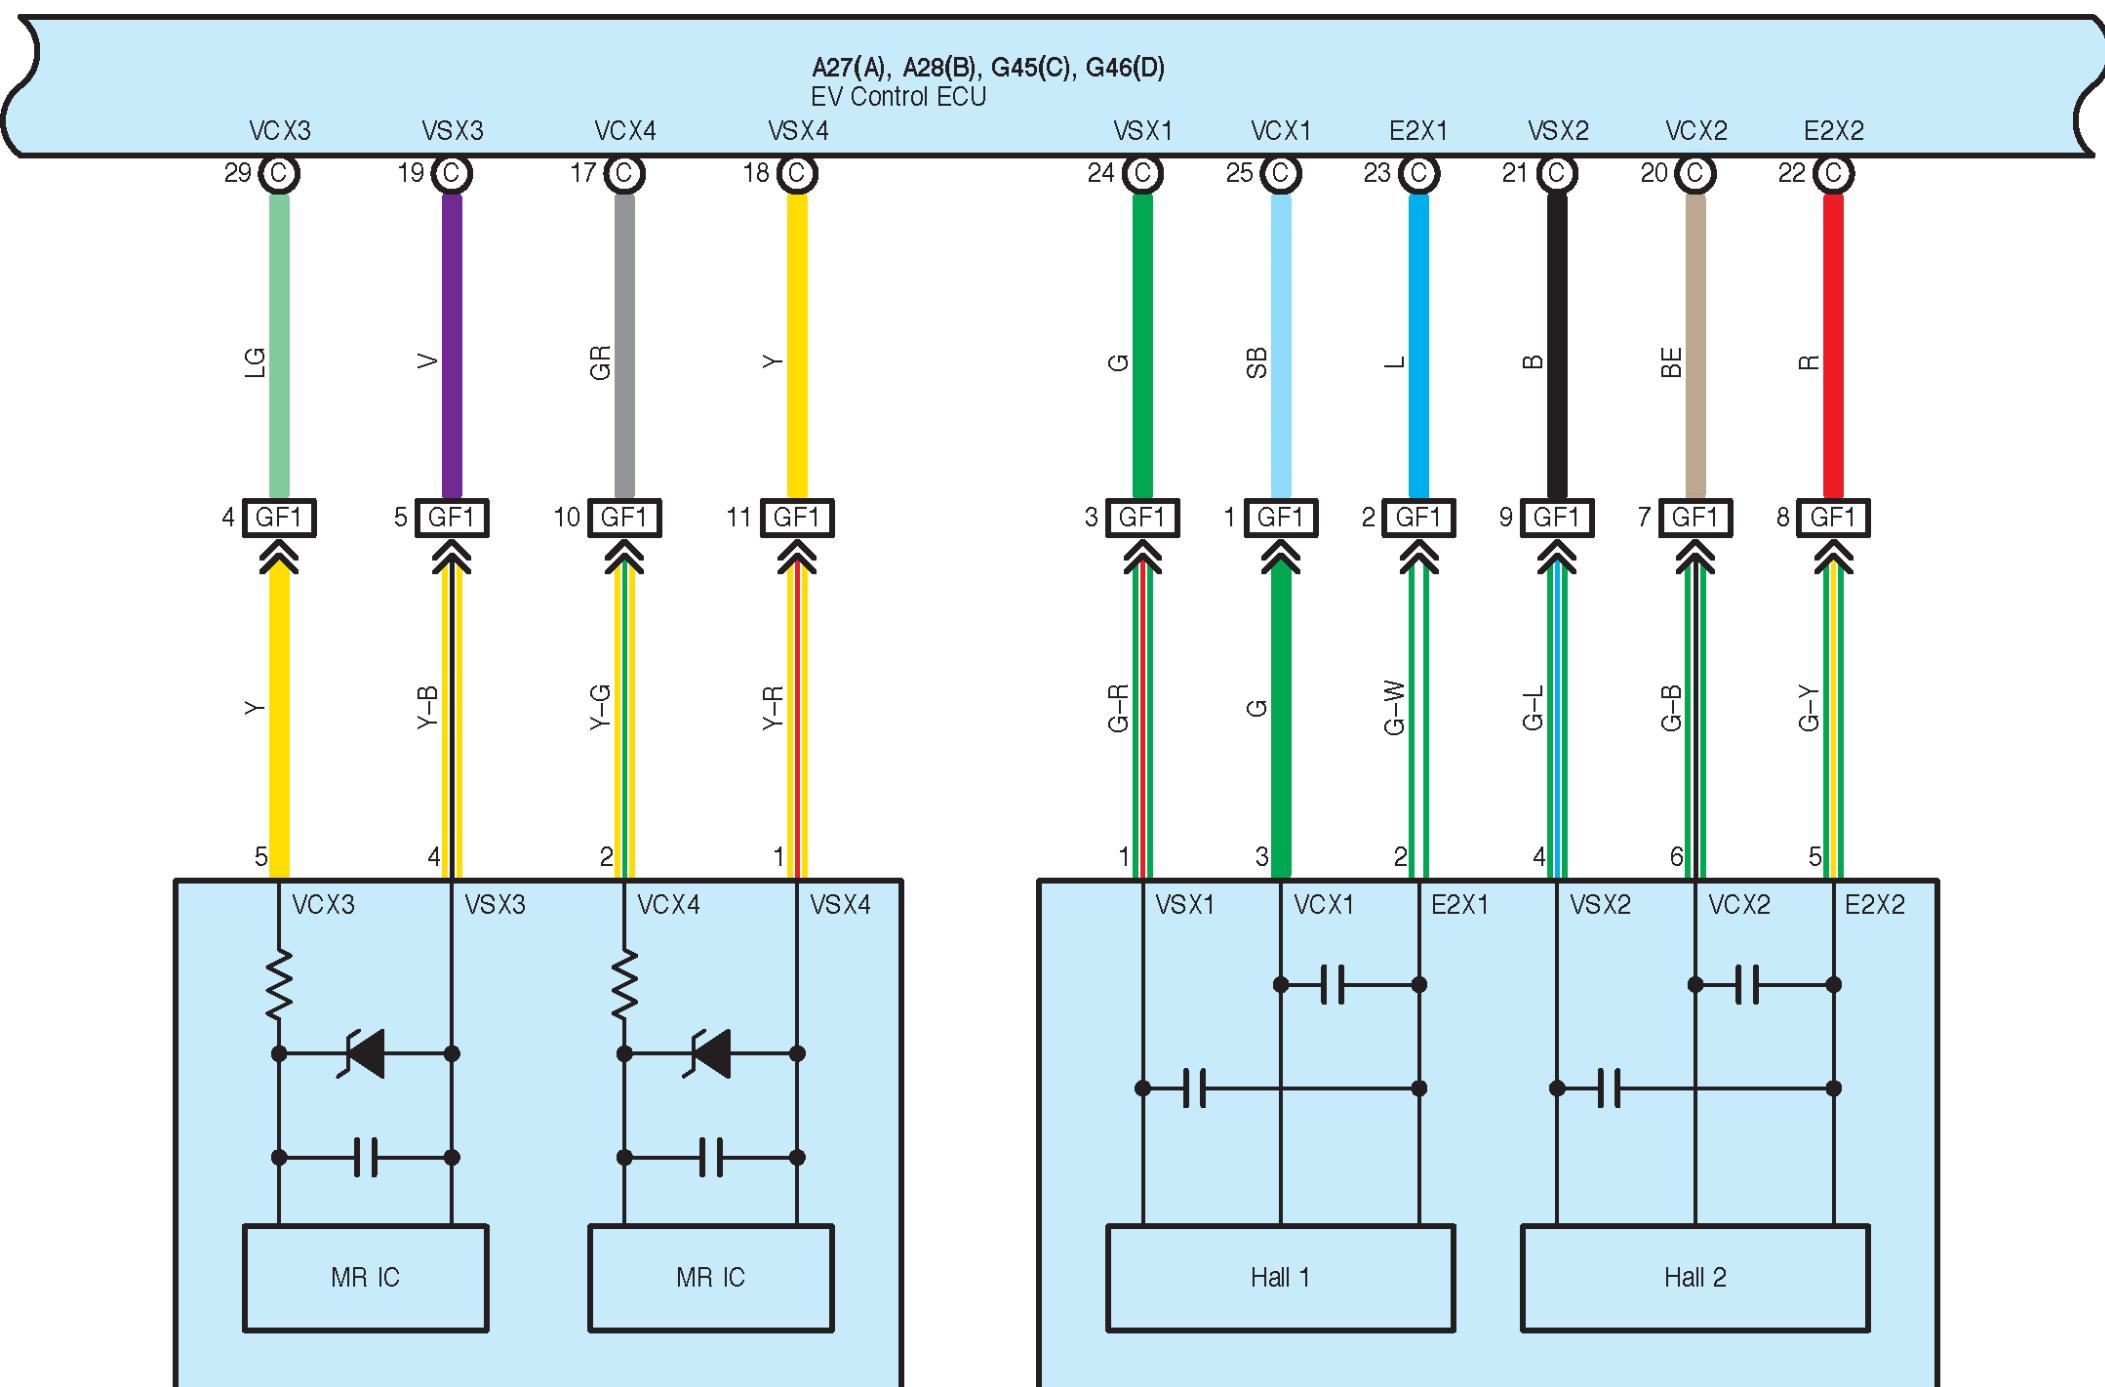

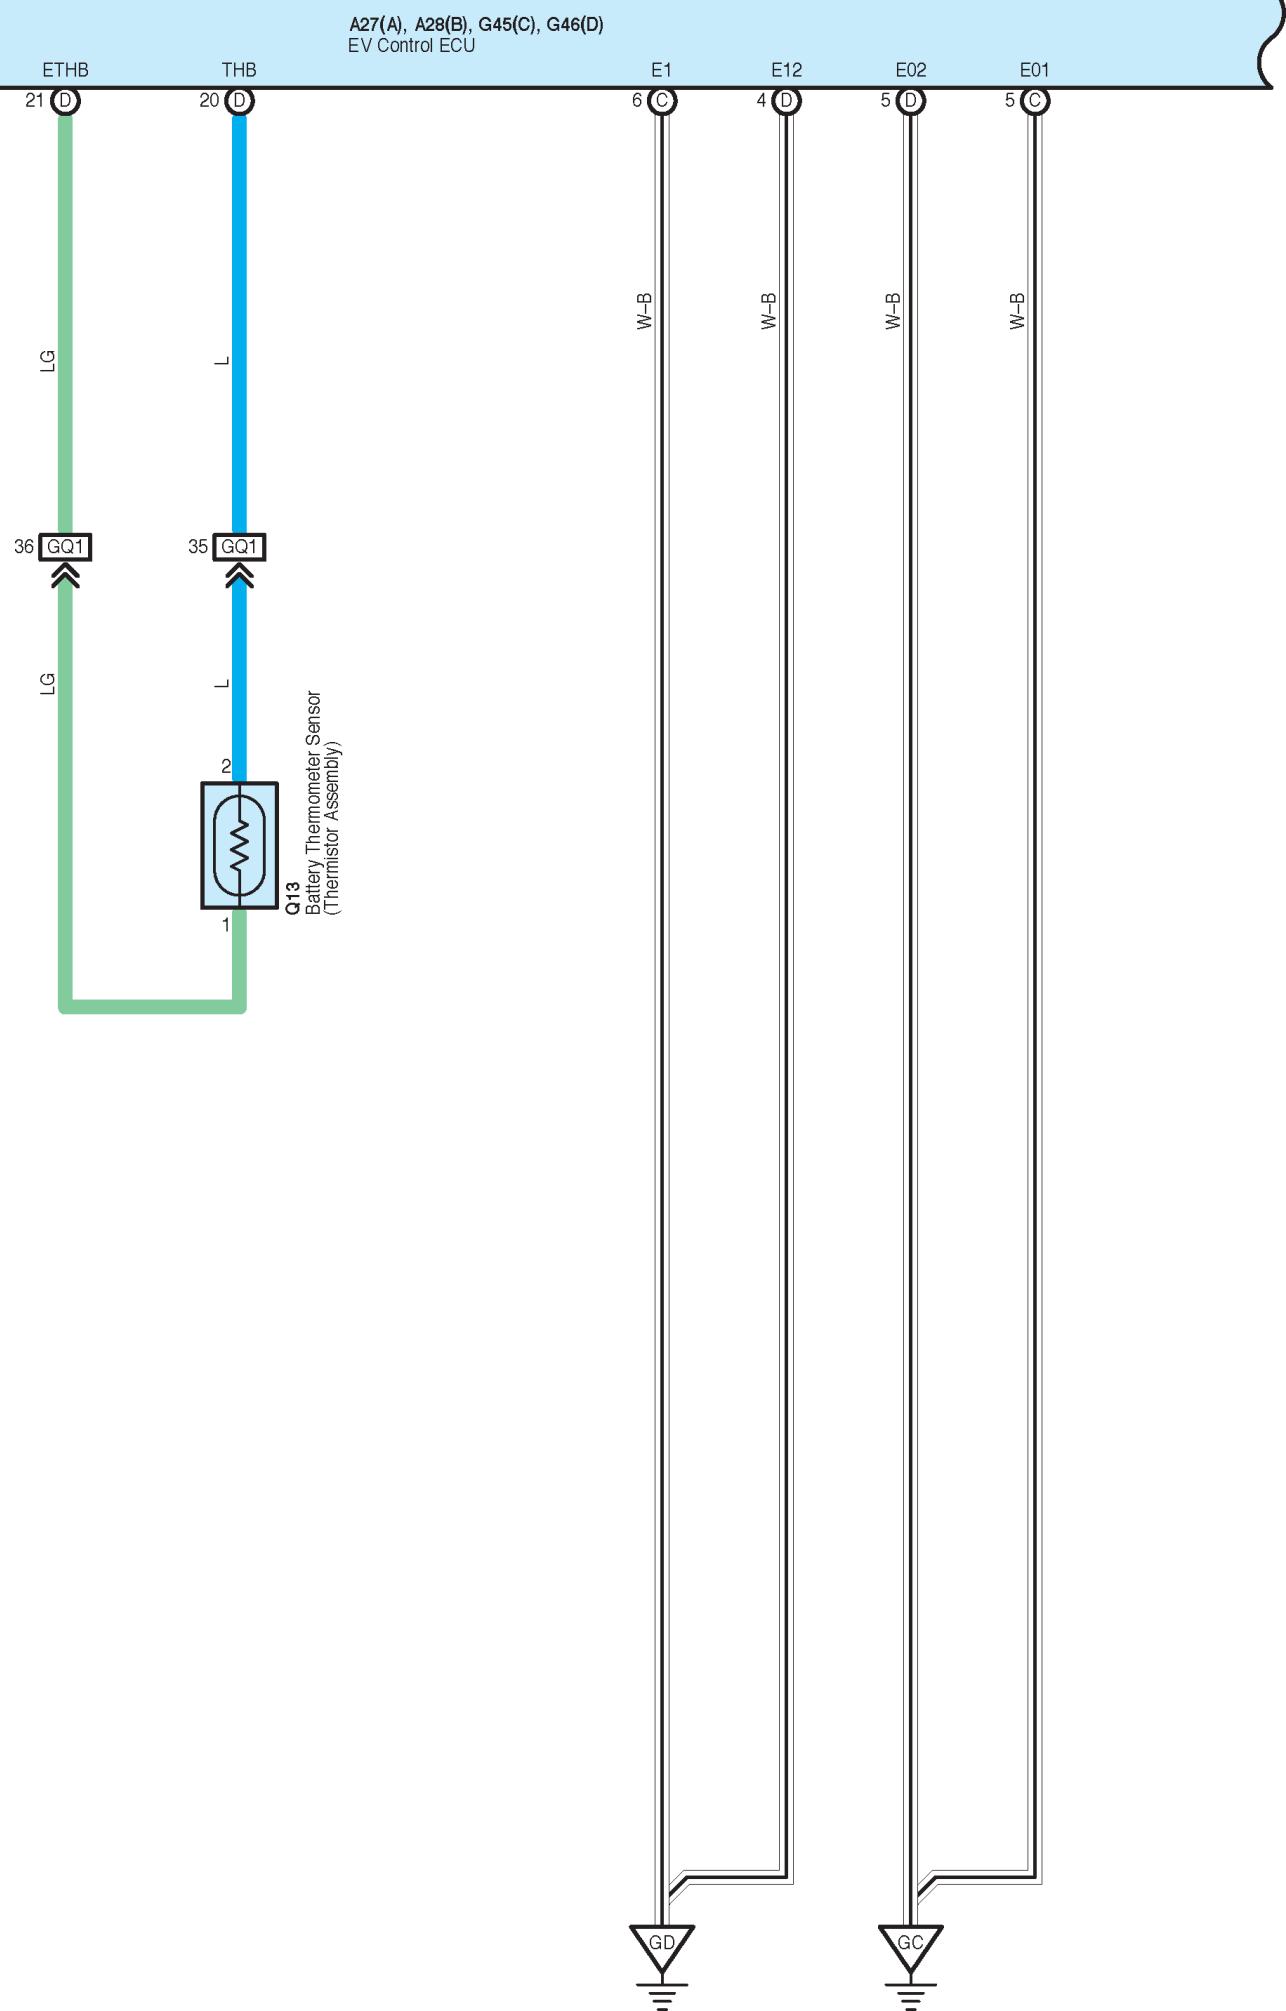

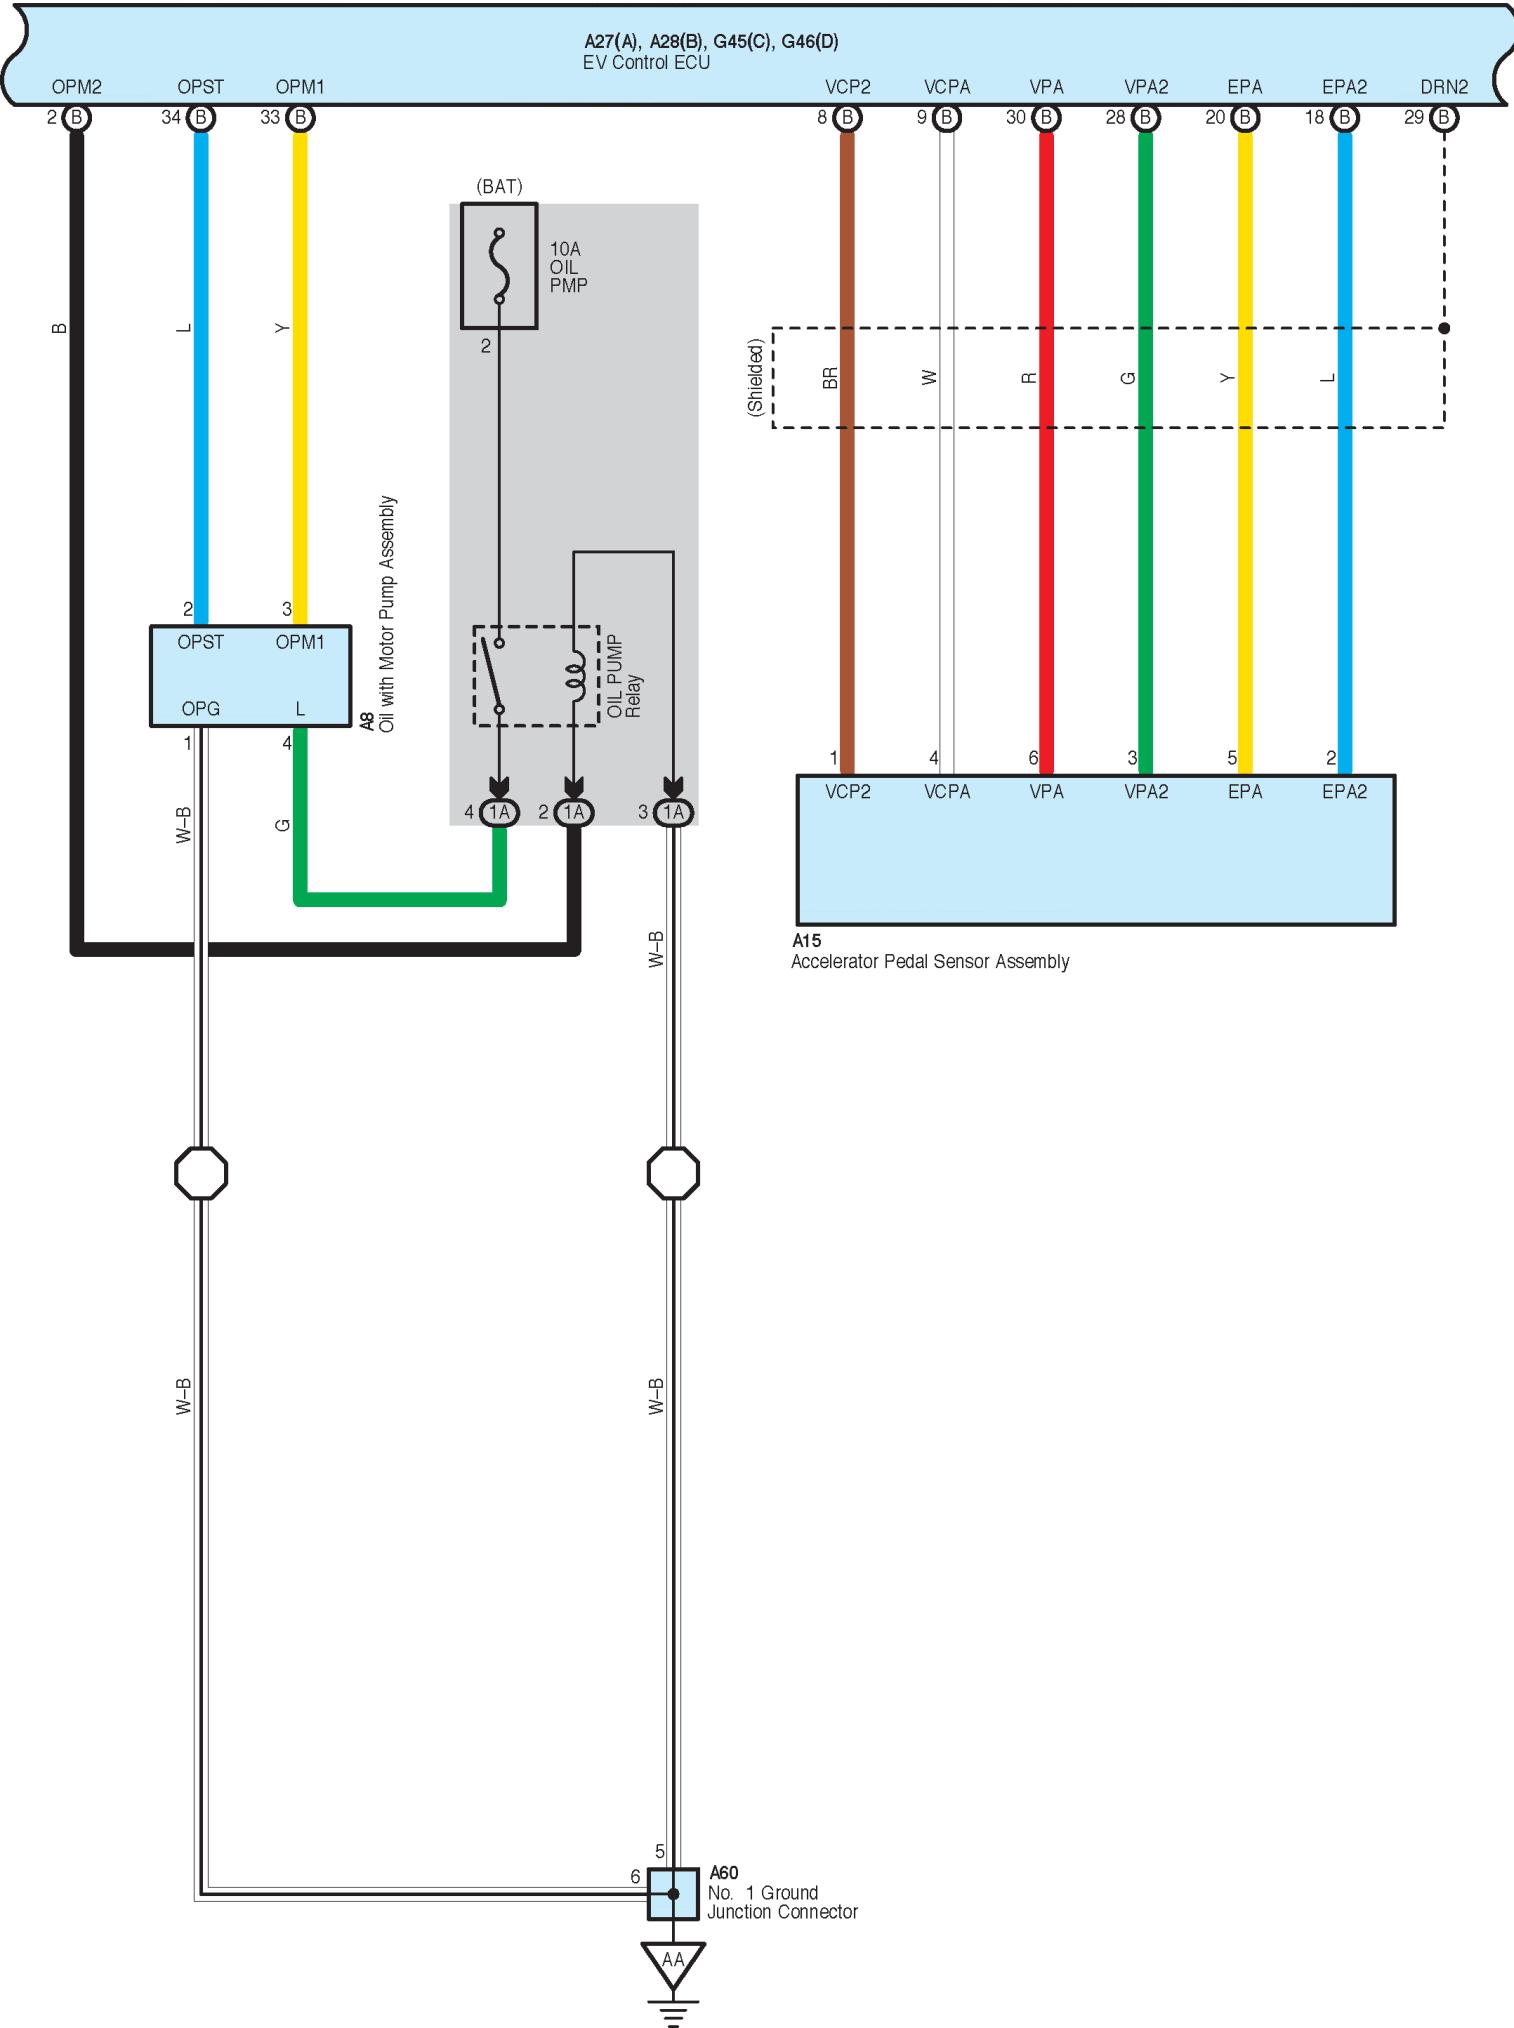

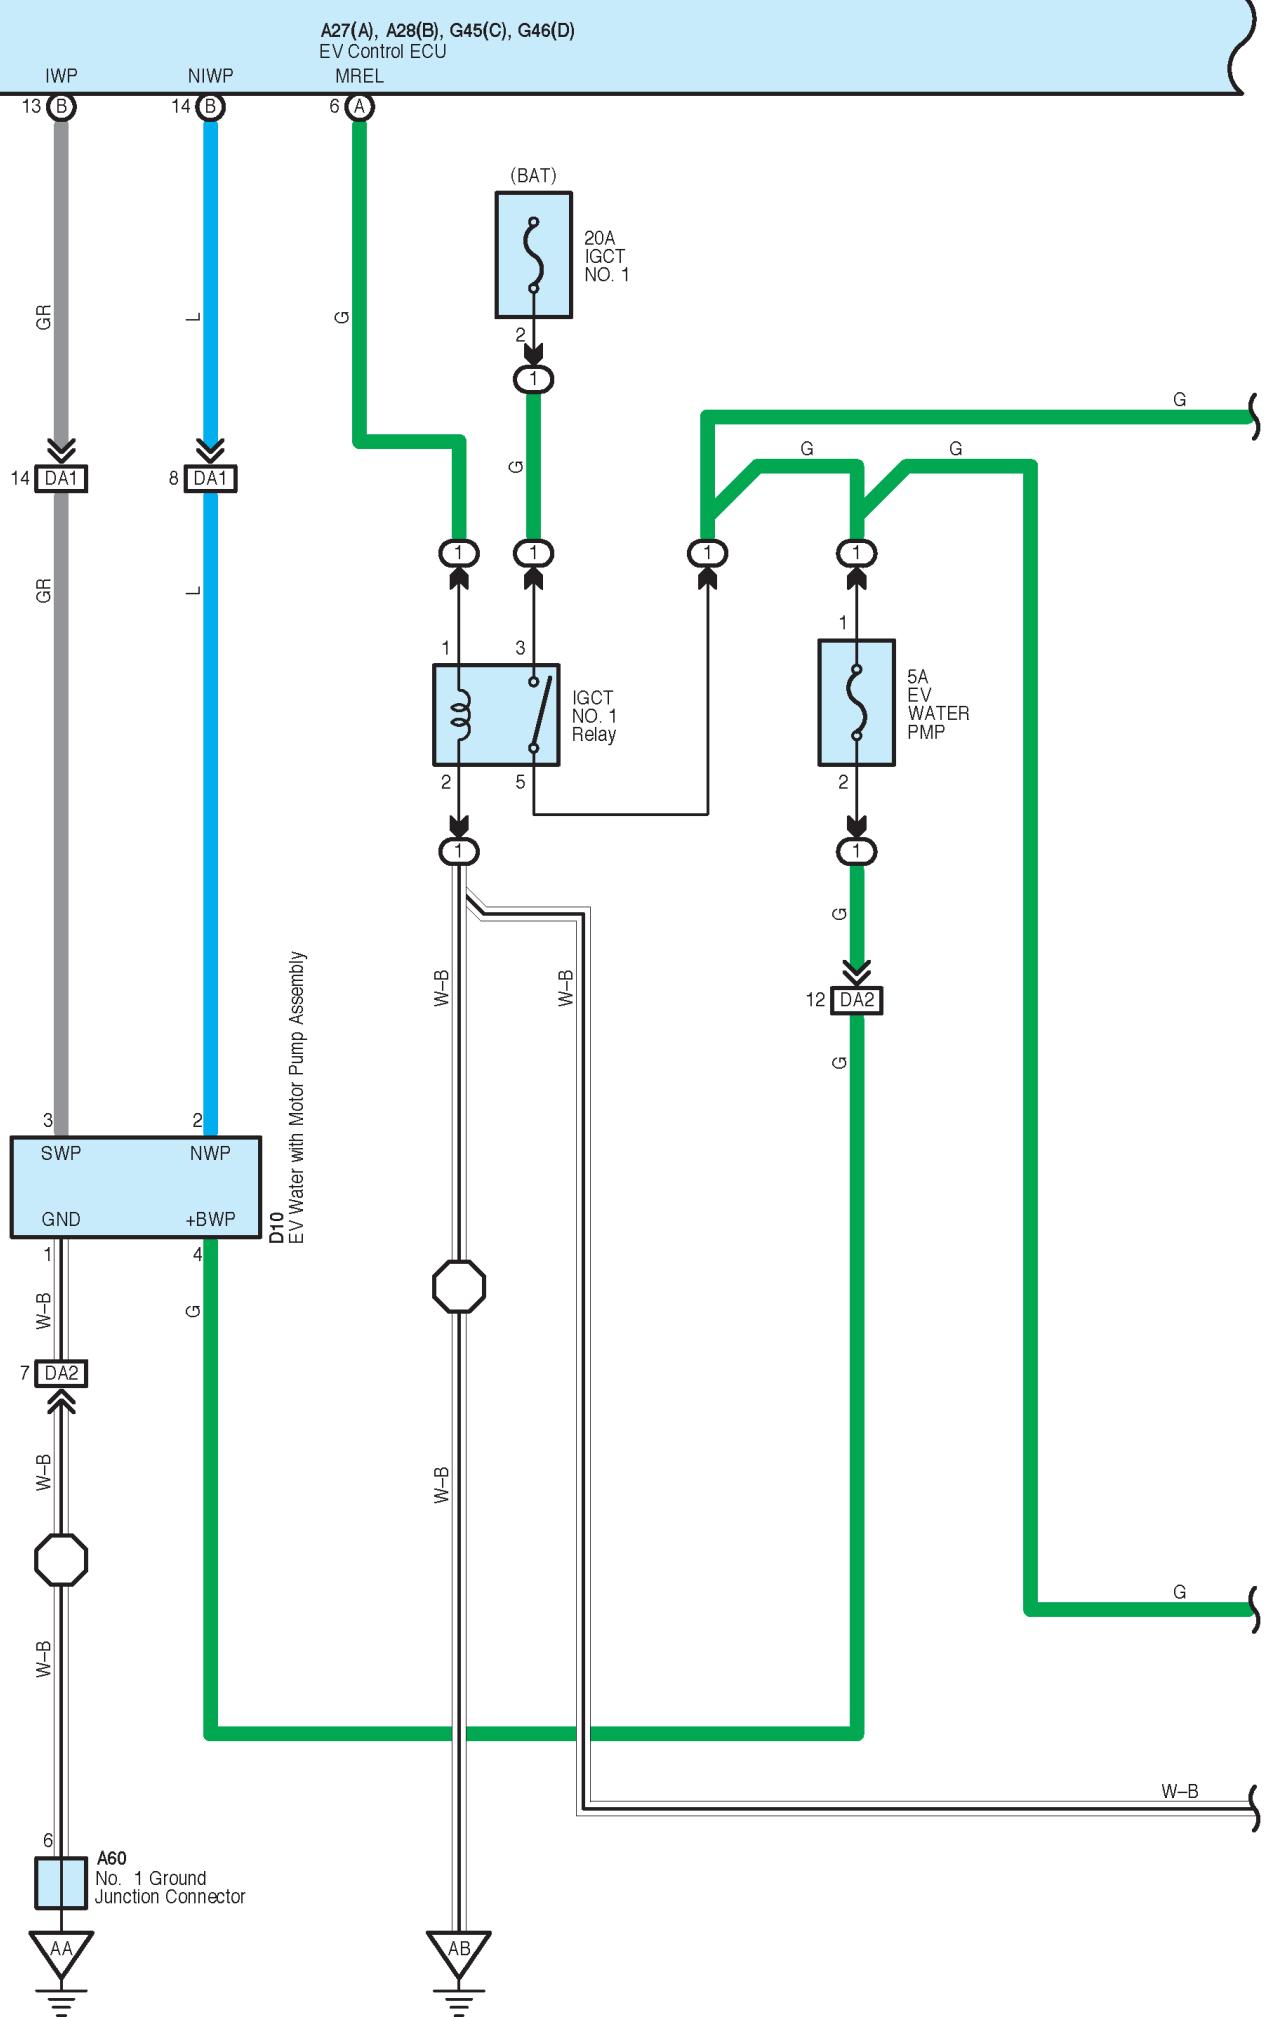

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

+B2 +B1

1(B)

4(A)

No. 1 Junction Connector
A39

12

13

14

G


(BAT)

30A
P CON
MTR

1

2

G

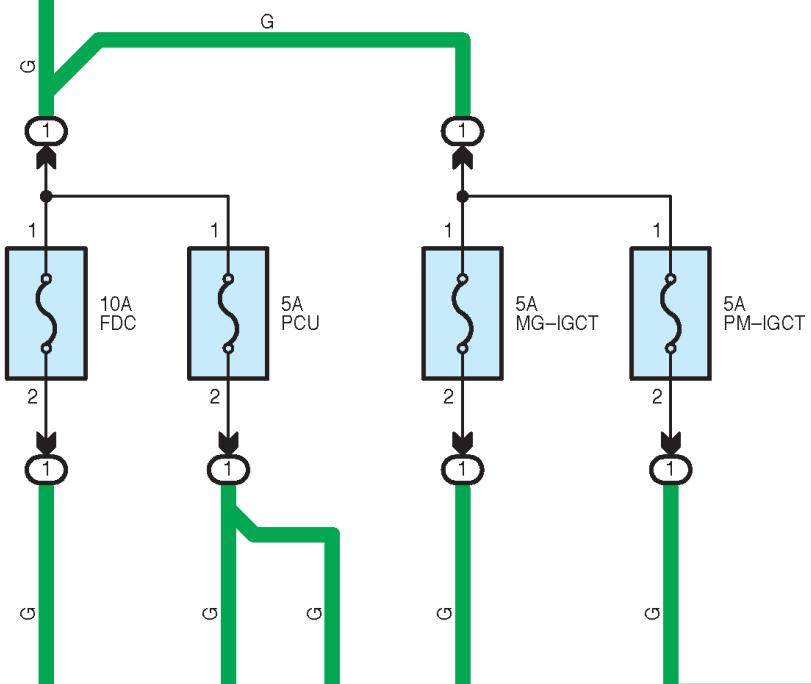

G

G

G

G

G

G

G

L

L

G


G

G

G


W-B

W-B

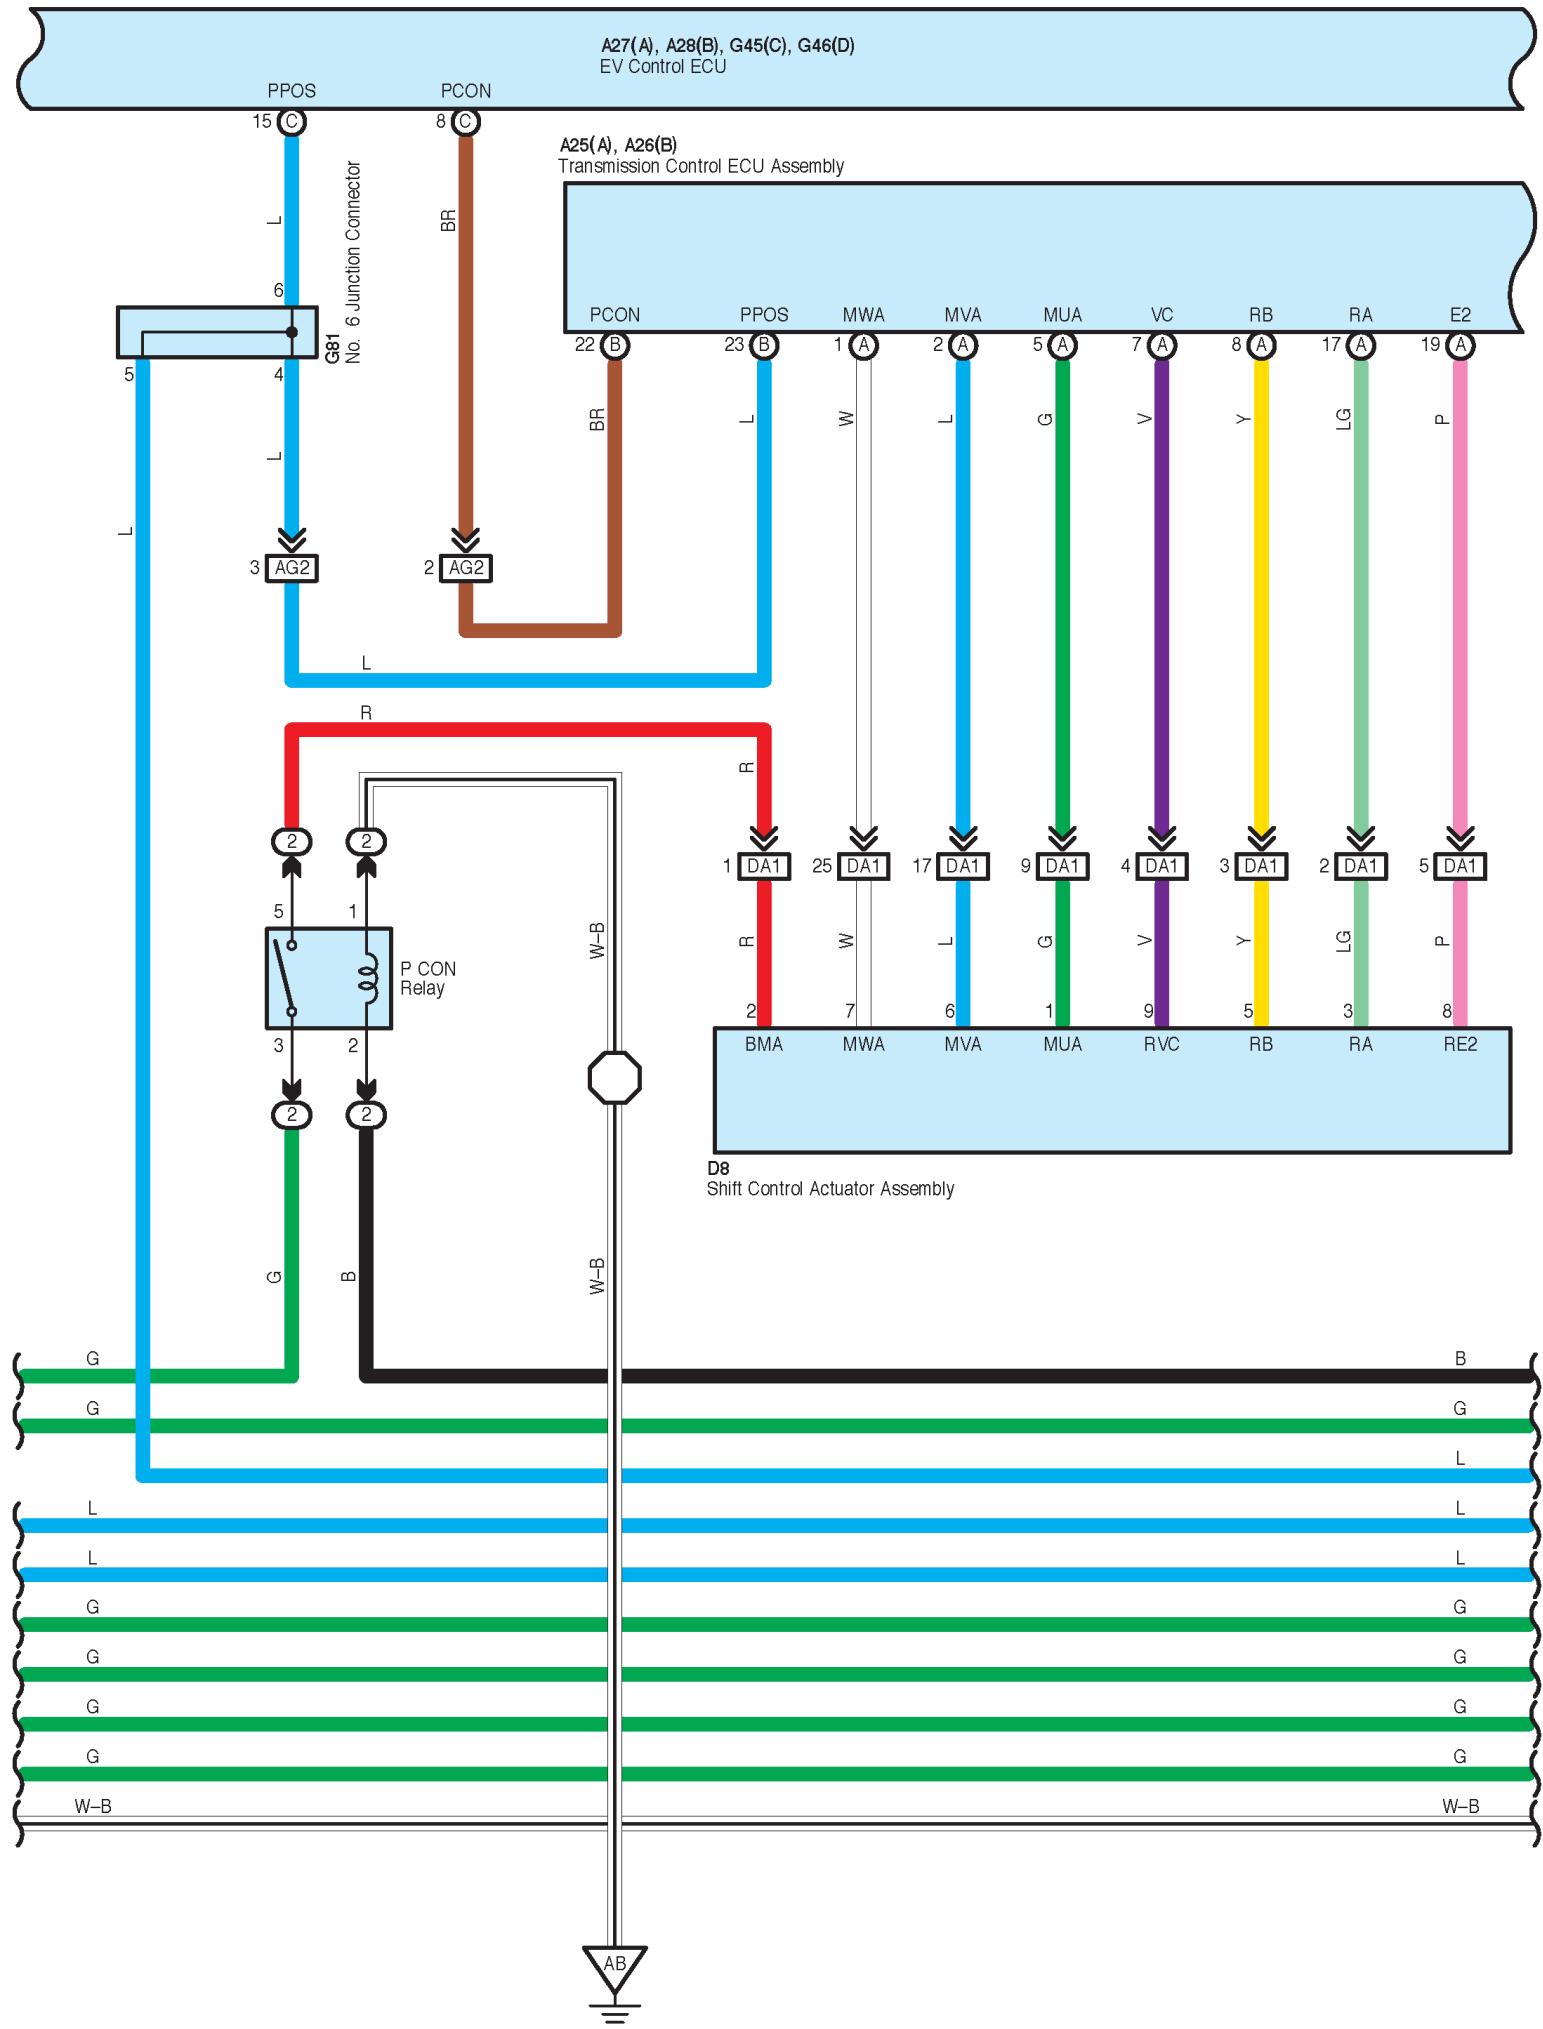


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

A25(A), A26(B)
Transmission Control ECU Assembly

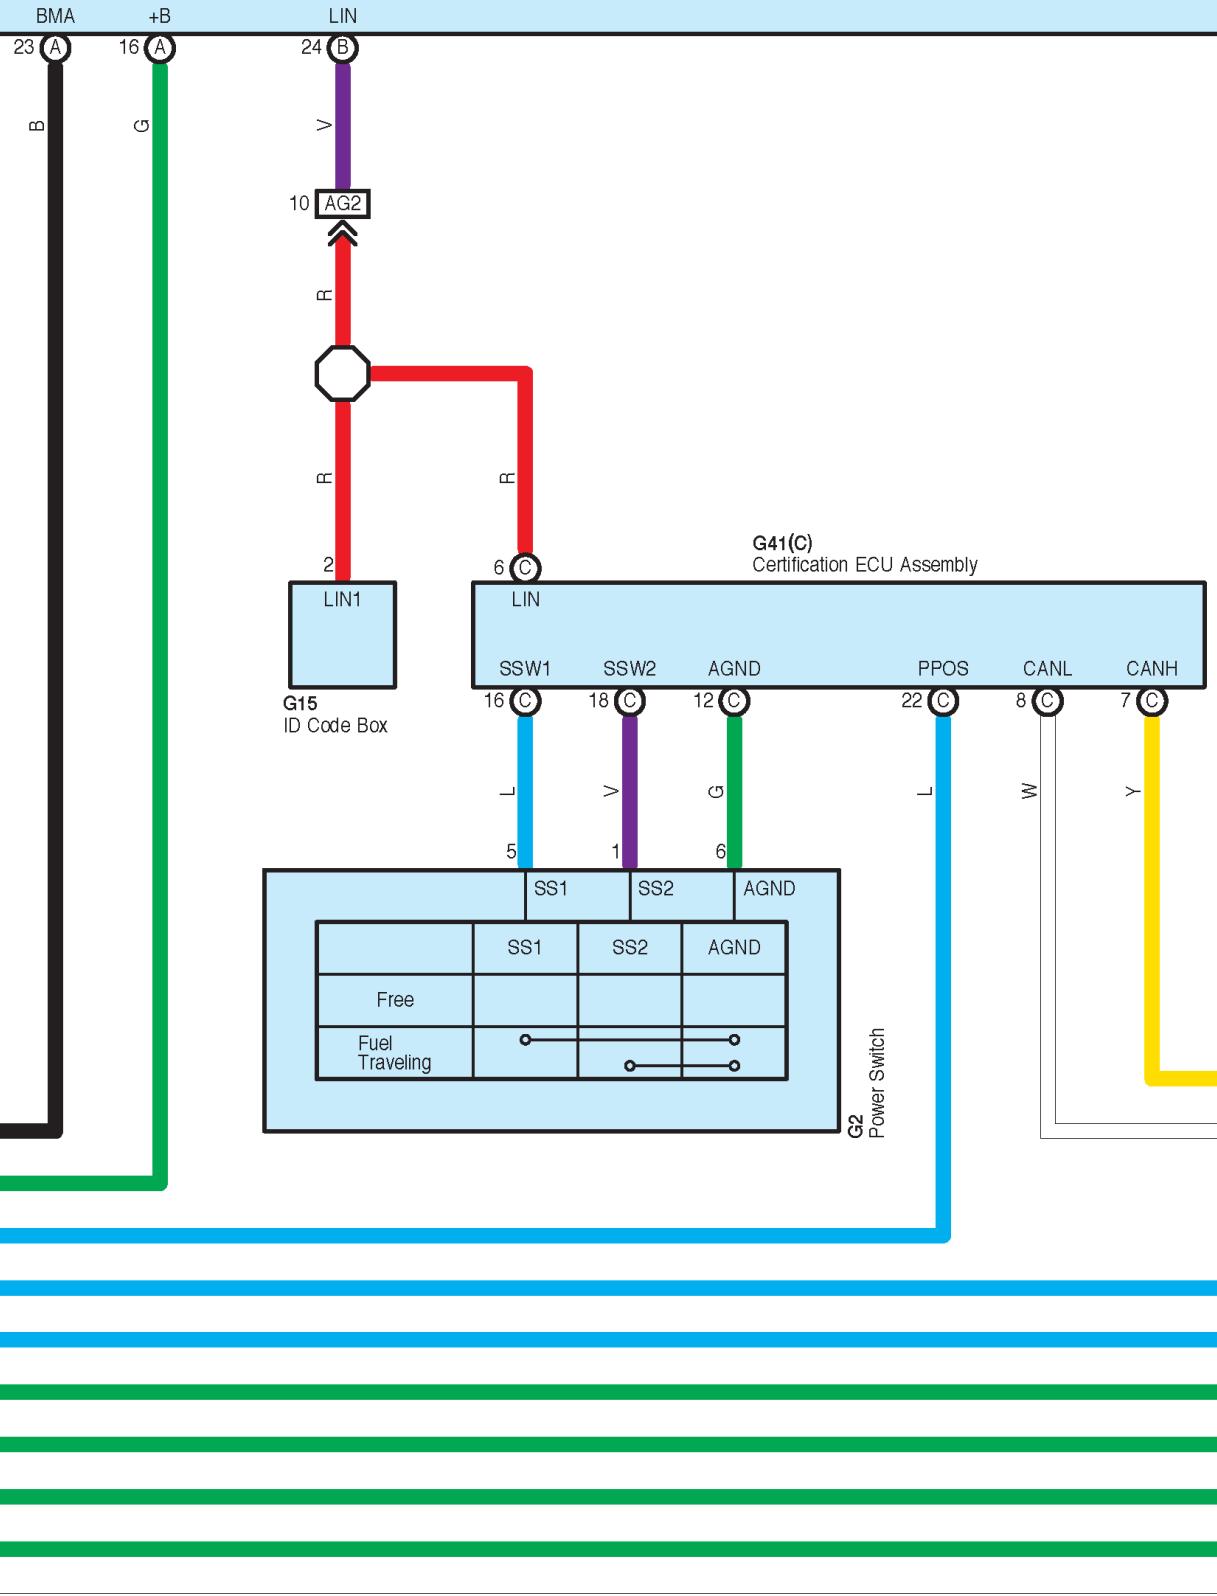


A27(A), A28(B), G45(C), G46(D)
EV Control ECU


A25(A), A26(B)
Transmission Control ECU Assembly

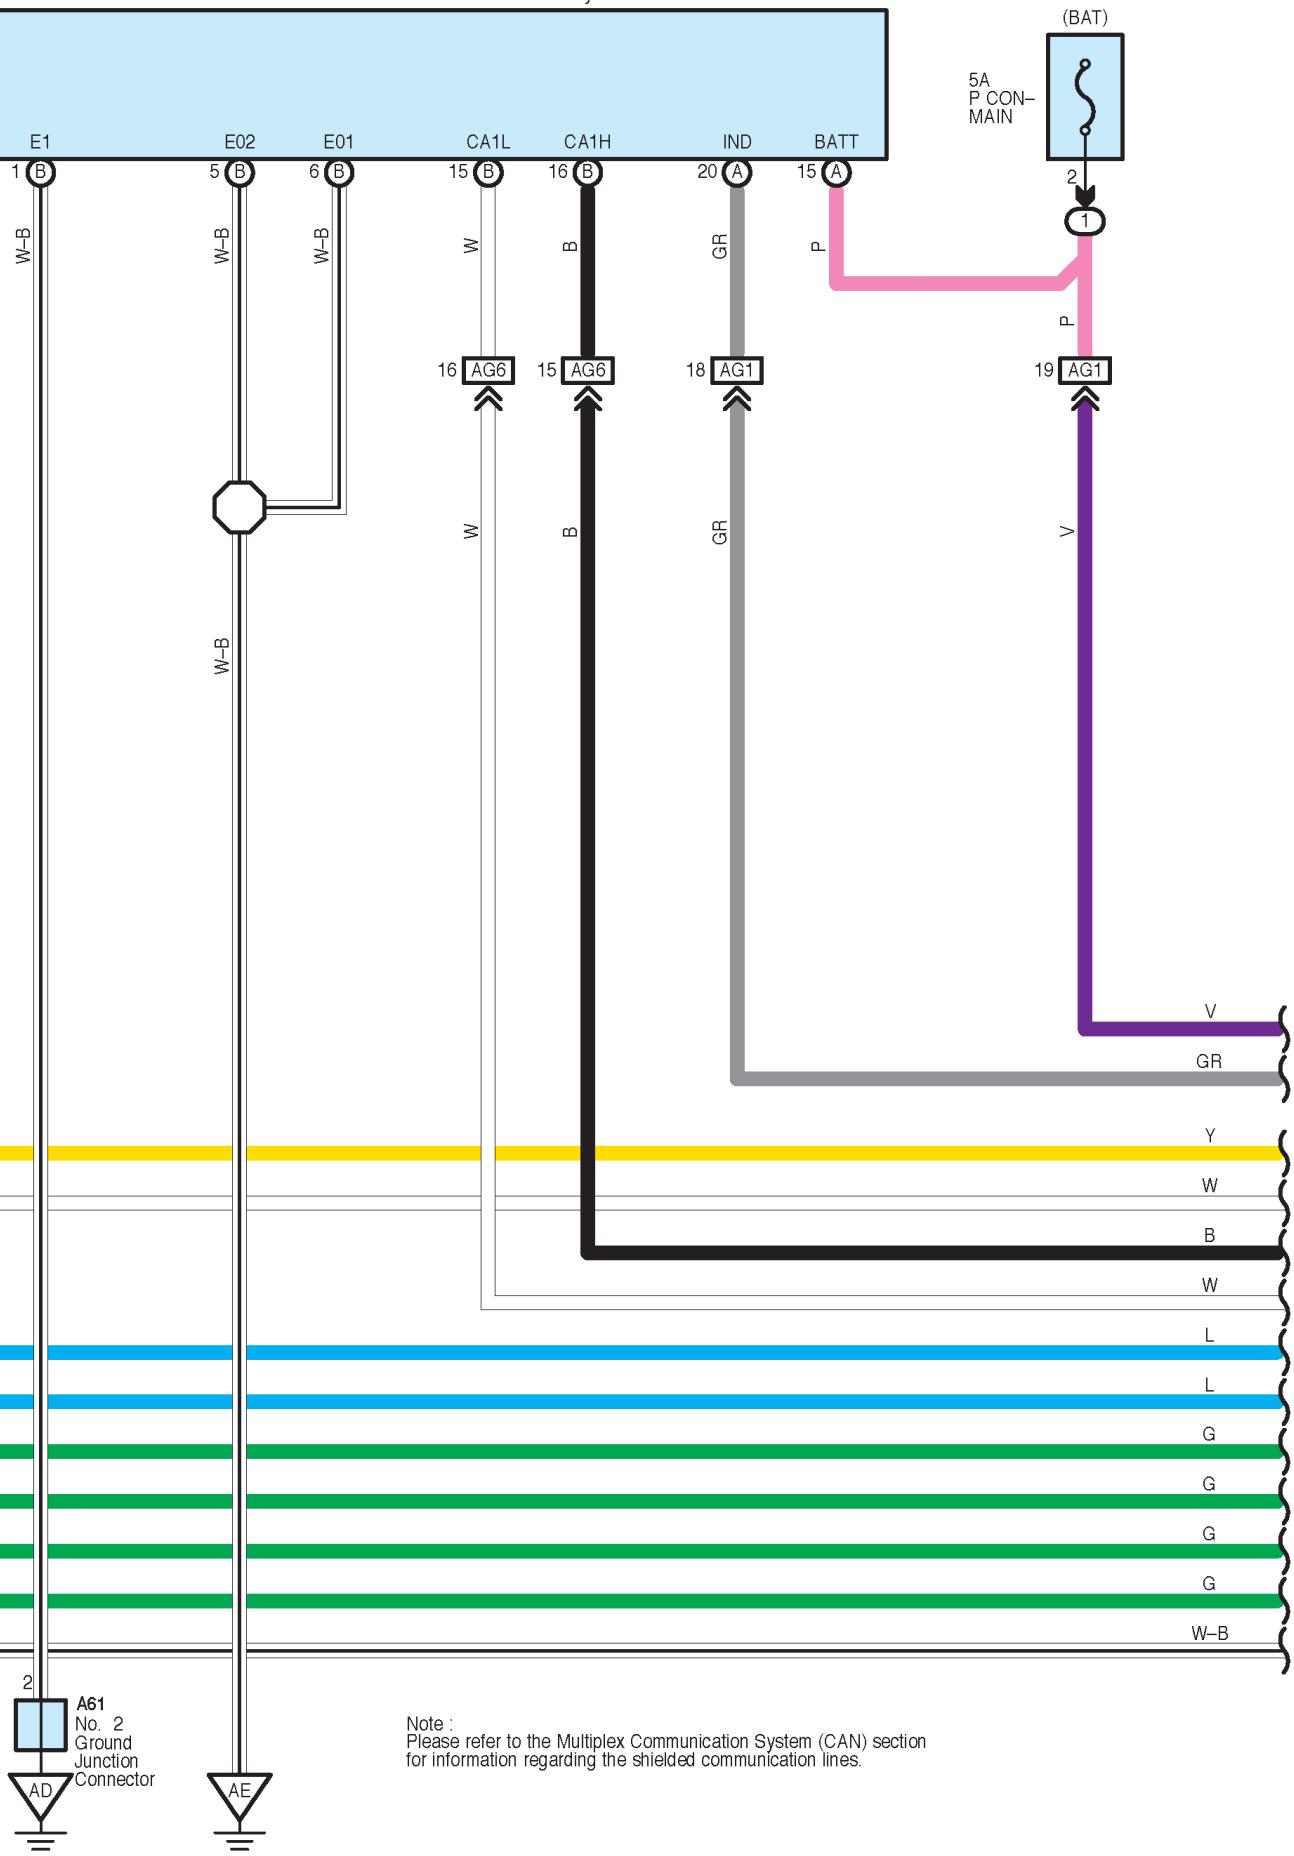

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

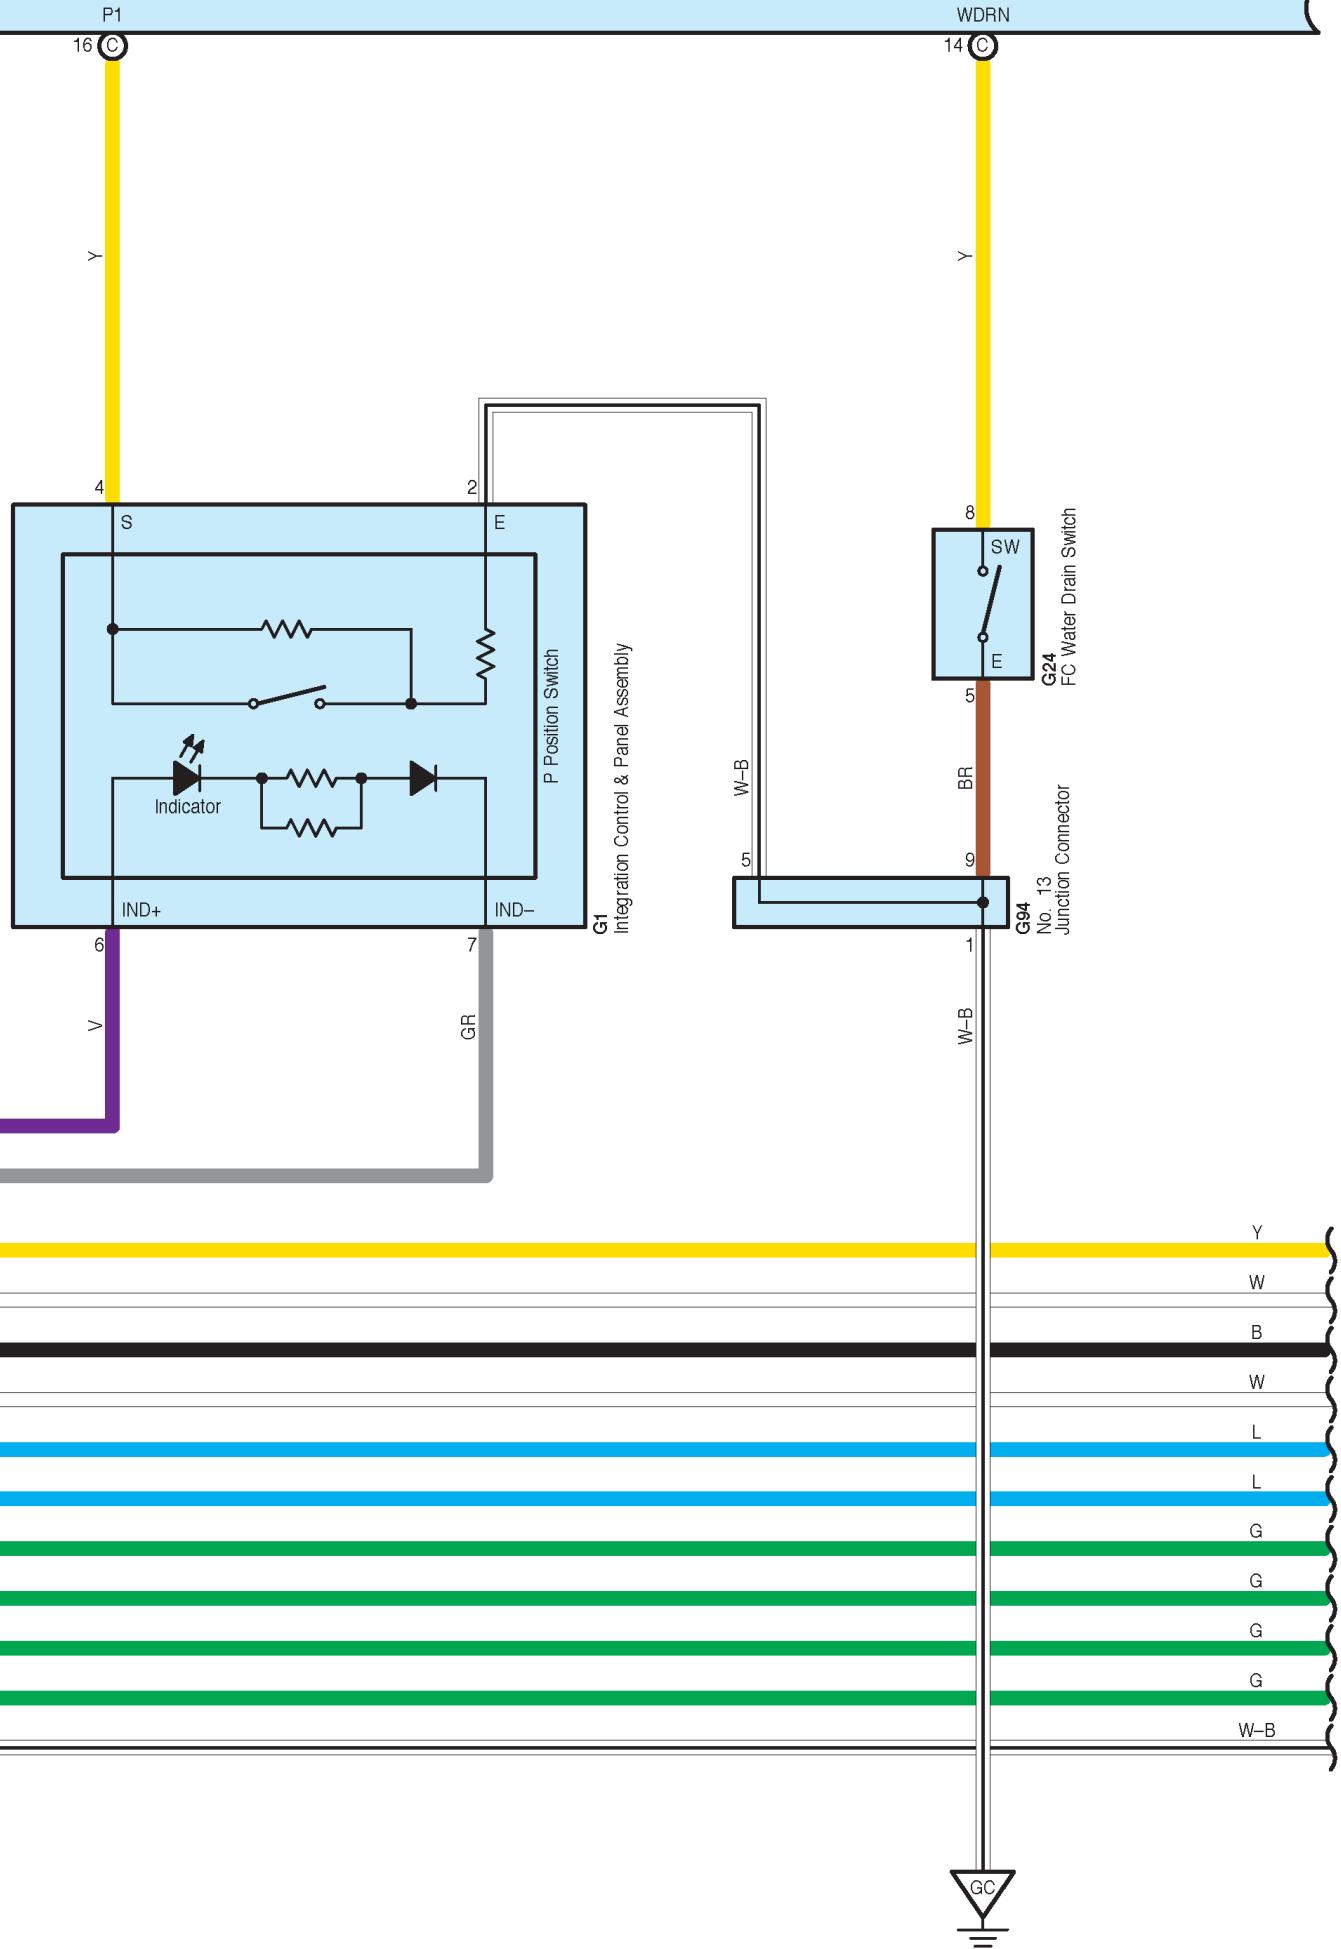

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

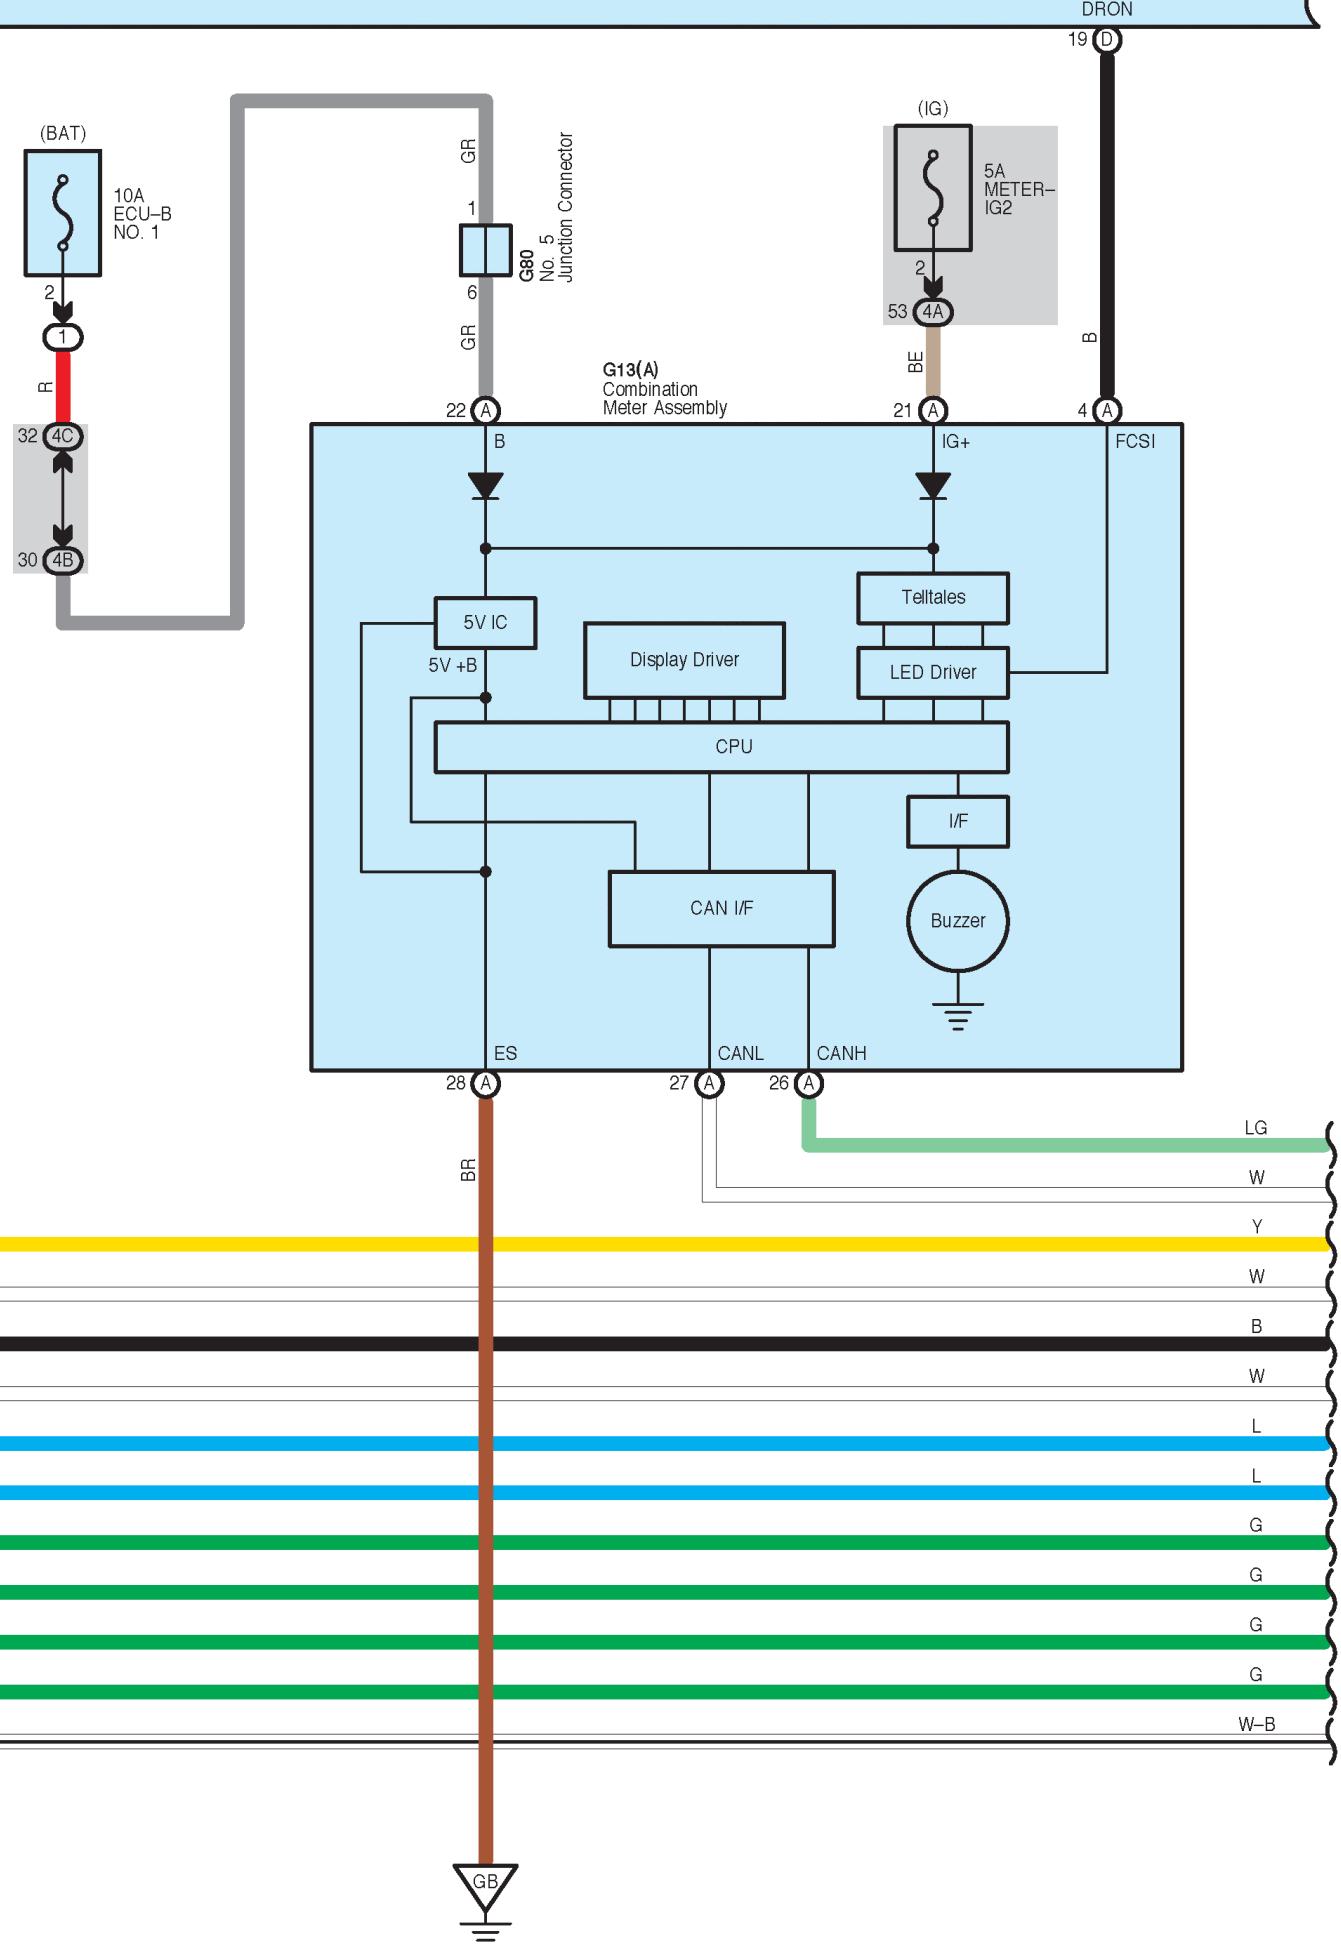

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

PWR CA1H CA1L

6(D) 25(D) 24(D)

GR

GR

W

4

14

G85
No. 2 CAN Junction Connector



PWR MODE Switch
ECO MODE Switch

GND

G49
Integration Control
& Panel Assembly

W-B

7

16

W-B

1

13

Junction Connector

CA1H CA1L
CA2L CA2H

G56
Network Gateway ECU

LG

W

Y

W

B

W

L

L

G

G

G

W-B

LG

W

W

BE

B

W

L

L

G

G

G


W-B



A27(A), A28(B), G45(C), G46(D)
EV Control ECU

CA2H CA2L
34(C) 35(C)

G86
No. 3 CAN Junction Connector

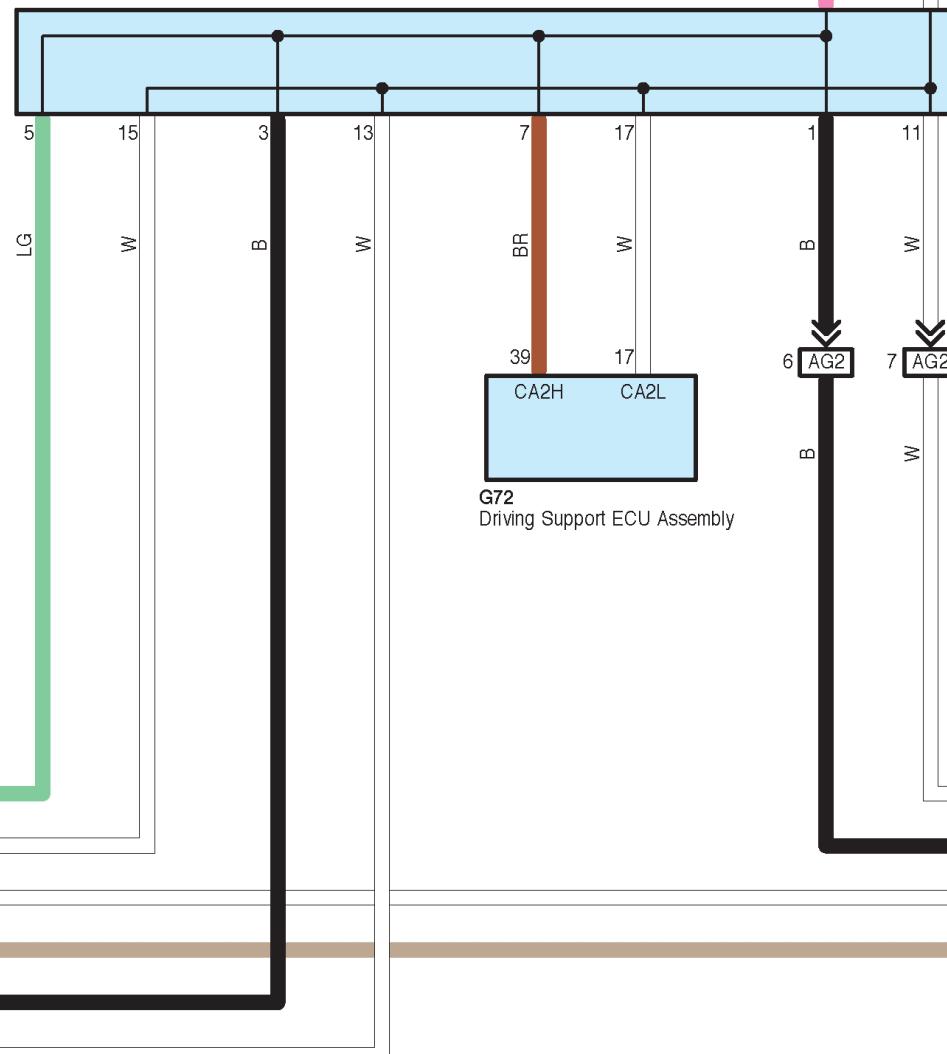

LG

W

W

BE

B

W

L

L

G

G

G

G

W-B

W

B

W

BE

L

L


G

G

G

G

W-B

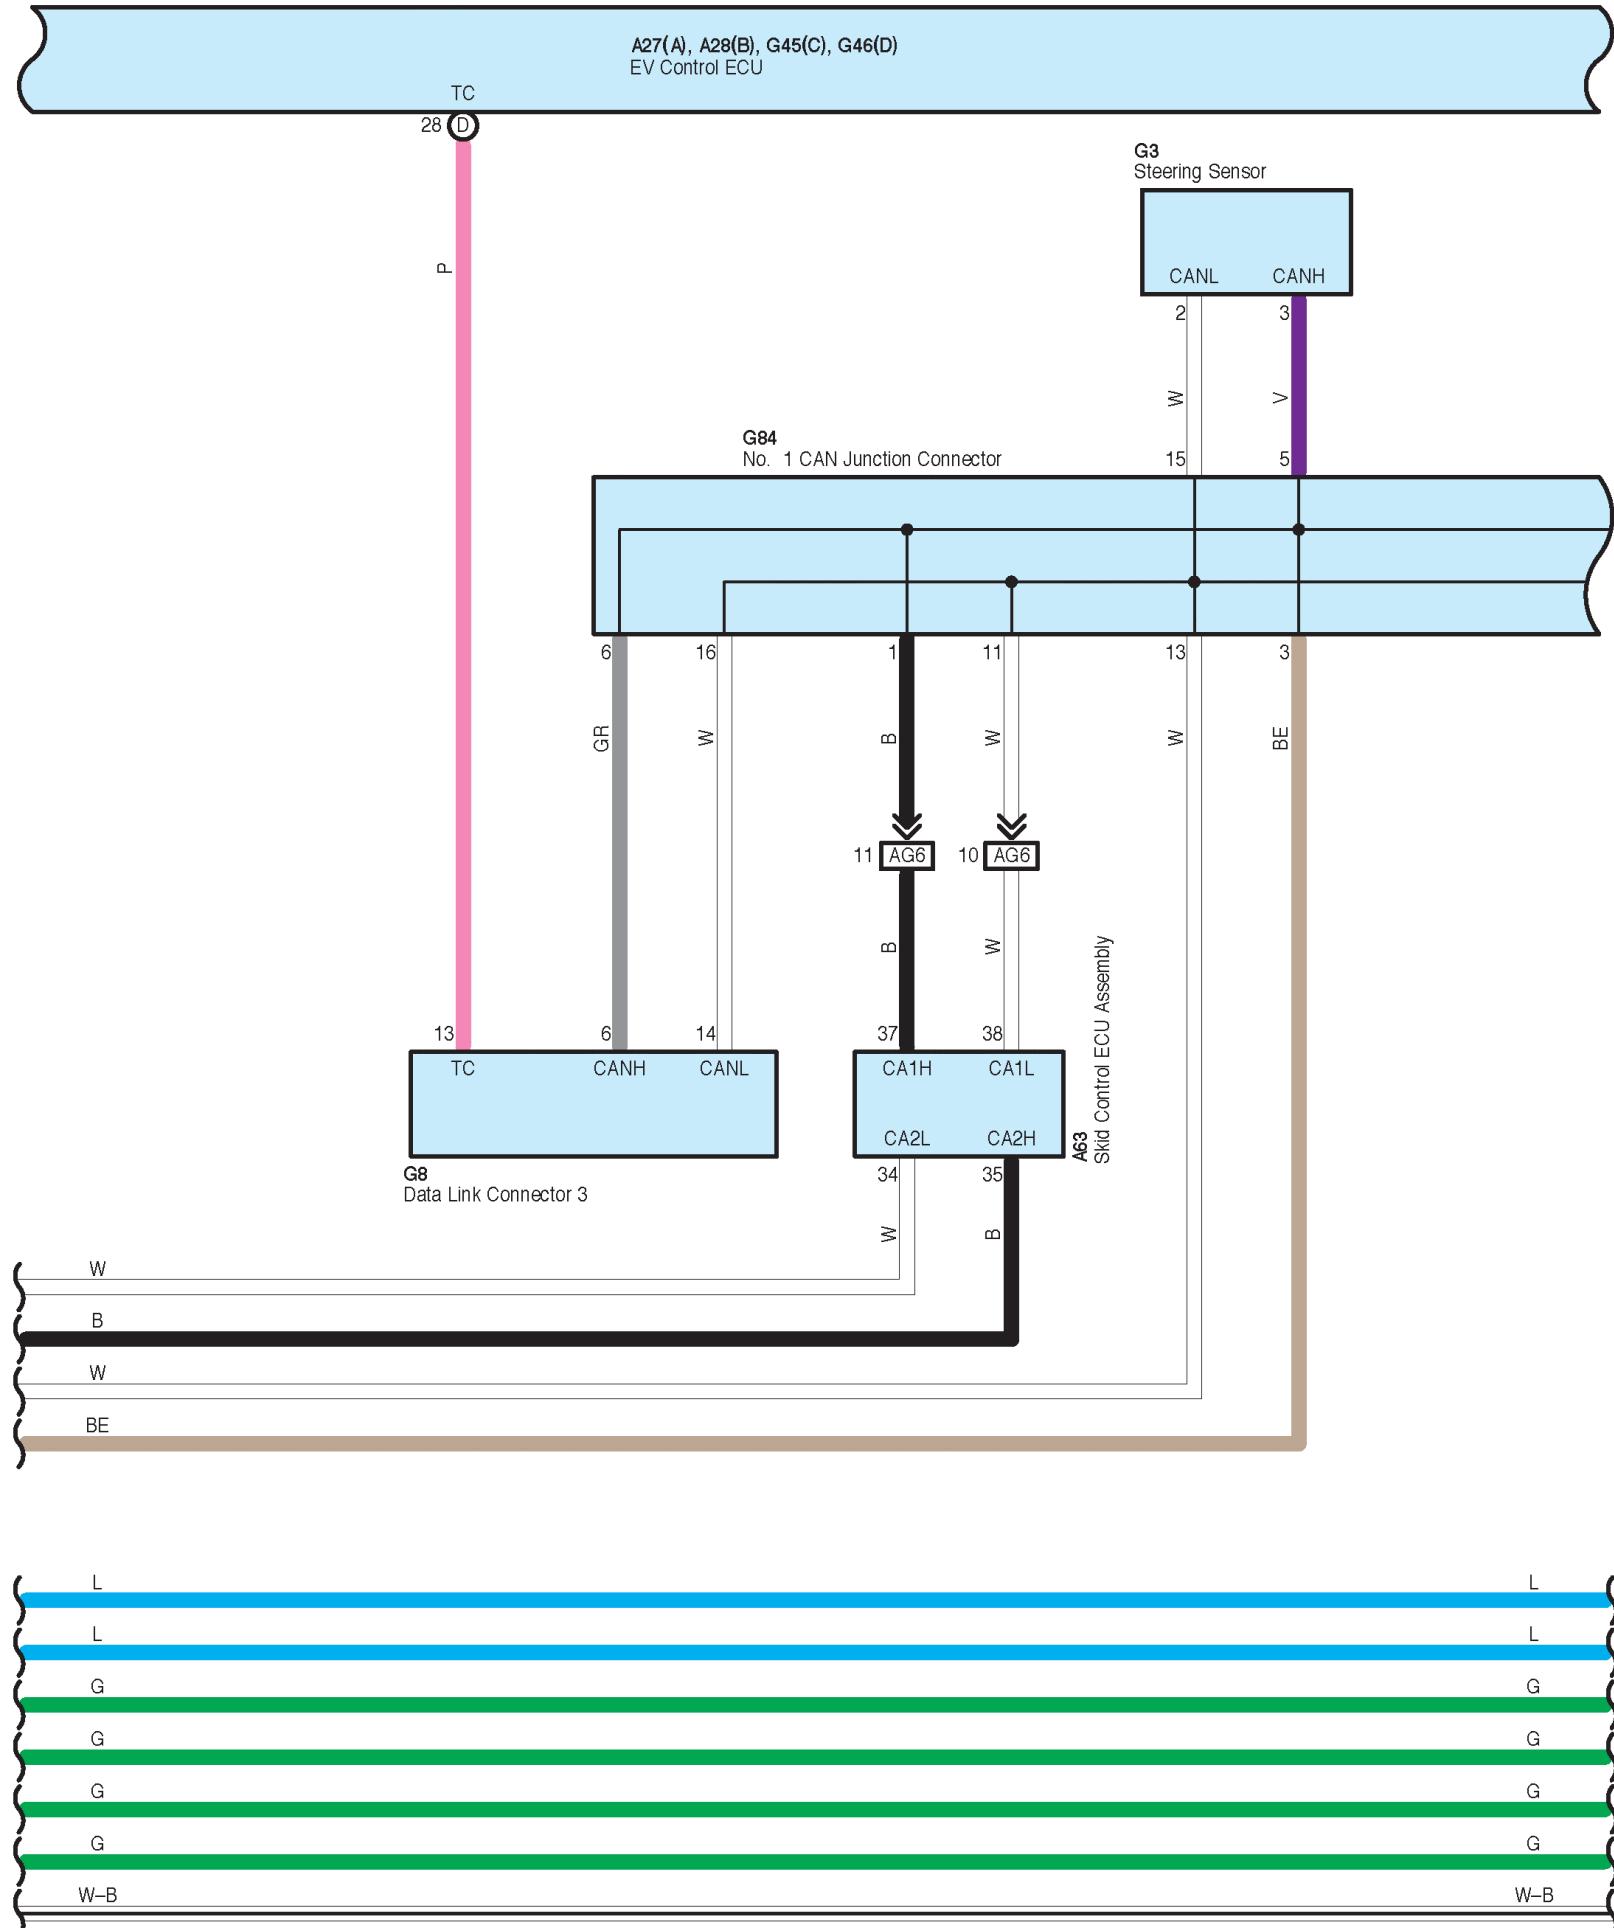


Note :
Please refer to the Multiplex Communication System (CAN) section
for information regarding the shielded communication lines.


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

ABFS

 
G43(B)
Air Conditioning
Amplifier Assembly



G6(B)
Main Body ECU

 

G84
No. 1 CAN
Junction Connector

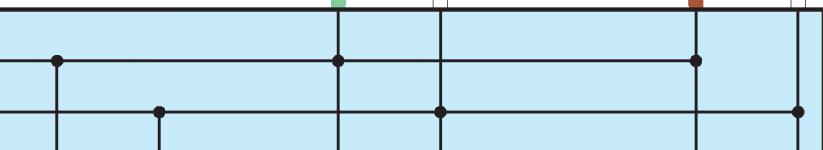


14(D)

B


41 4A

24 4A

B

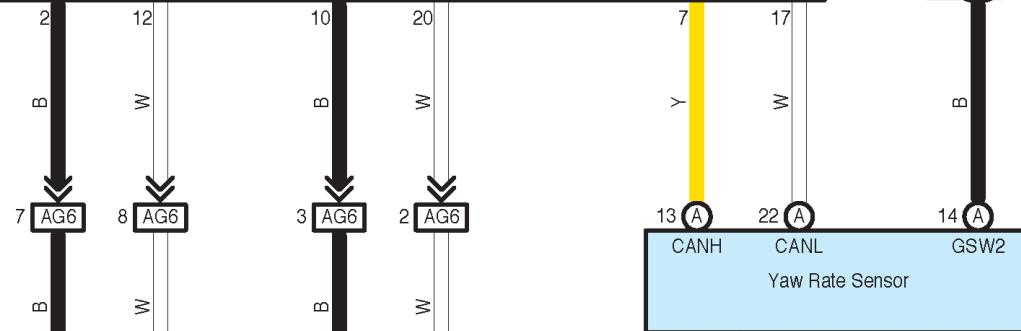

G33(A)
Airbag ECU Assembly

 

14(A)

G87
No. 4 CAN
Junction Connector



3 AG7 2 AG7

3 AG7 2 AG7

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W

B W


B W

B W

B W


Y

Note :
Please refer to the Multiplex Communication System (CAN) section
for information regarding the shielded communication lines.

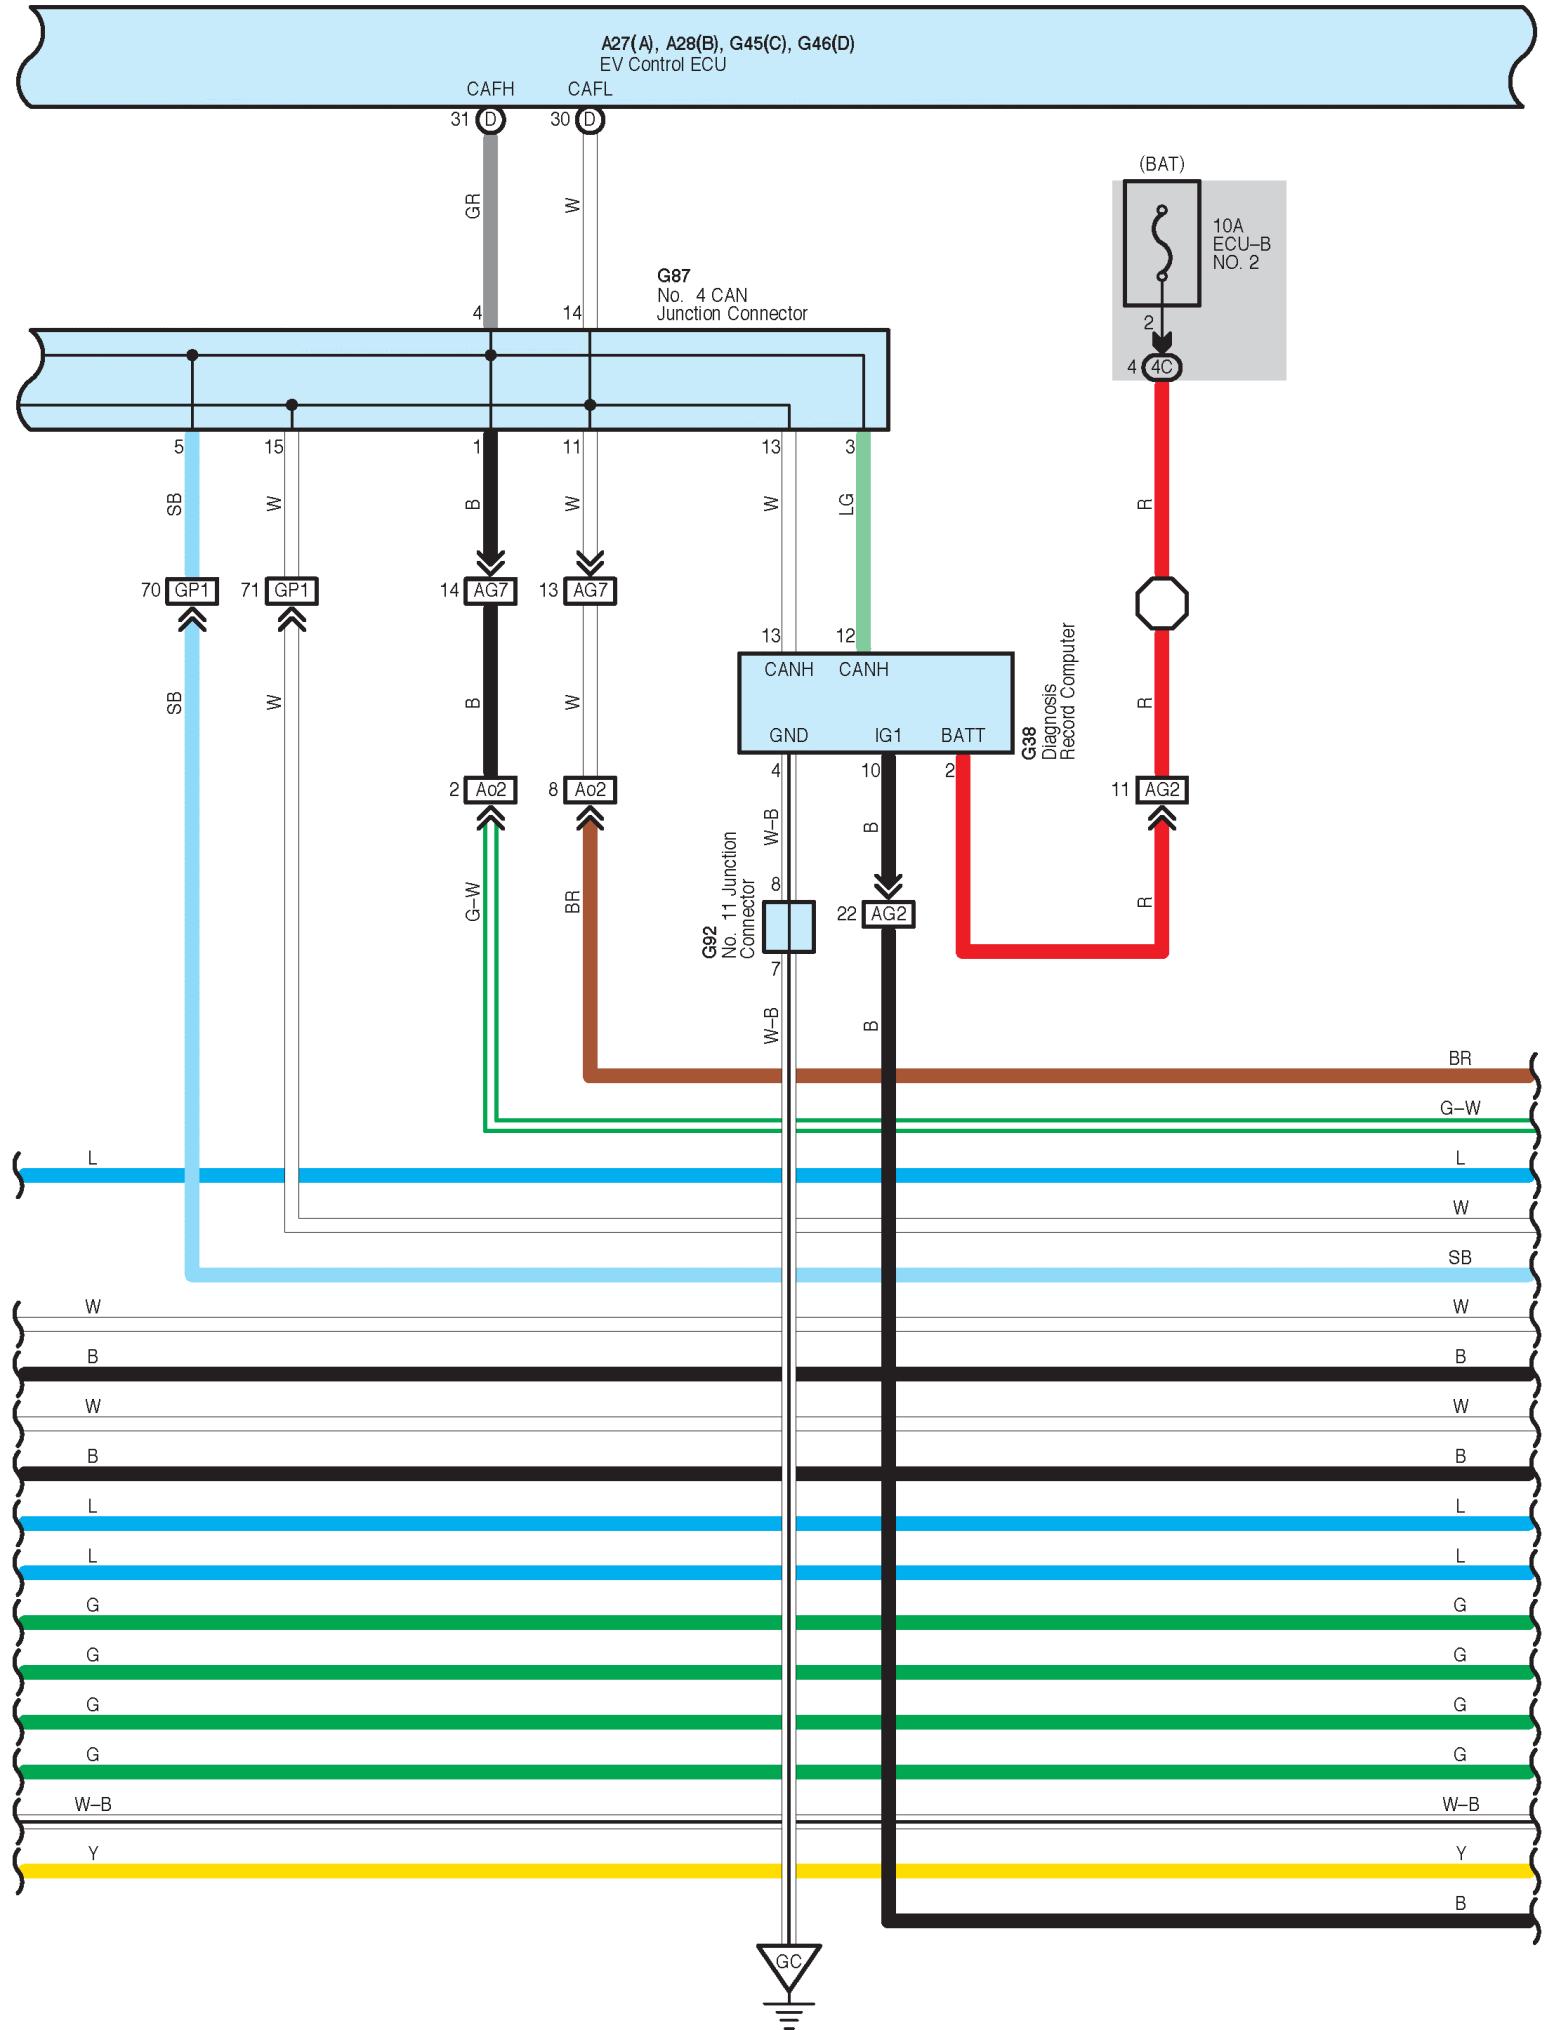


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

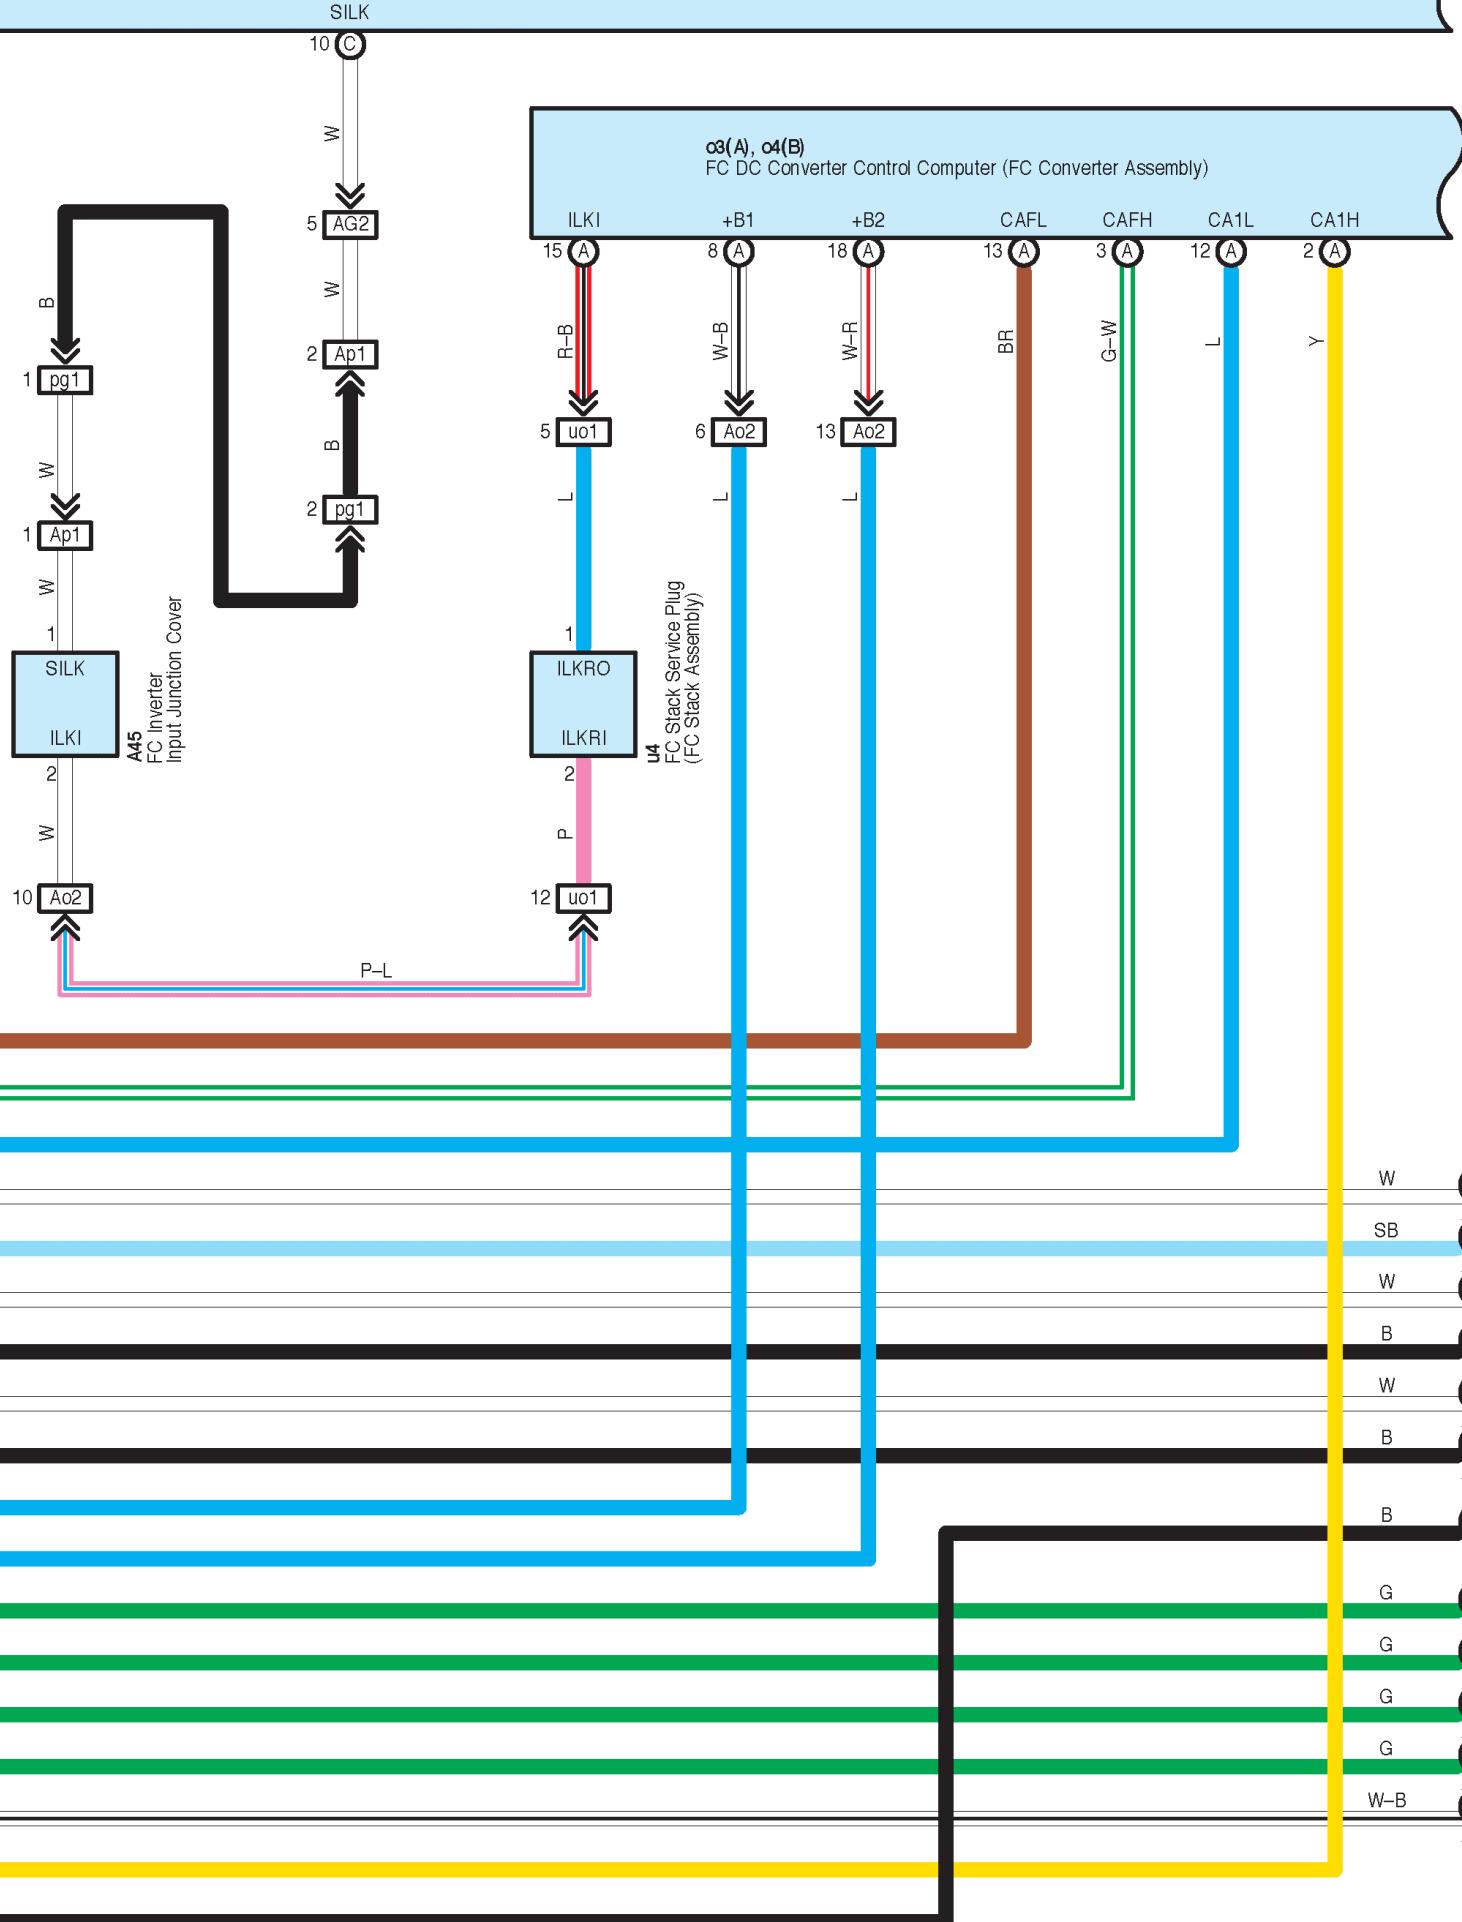


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

o3(A), o4(B)
FC DC Converter Control Computer (FC Converter Assembly)

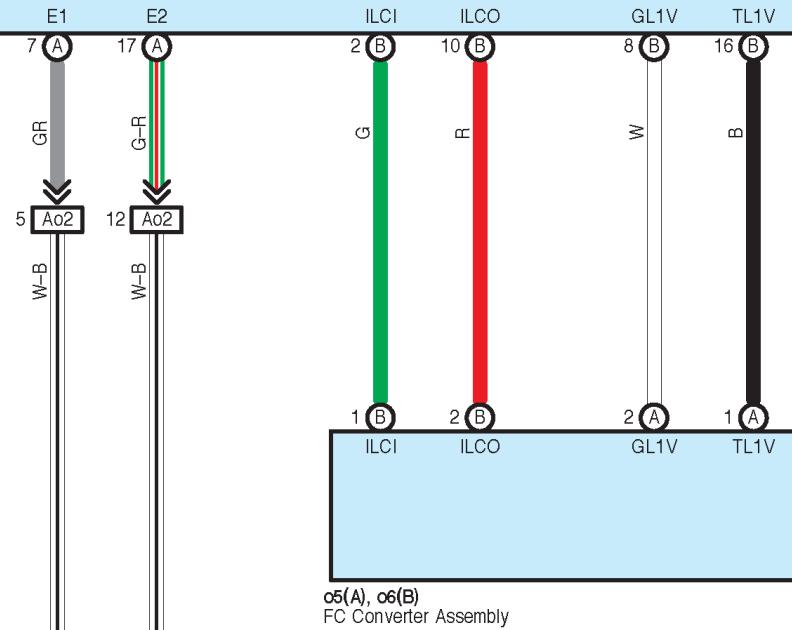


o5(A), o6(B)
FC Converter Assembly

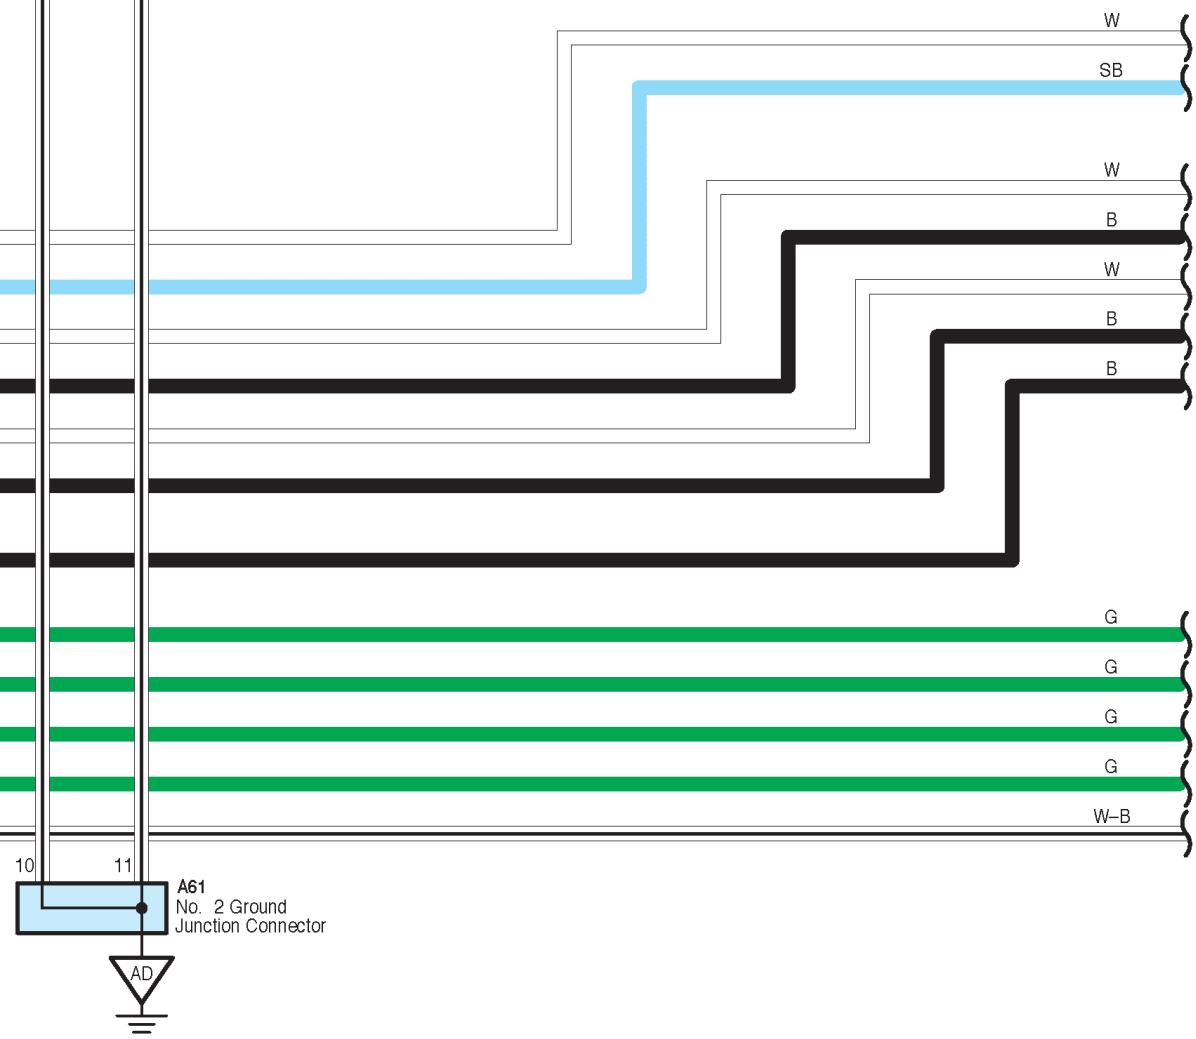

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

c3(A), c4(B)
FC DC Converter Control Computer (FC Converter Assembly)

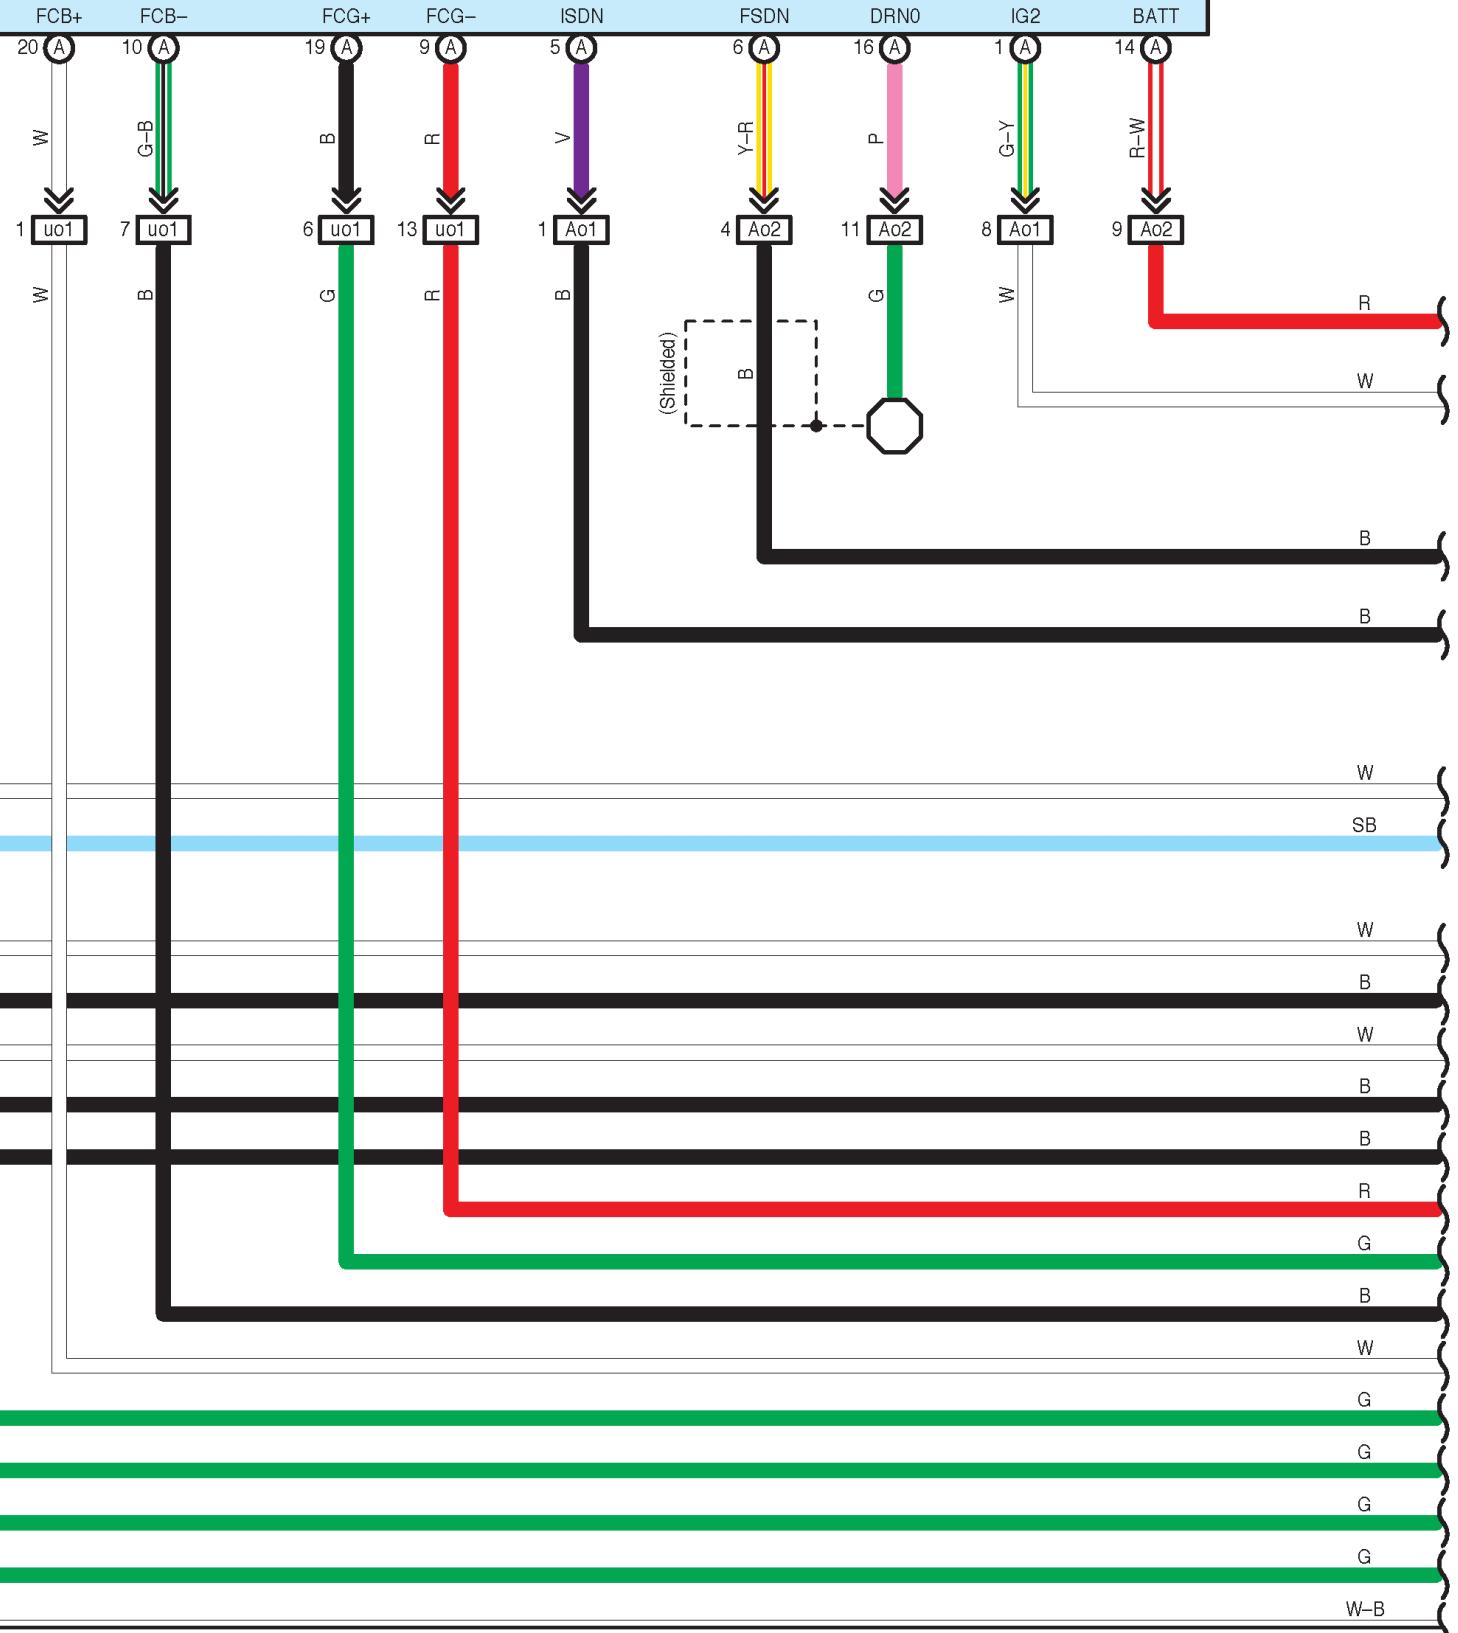


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

FSDN


ISDN

DRN4

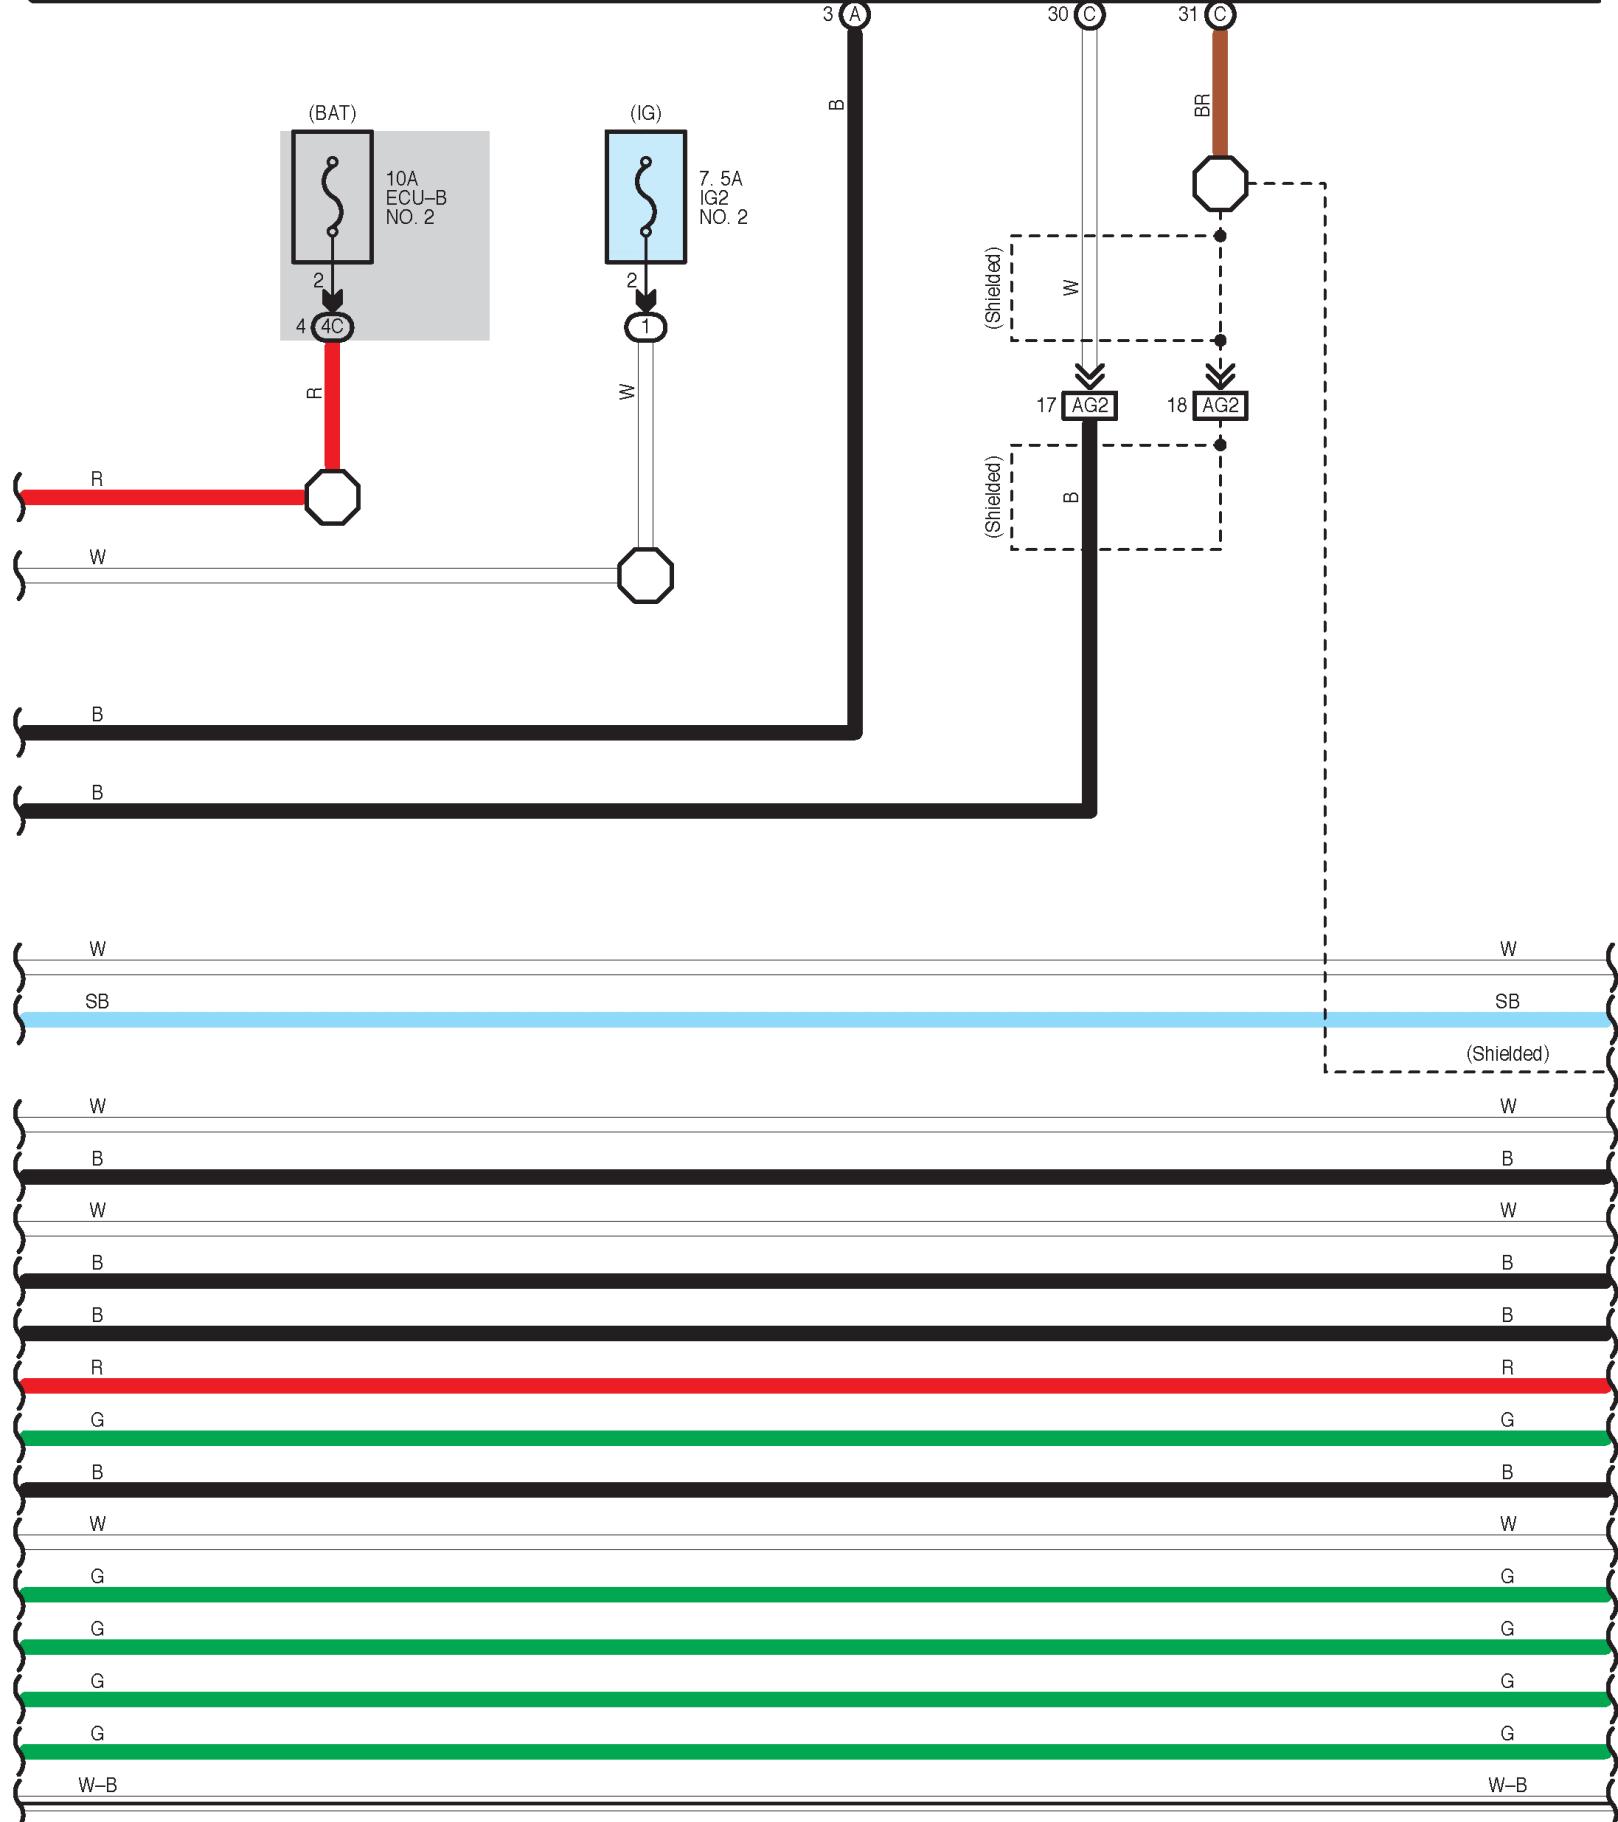


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

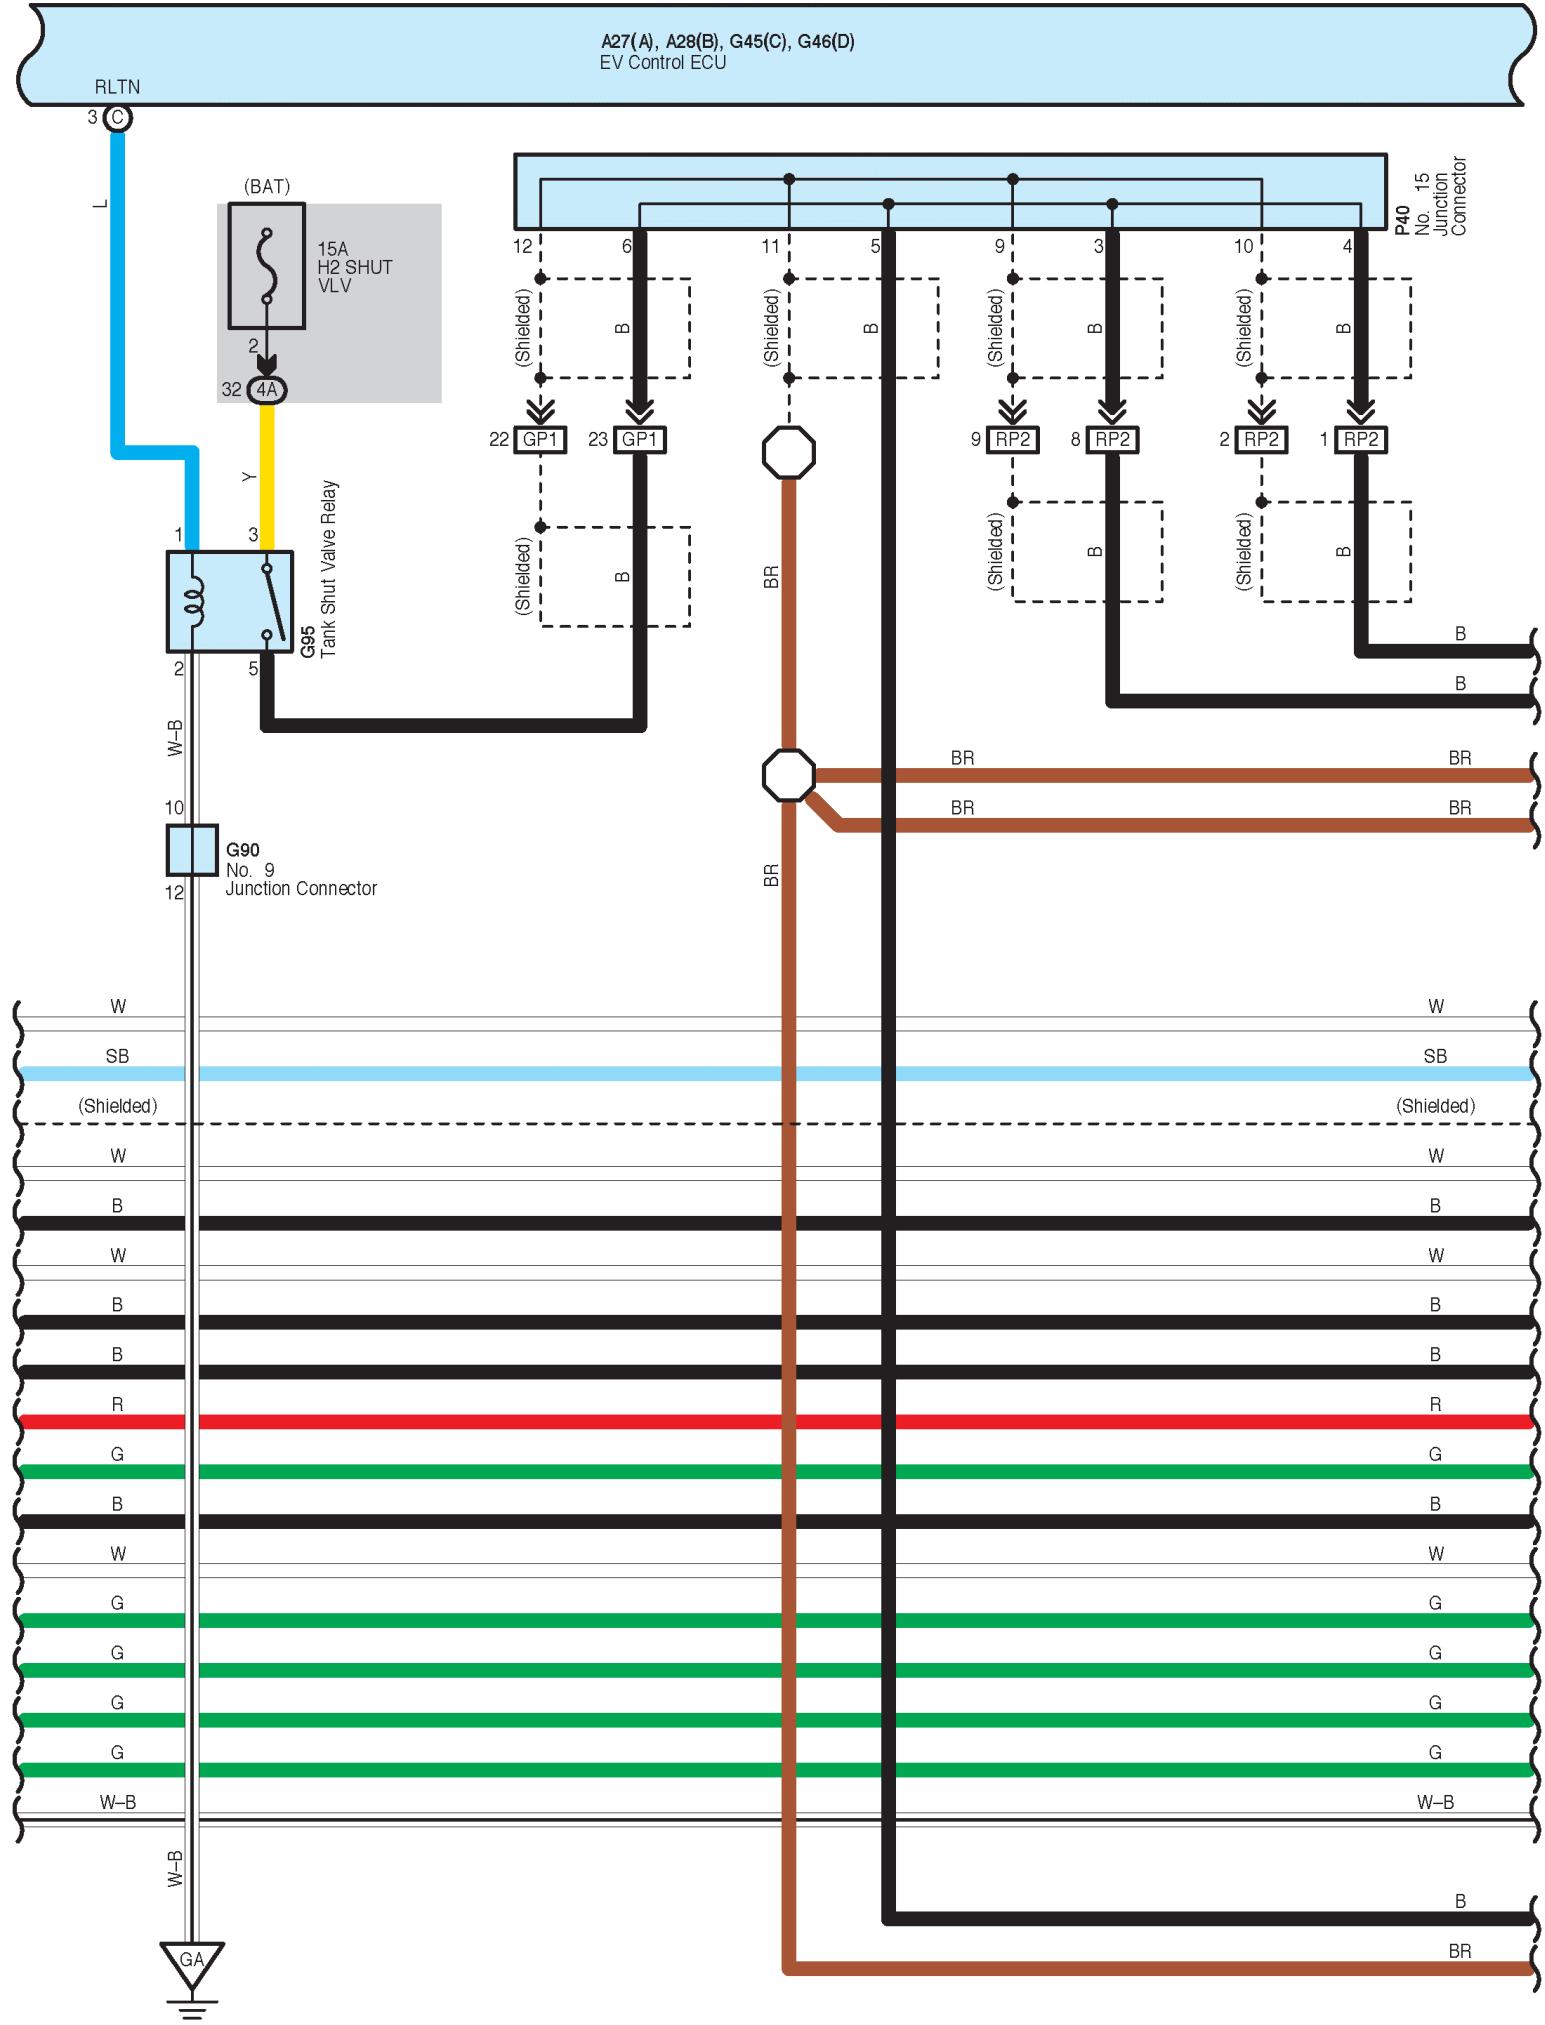


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

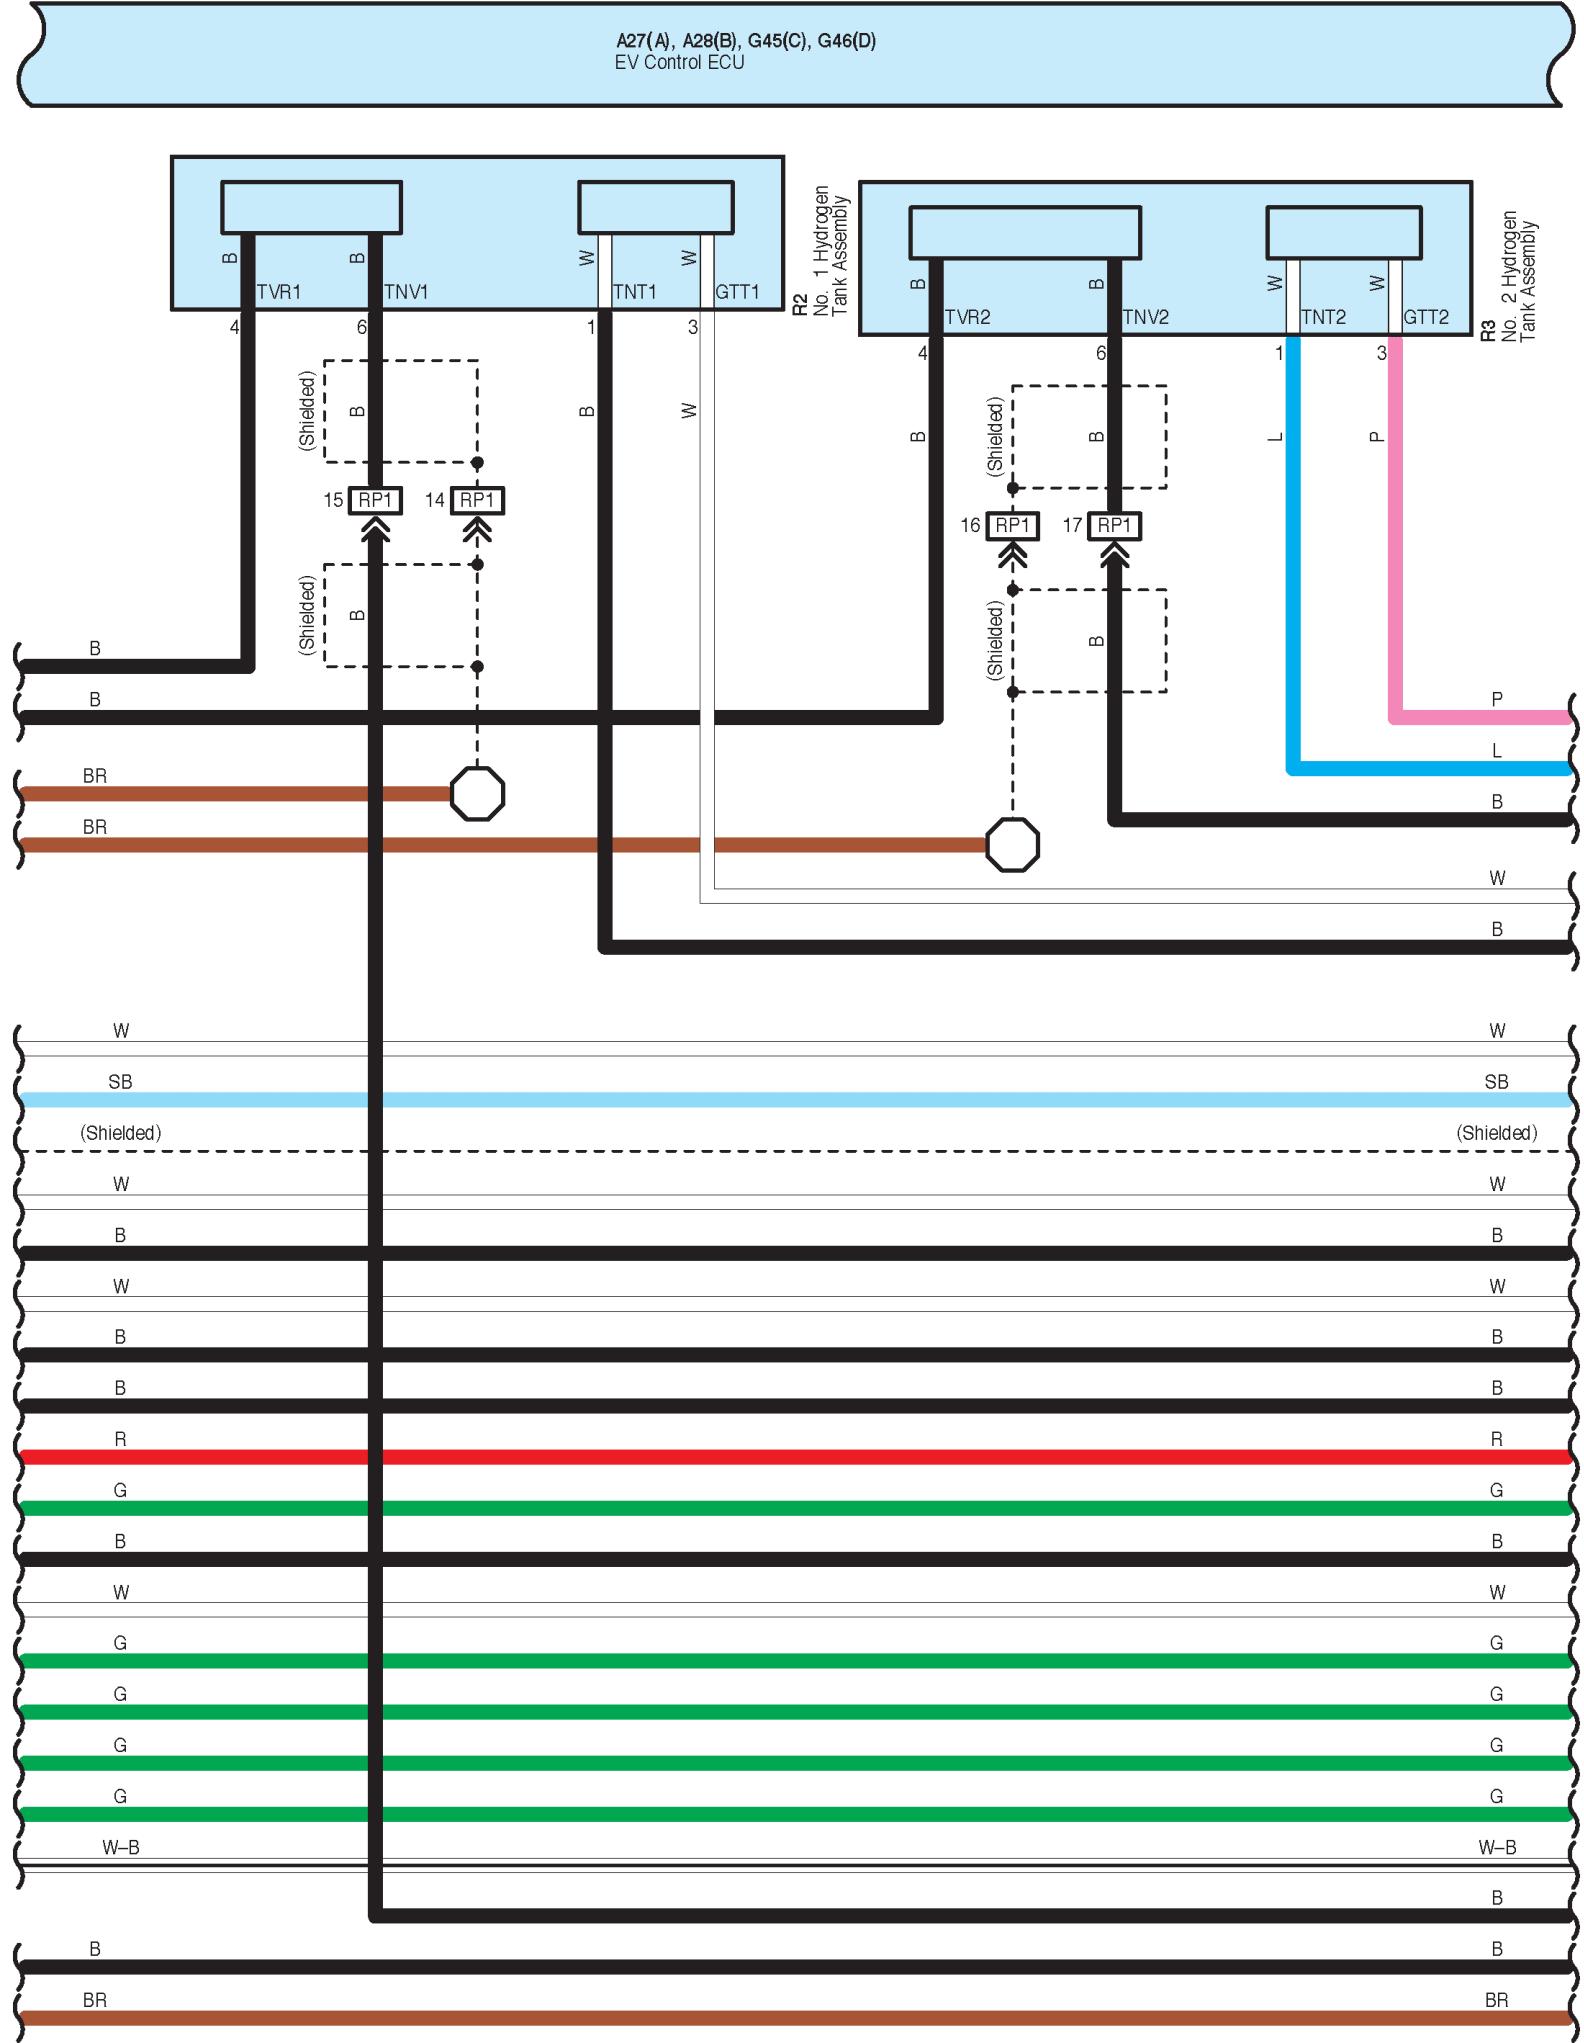

A27(A), A28(B), G45(C), G46(D)
EV Control ECU


P30
Hydrogen Fuel Control ECU Assembly

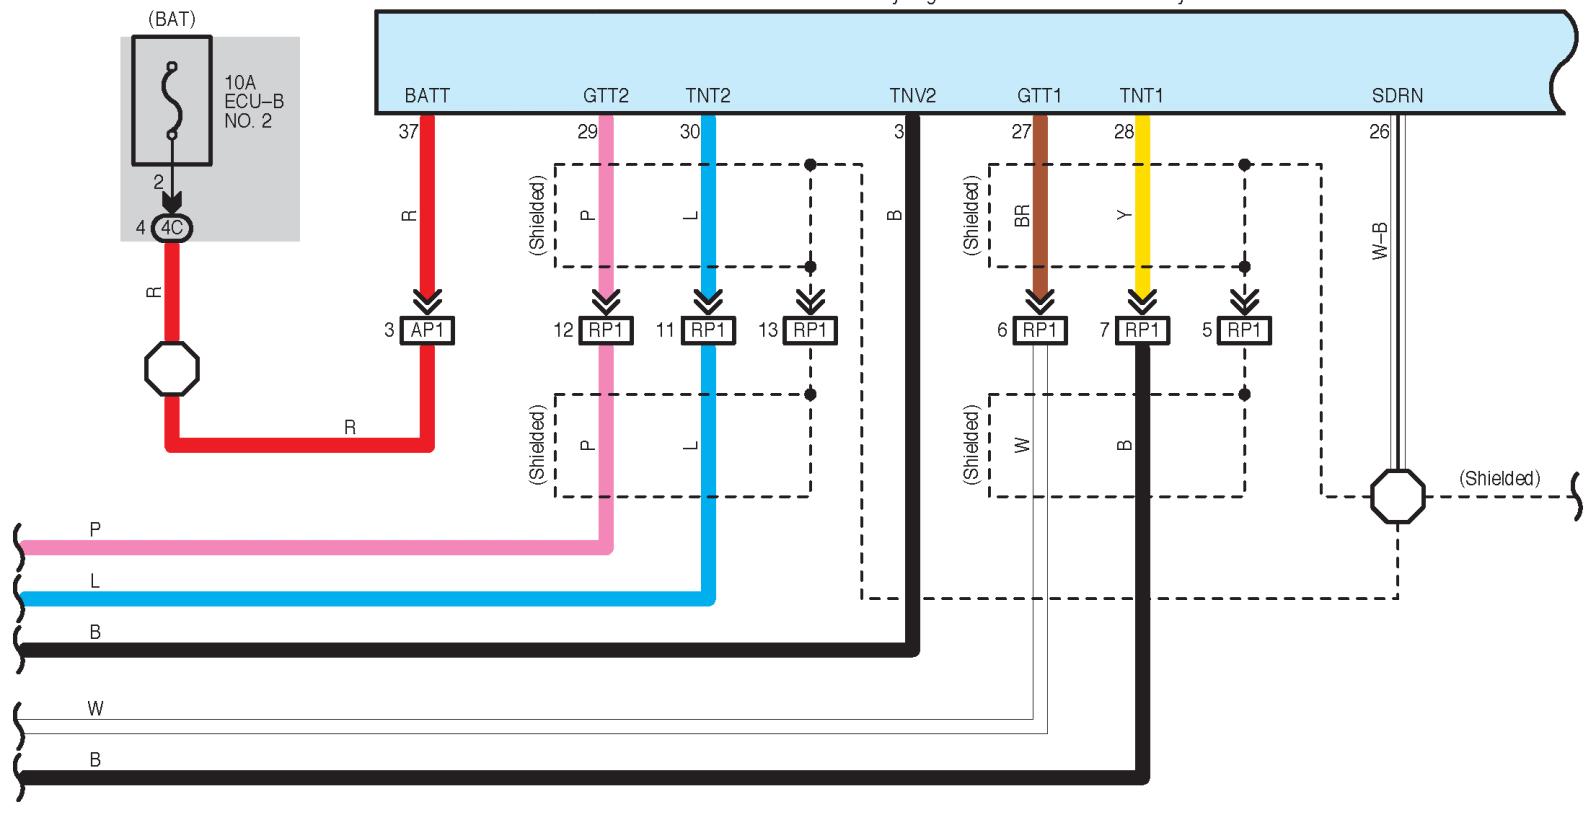

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

P30
Hydrogen Fuel Control ECU Assembly

VHPC HPC GHPC C AFL C AFH TNV1 +BP PDRN

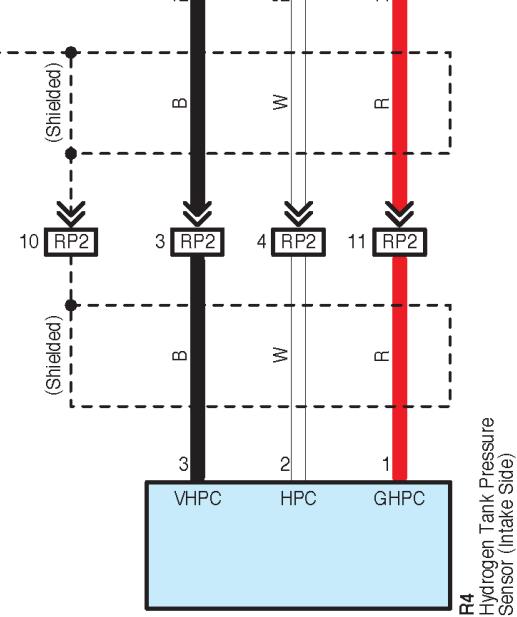

16 15 6 5 9

W SB B BR

W

SB

(Shielded)

W

B

W

B

B

R

G

B

W

G

G

G

W-B

B

B

BR

(Shielded)

W

B

W

B

B

R

G

B

W

G

G


G

G

W-B

A27(A), A28(B), G45(C), G46(D)
EV Control ECU

P30
Hydrogen Fuel Control ECU Assembly

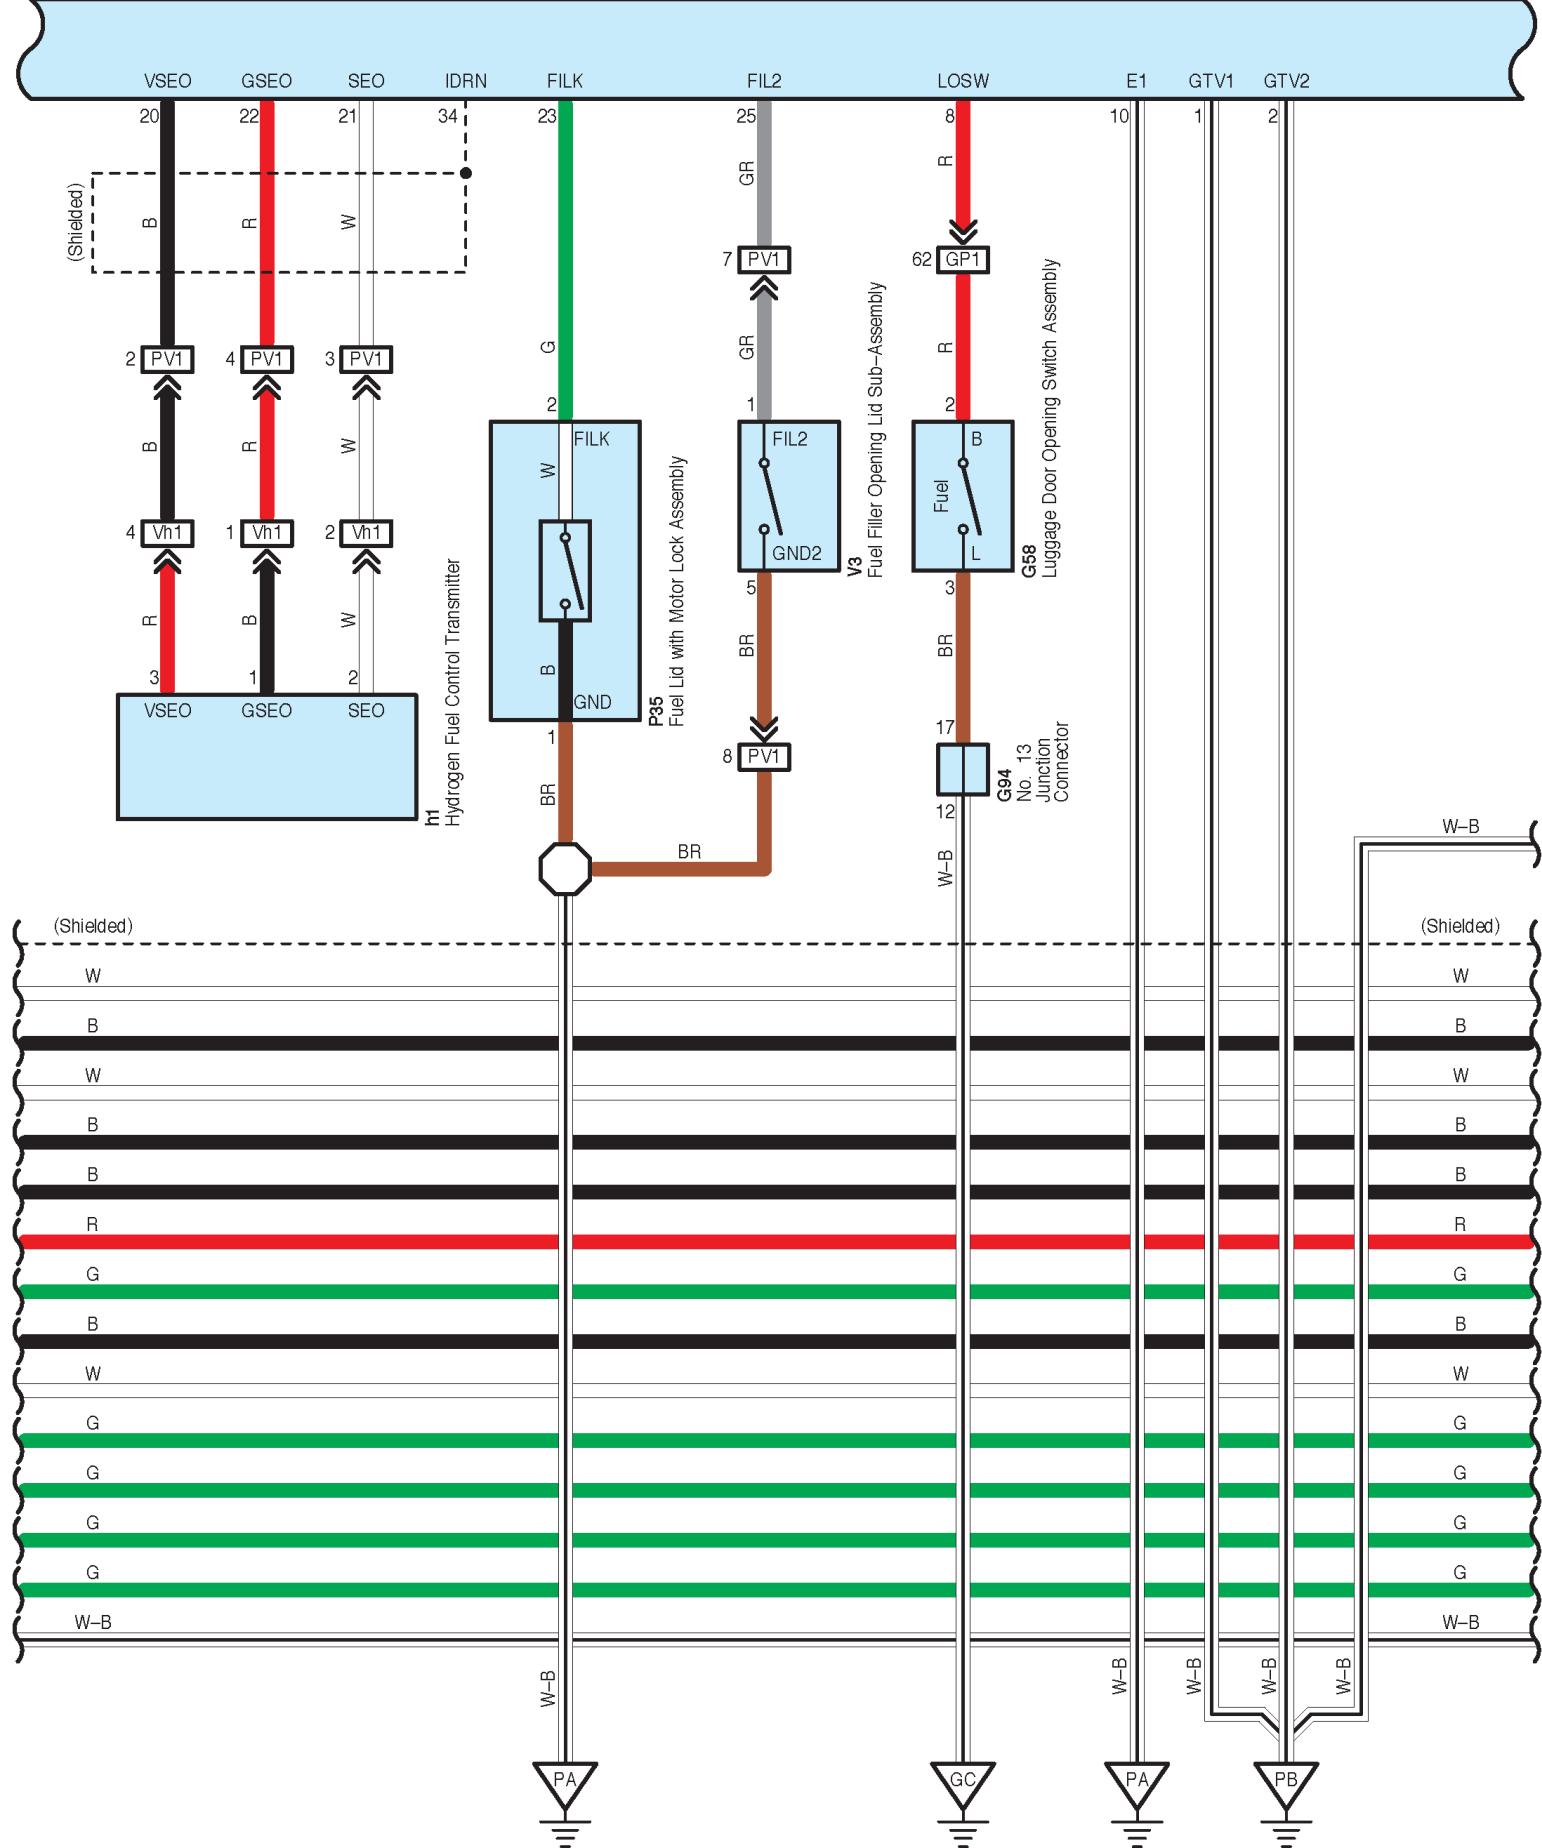


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU


P30

Hydrogen Fuel Control ECU Assembly

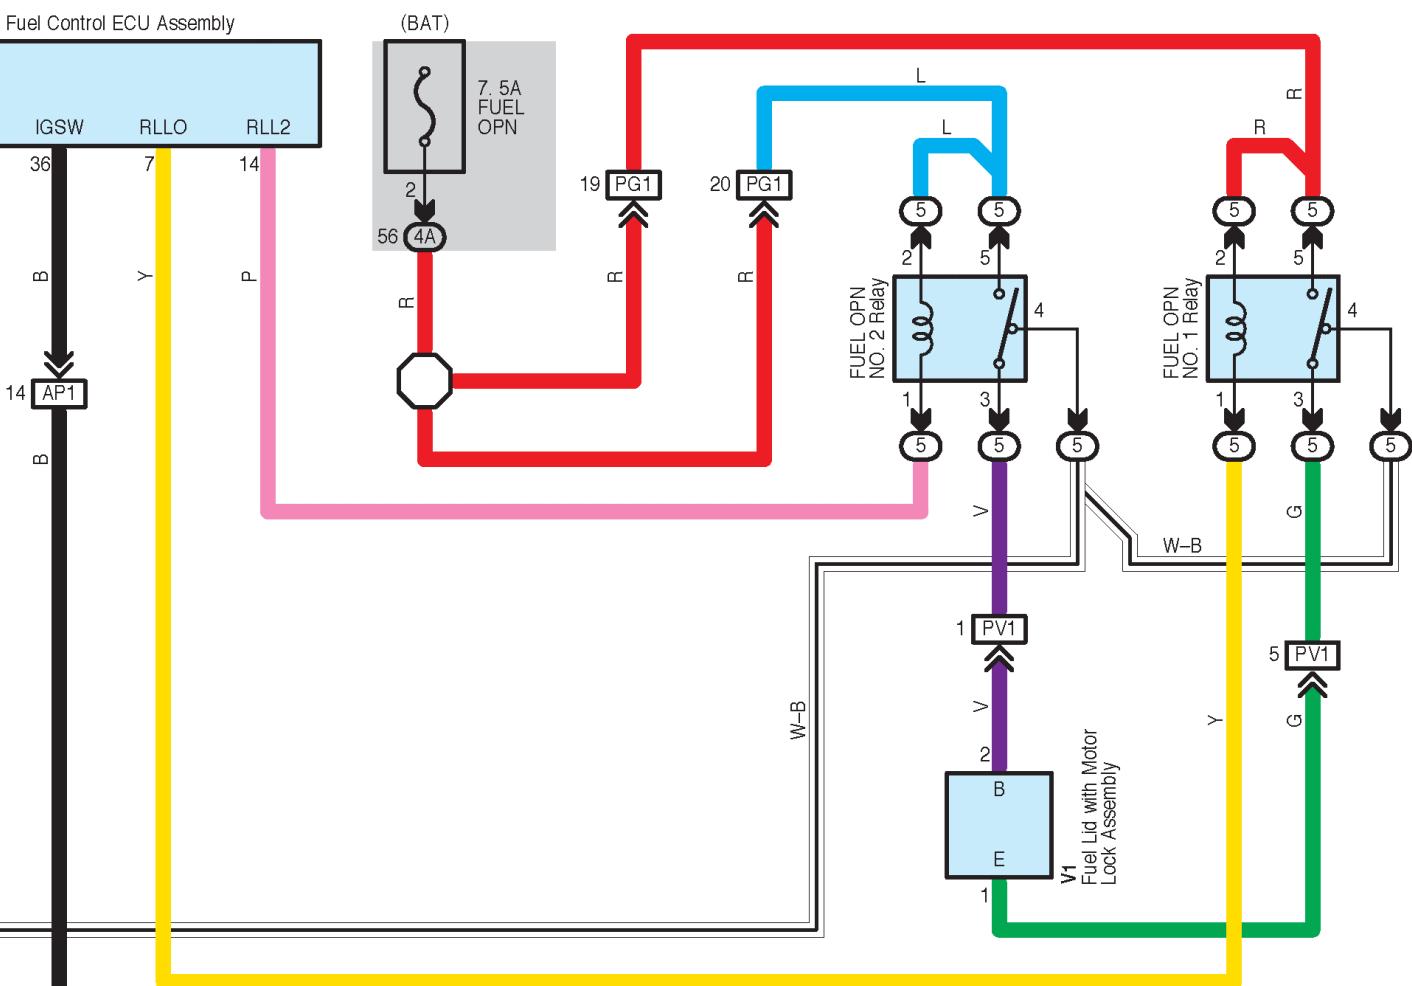


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

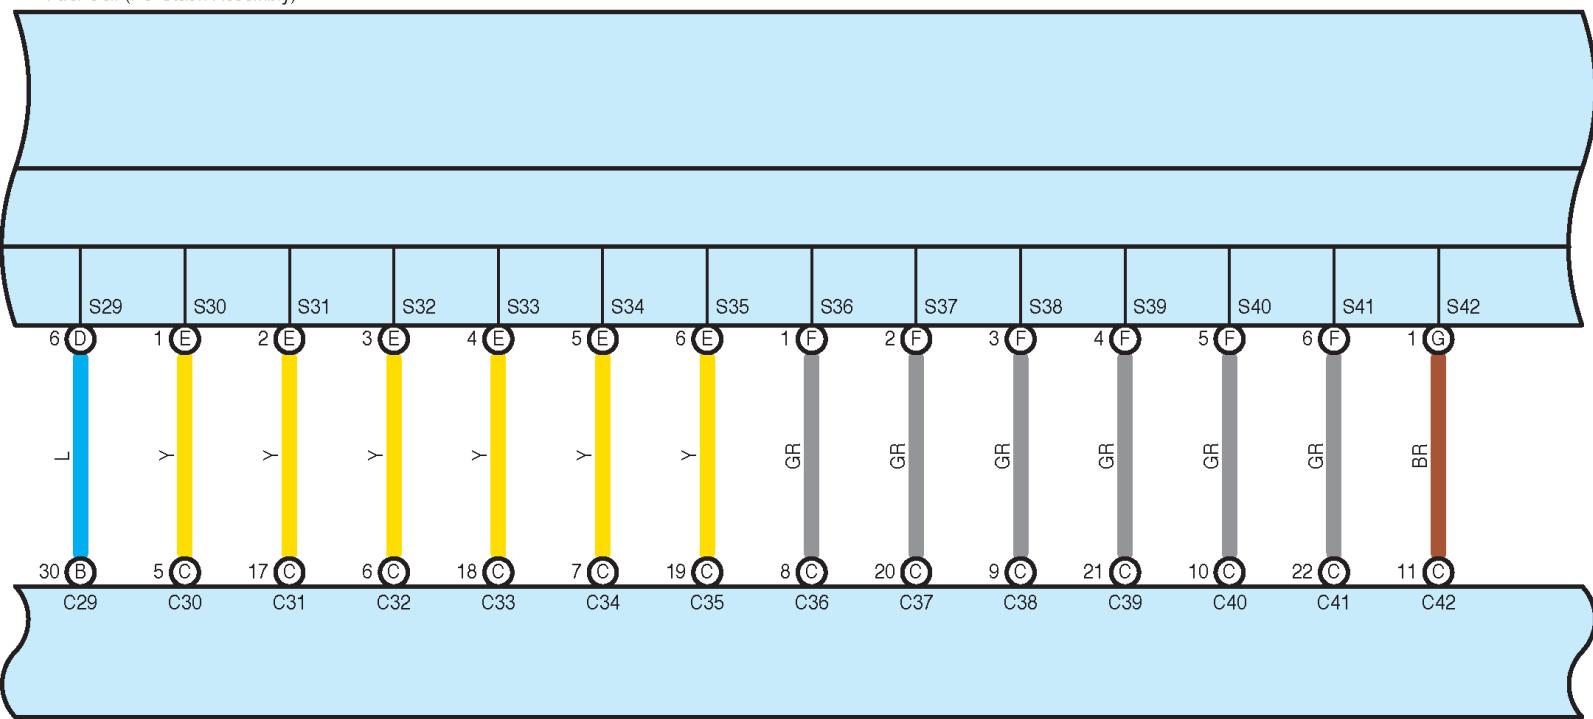


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

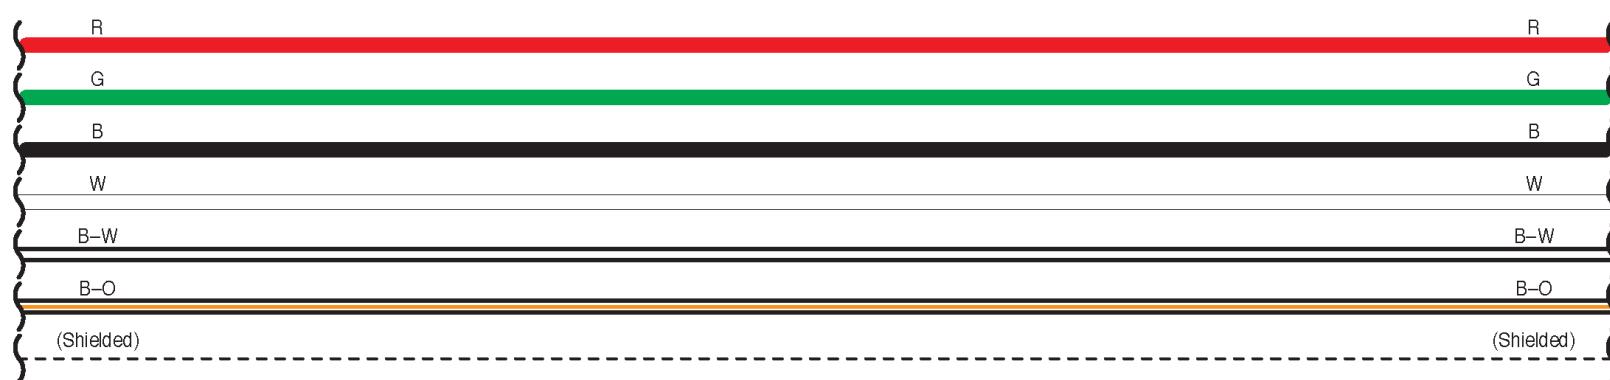


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)

Fuel Cell (FC Stack Assembly)

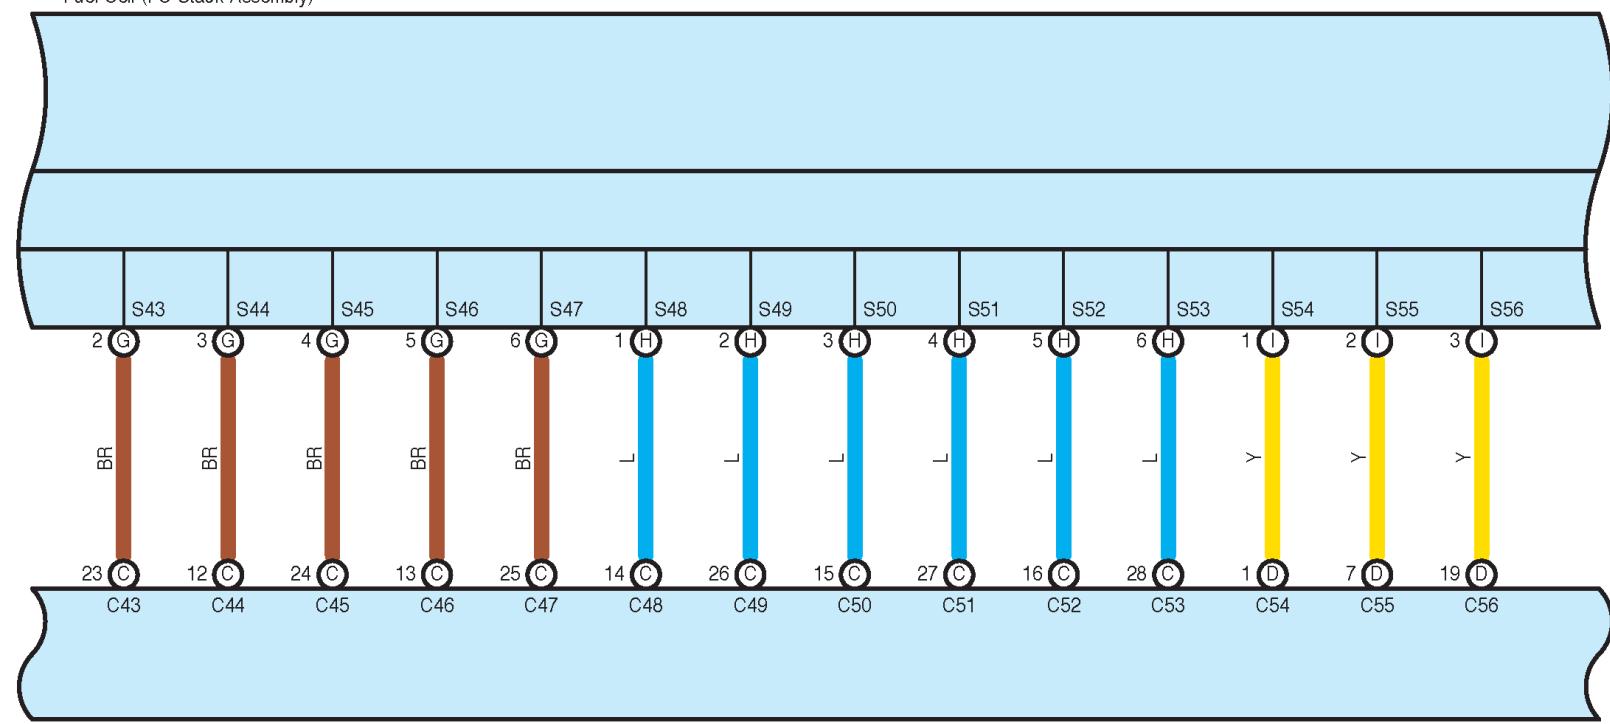


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
FC Stack Voltage Sensor (FC Stack Assembly)

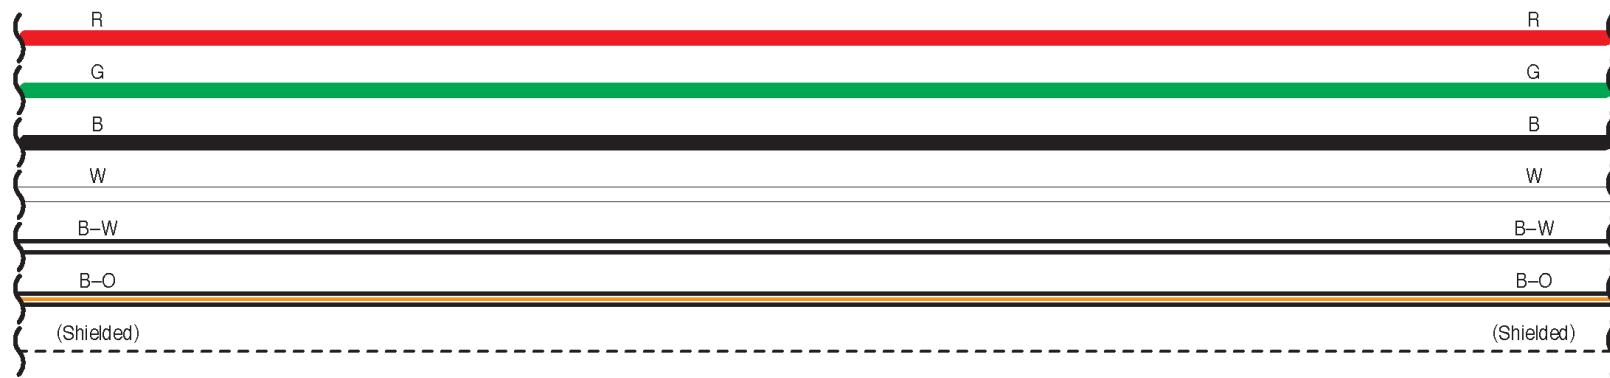


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

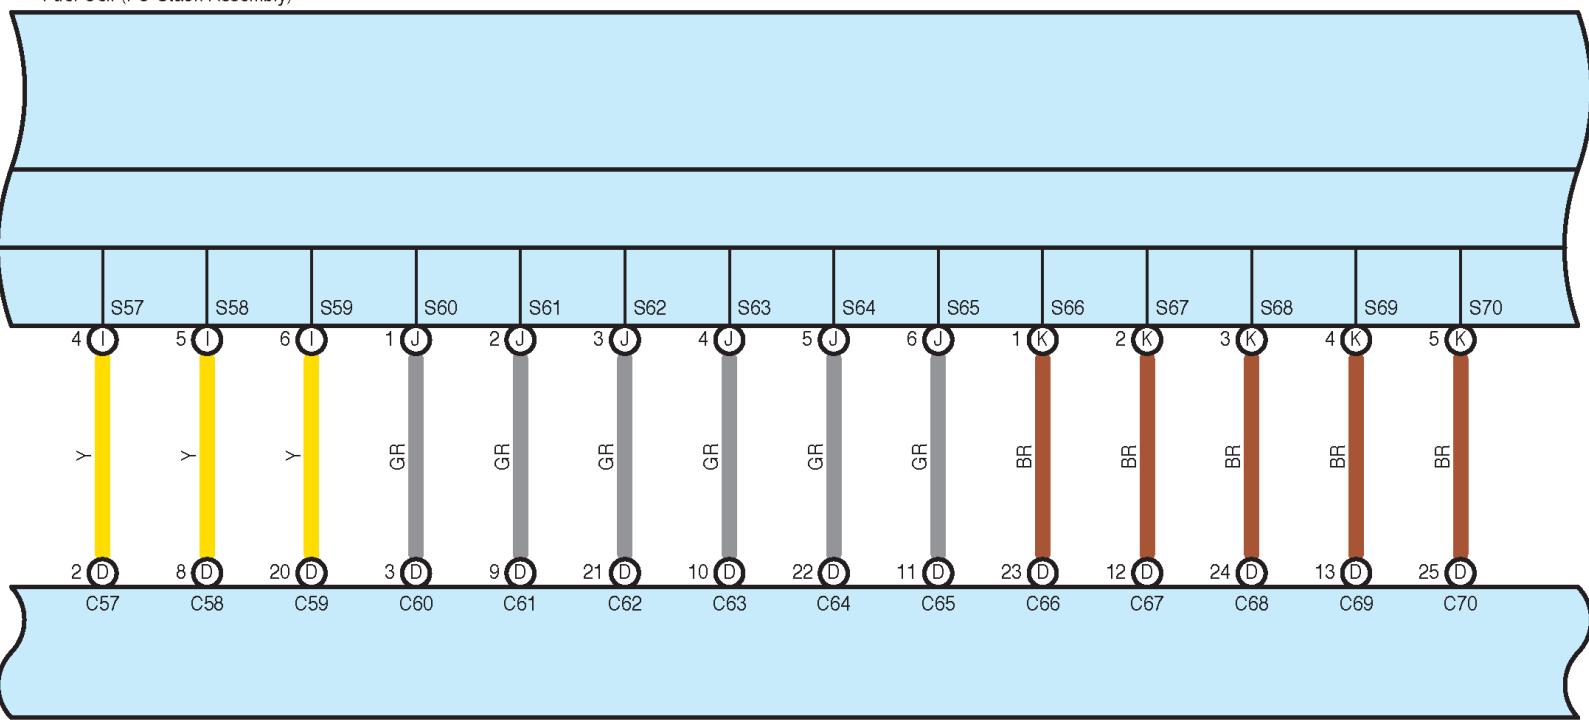


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

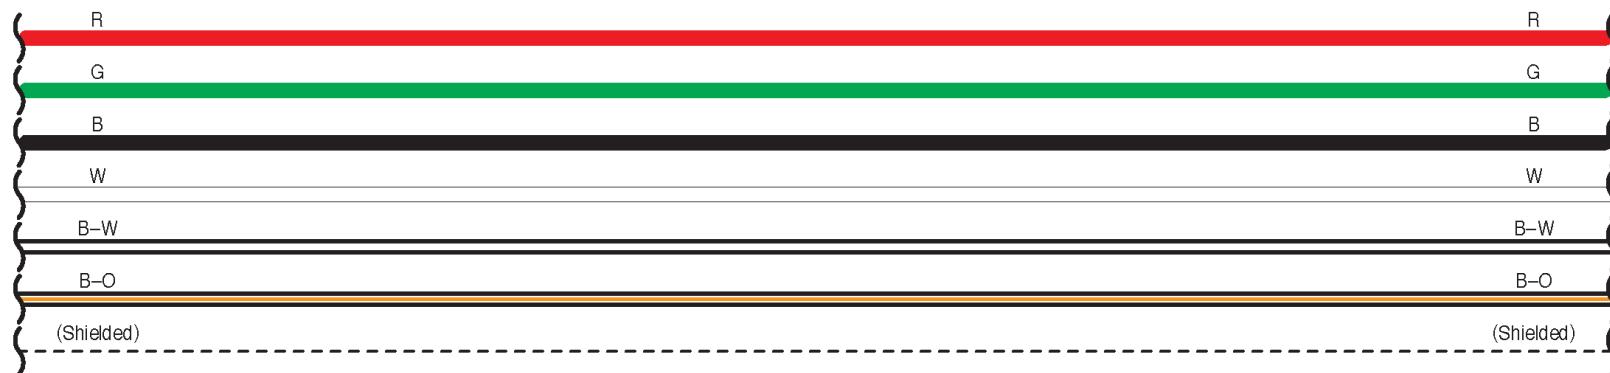


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
Fuel Cell (FC Stack Assembly)

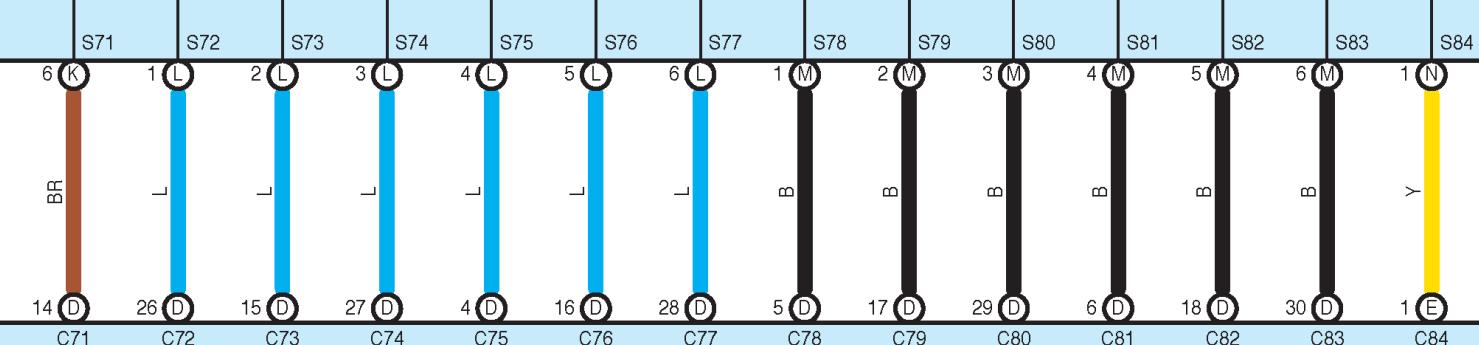


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
FC Stack Voltage Sensor (FC Stack Assembly)

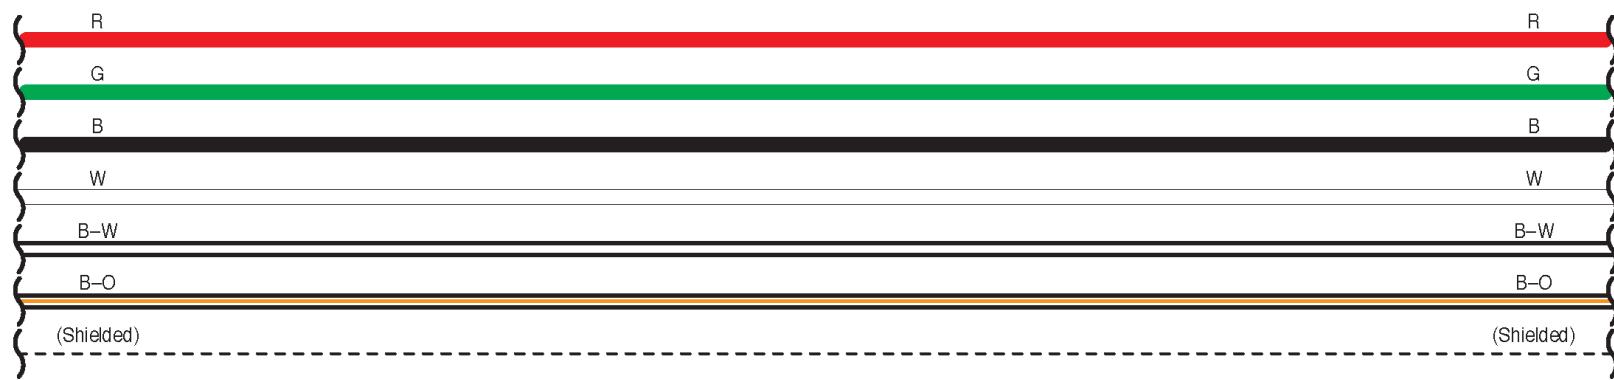


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
Fuel Cell (FC Stack Assembly)

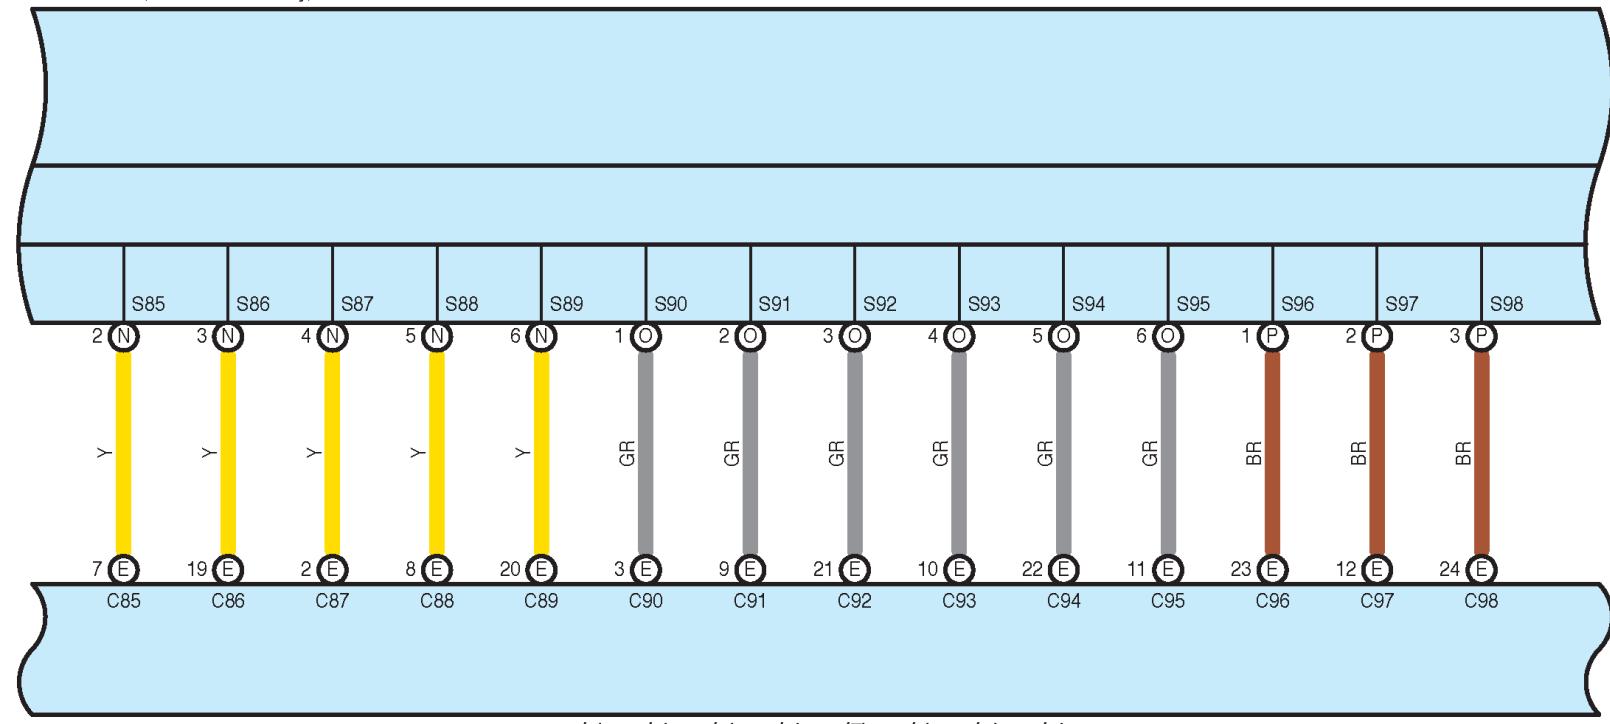


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
FC Stack Voltage Sensor (FC Stack Assembly)

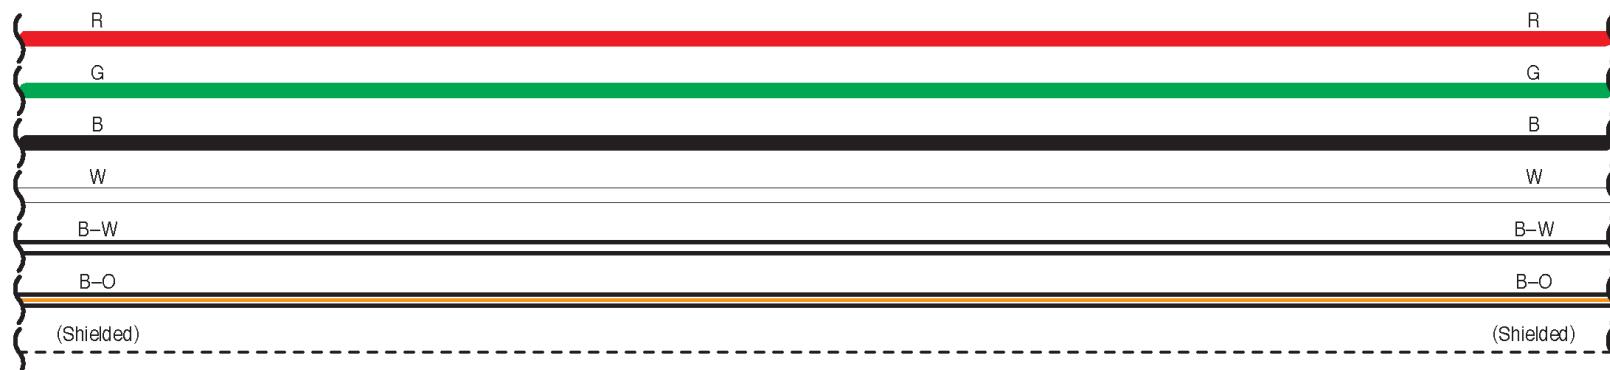


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
Fuel Cell (FC Stack Assembly)

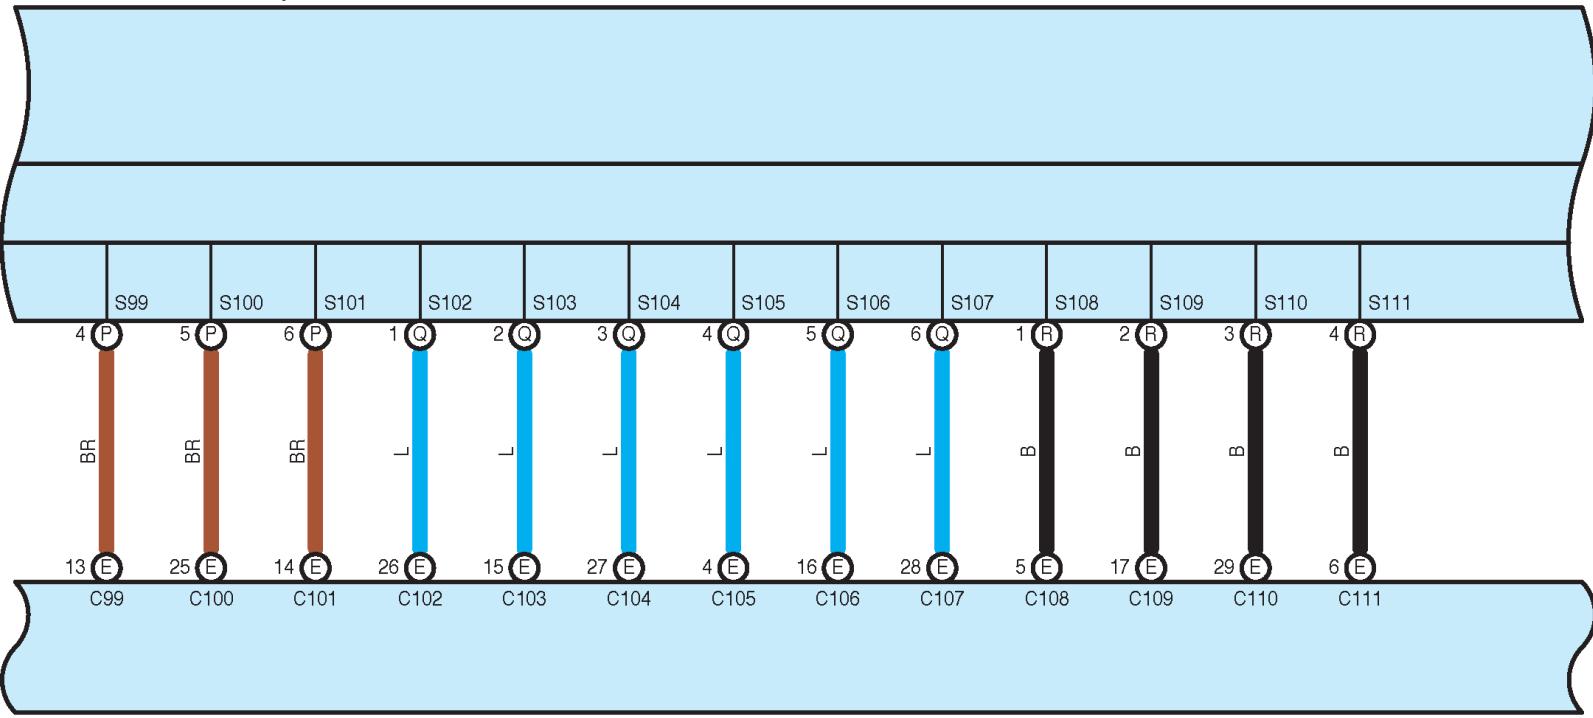


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
FC Stack Voltage Sensor (FC Stack Assembly)

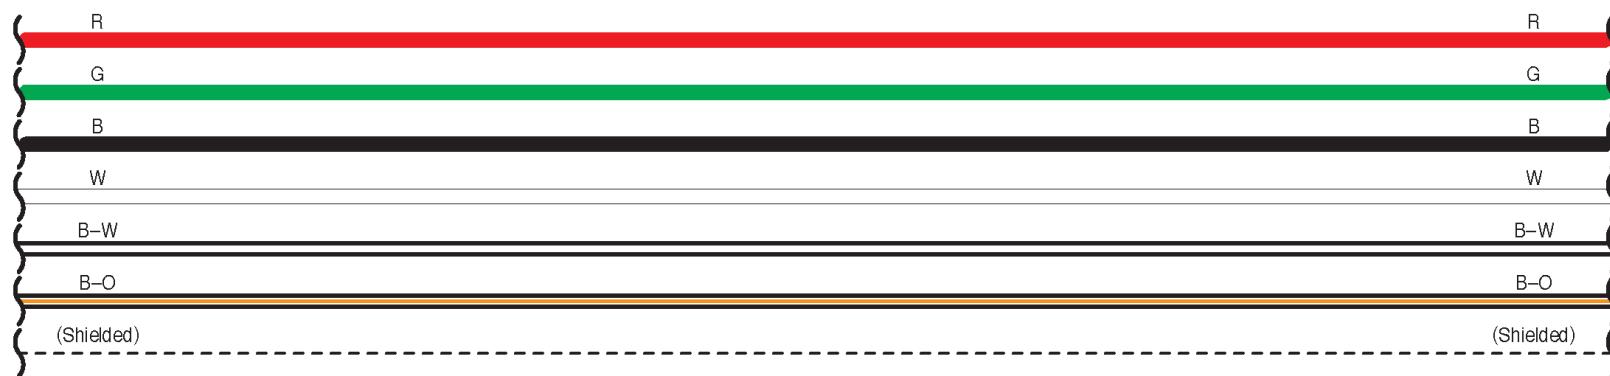


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

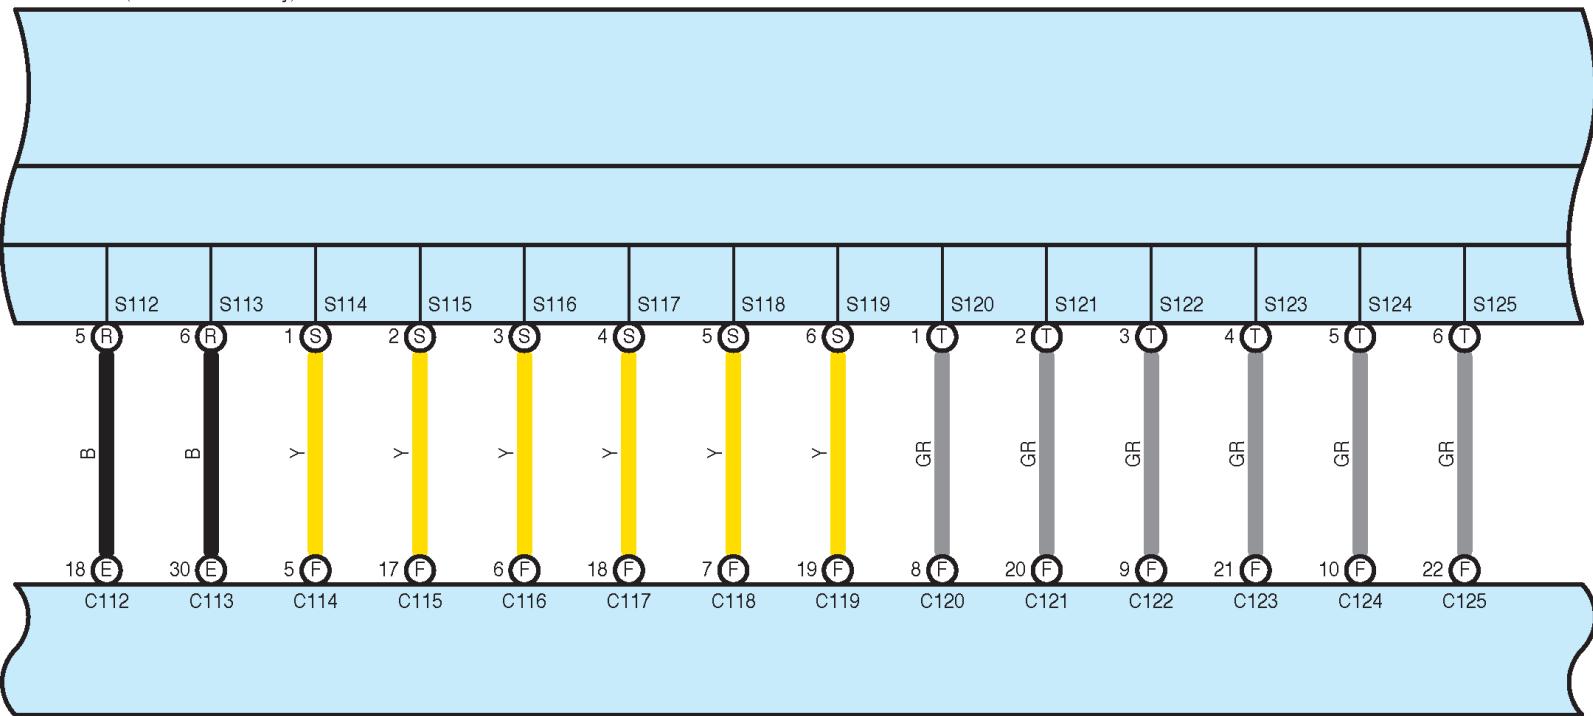


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

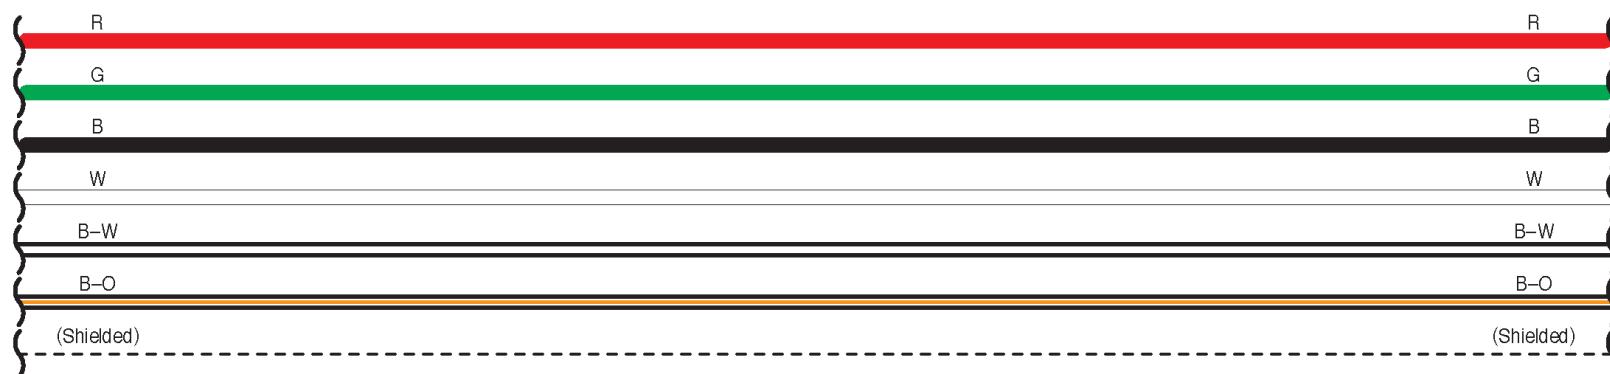


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

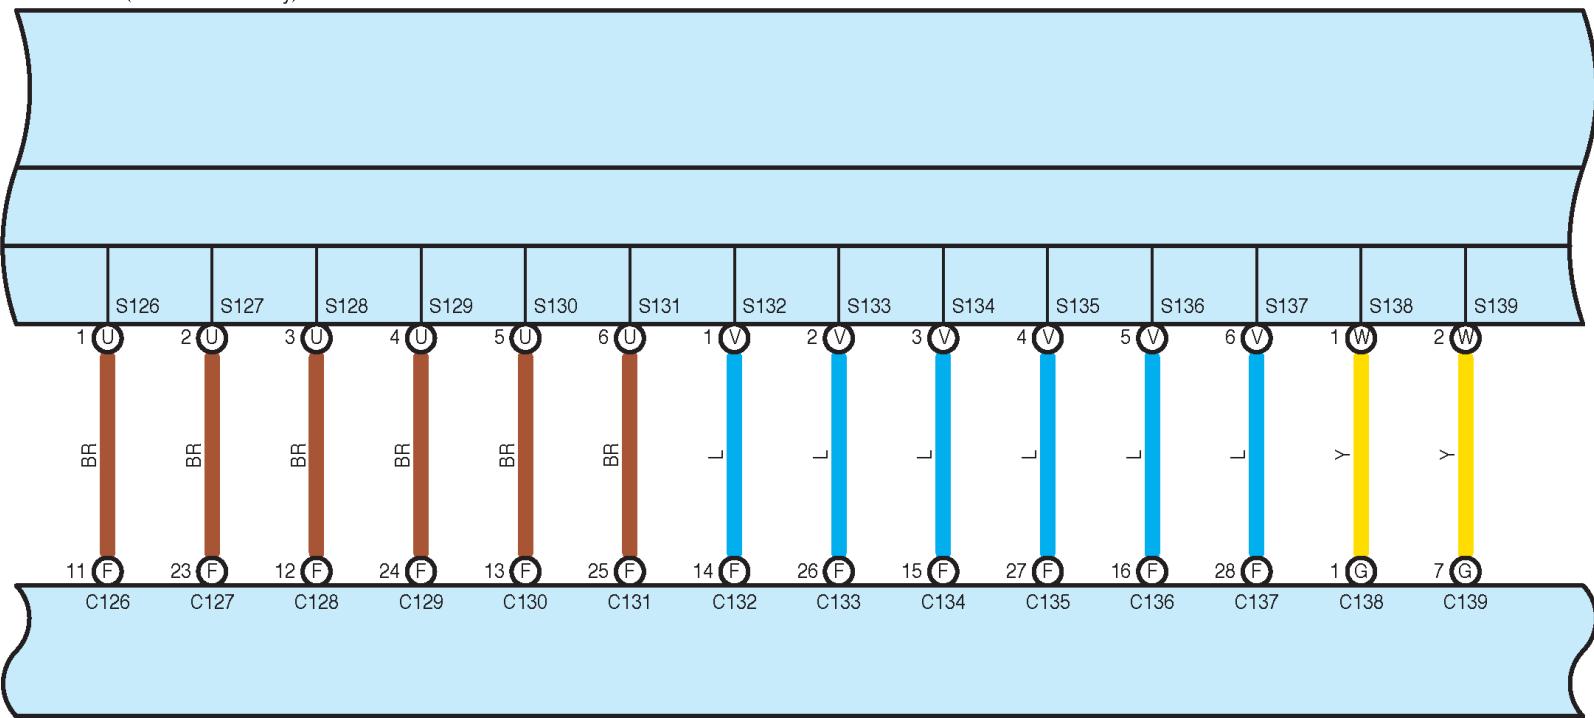


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

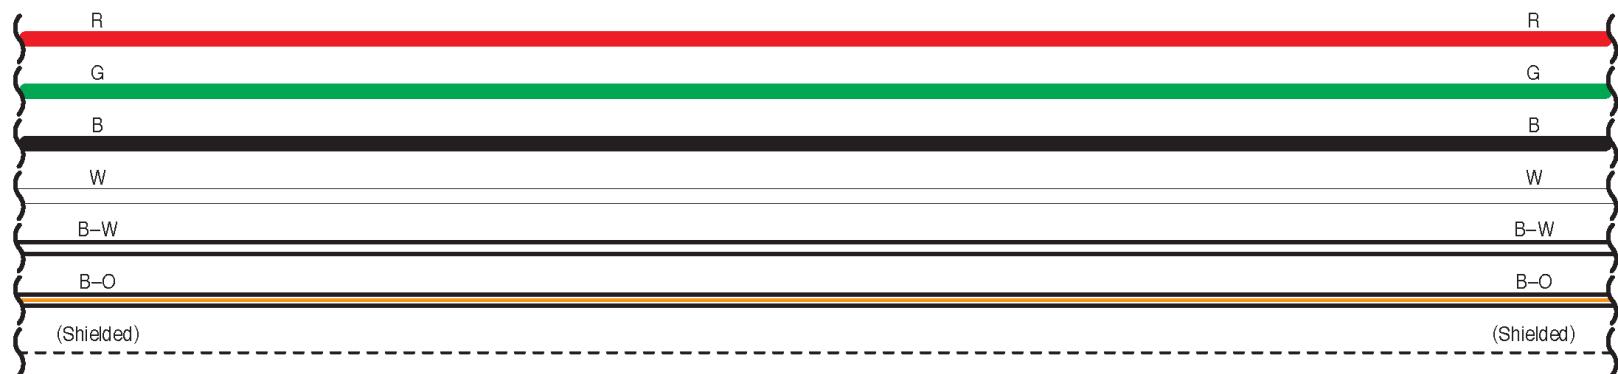


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)

Fuel Cell (FC Stack Assembly)

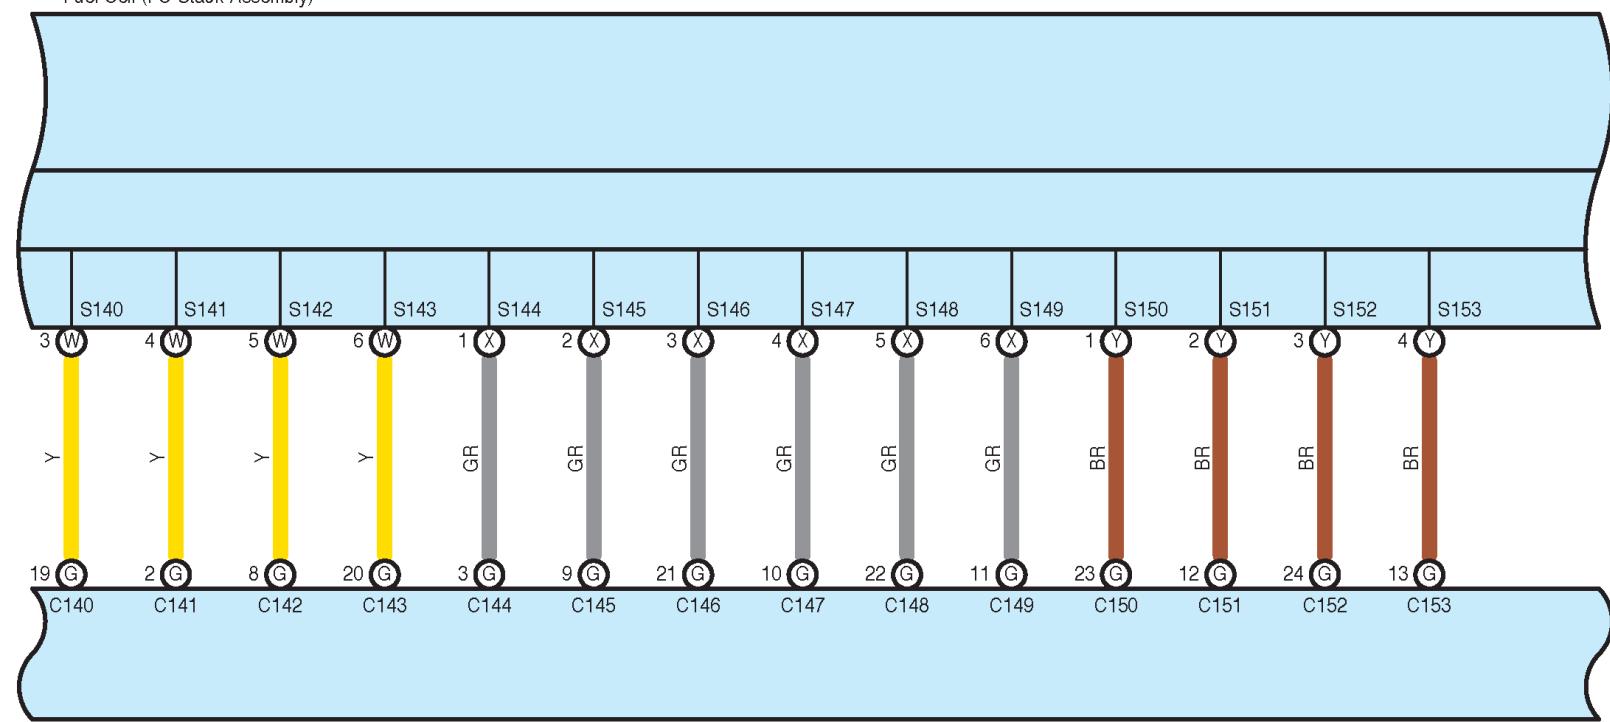


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

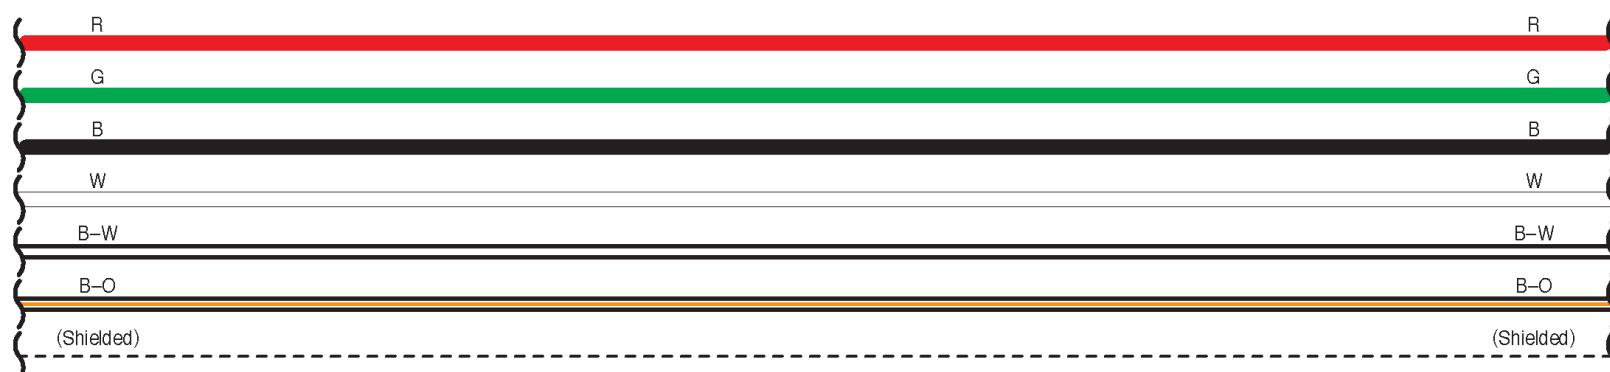


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)

Fuel Cell (FC Stack Assembly)

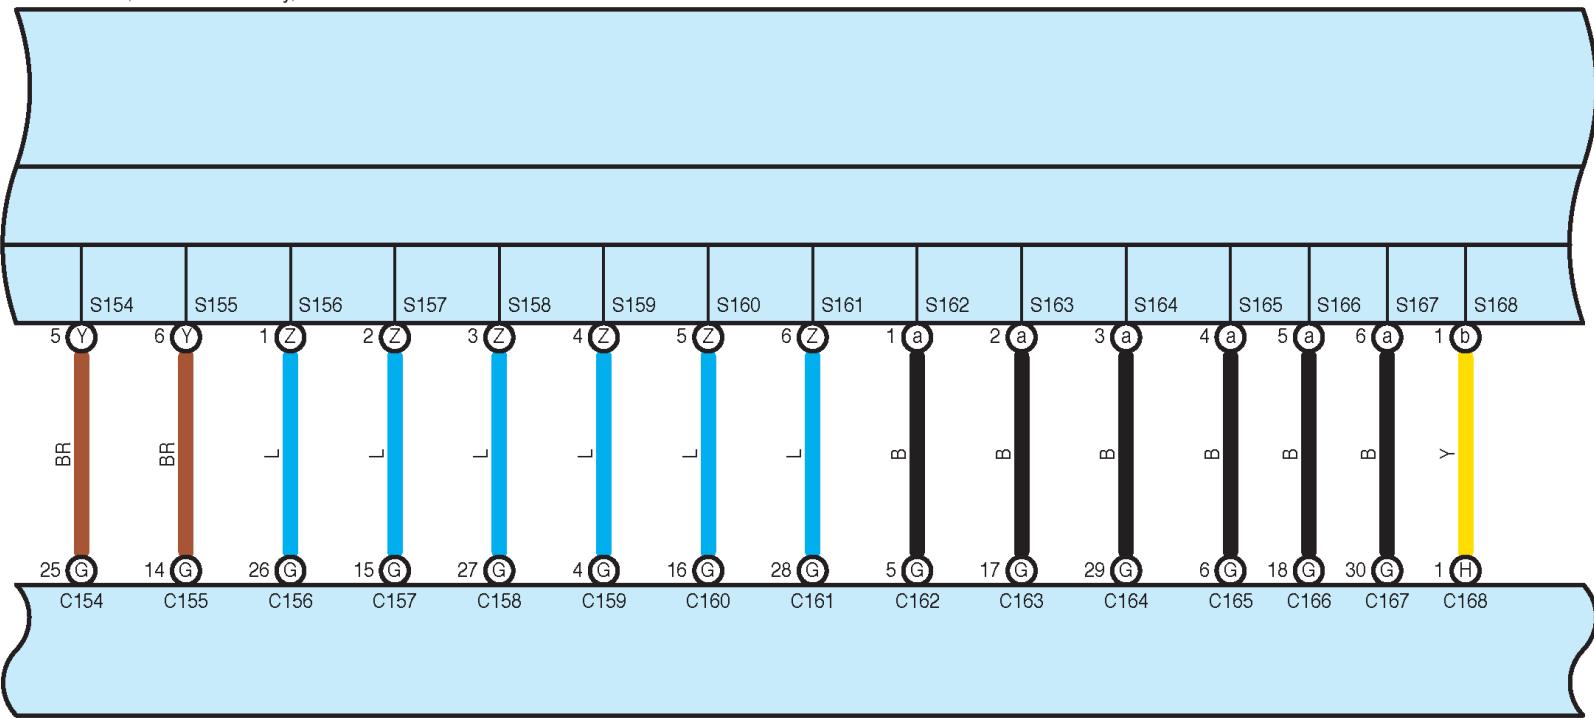


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
FC Stack Voltage Sensor (FC Stack Assembly)

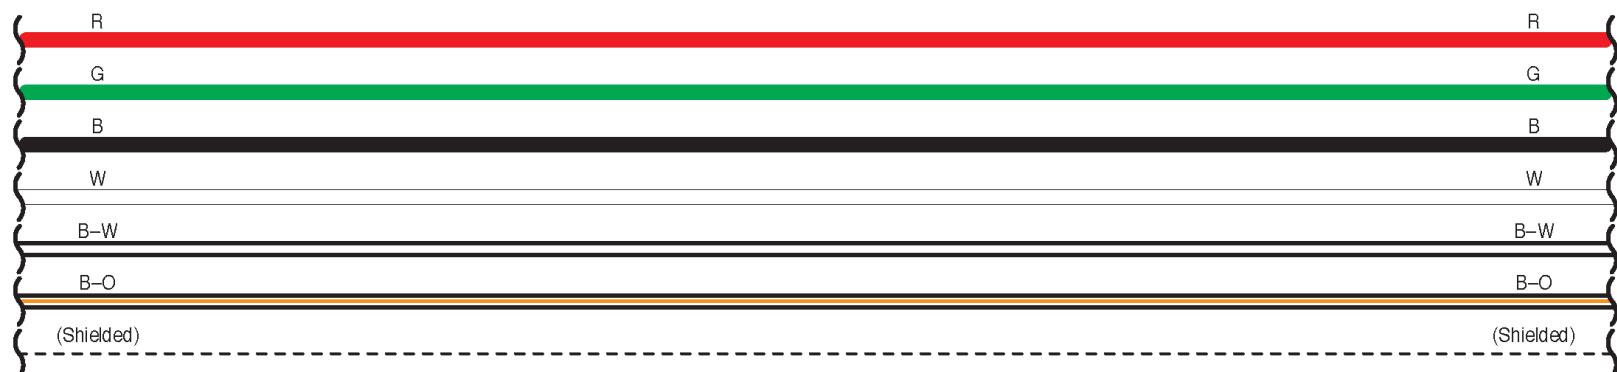


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

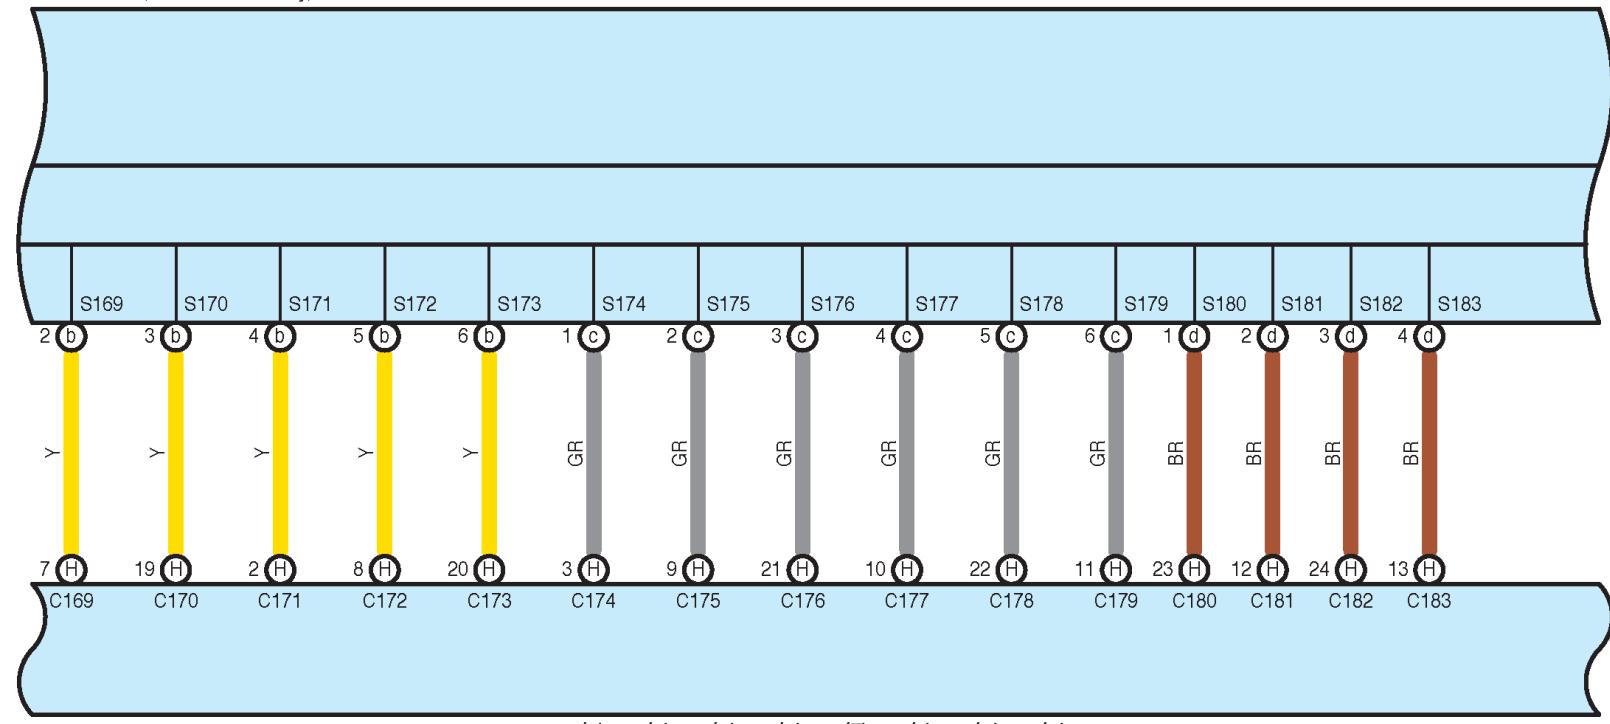


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

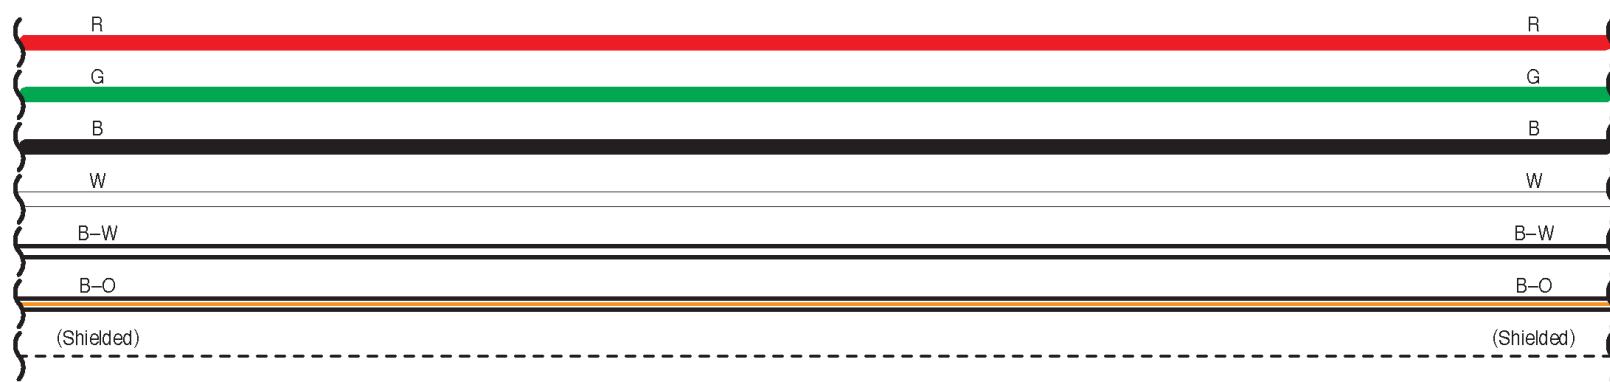

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

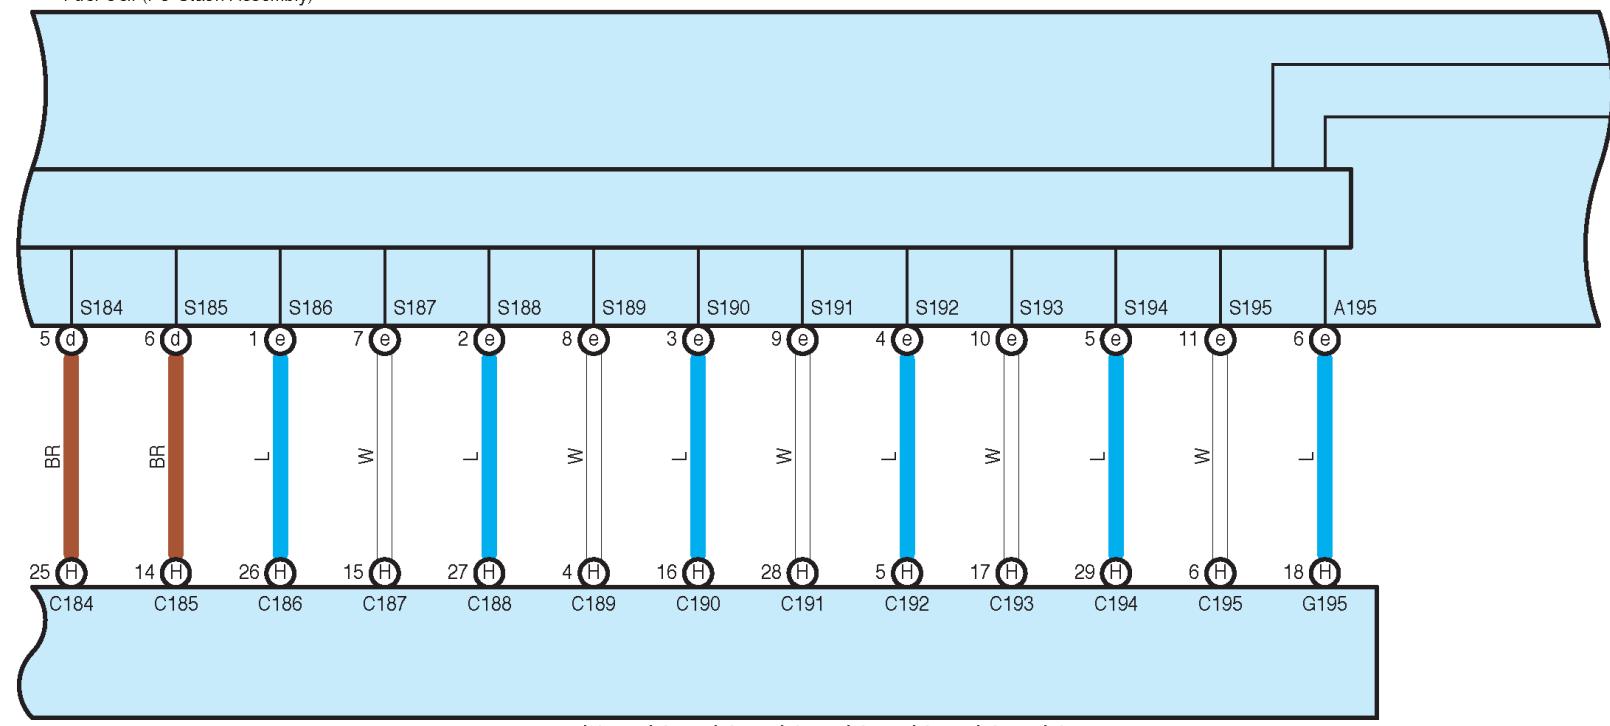


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)




EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)

Fuel Cell (FC Stack Assembly)

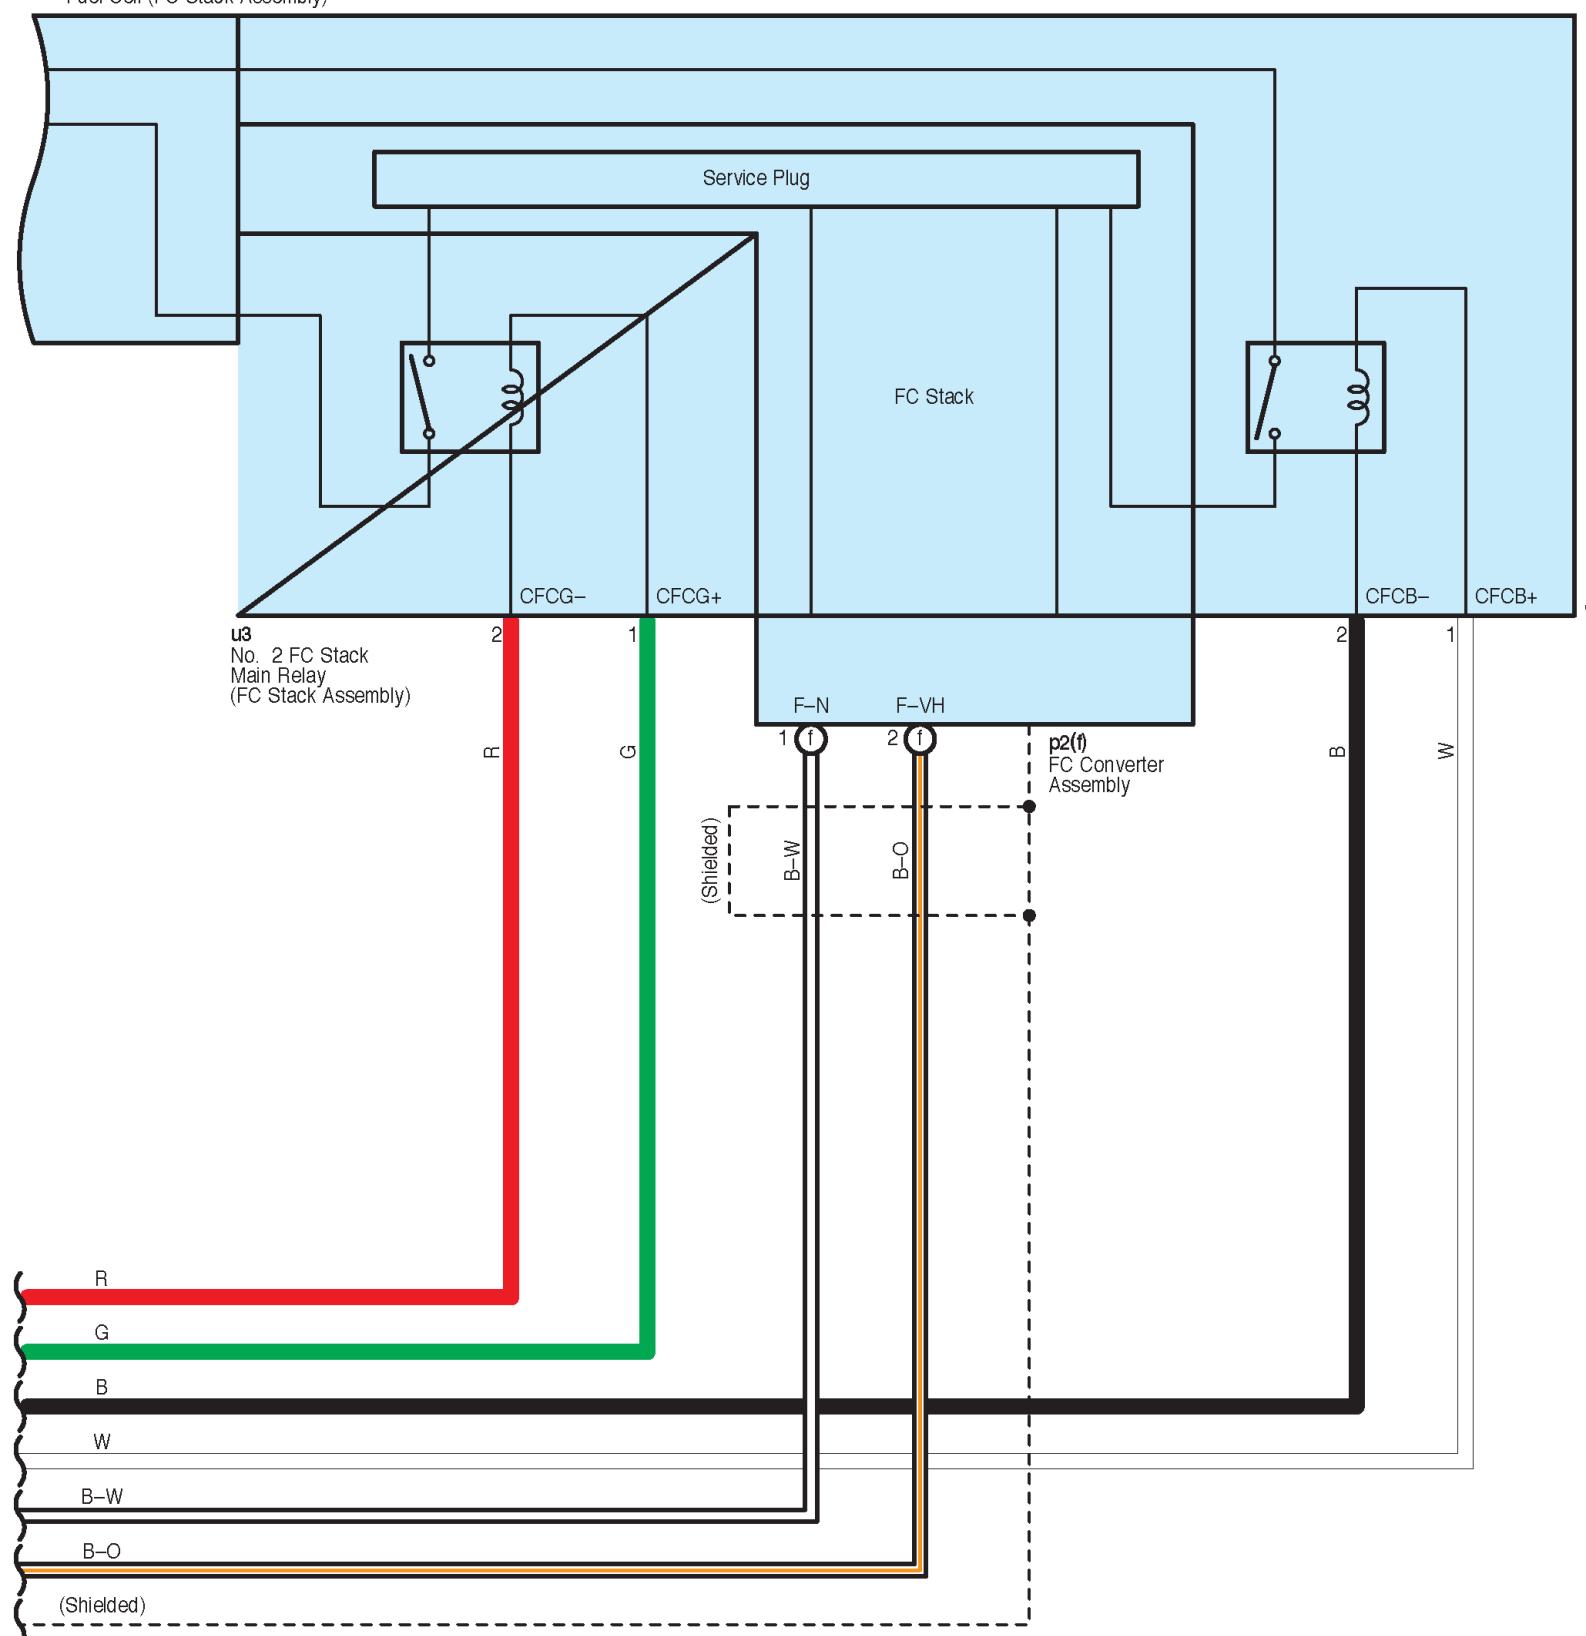


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

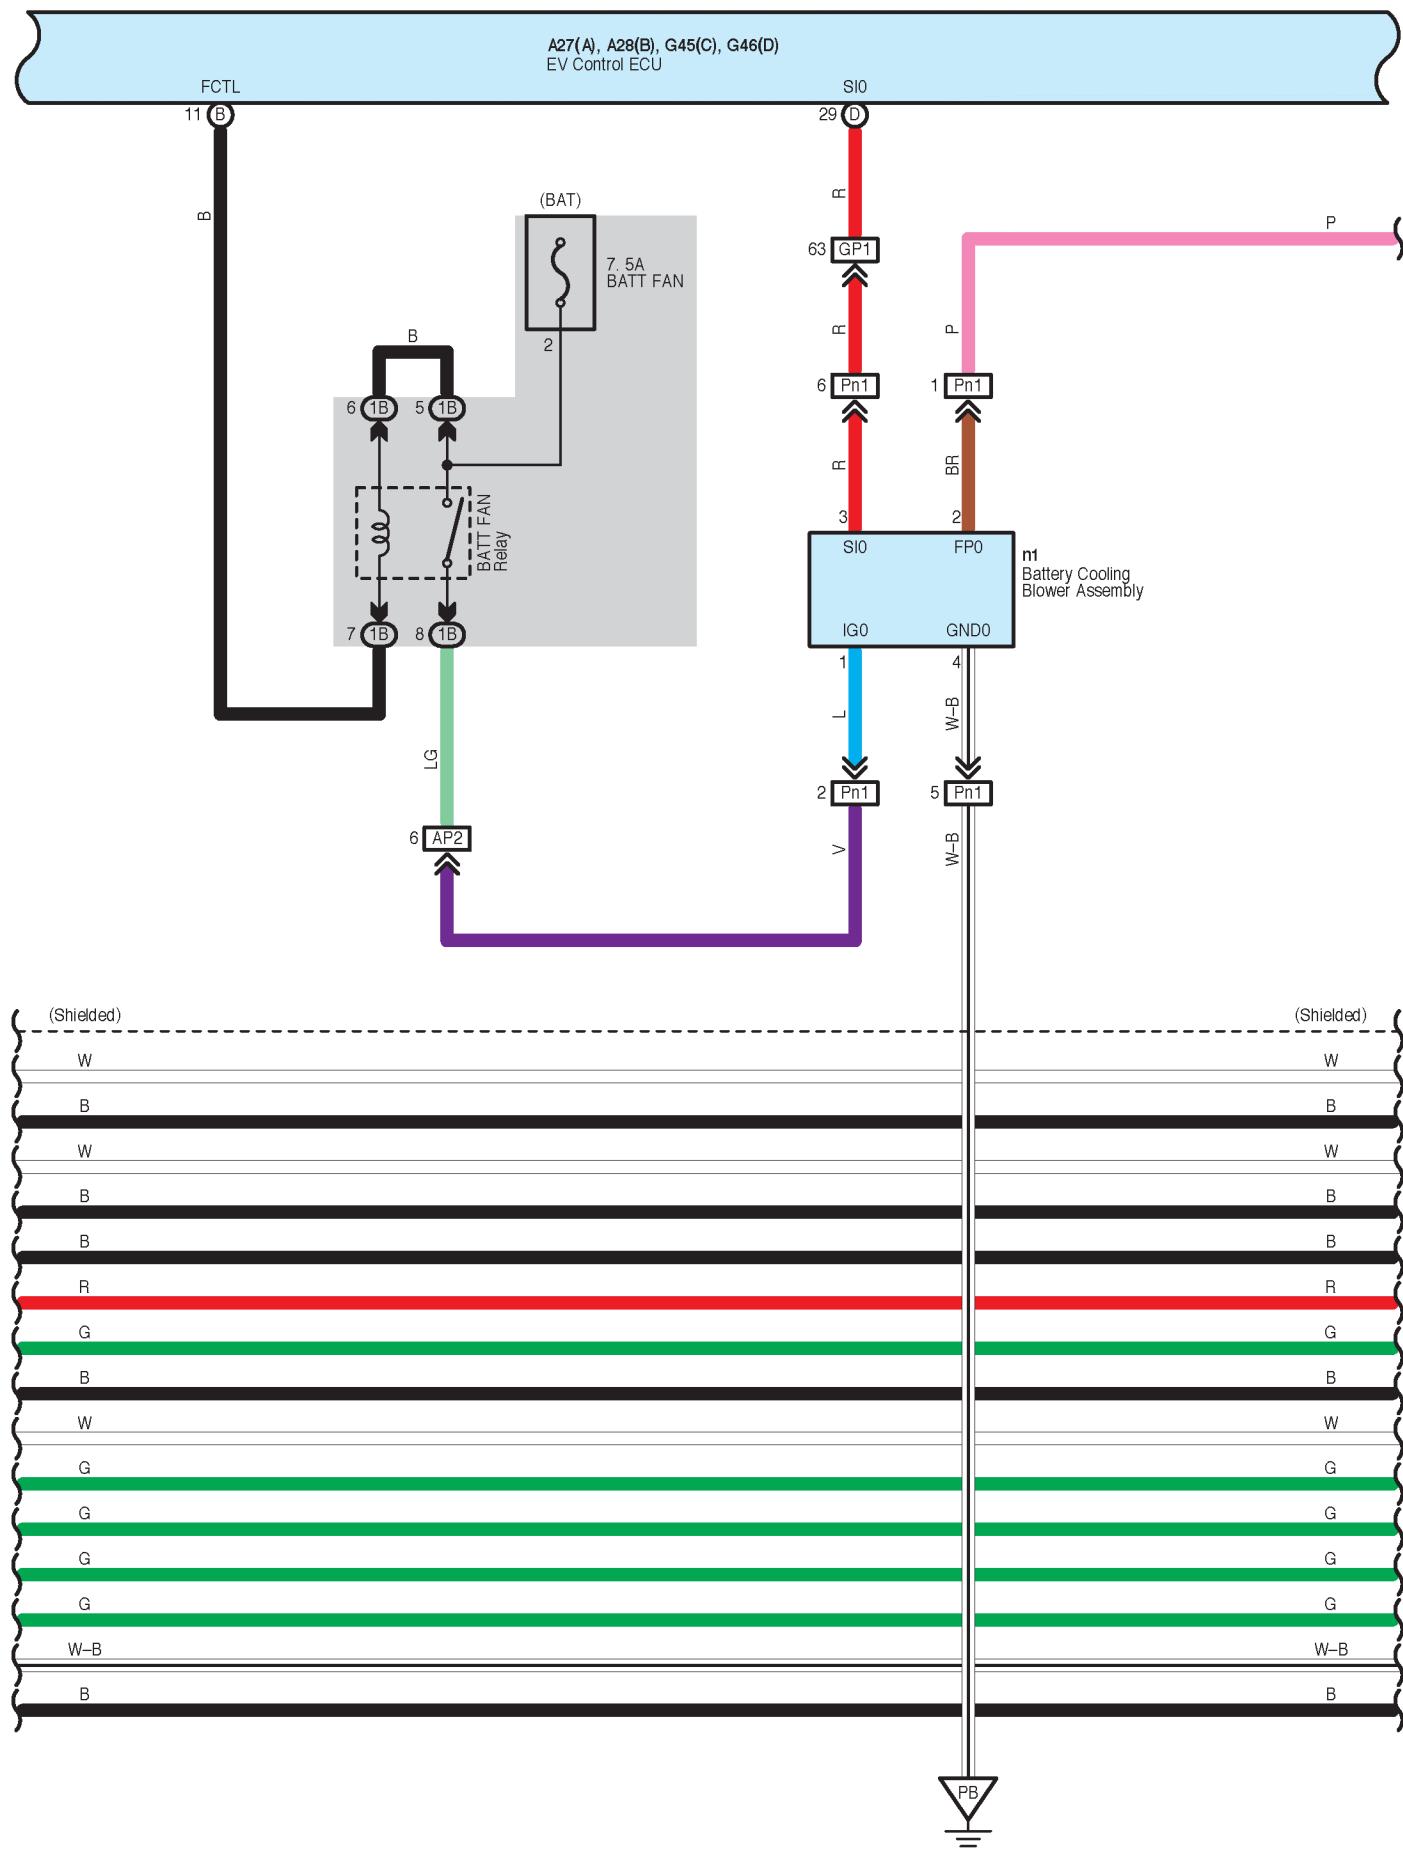


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

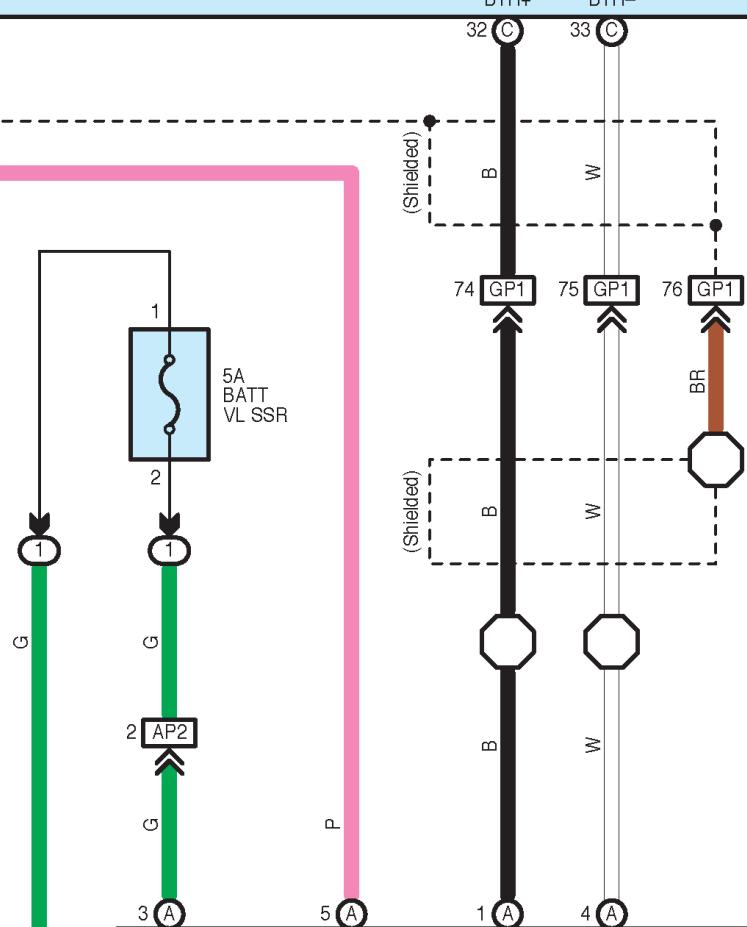

m2(L), z15(M), z16(N), z17(O)
EV Supply Battery Assembly

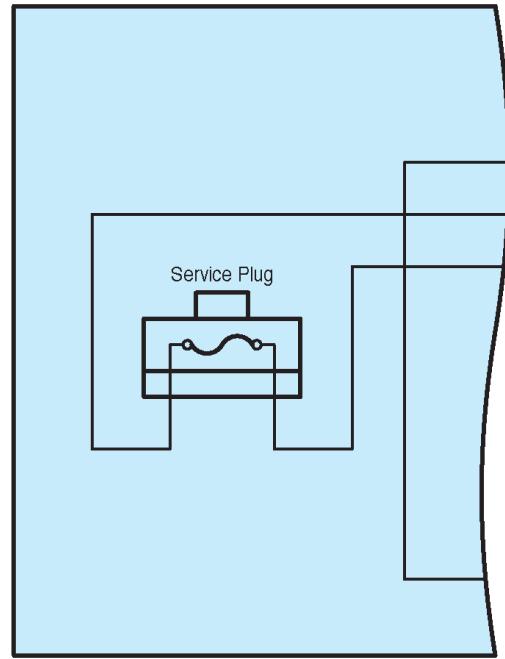


(Shielded)

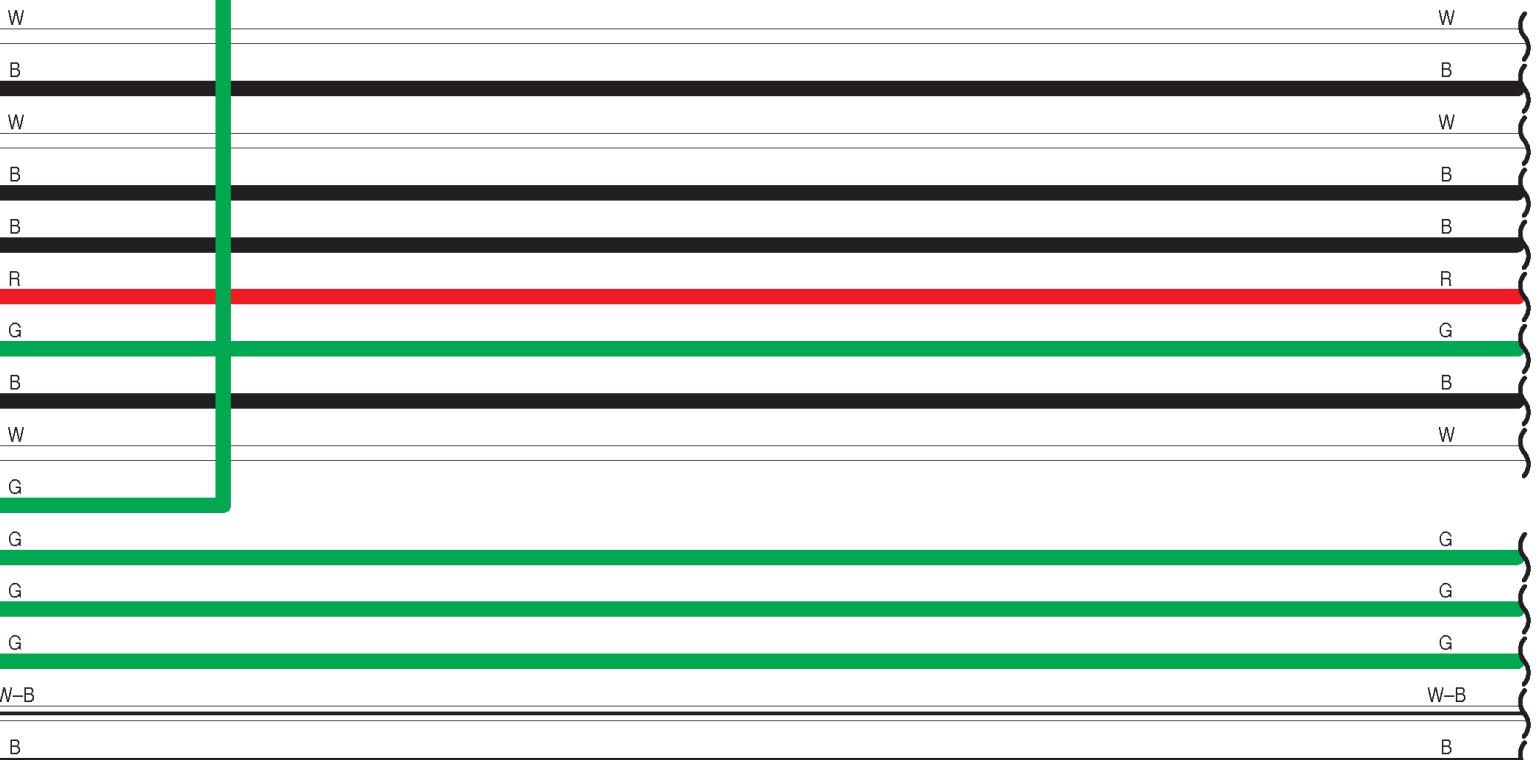


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A27(A), A28(B), G45(C), G46(D)
EV Control ECU


m2(L), z15(M), z16(N), z17(O)
EV Supply Battery Assembly

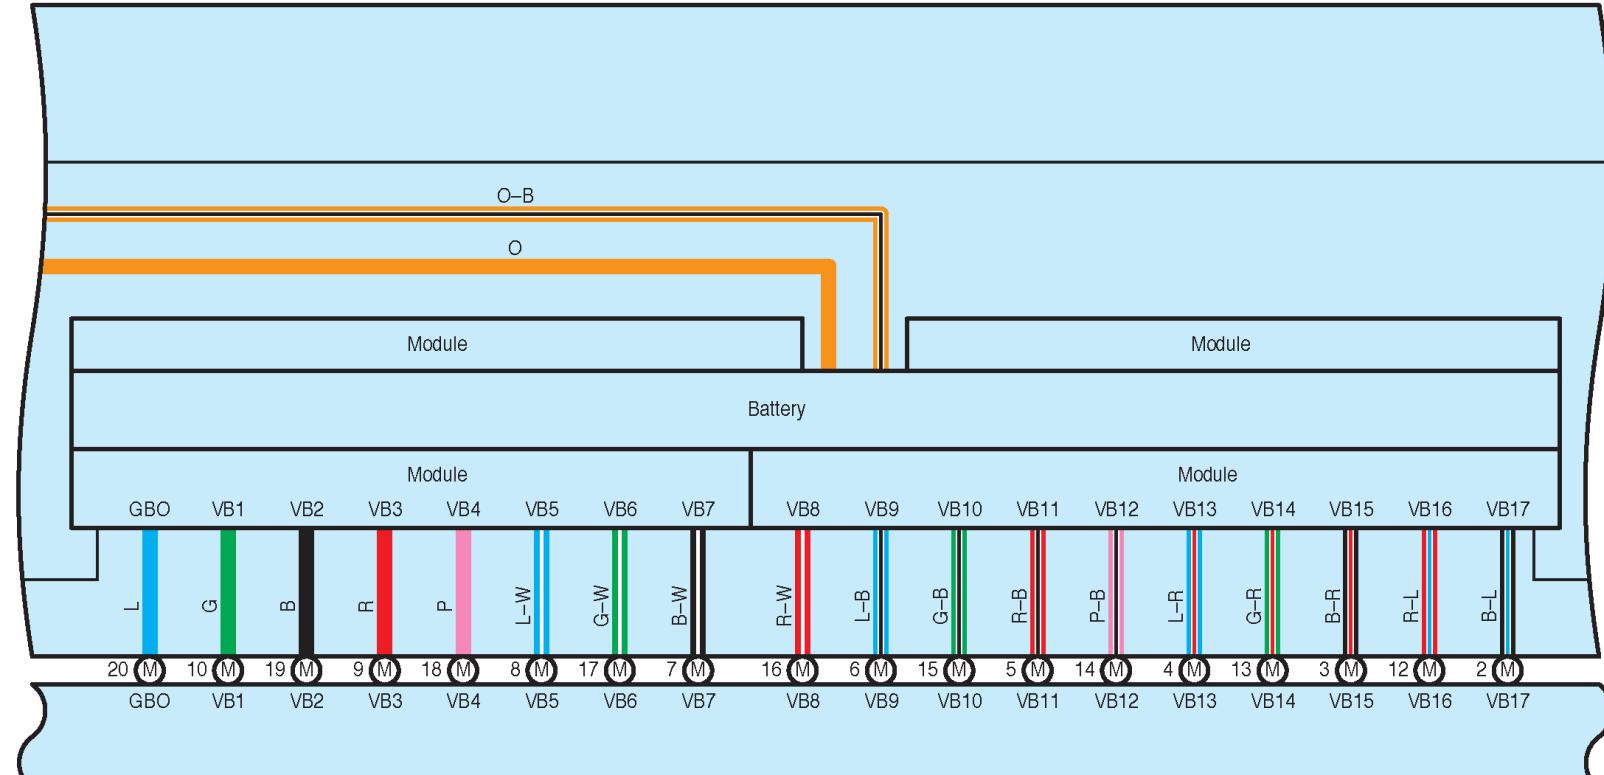

P29(A), z15(M), z16(N)
Battery Voltage Sensor

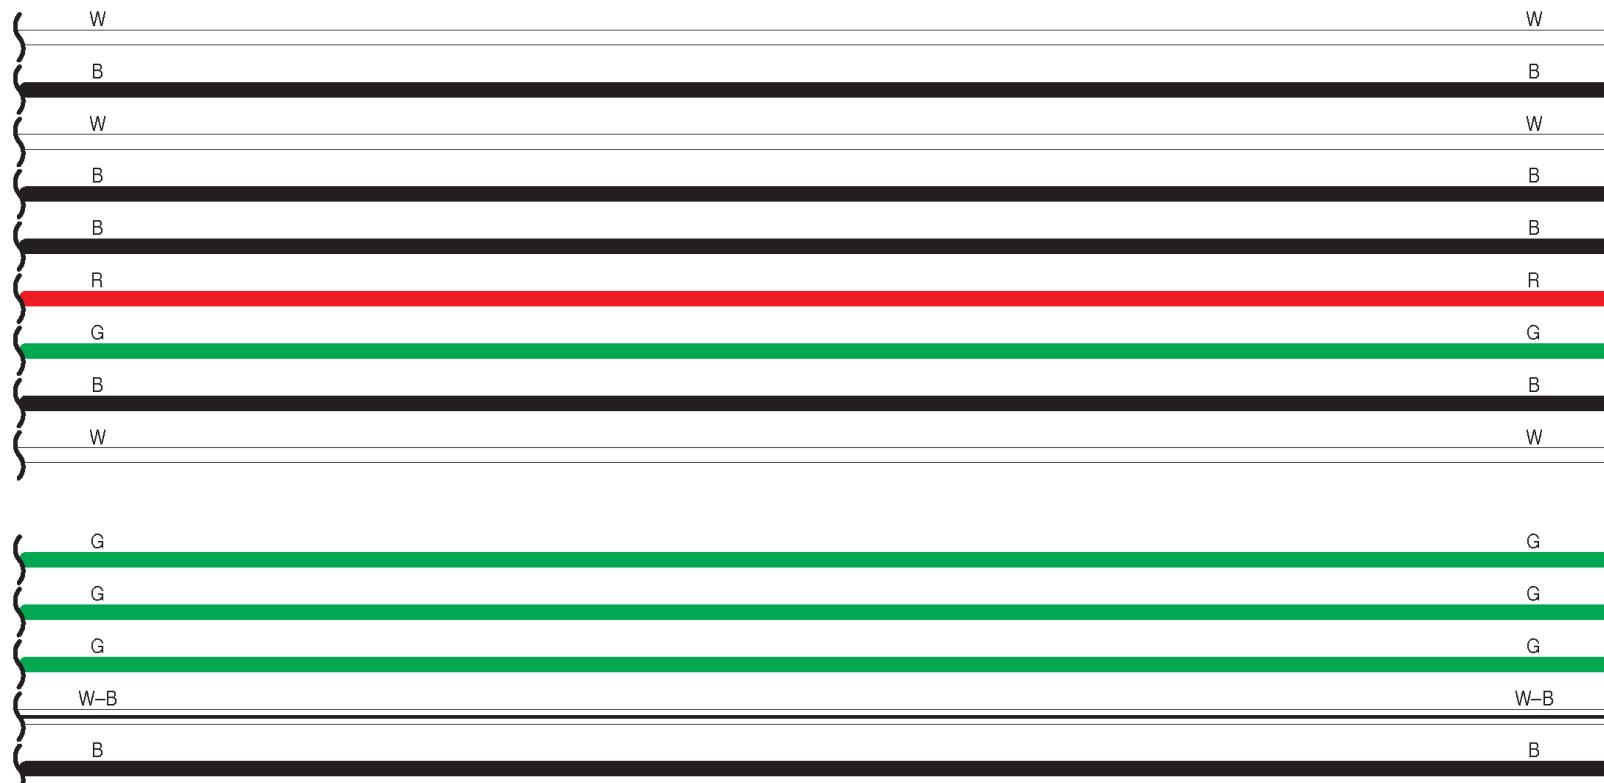


A27(A), A28(B), G45(C), G46(D)
EV Control ECU

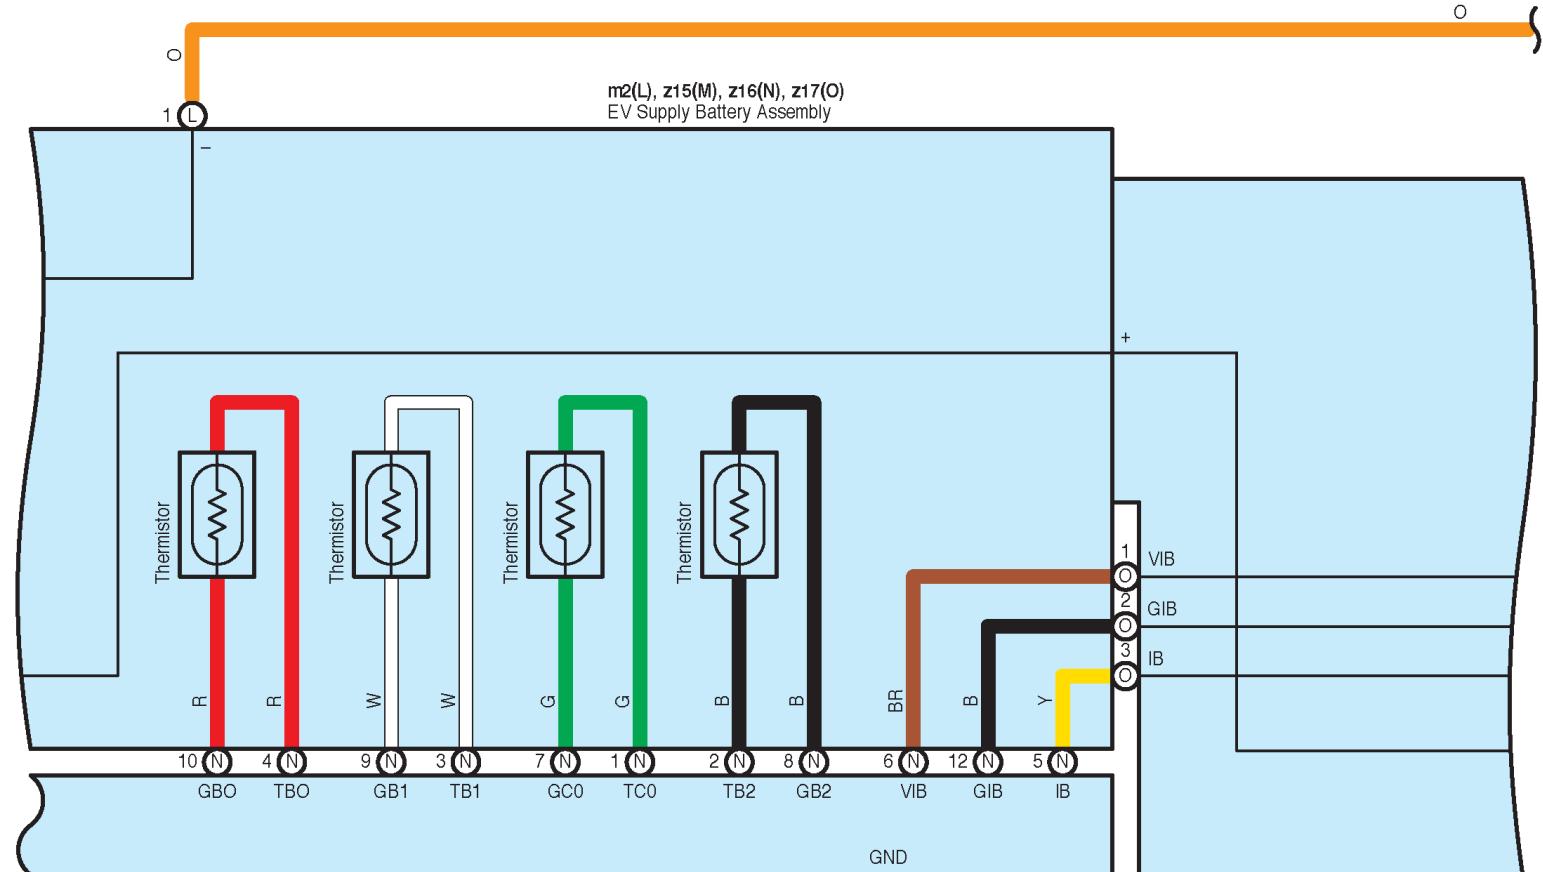


P29(A), z15(M), z16(N)
Battery Voltage Sensor

Q16(C), S1(D), S2(E),
m1(K), z17(O)
EV Battery Junction Block Assembly

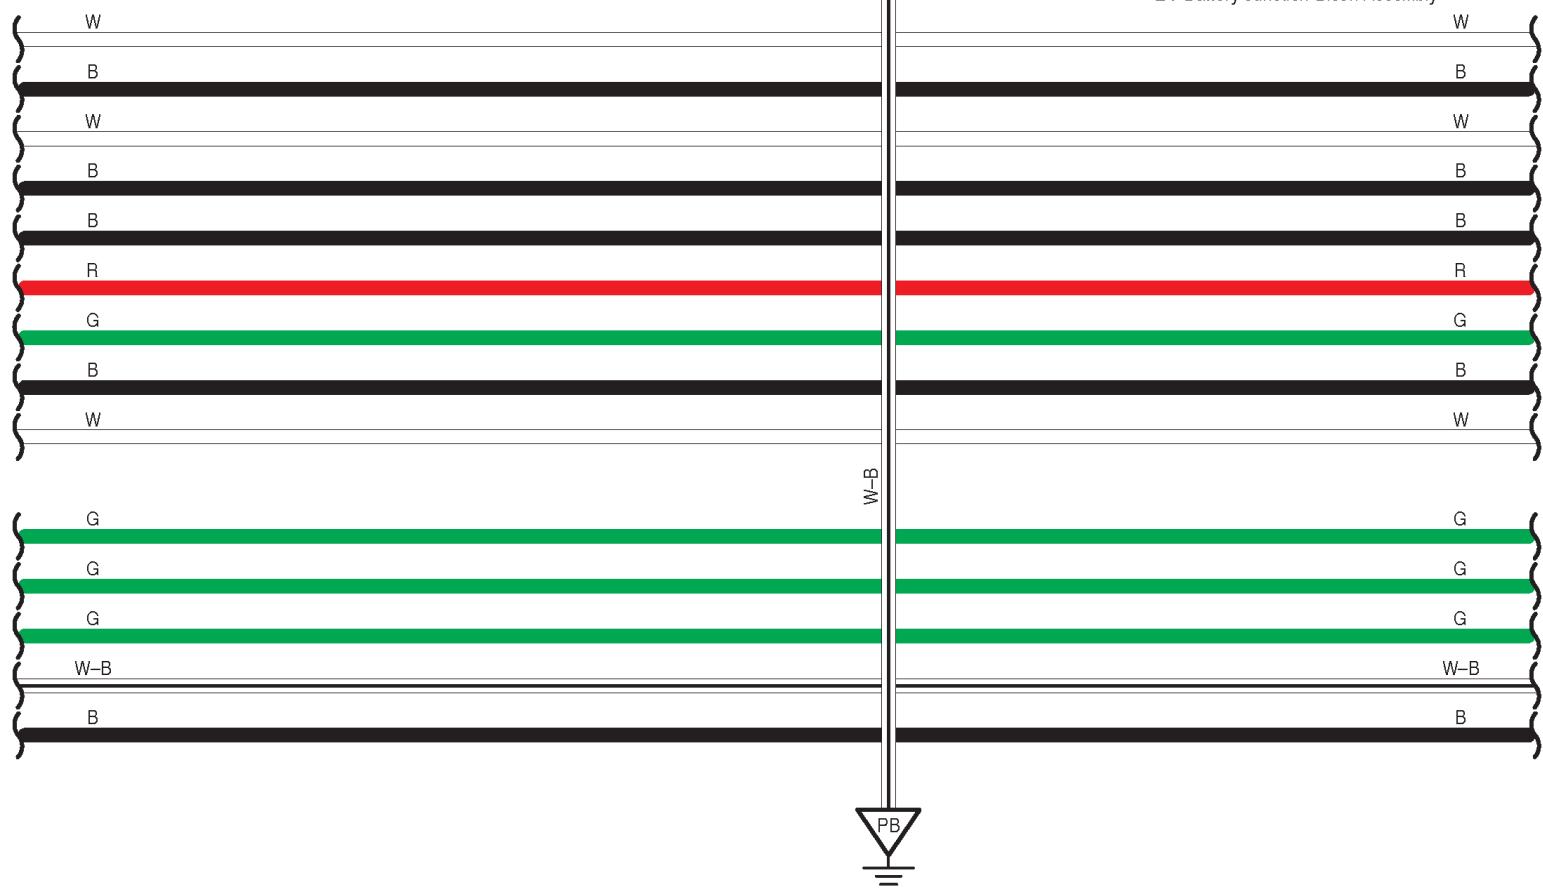


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

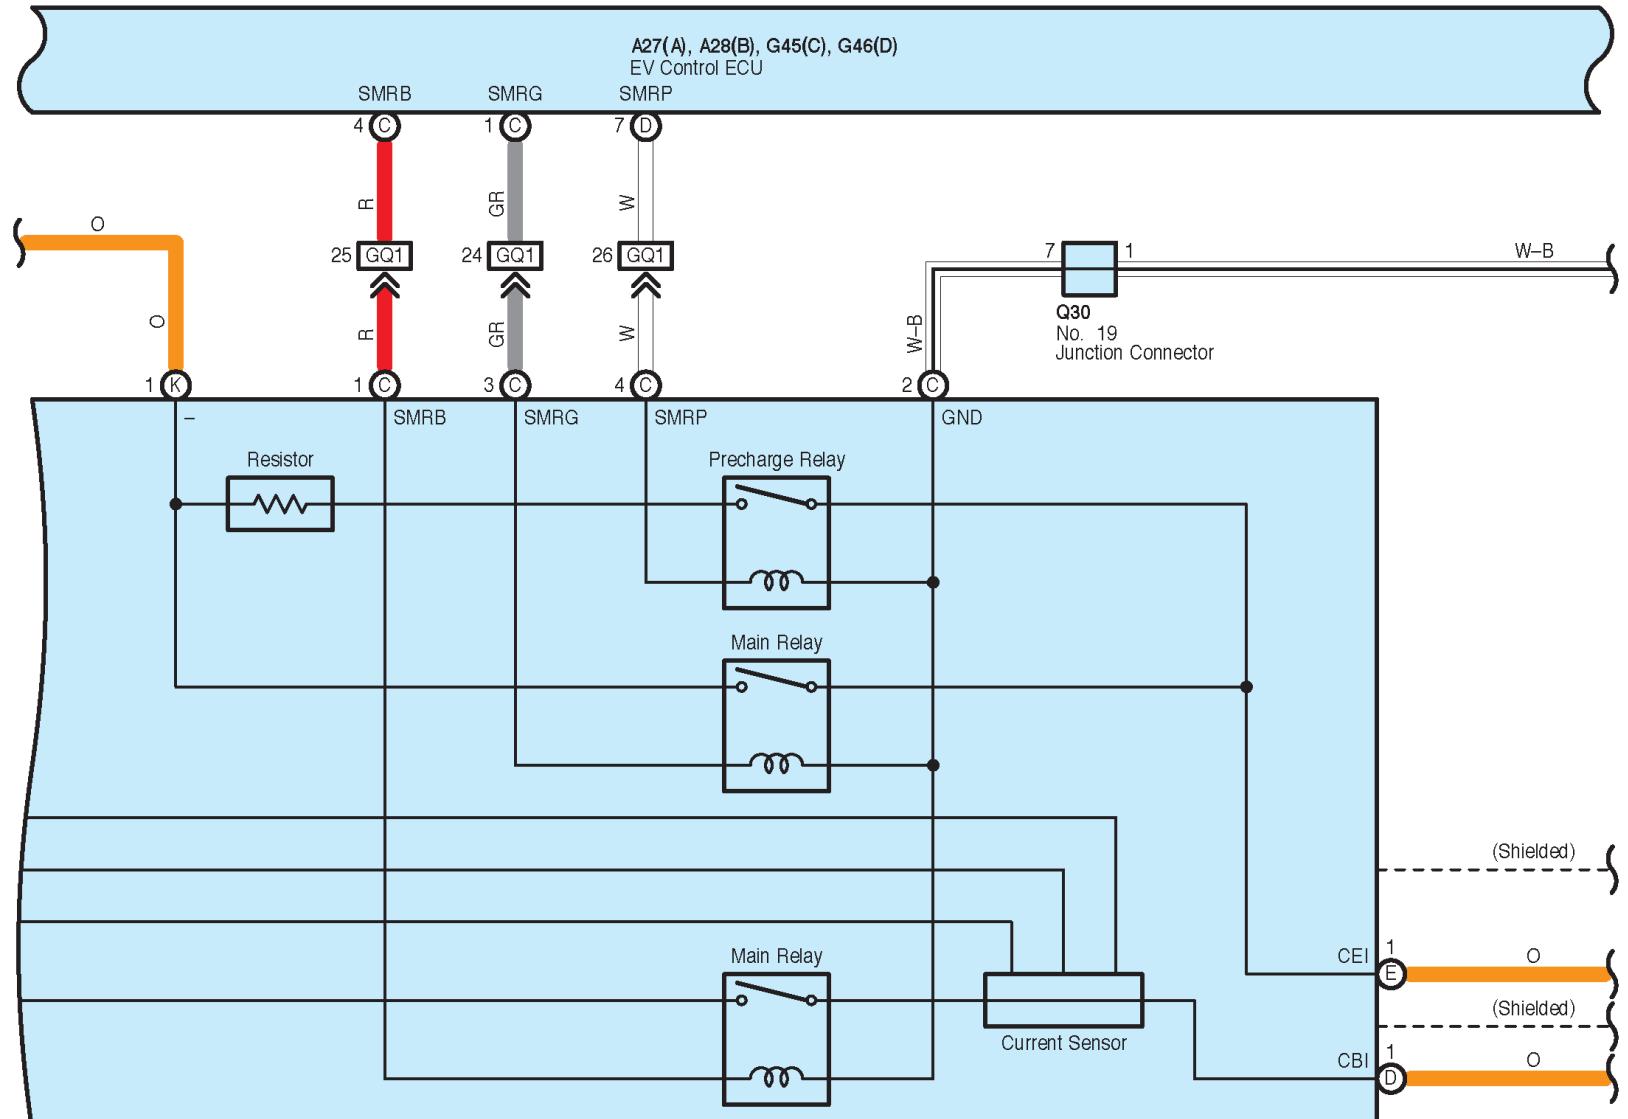


Q16(C), S1(D), S2(E), m1(K), z17(O)
EV Battery Junction Block Assembly




EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

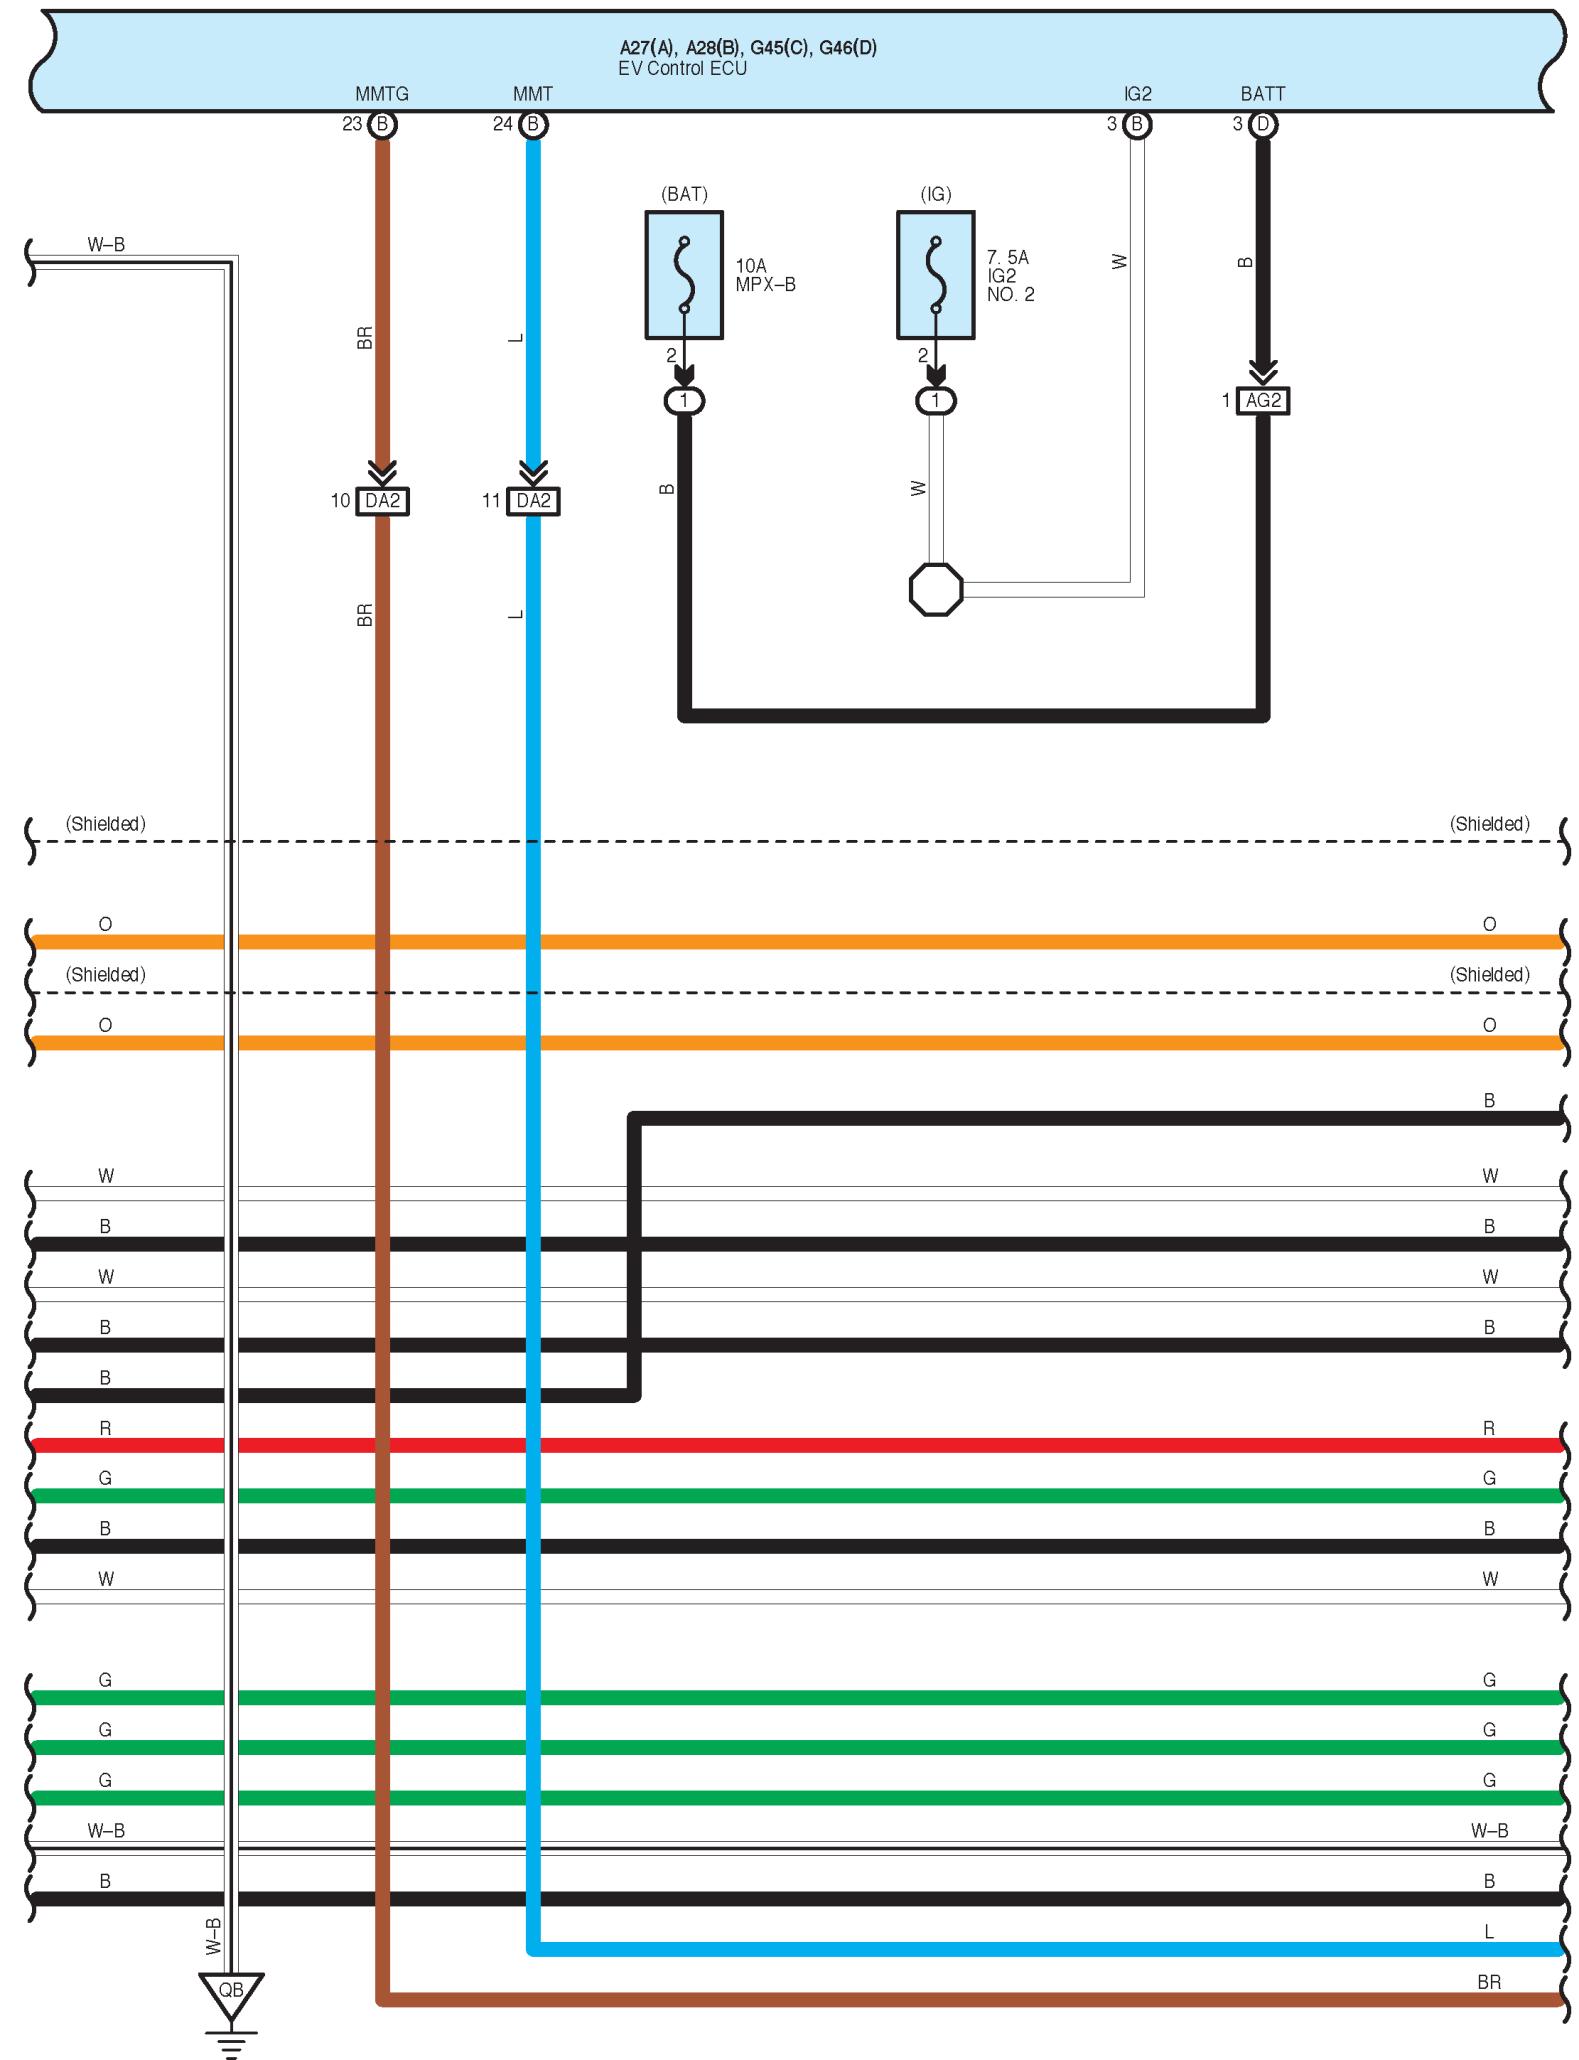

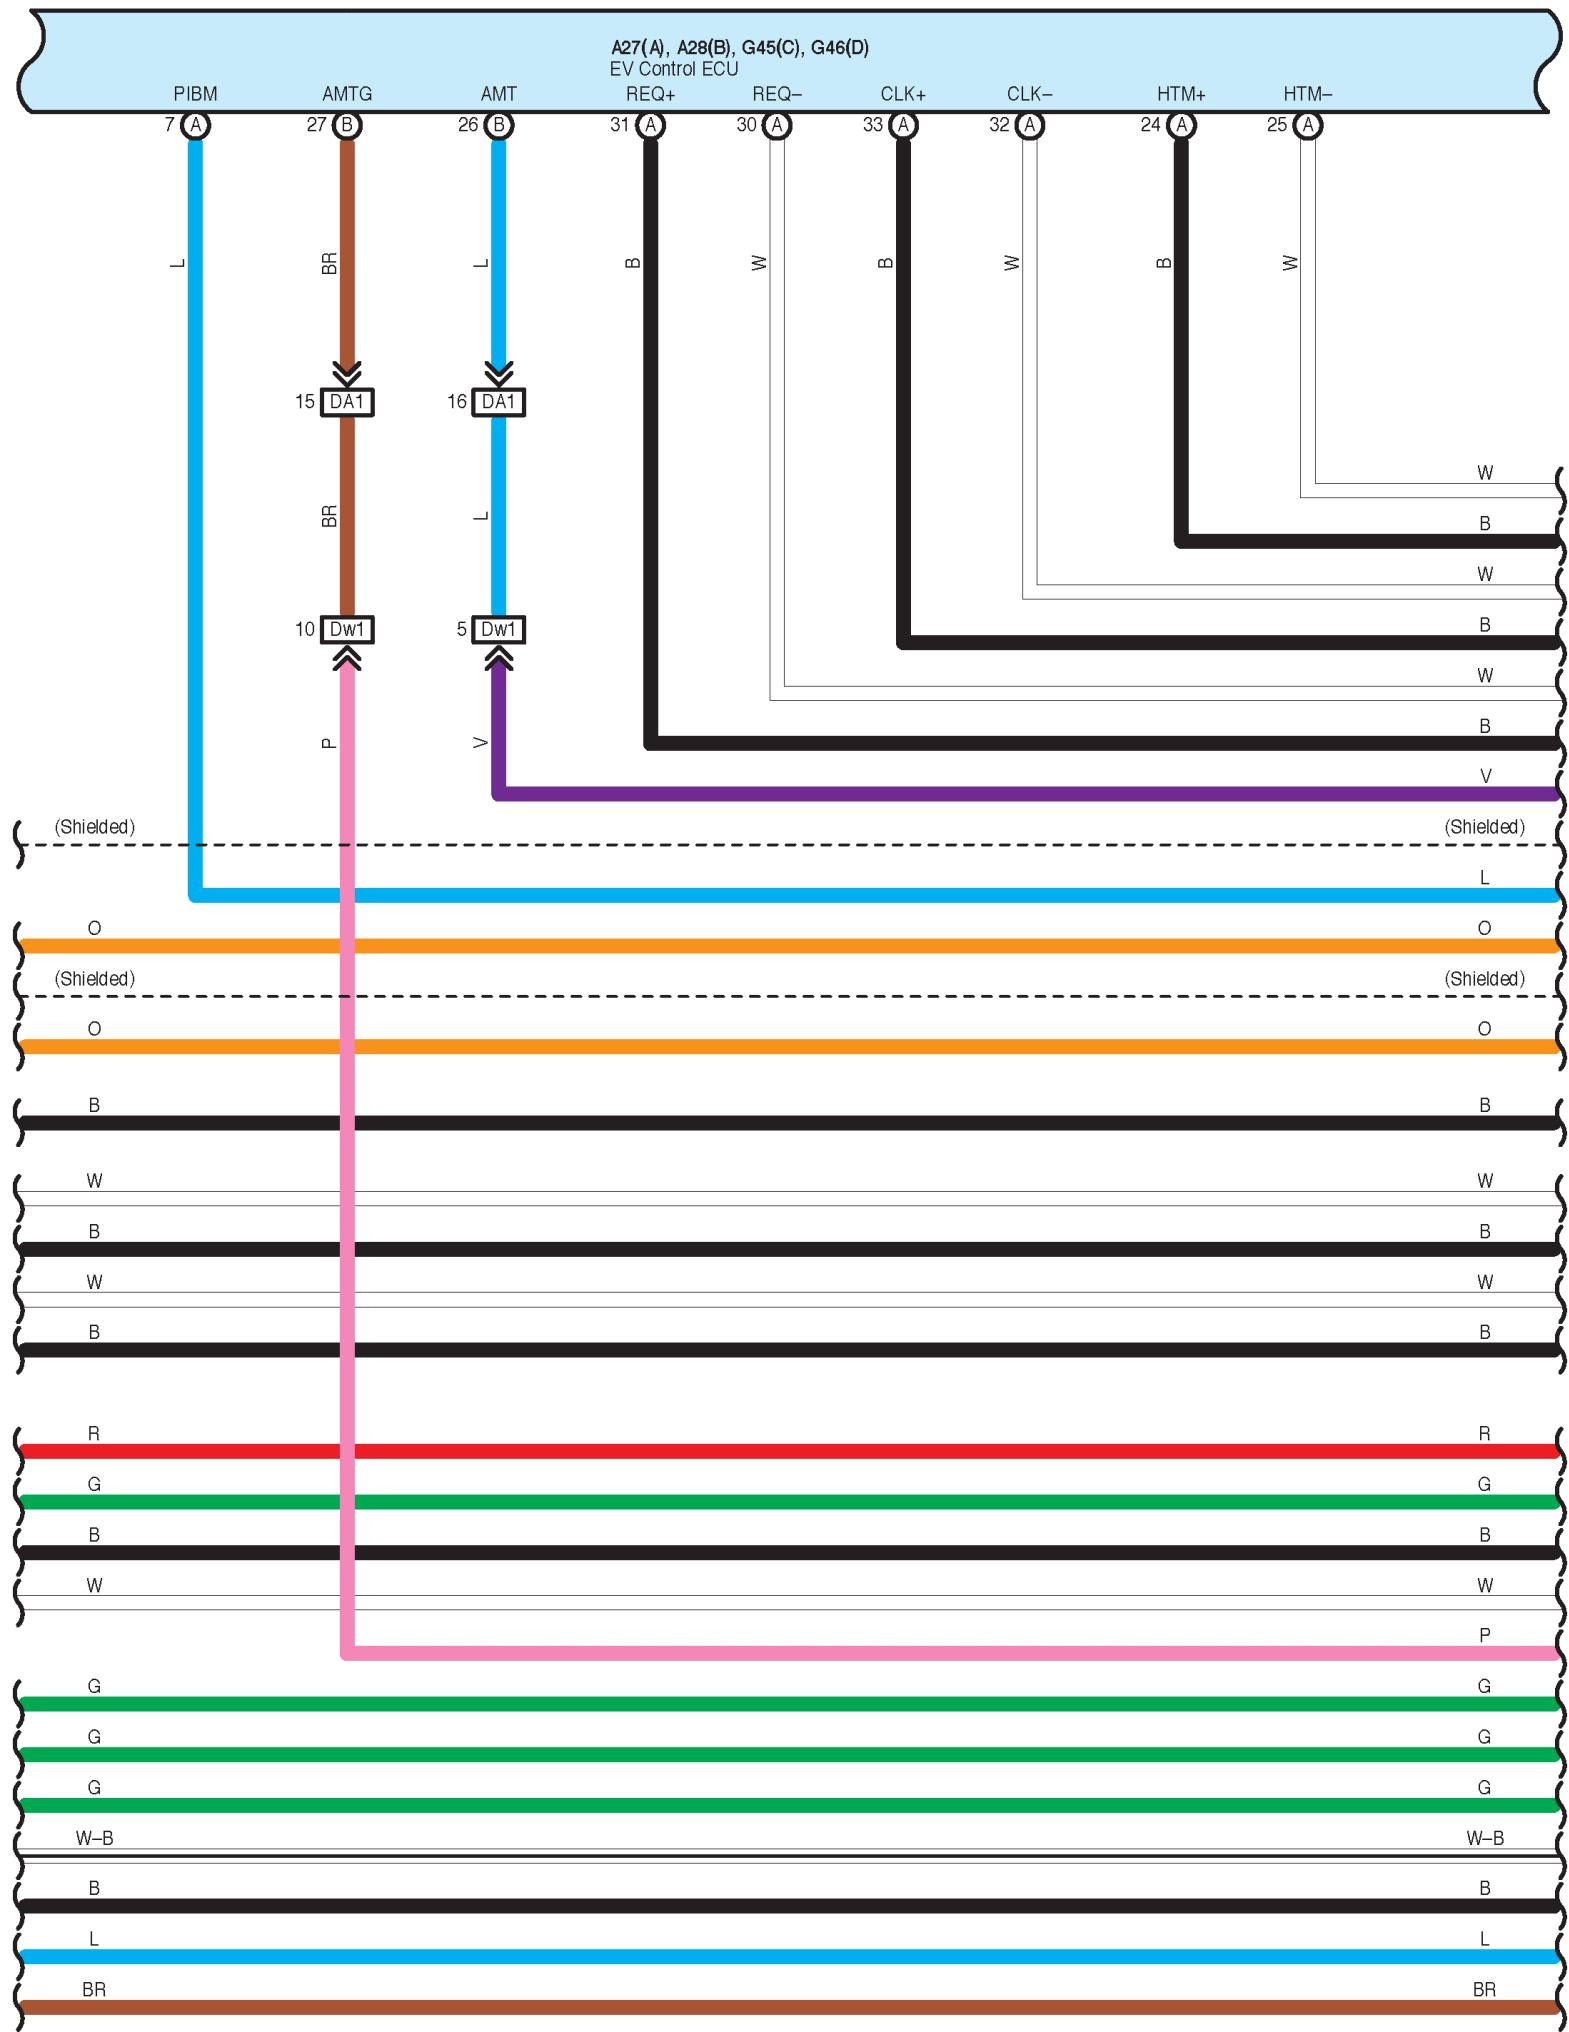


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

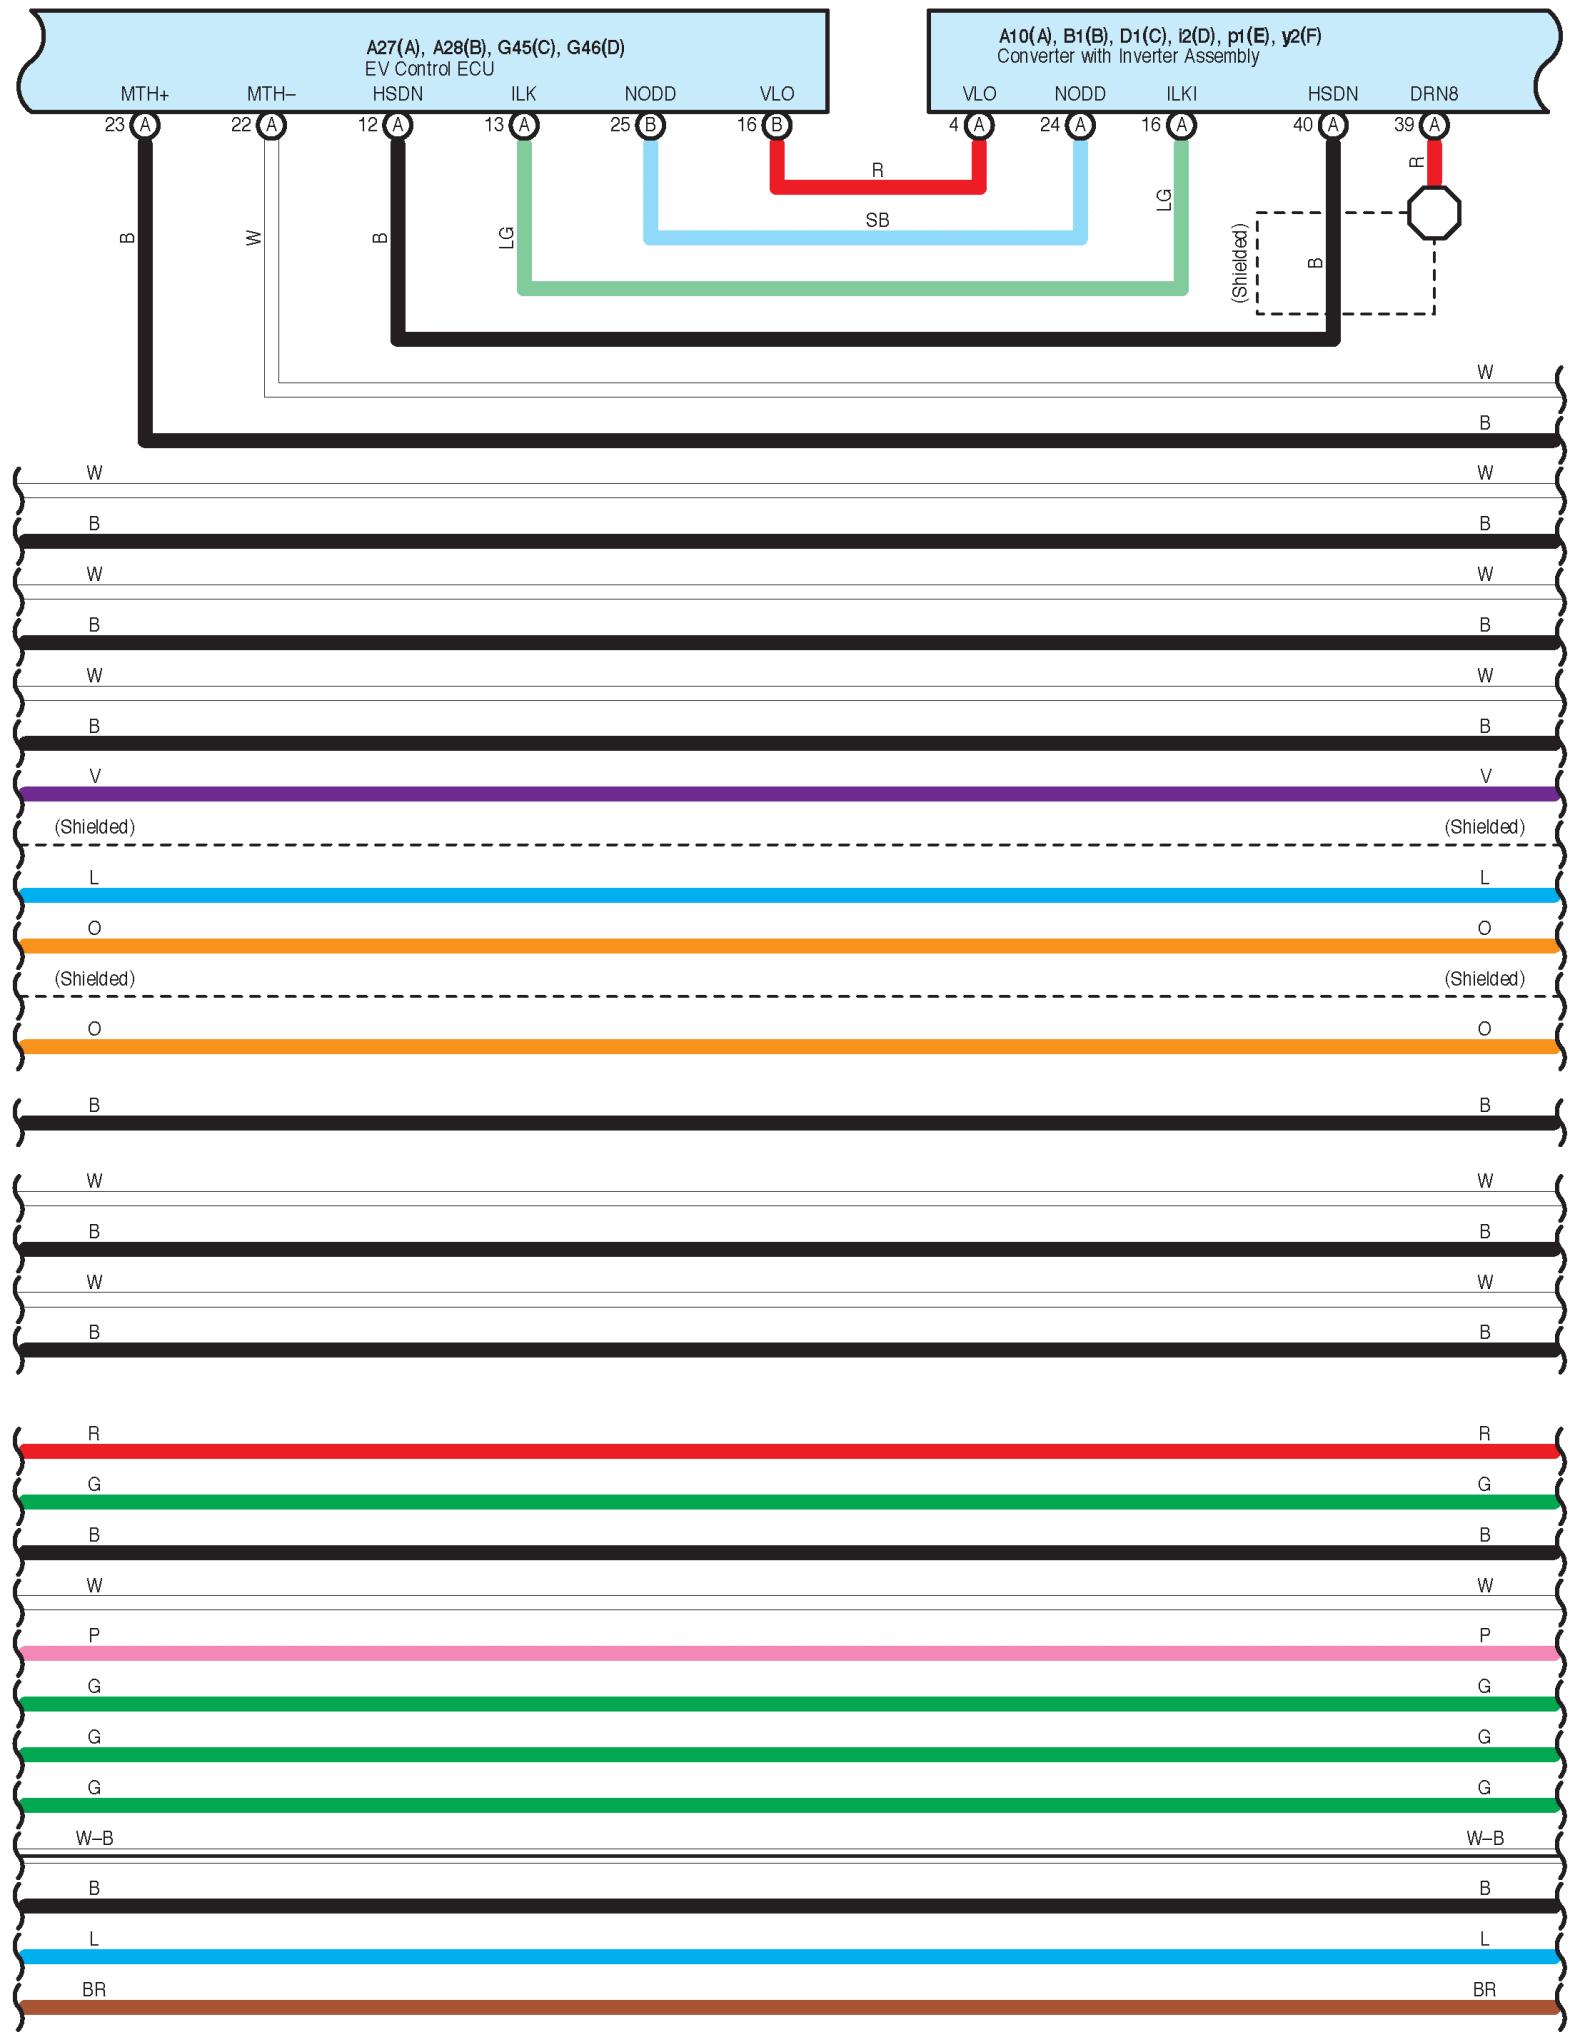


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A10(A), B1(B), D1(C), i2(D), p1(E), y2(F)
Converter with Inverter Assembly

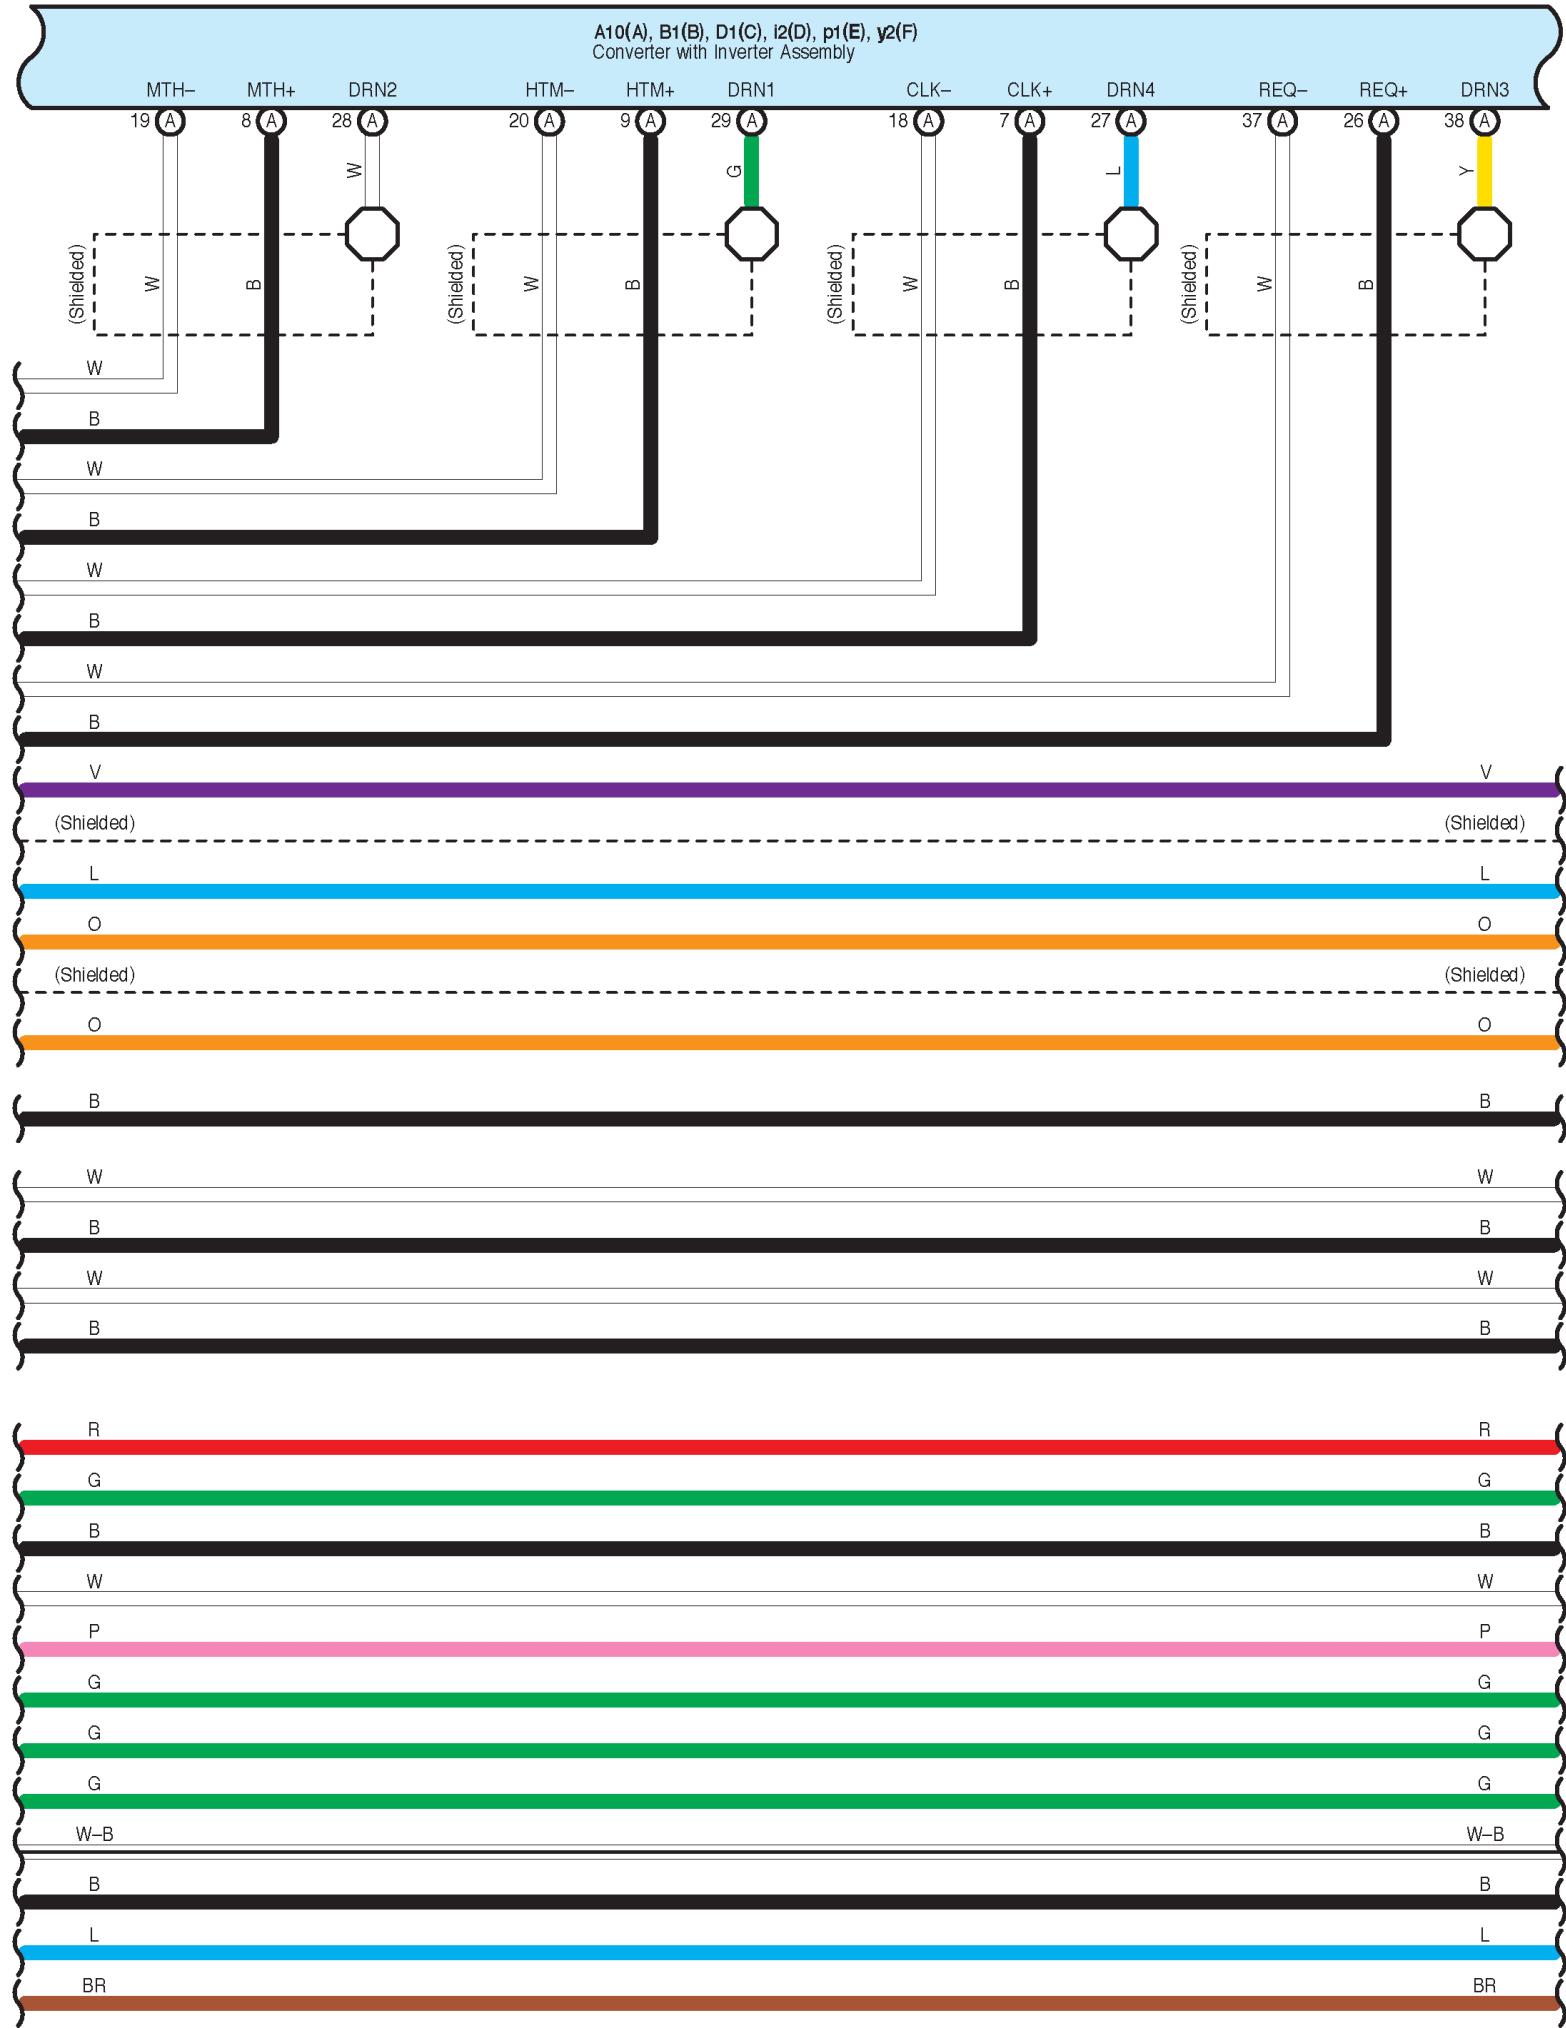


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

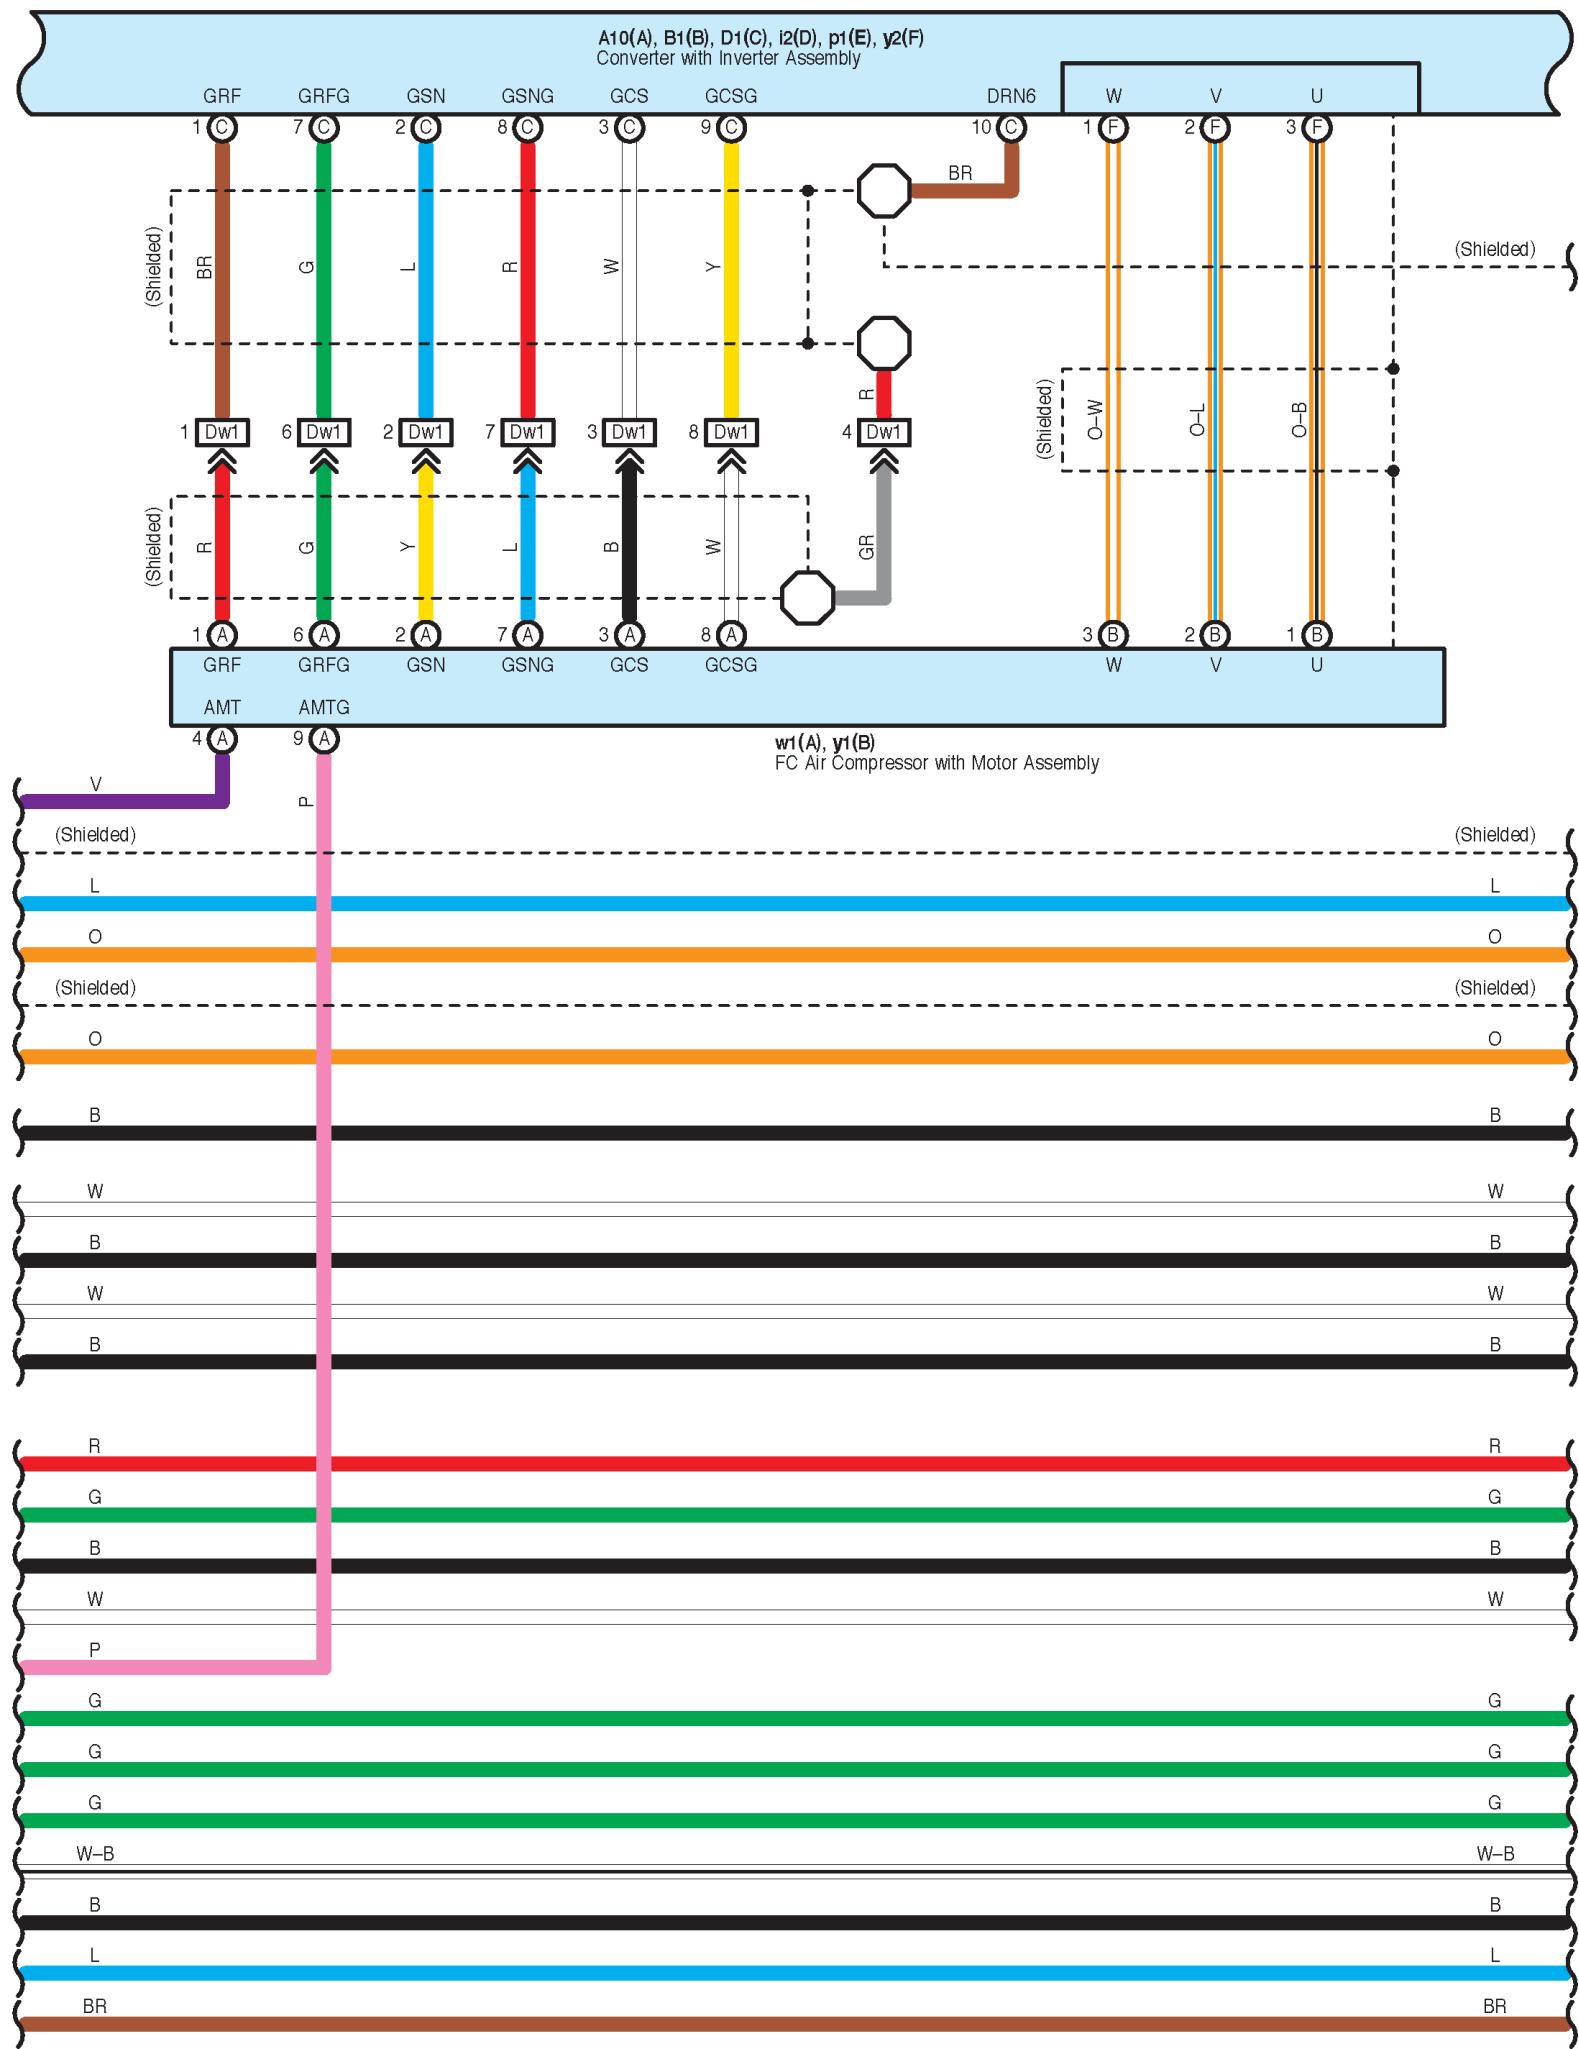

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System



A10(A), B1(B), D1(C), I2(D), p1(E), y2(F)
Converter with Inverter Assembly

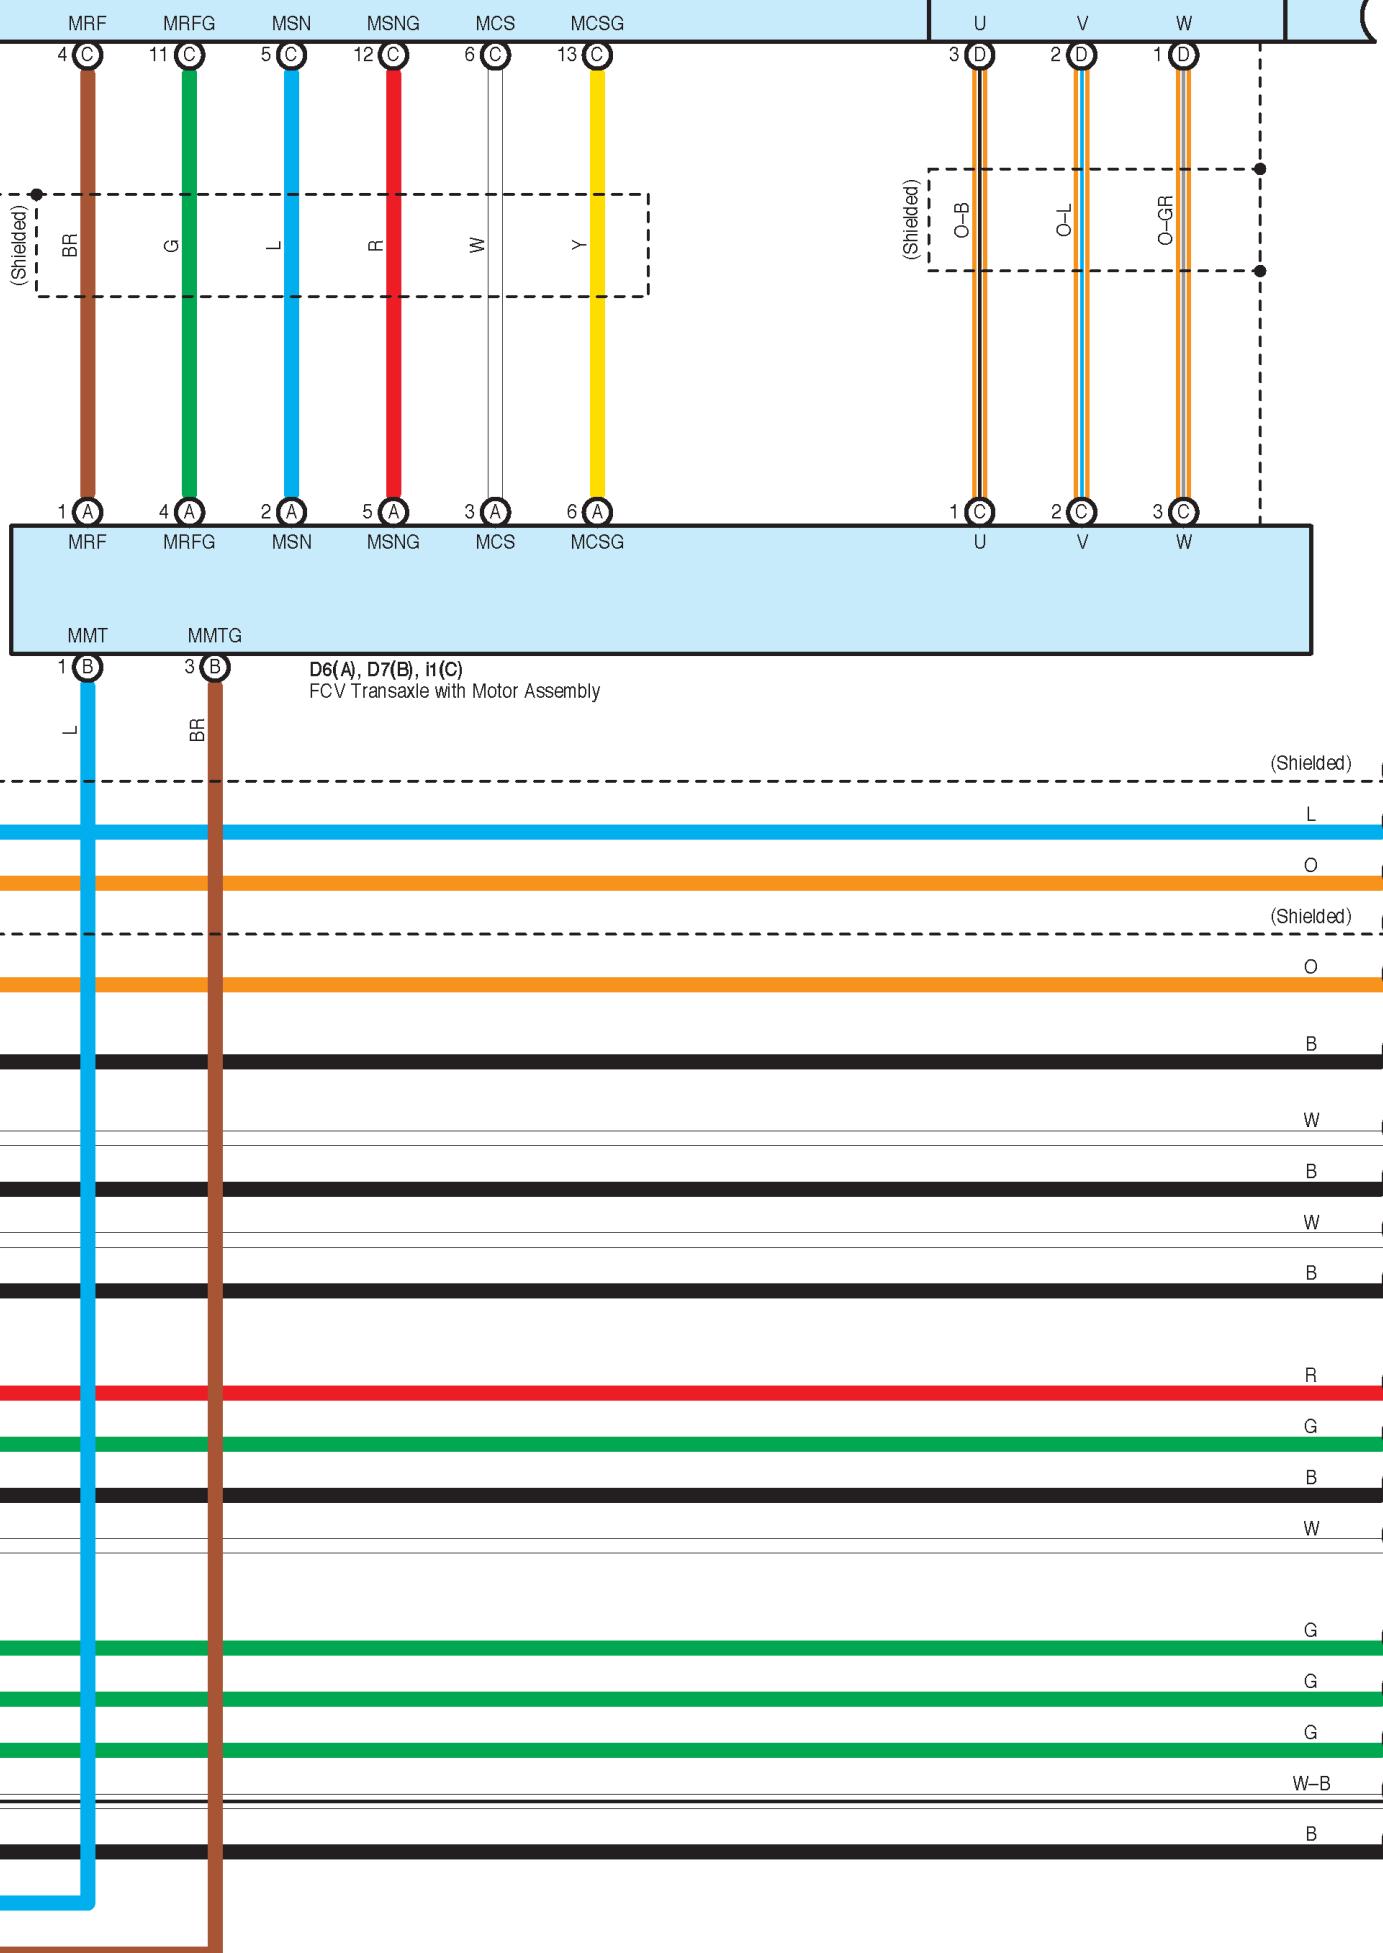


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A10(A), B1(B), D1(C), I2(D), p1(E), y2(F)
Converter with Inverter Assembly


IGCT +B +B2 AMD S
25(A) 30(A) 31(A) 1(B) 36(A)

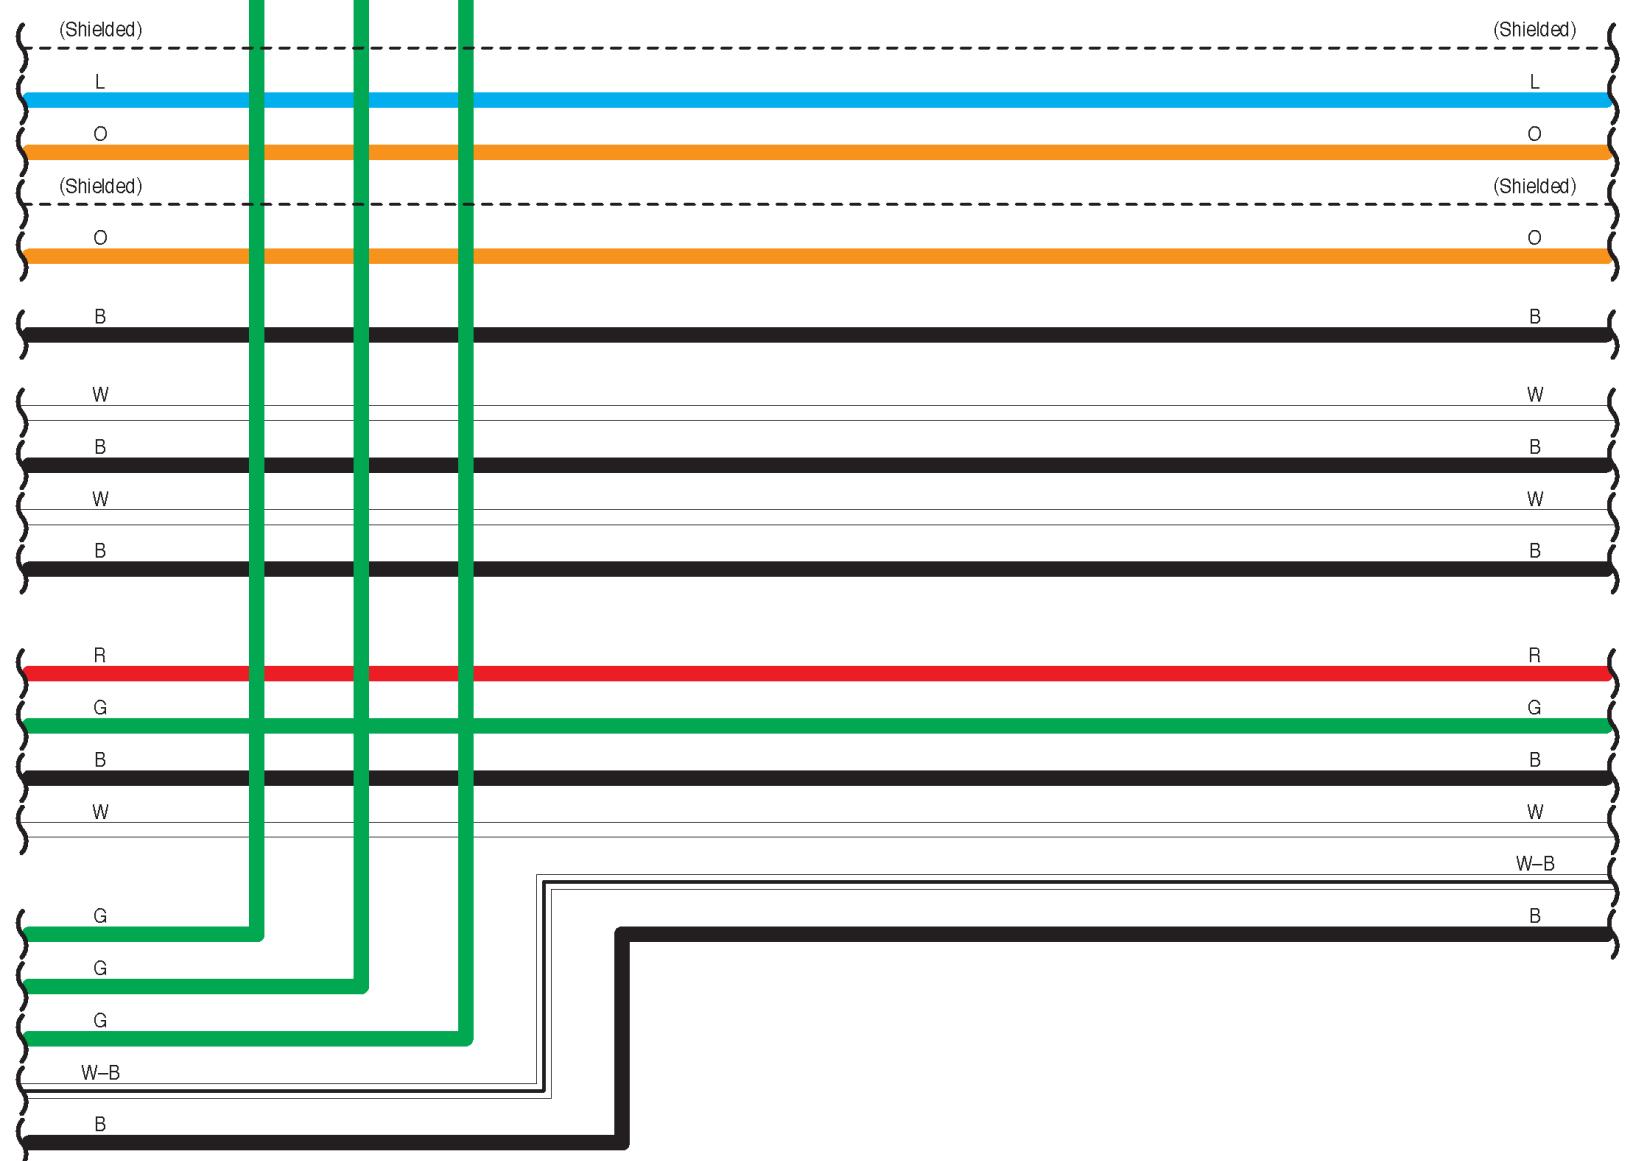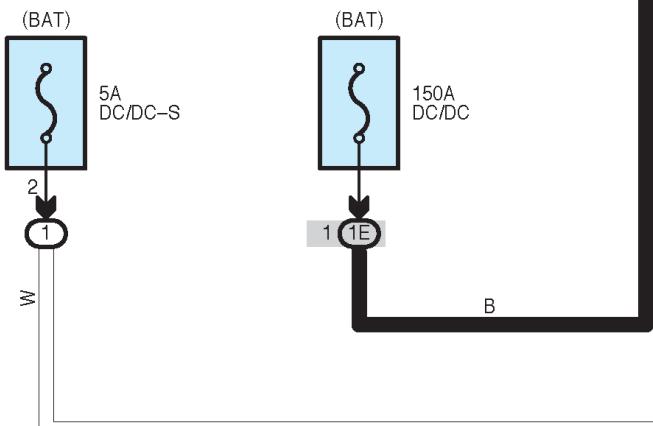



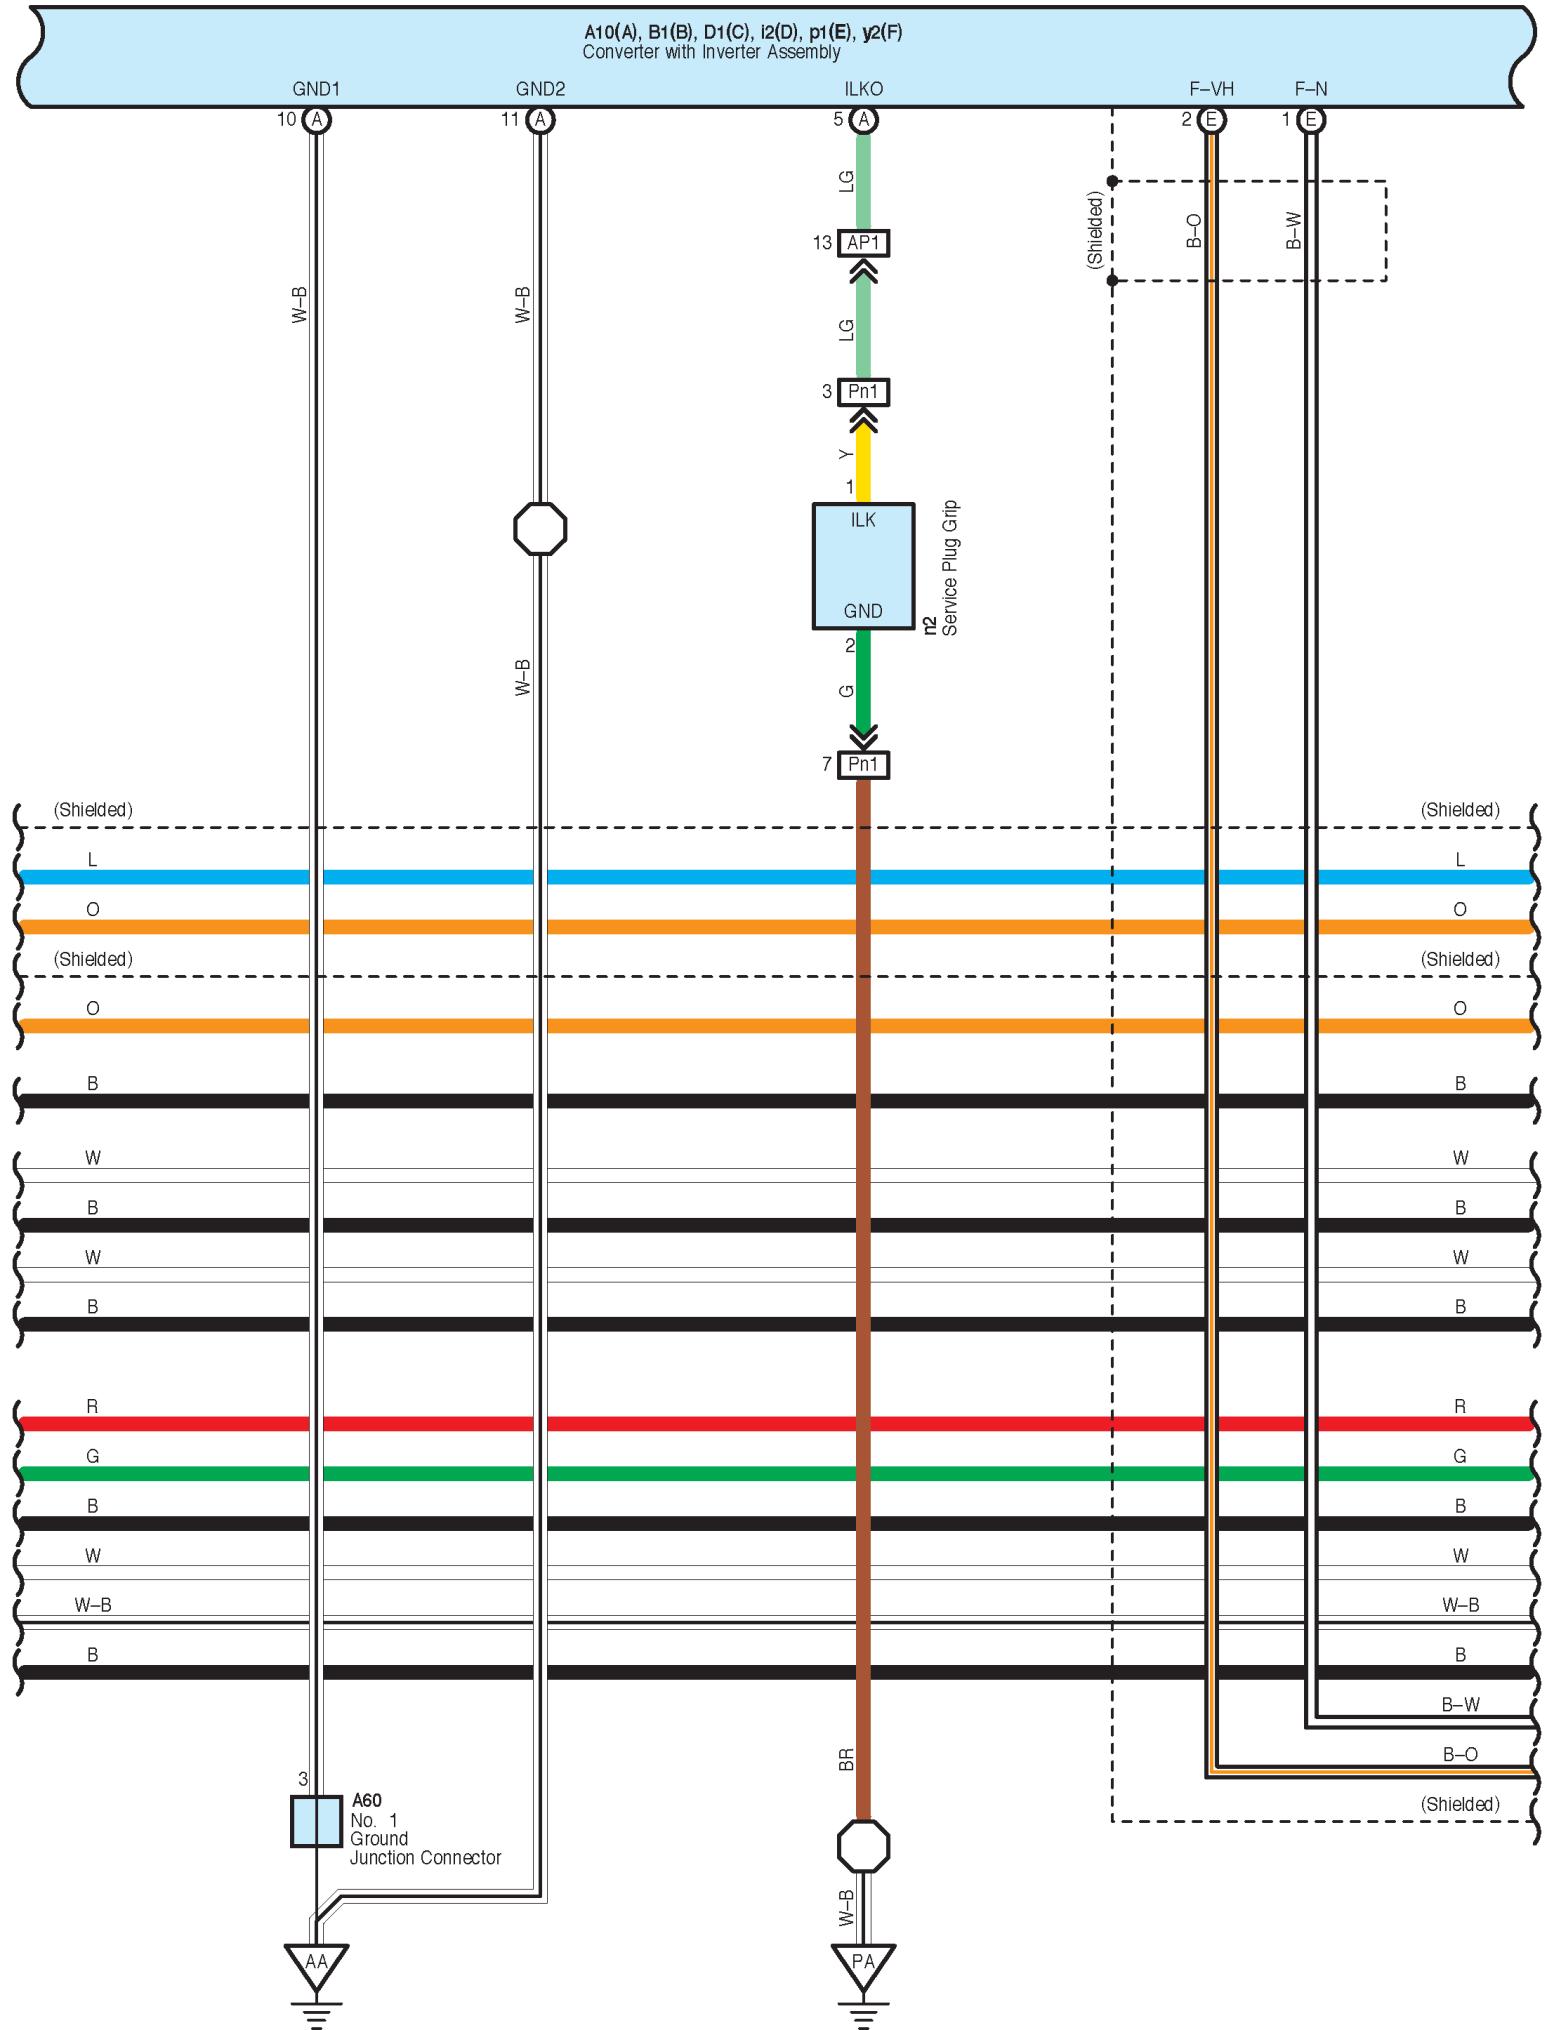


A10(A), B1(B), D1(C), I2(D), P1(E), Y2(F)
Converter with Inverter Assembly

z14(G)
Electric Heater Sub-Assembly

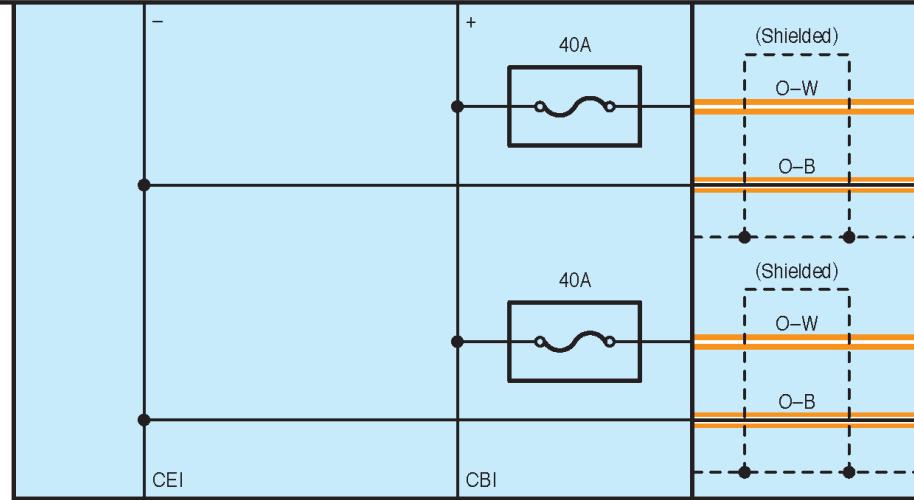


A41(A), A50(B), v1(E),
z13(F), z58(H)
FC Water & Hydrogen Pump
Inverter Assembly, FC Cooling
Water Pump Assembly

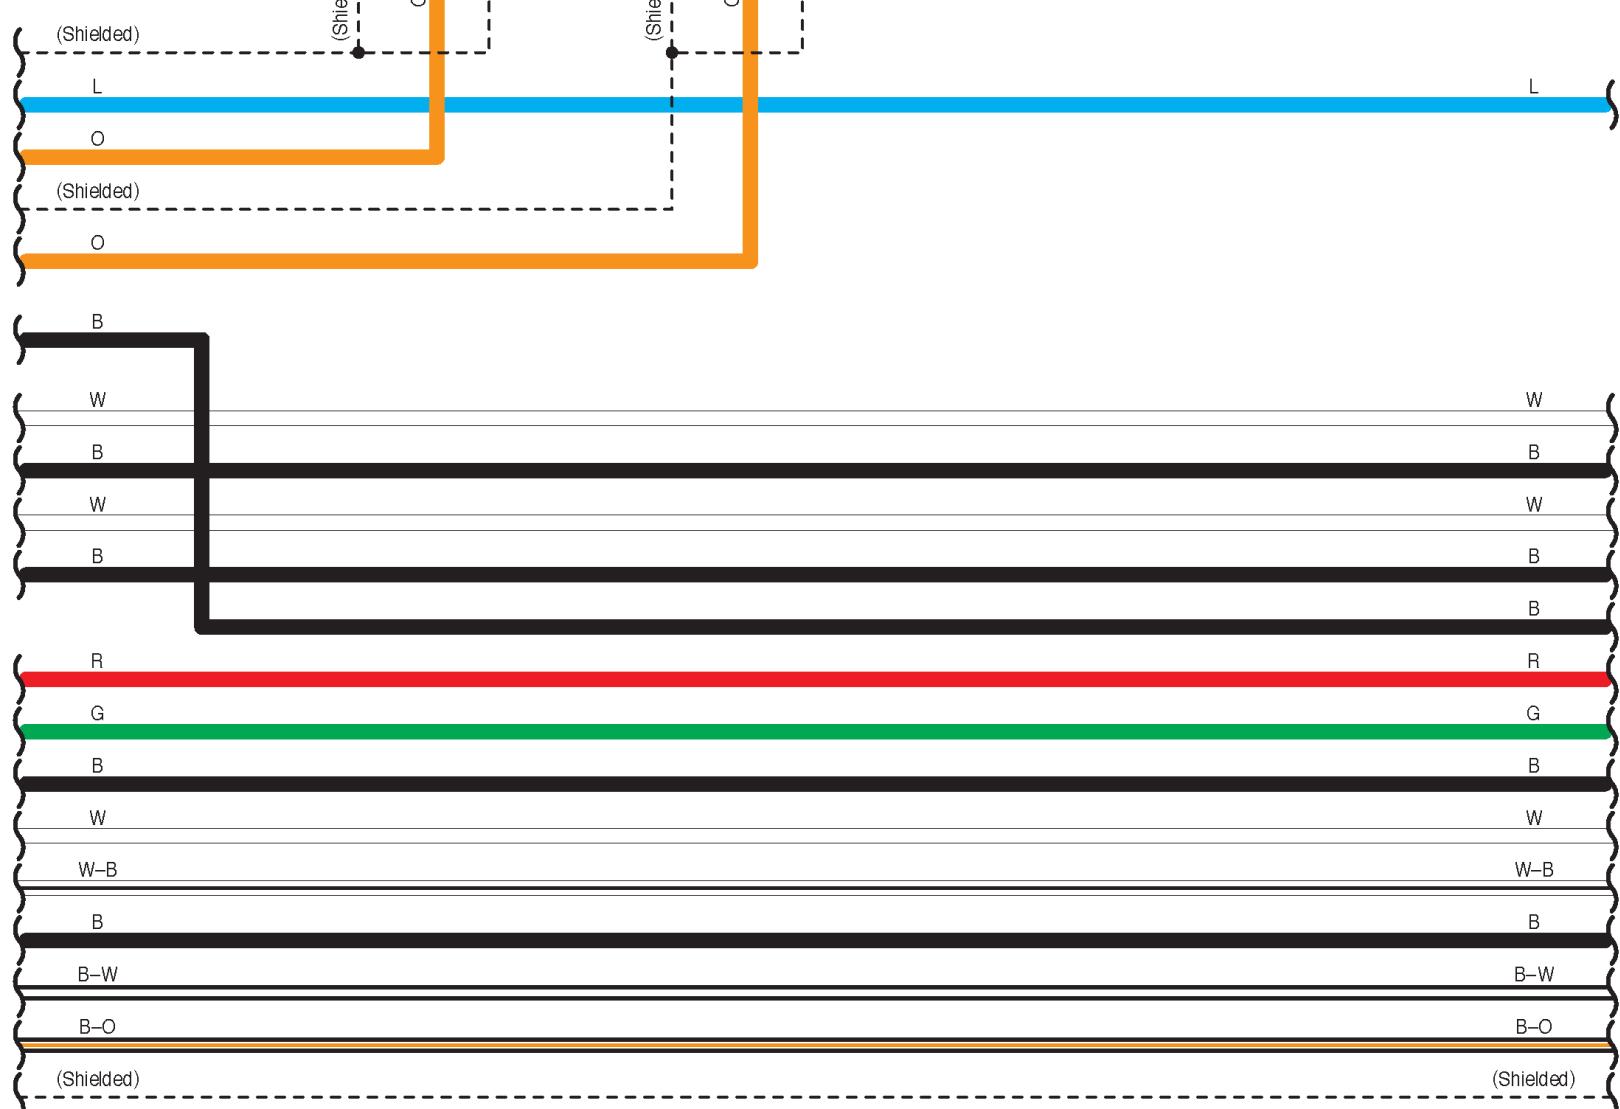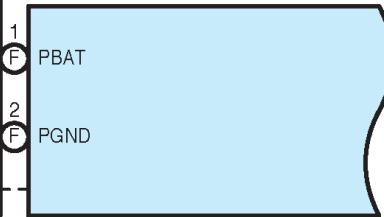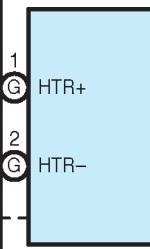

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System


A47(A), A48(B)
FC Control ECU

z58(H)
FC Water & Hydrogen Pump
Inverter Assembly
FC Cooling Water Pump Assembly

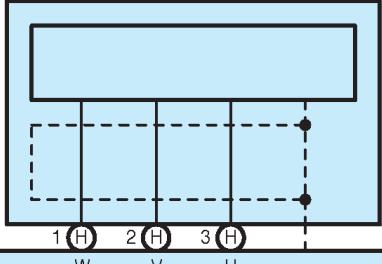

HCLK	HSTB	HETI	HITE	WCK1	WSB1	WEI1	WIE1
37(B)	26(B)	38(B)	49(B)	48(B)	27(B)	39(B)	47(B)
W	BR	>	GE	DC	>	L	D


A41(A), A50(B), v1(E), z13(F), z58(H)
FC Water & Hydrogen Pump
Inverter Assembly, FC Cooling
Water Pump Assembly

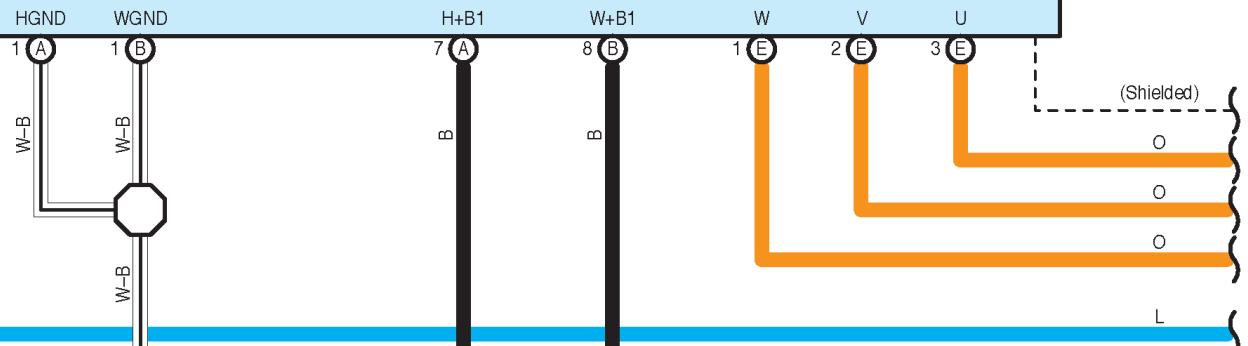


A60
No. 1
Ground
Junction Connector
AA

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A47(A), A48(B)
FC Control ECU

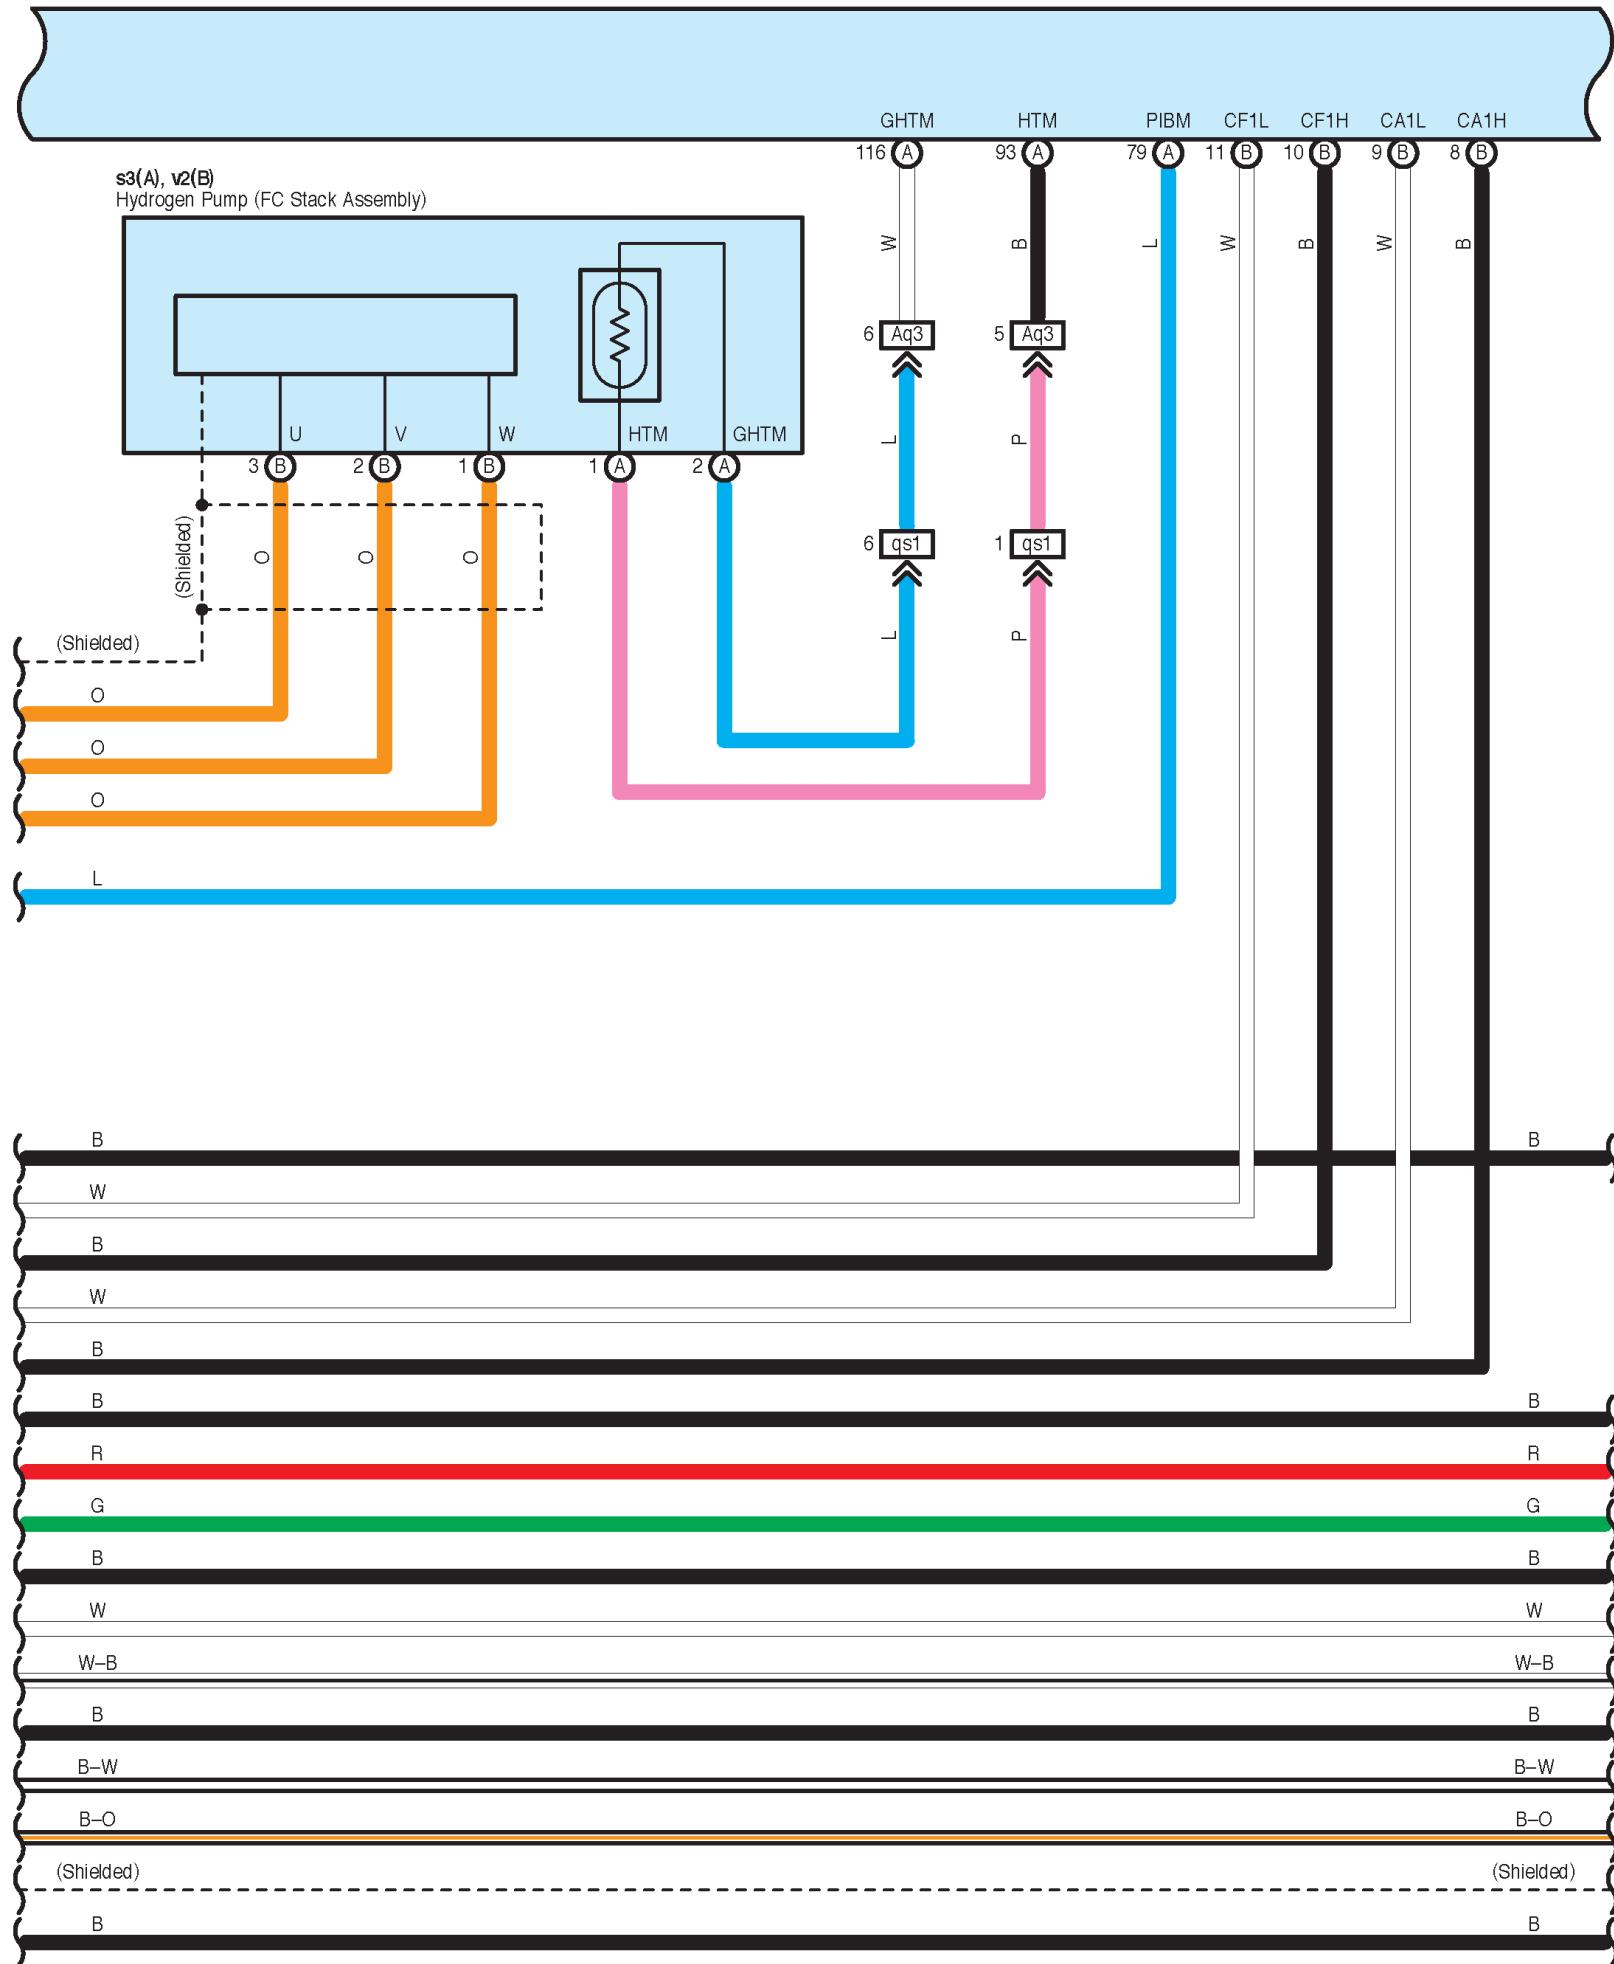

BATT 23(B) RLF2 33(B) RLFC 30(B)

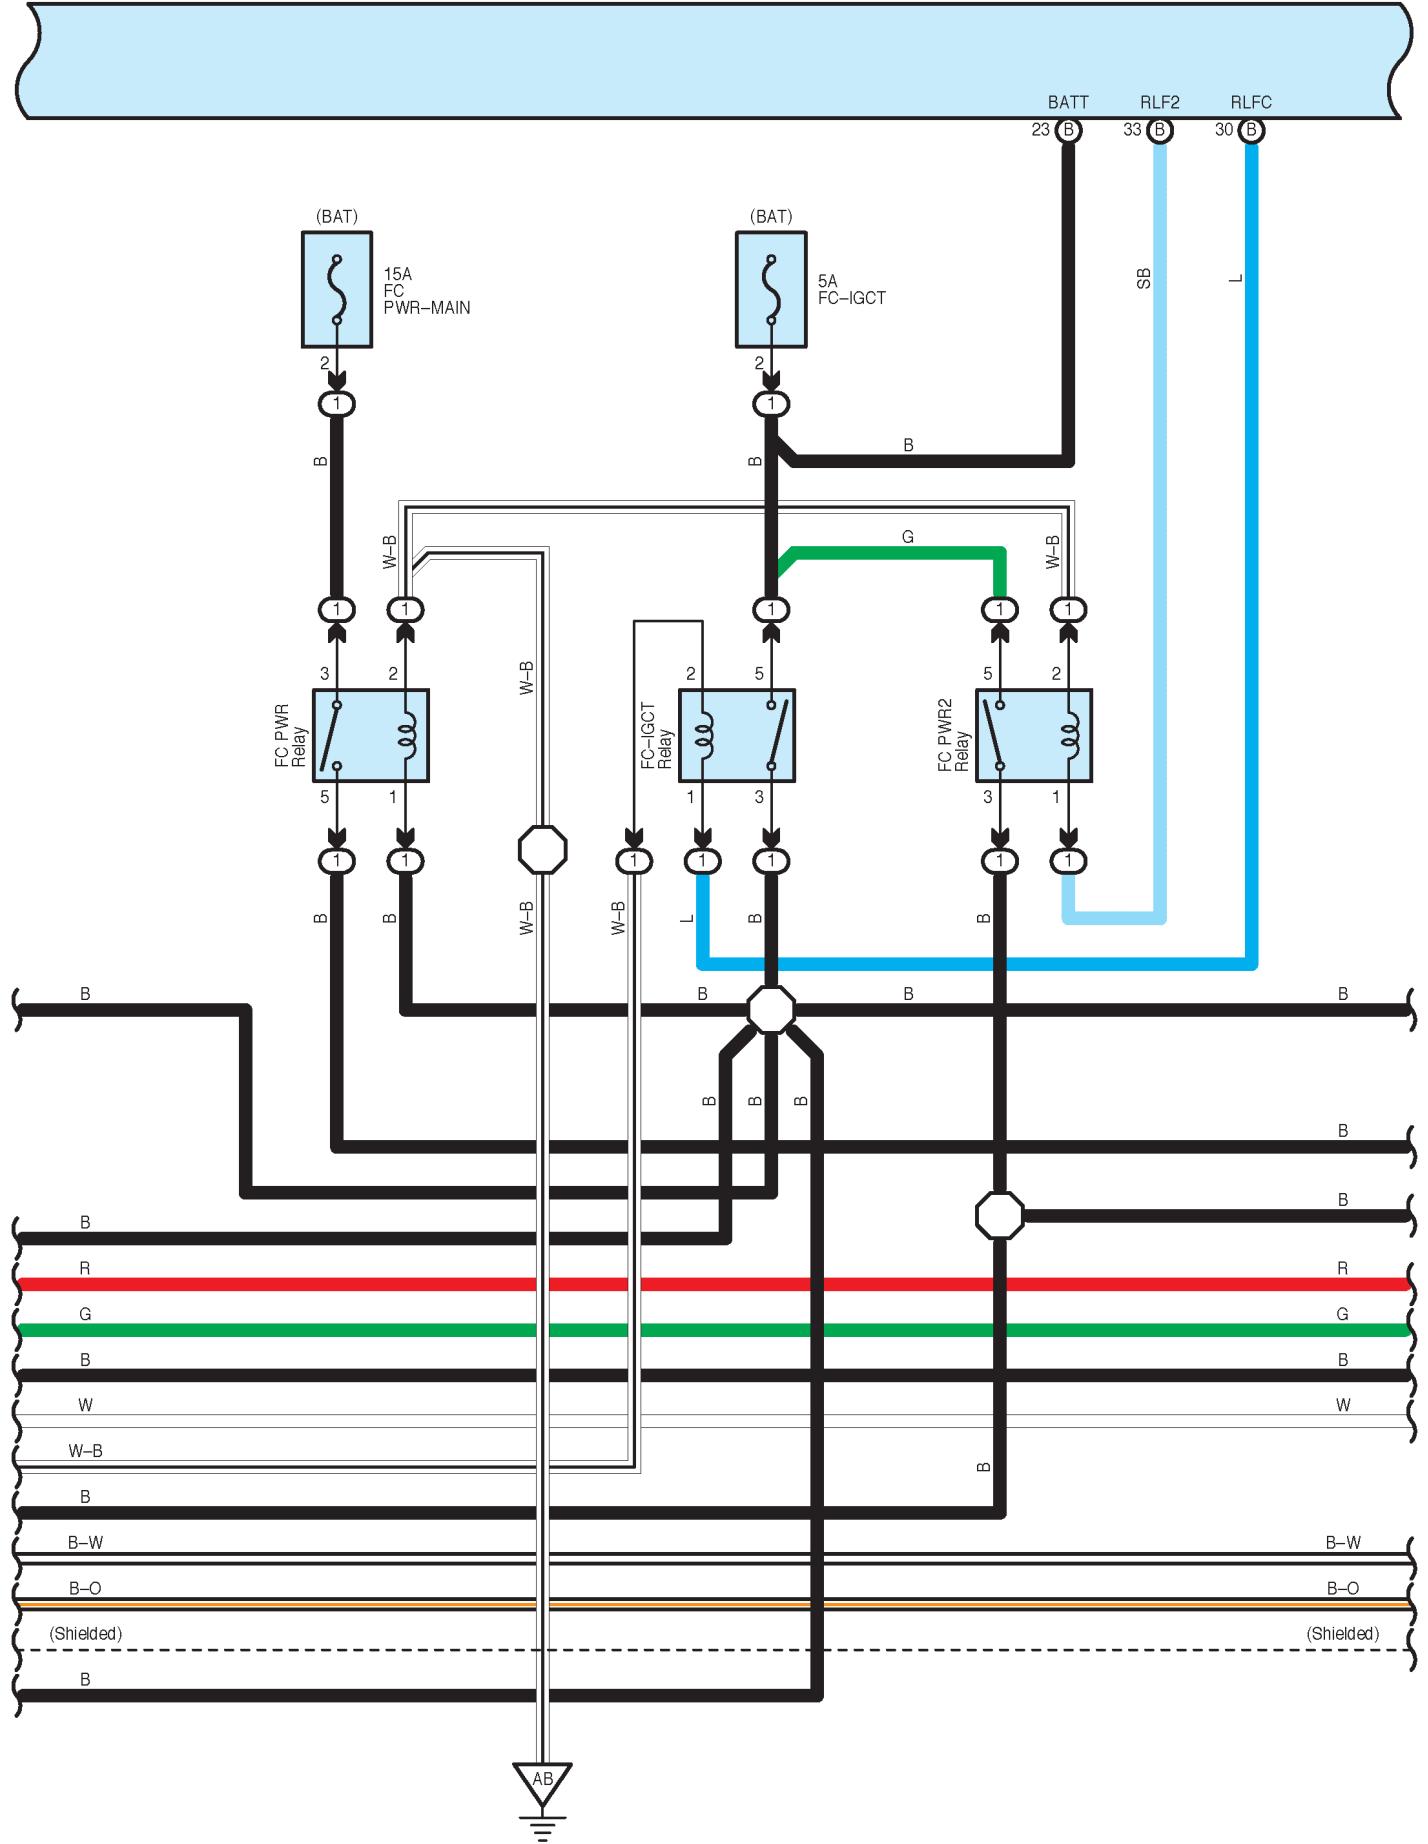

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A47(A), A48(B)
FC Control ECU

IG2 +B2 +B1 +BP1 +BP2 WRB2 WRB1 WRA2 WRA1

43(B) 20(B) 1(B) 107(A) 44(A) 50(B) 31(B) 51(B) 32(B)



7.5A
IG2
NO. 2

2

1

W

W

B

B

B

B


W

L

G

DC

E2
FC Cooling Water Temperature Control Valve

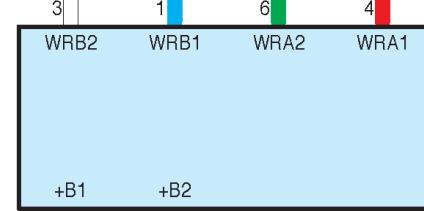

B

B

B

B

V

B

B

B

B

B

B

R

G

B

W

B

R

G

B

W

B-W

B-W

B-O


B-O


(Shielded)

(Shielded)

EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System


A47(A), A48(B)
FC Control ECU

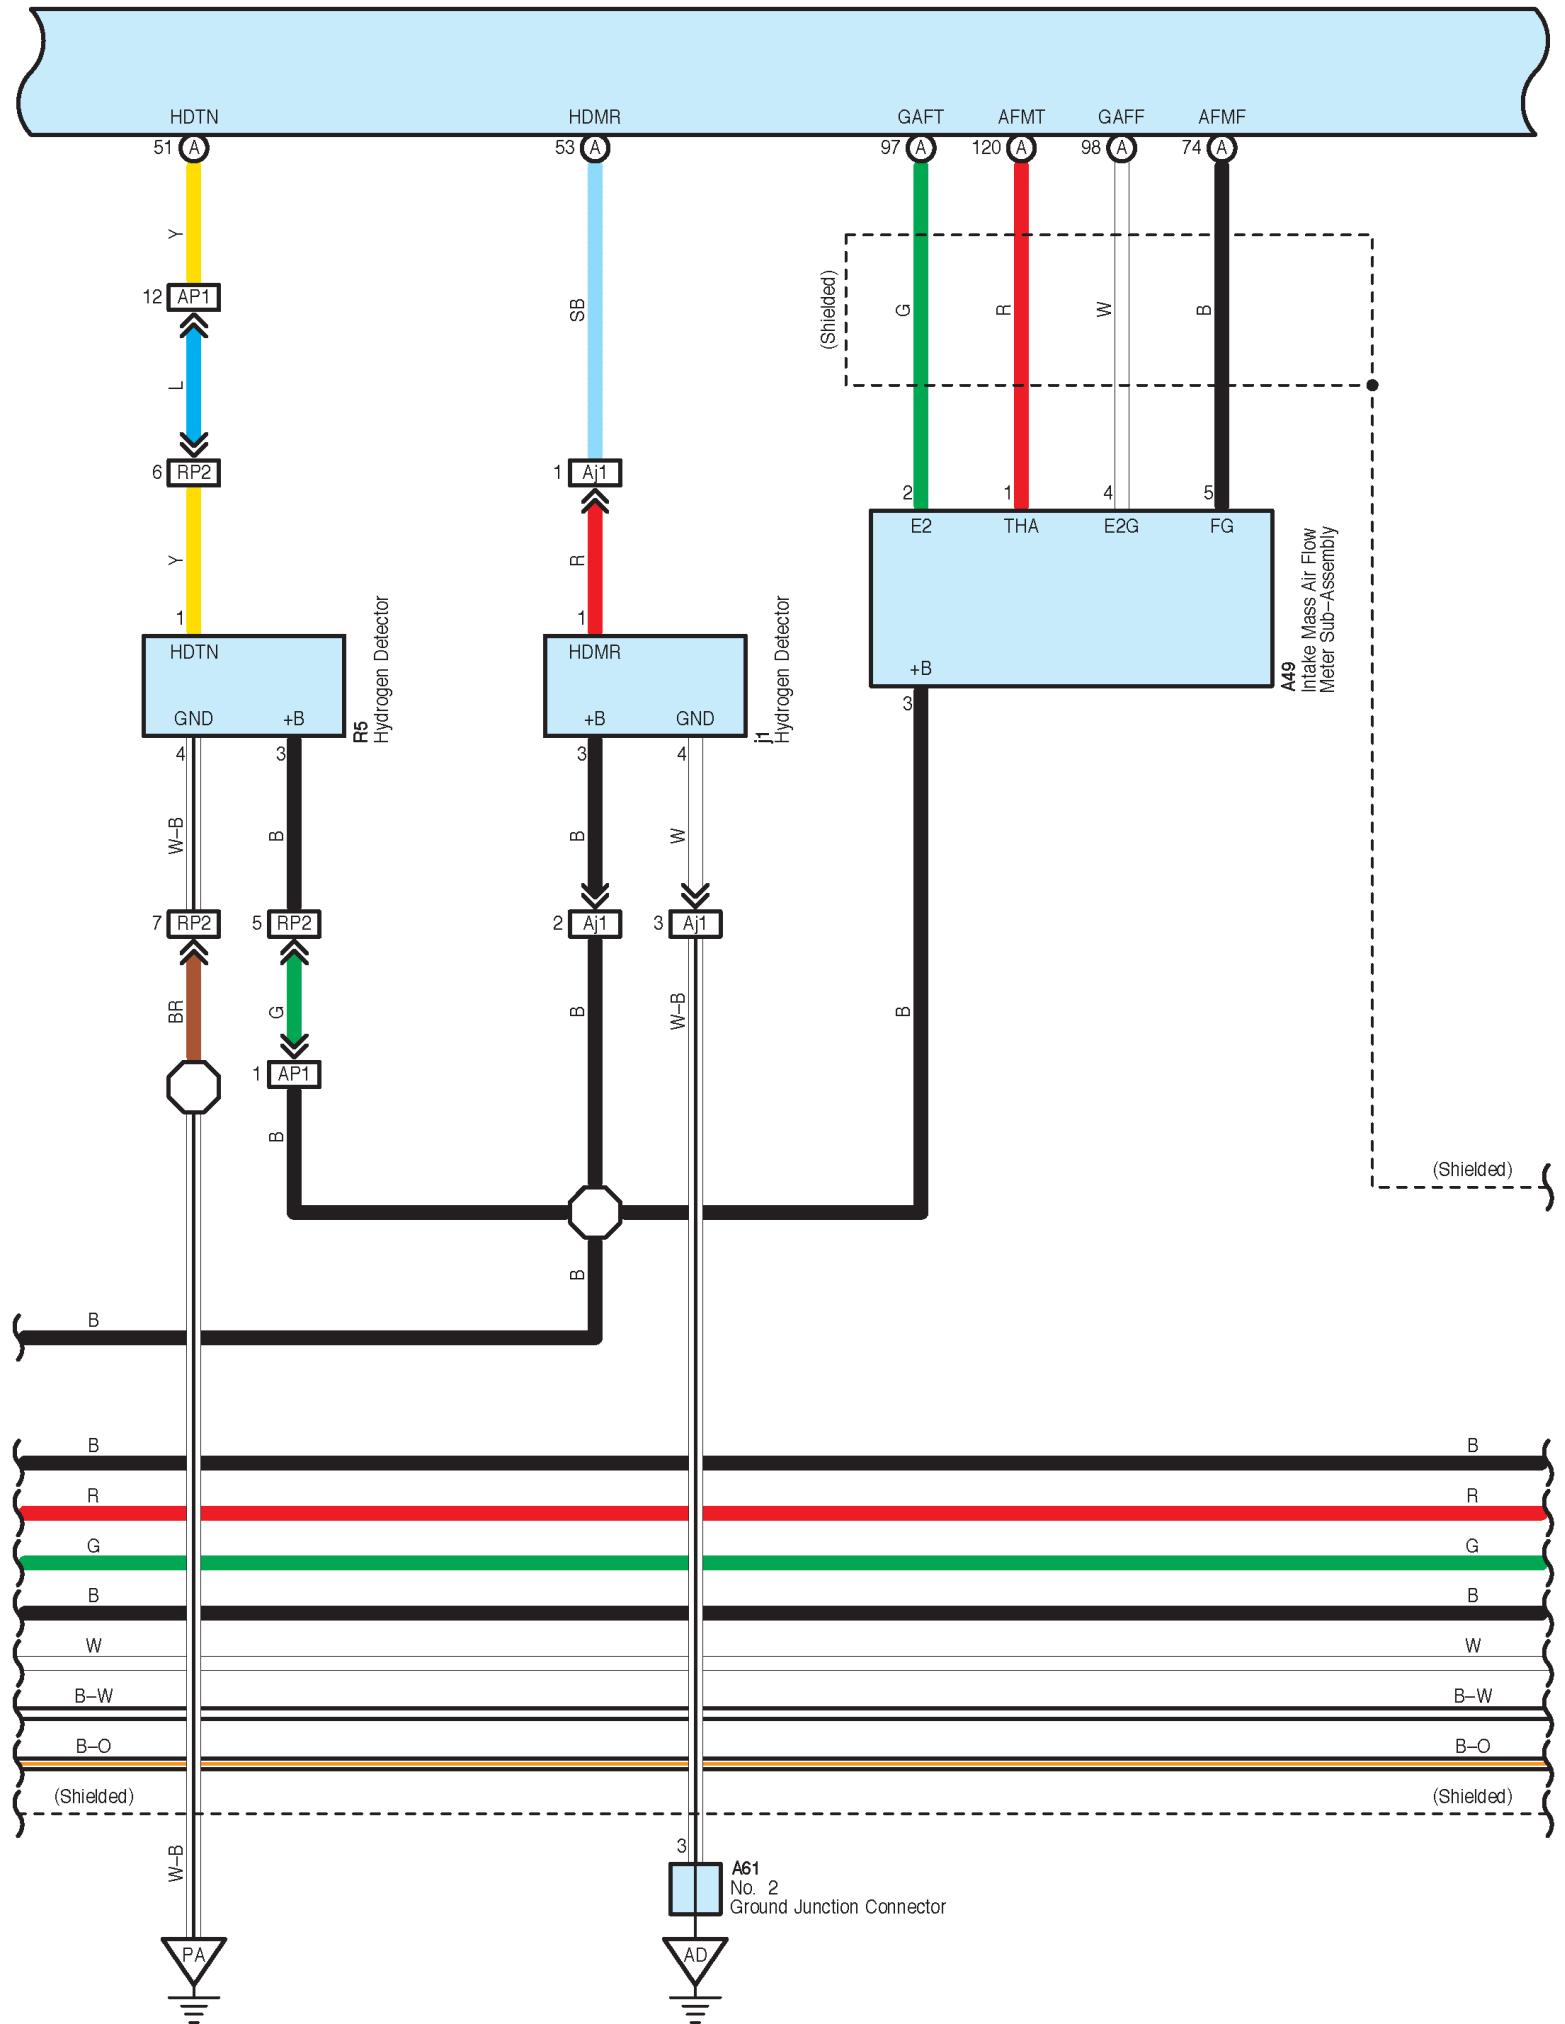

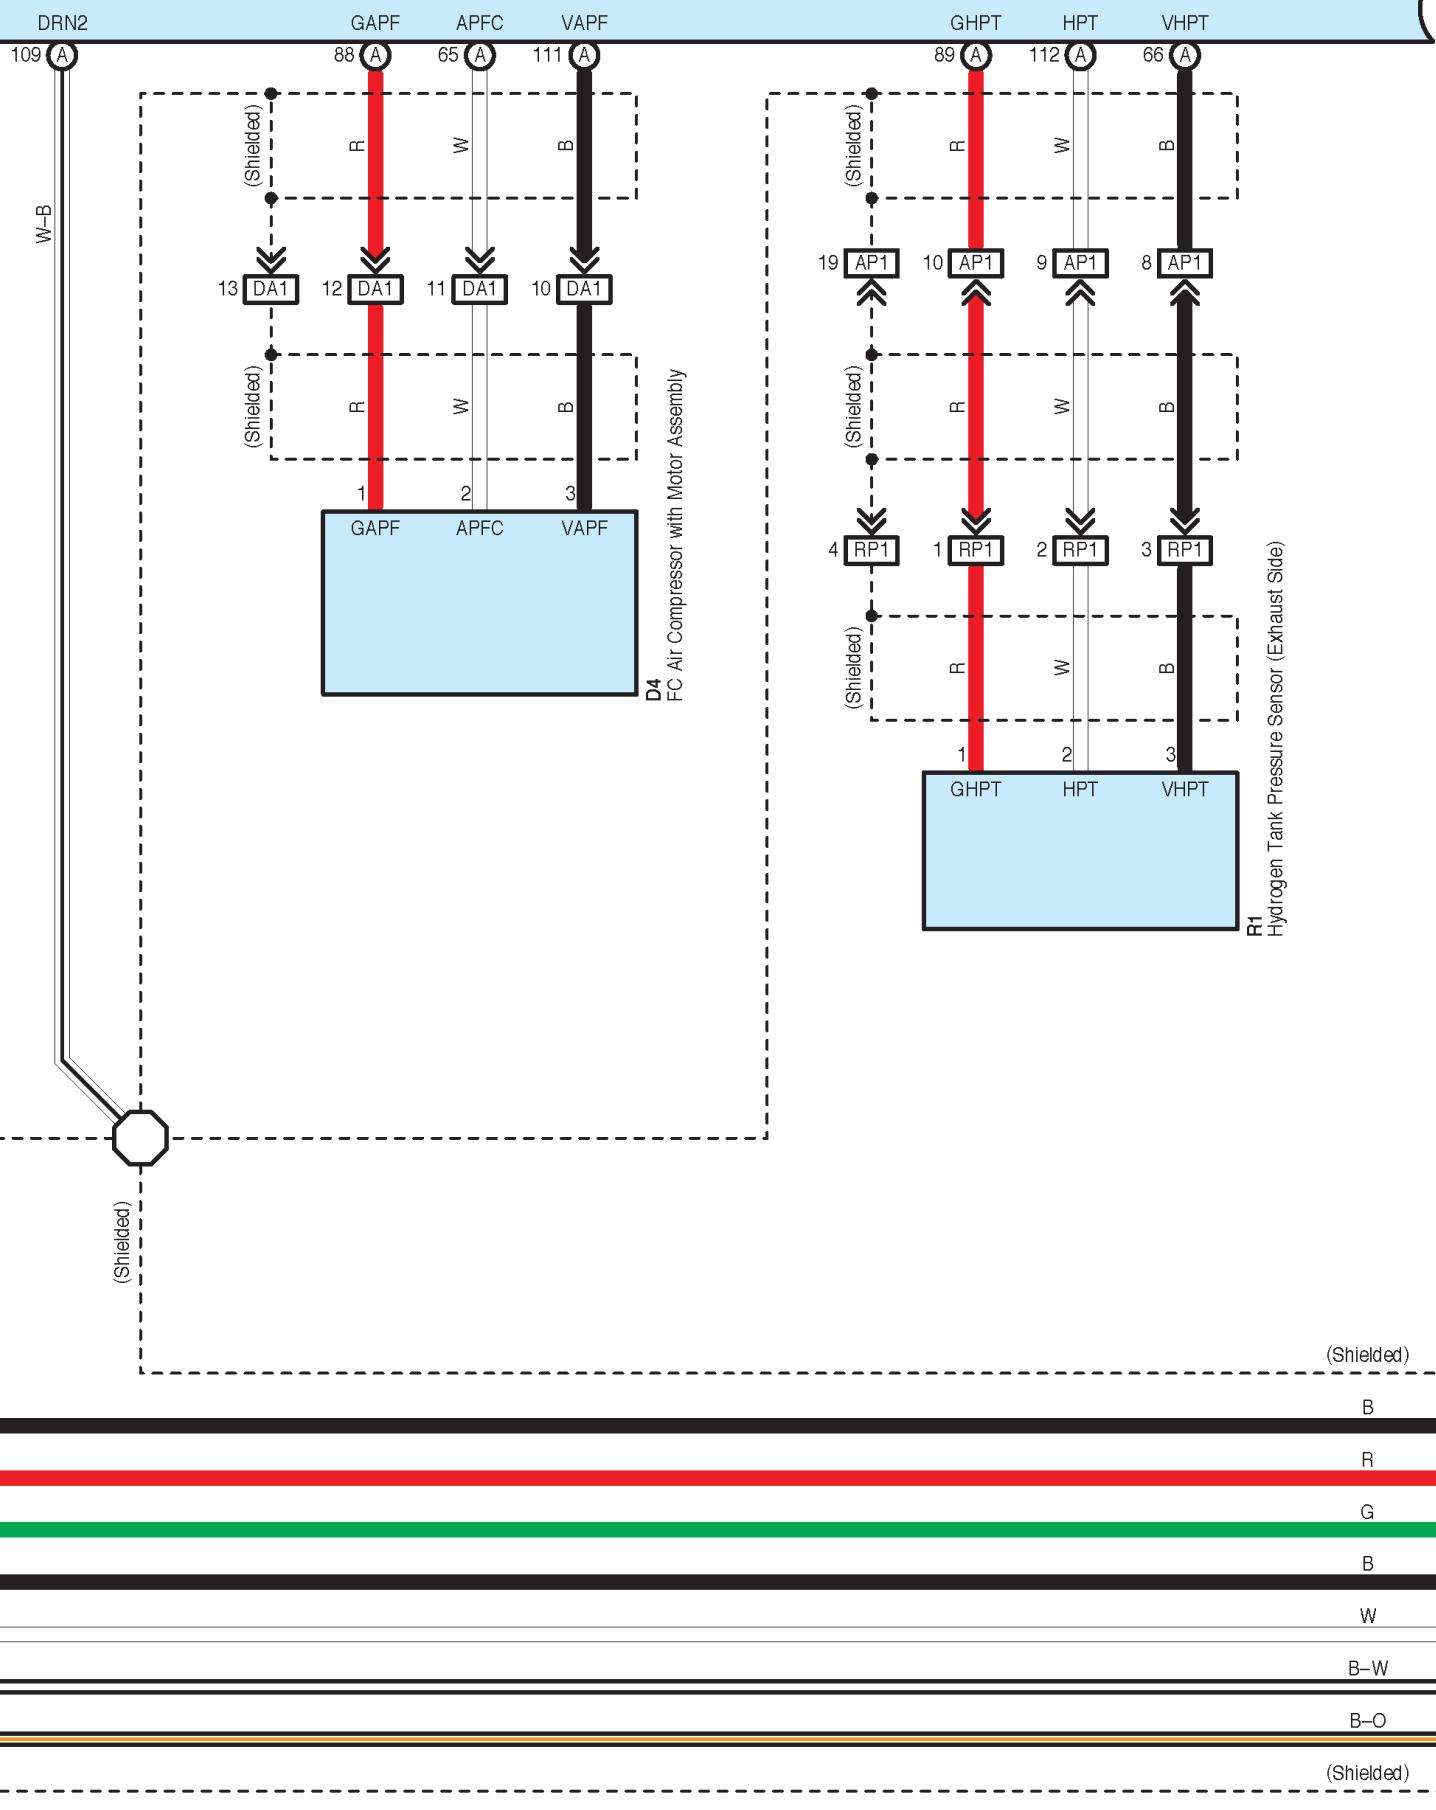


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A47(A), A48(B)
FC Control ECU

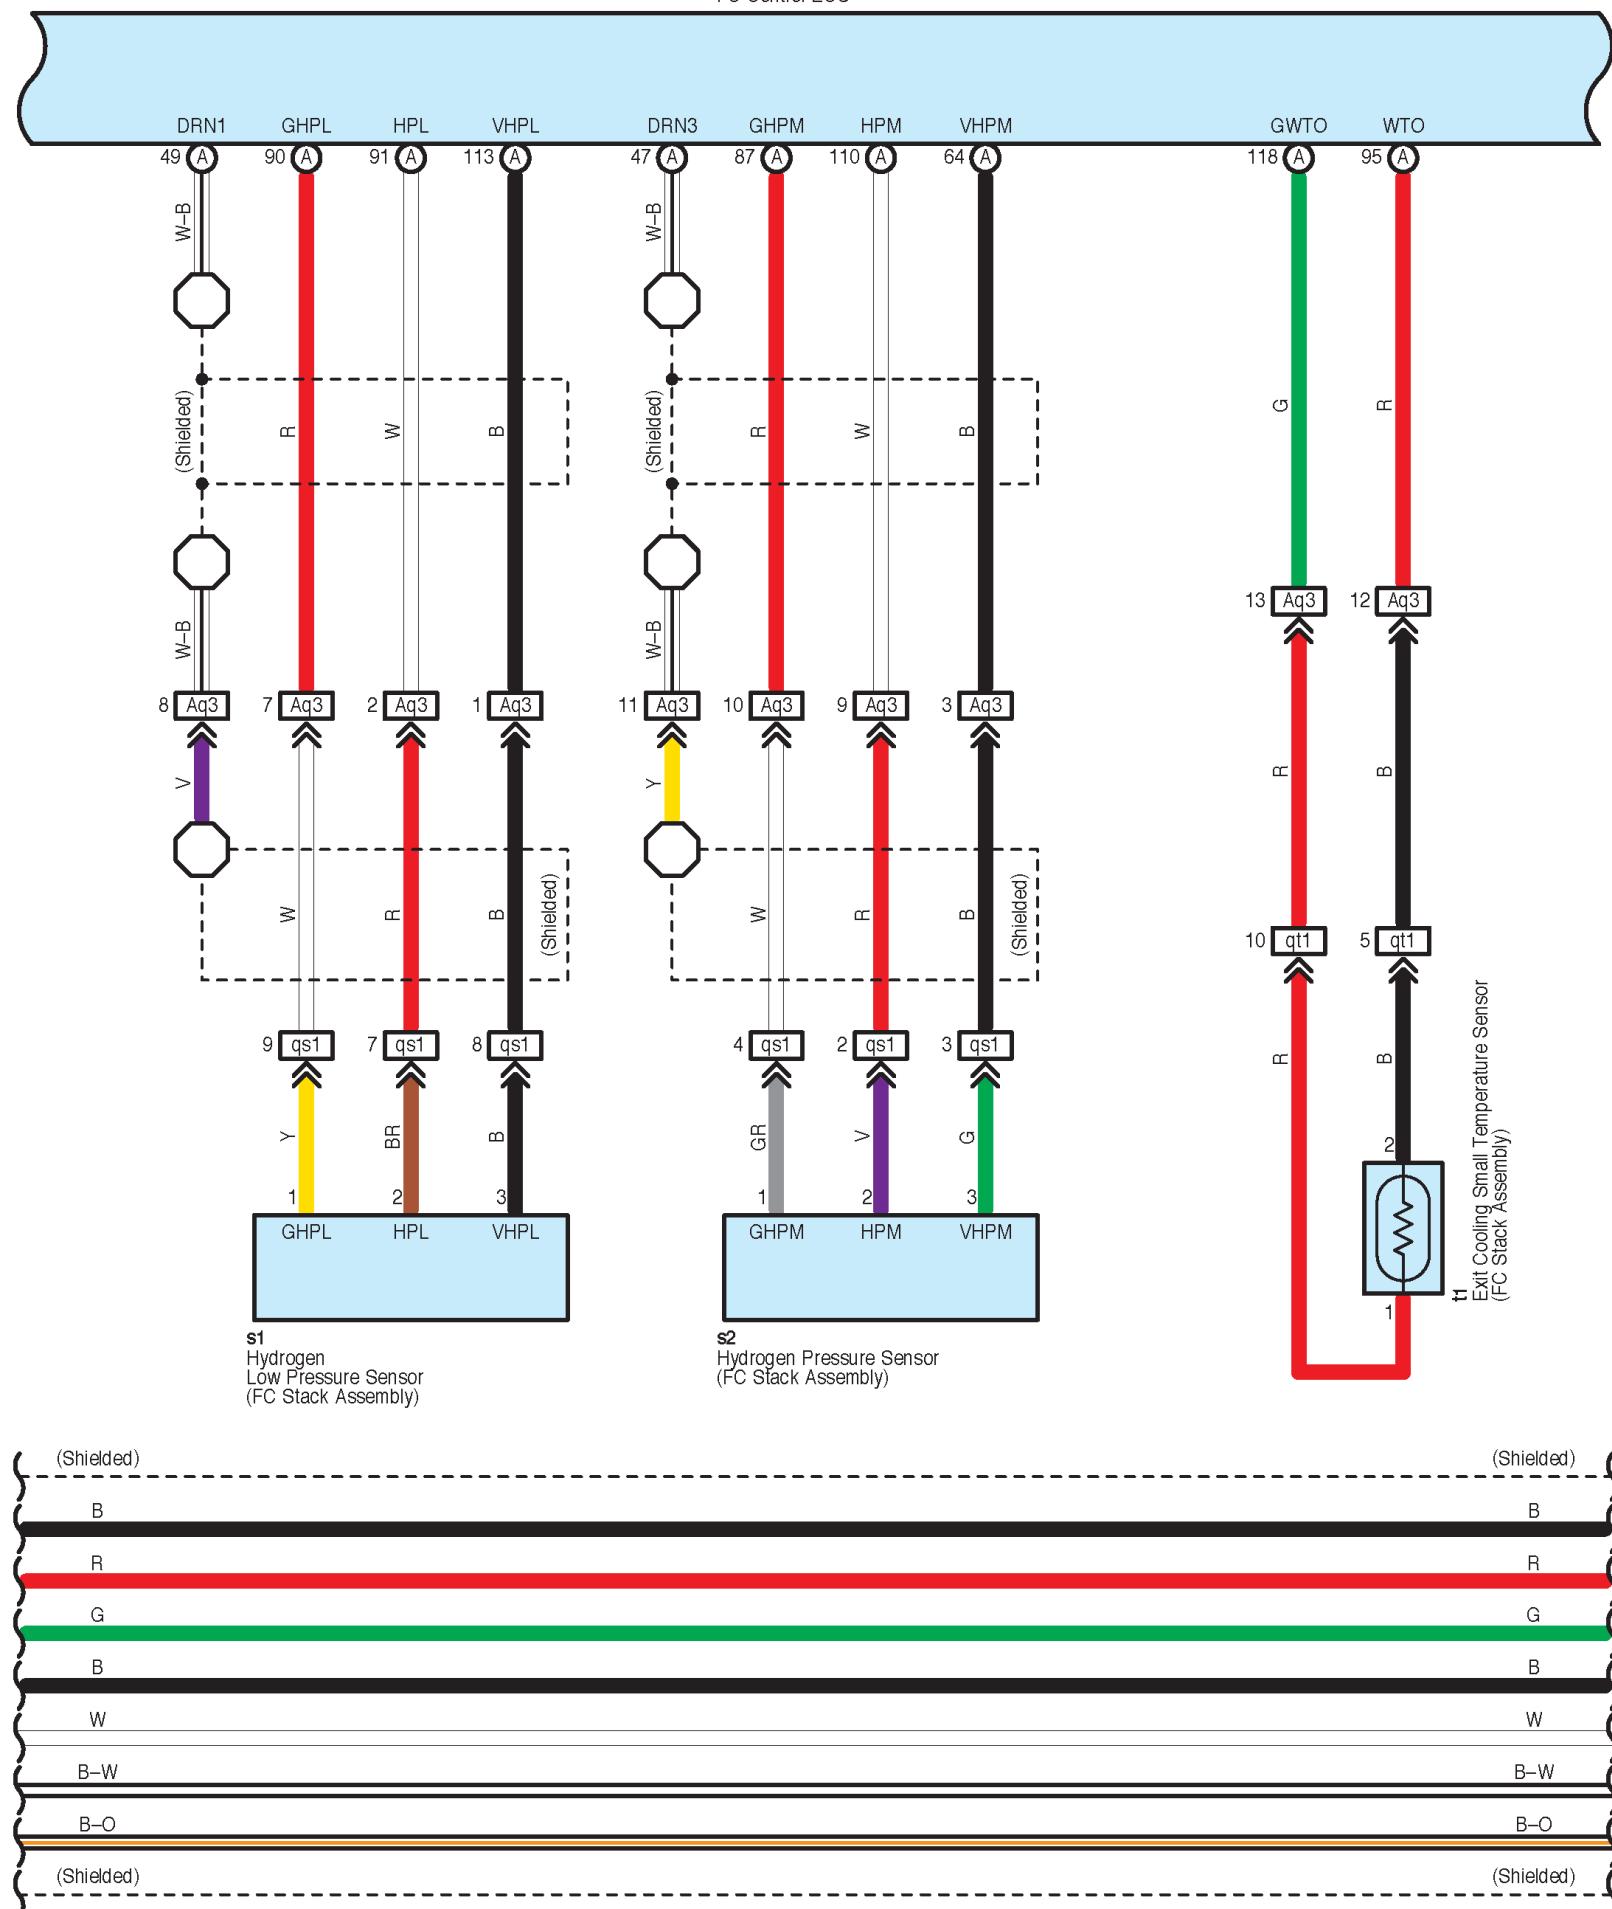


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A47(A), A48(B)
FC Control ECU

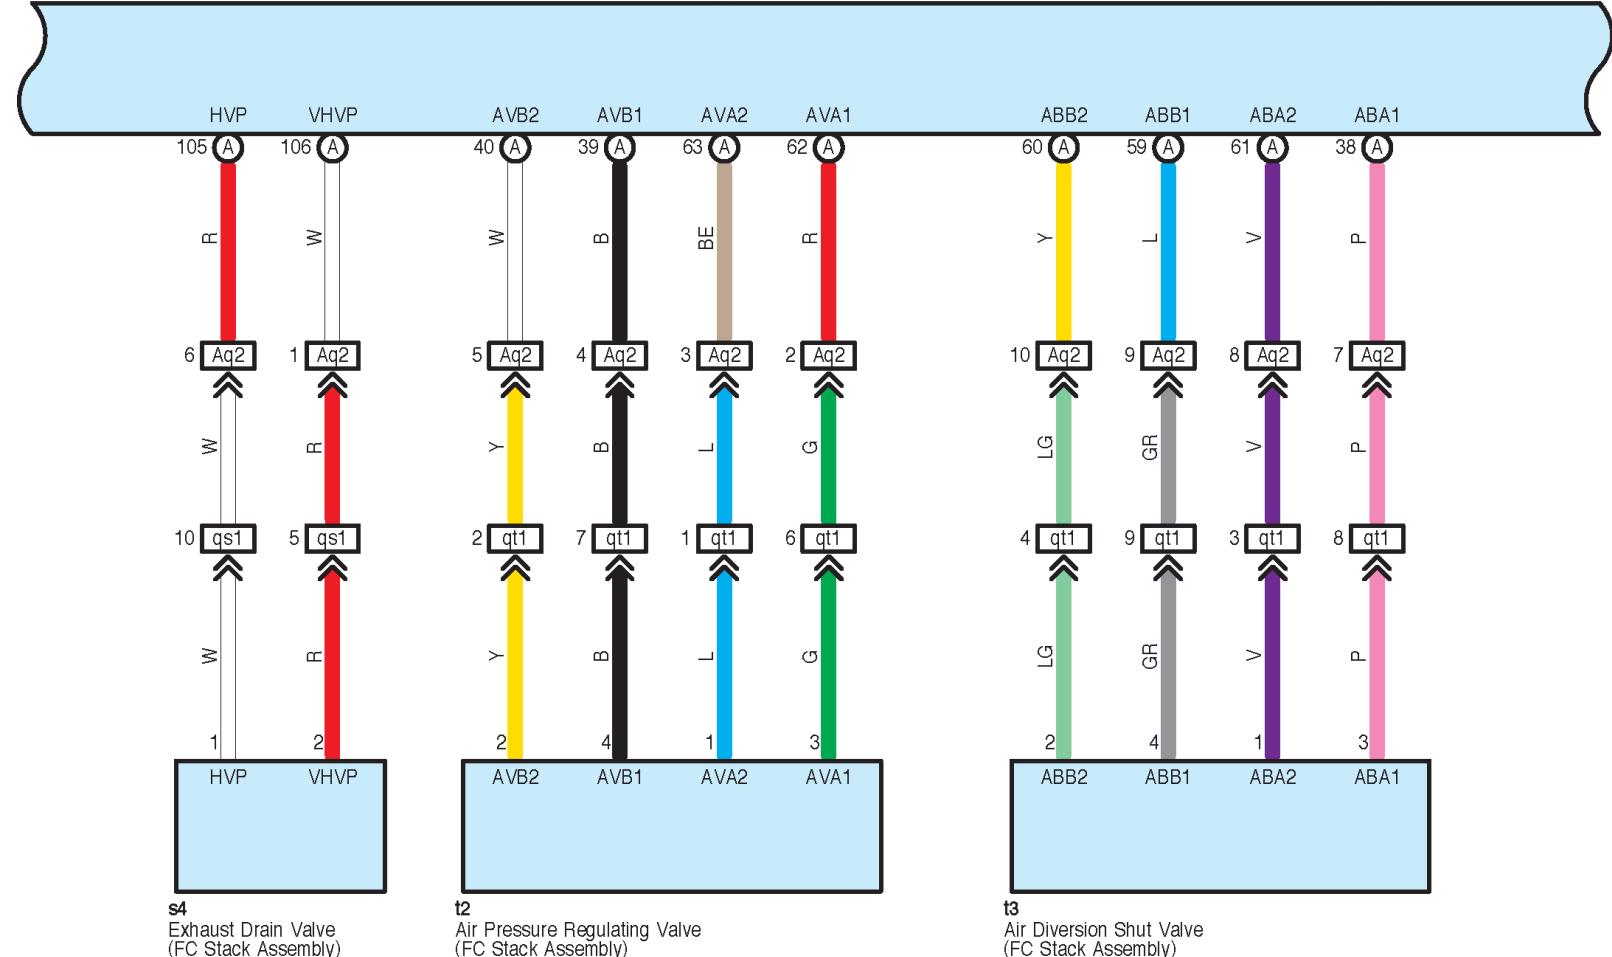


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A47(A), A48(B)
FC Control ECU

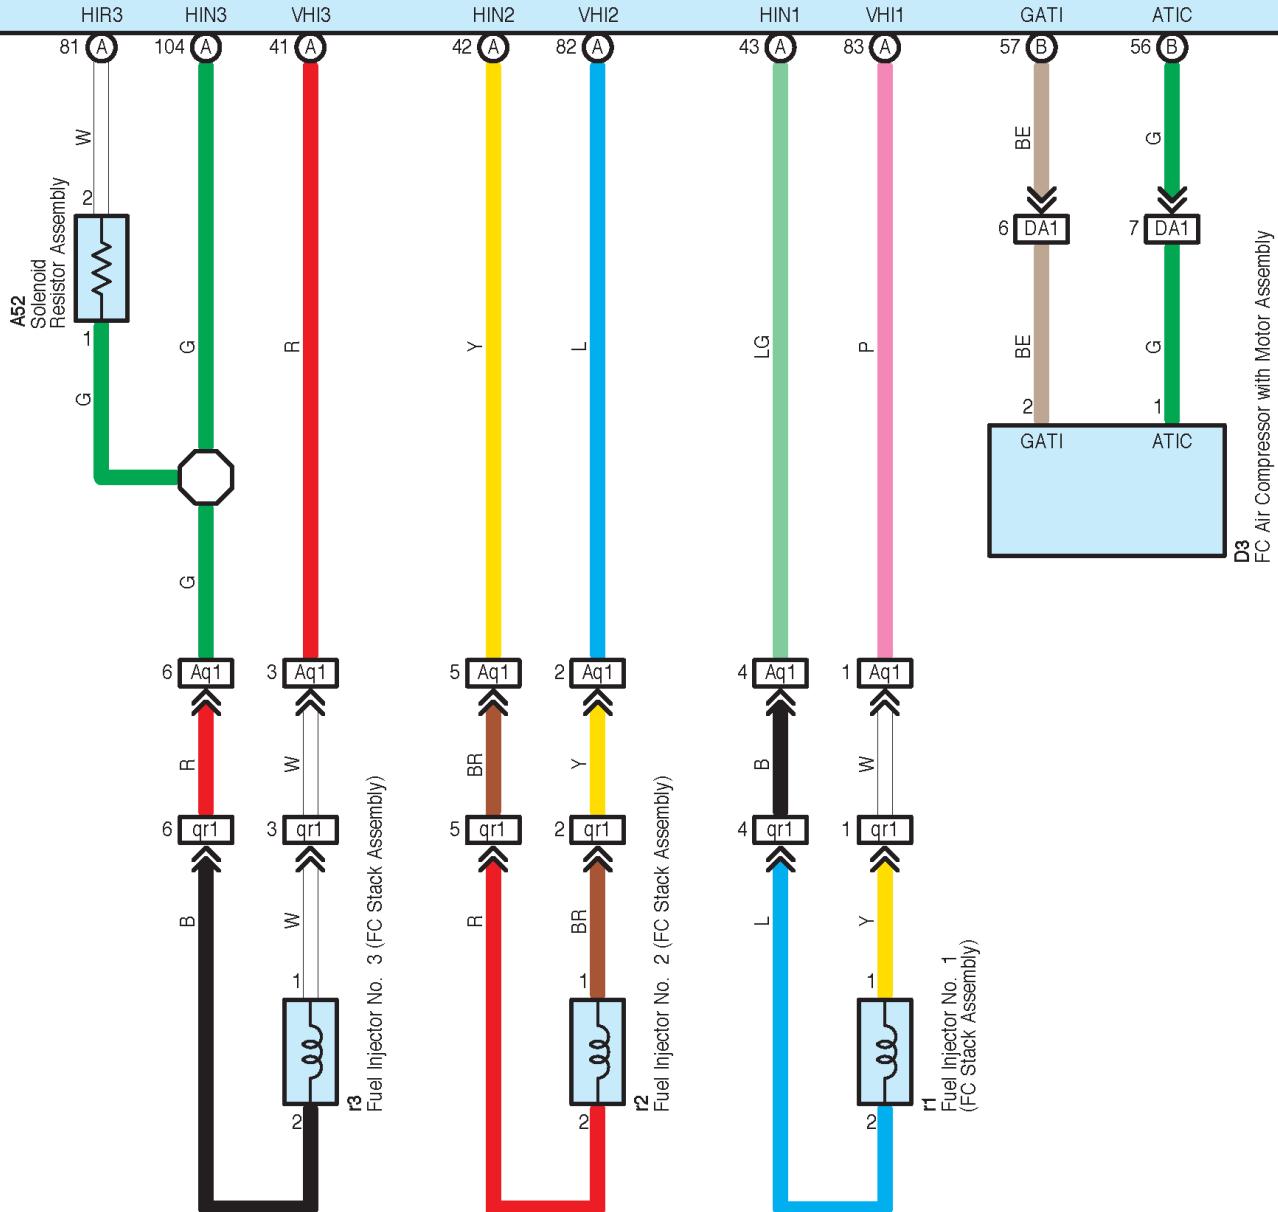


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

A47(A), A48(B)
FC Control ECU

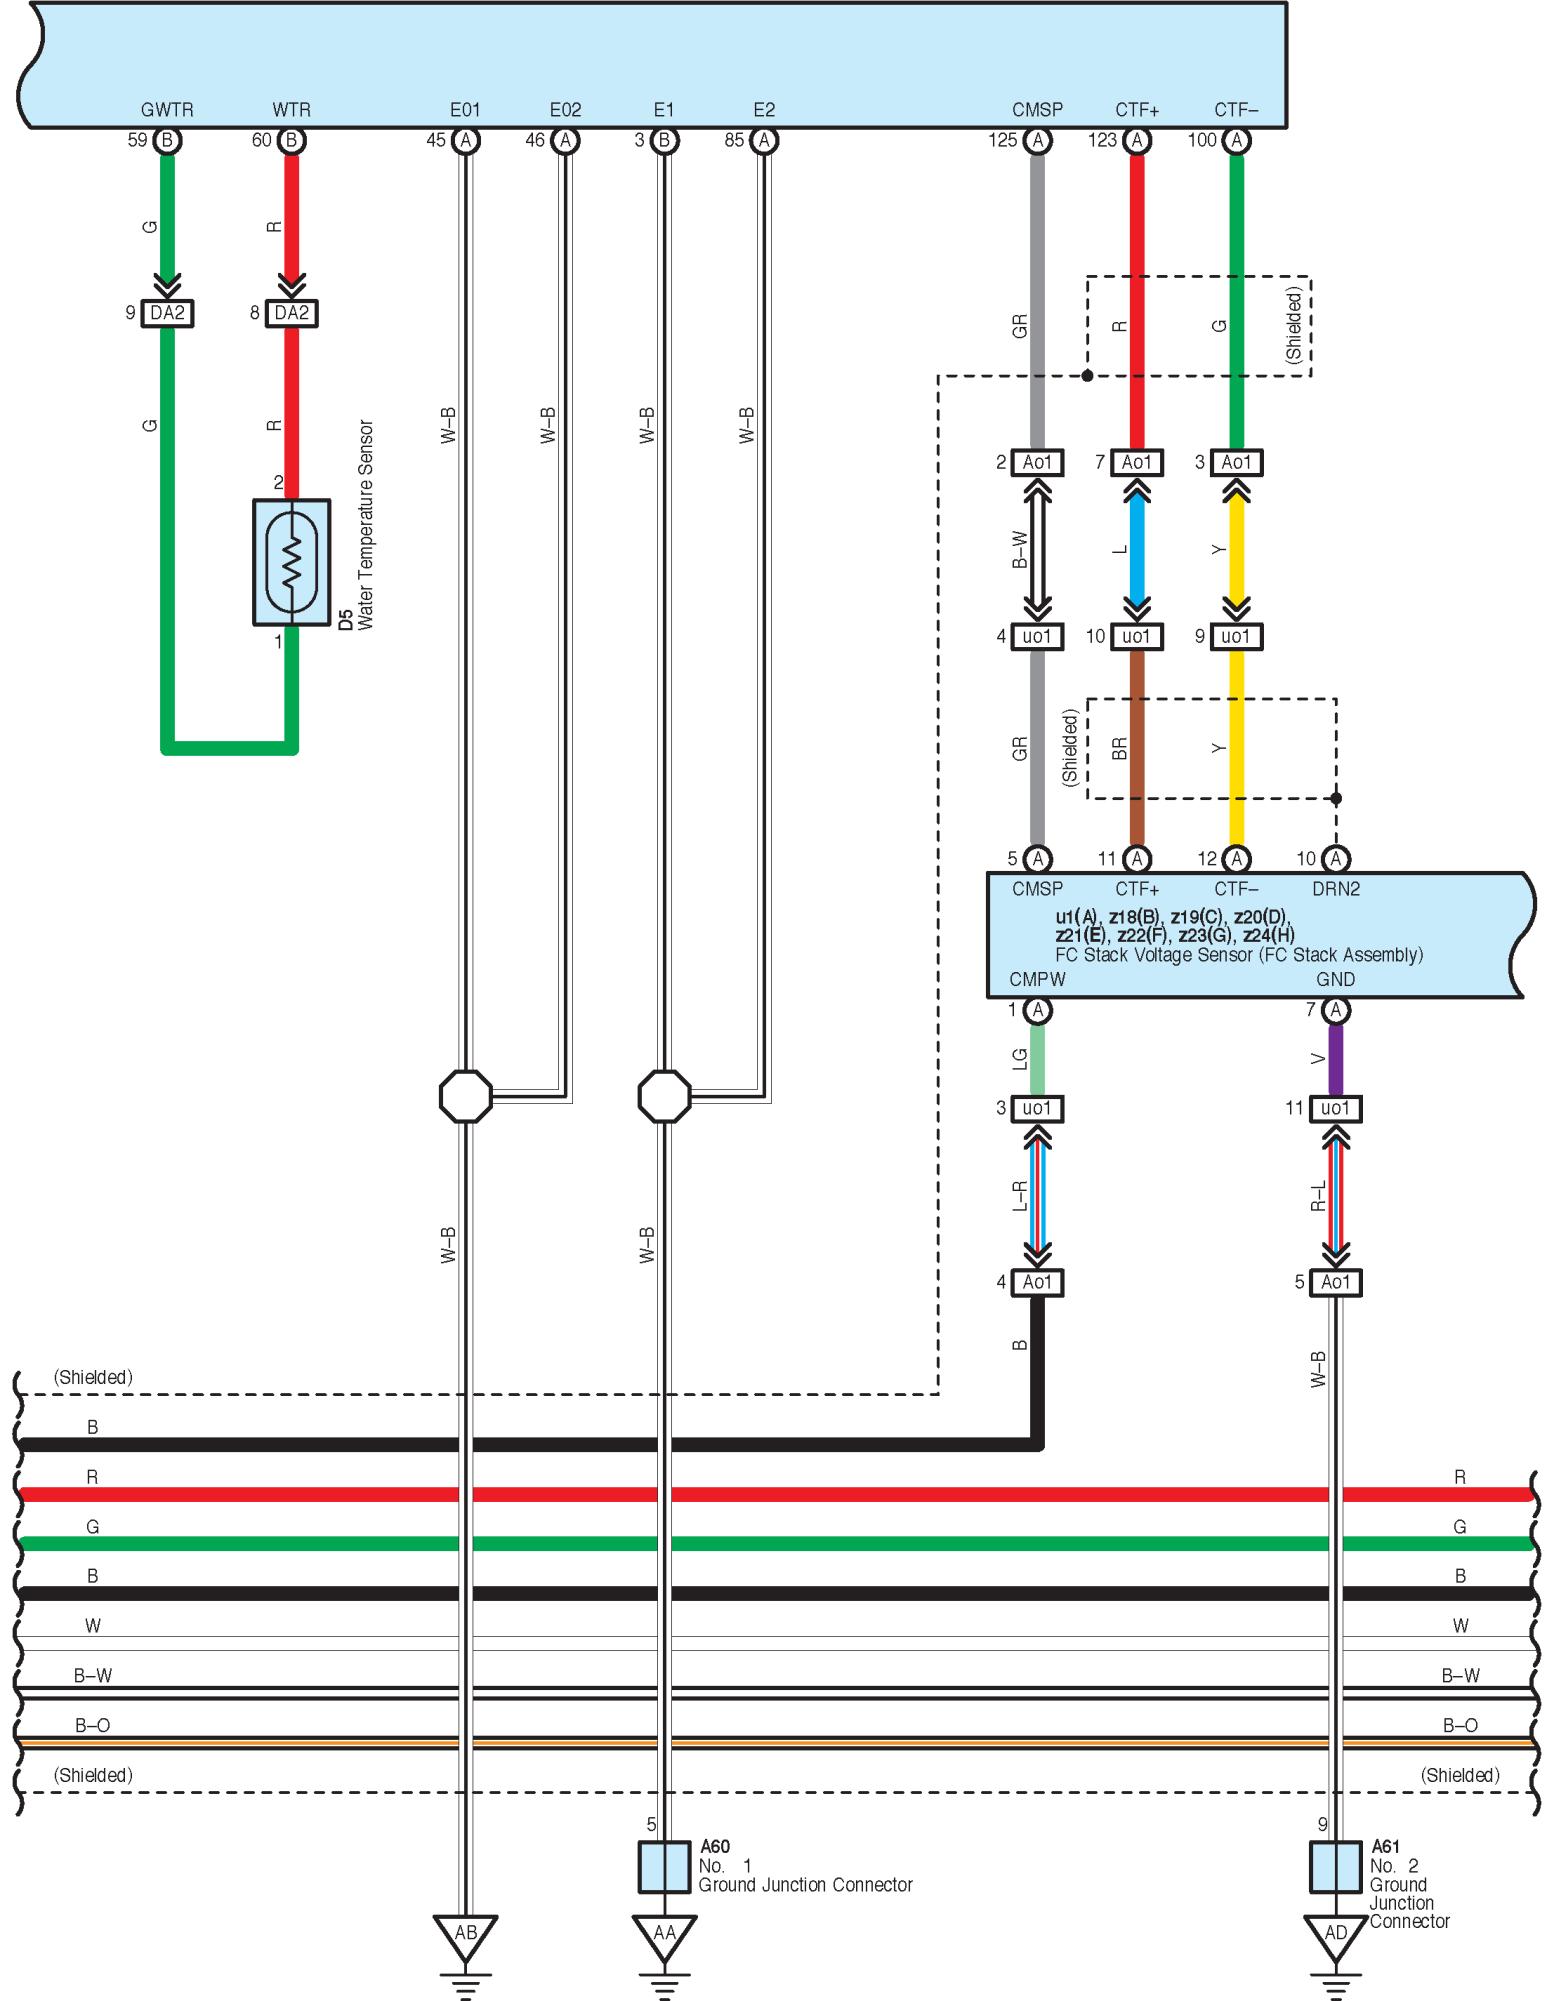


EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
Fuel Cell (FC Stack Assembly)

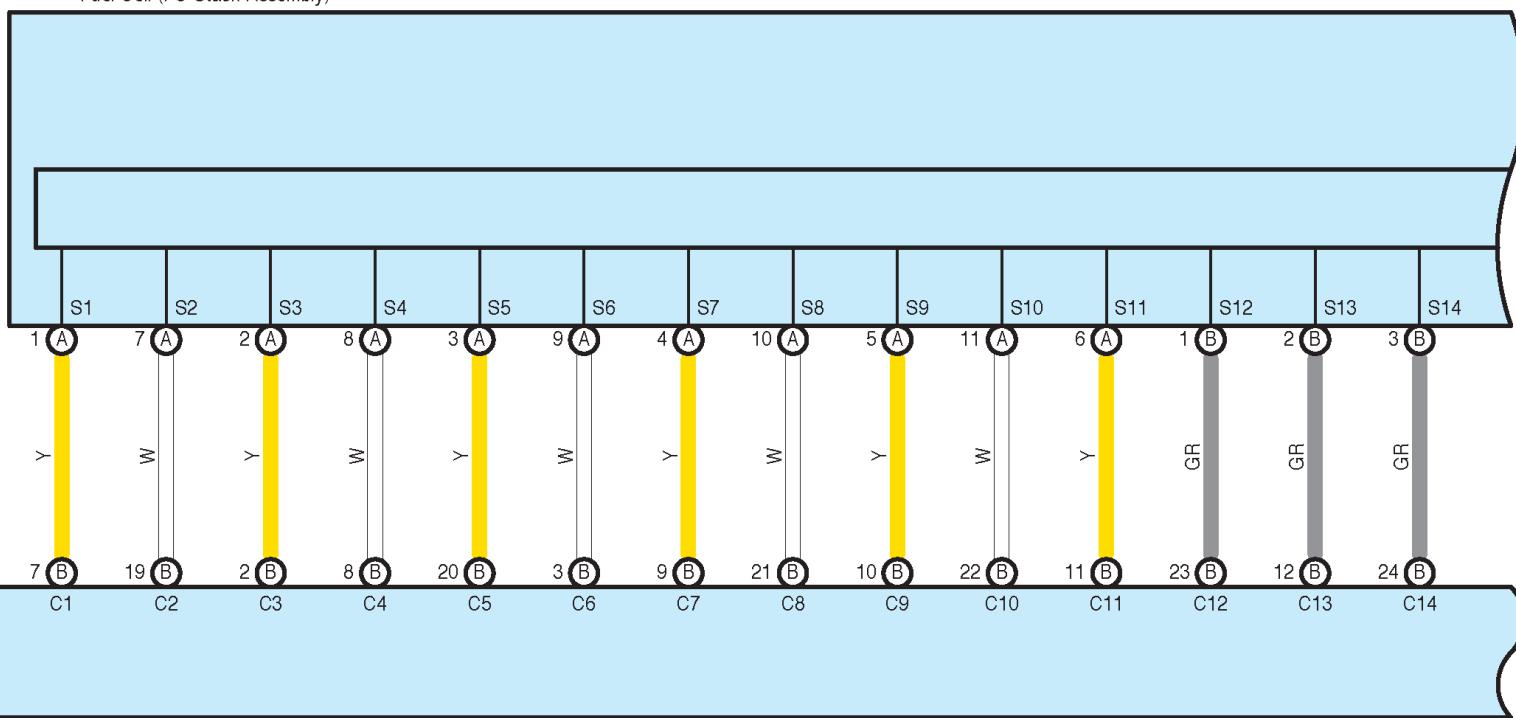


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
FC Stack Voltage Sensor (FC Stack Assembly)

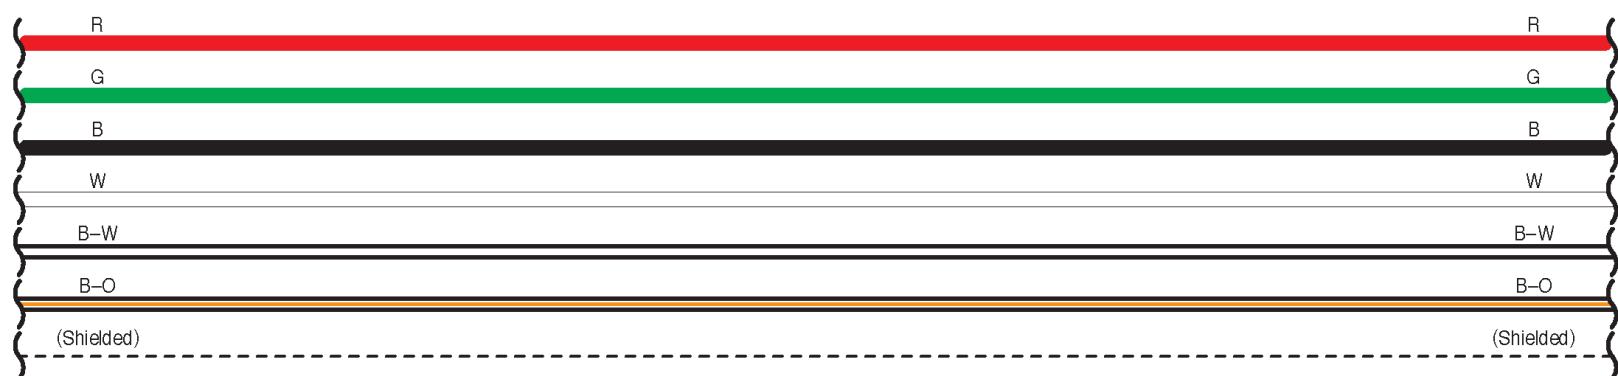



EV Control System, FC Control System, Fuel Lid Opener, Hydrogen Control System, Shift Control System

z25(A), z26(B), z27(C), z28(D), z29(E), z30(F), z31(G), z32(H), z33(I), z34(J), z35(K), z36(L), z37(M), z38(N), z39(O), z40(P),
 z41(Q), z42(R), z43(S), z44(T), z45(U), z46(V), z47(W), z48(X), z49(Y), z50(Z), z51(a), z52(b), z53(c), z54(d), z55(e)
 Fuel Cell (FC Stack Assembly)

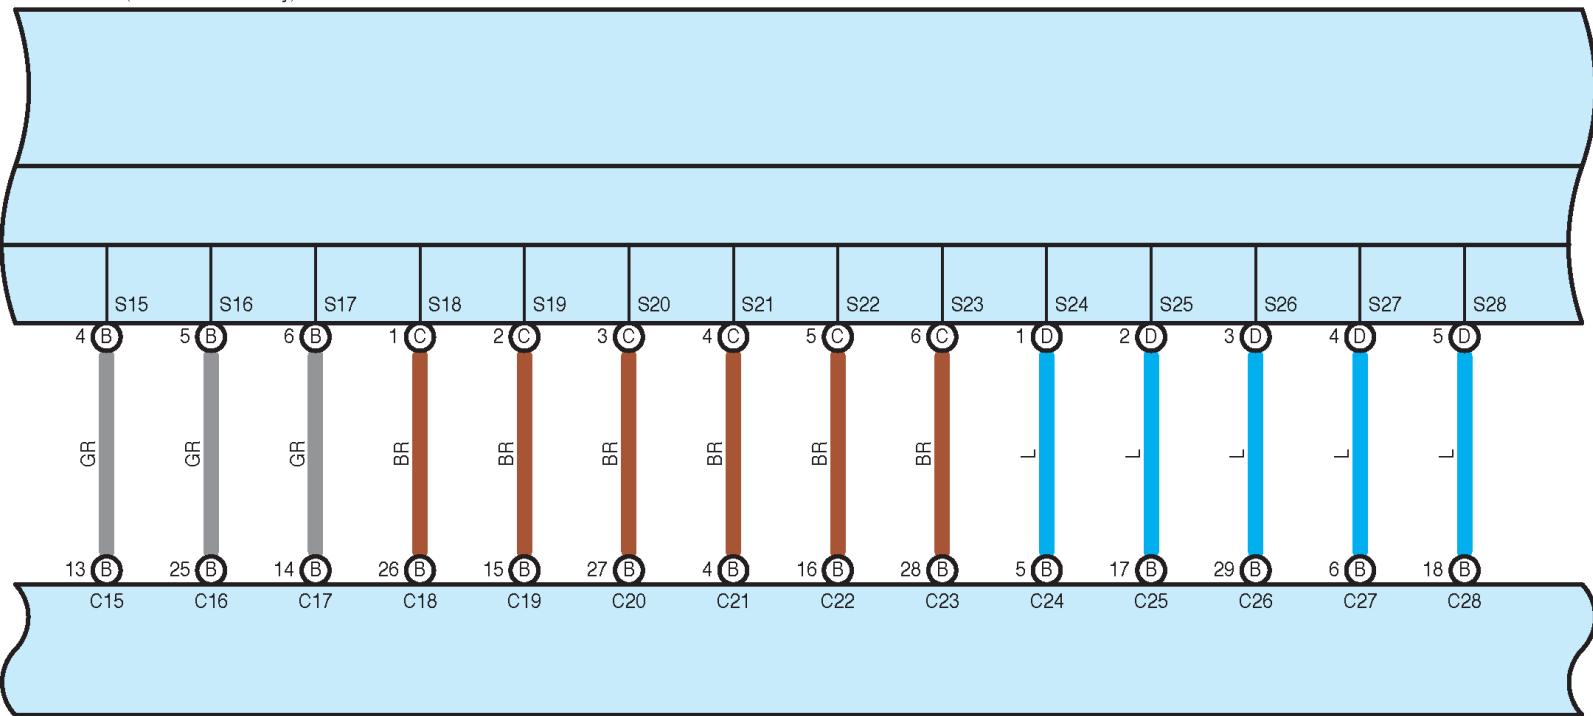


u1(A), z18(B), z19(C), z20(D), z21(E), z22(F), z23(G), z24(H)
 FC Stack Voltage Sensor (FC Stack Assembly)

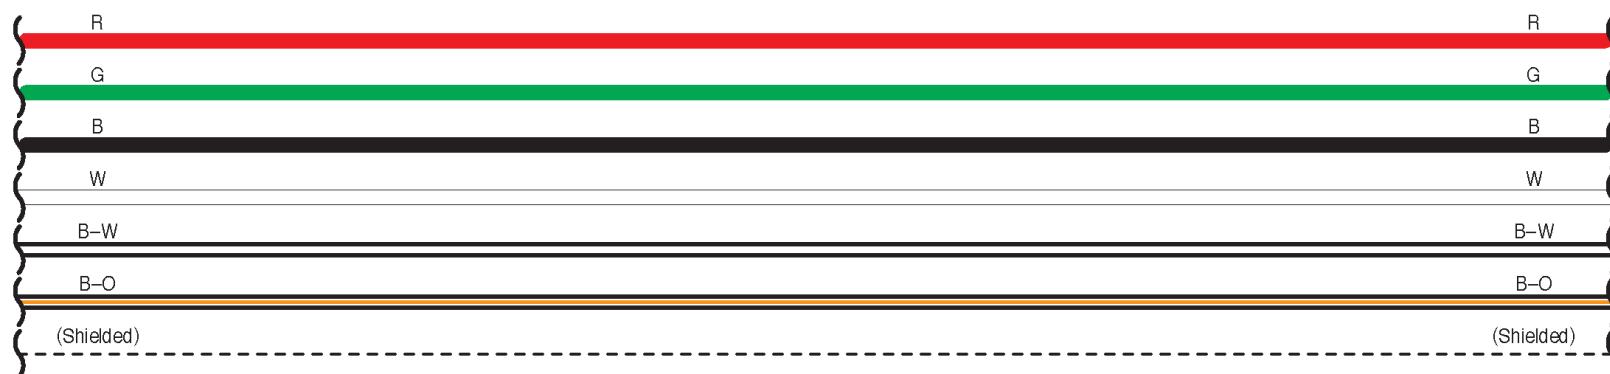

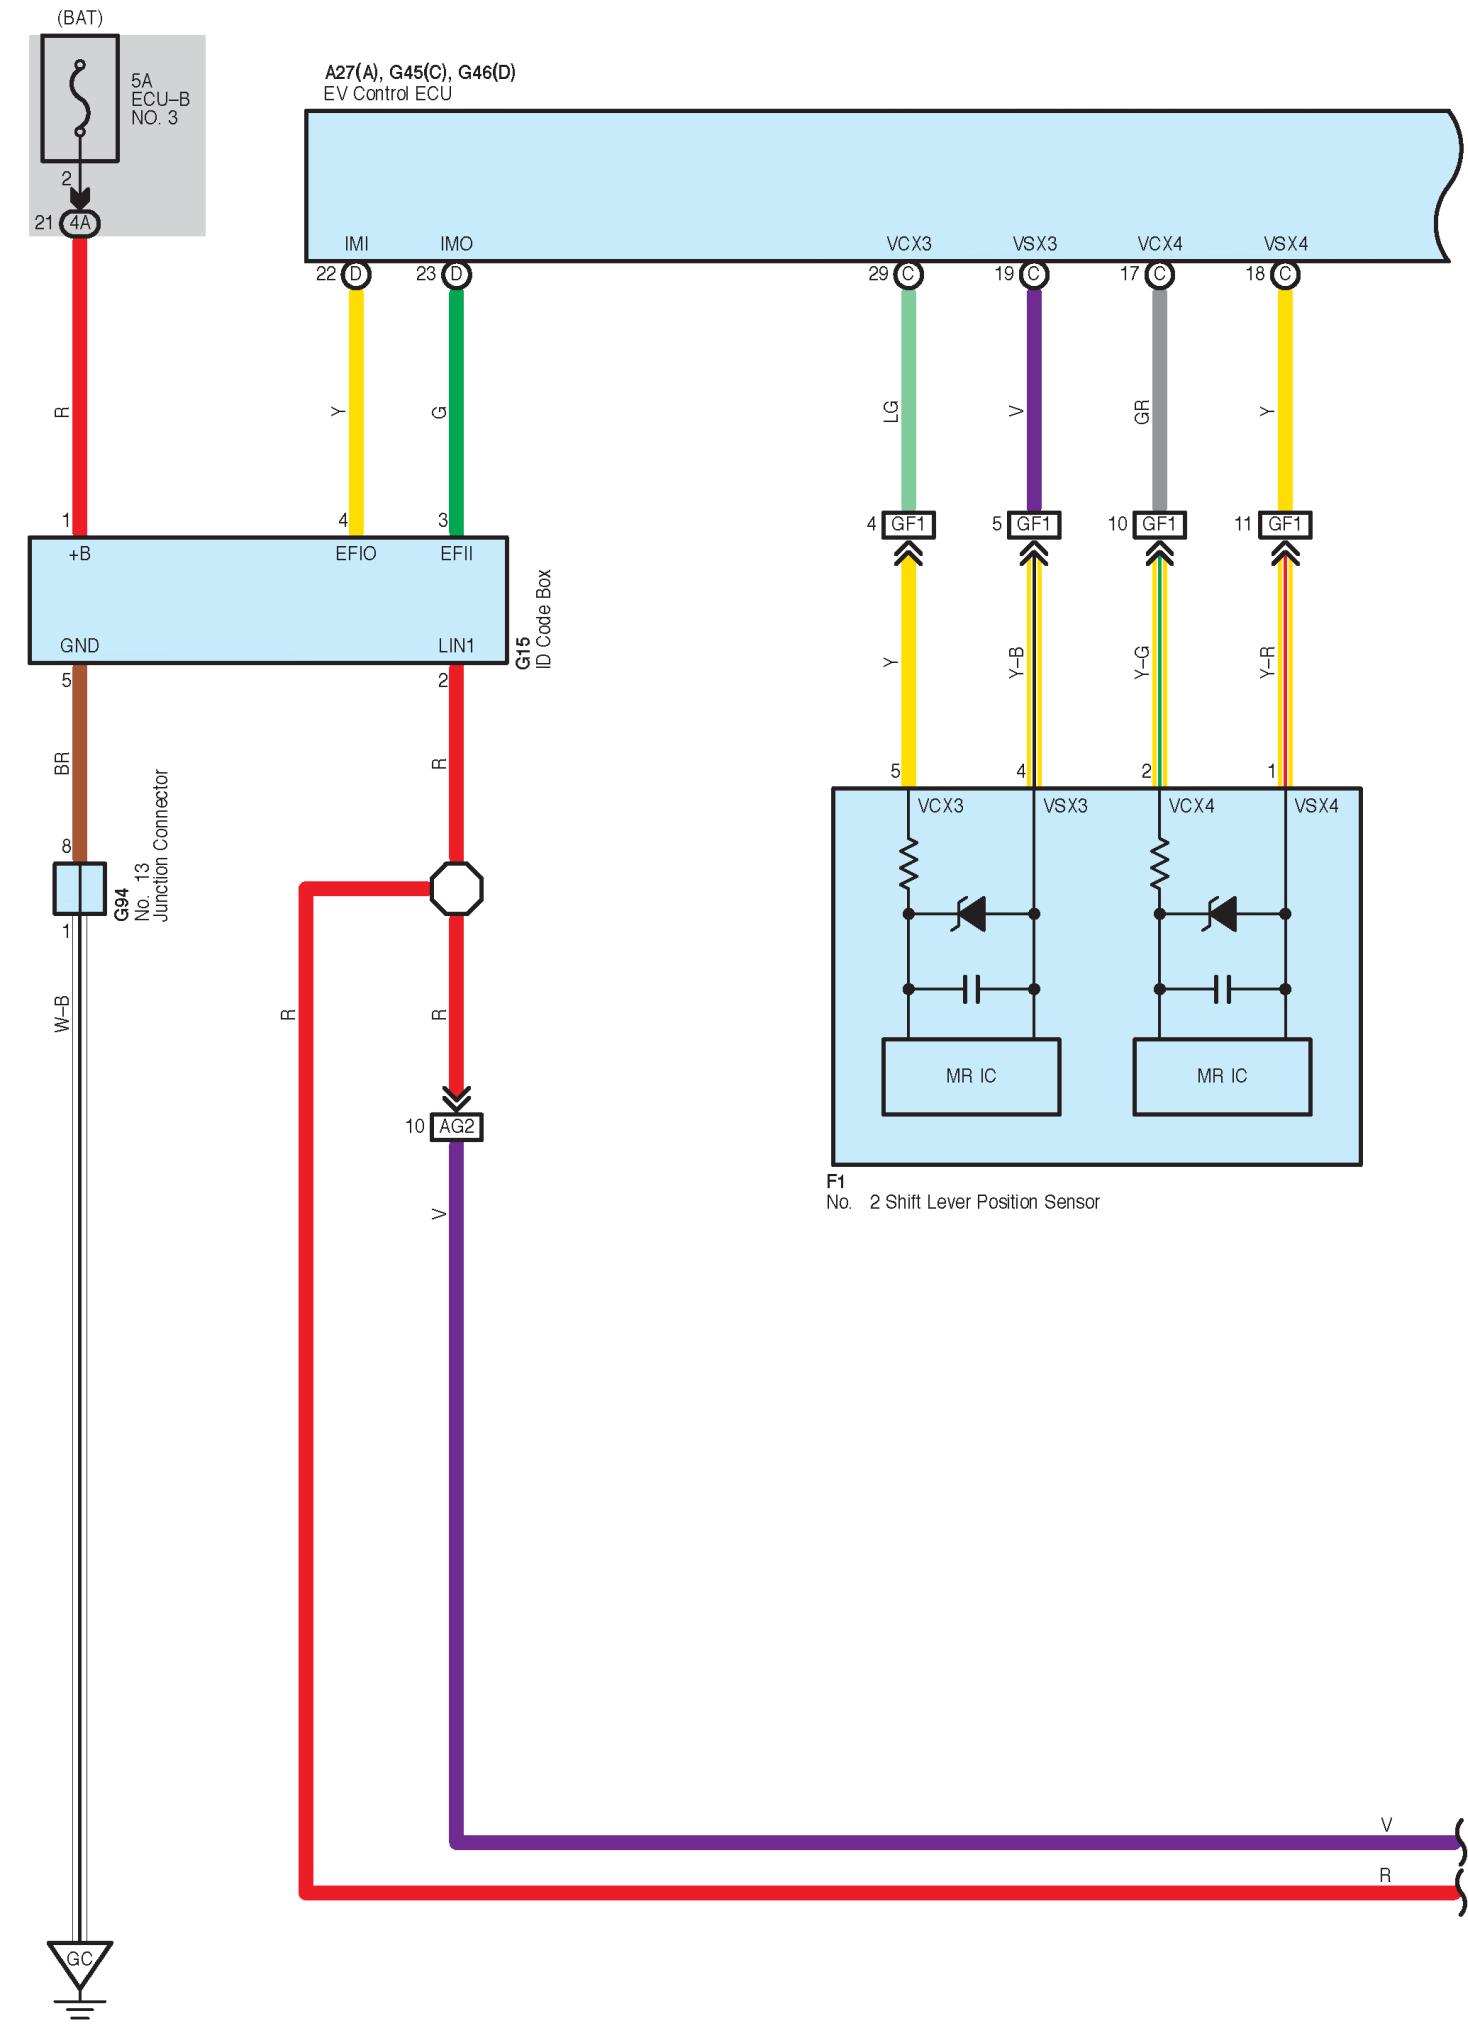


A27(A), G45(C), G46(D)
EV Control ECU

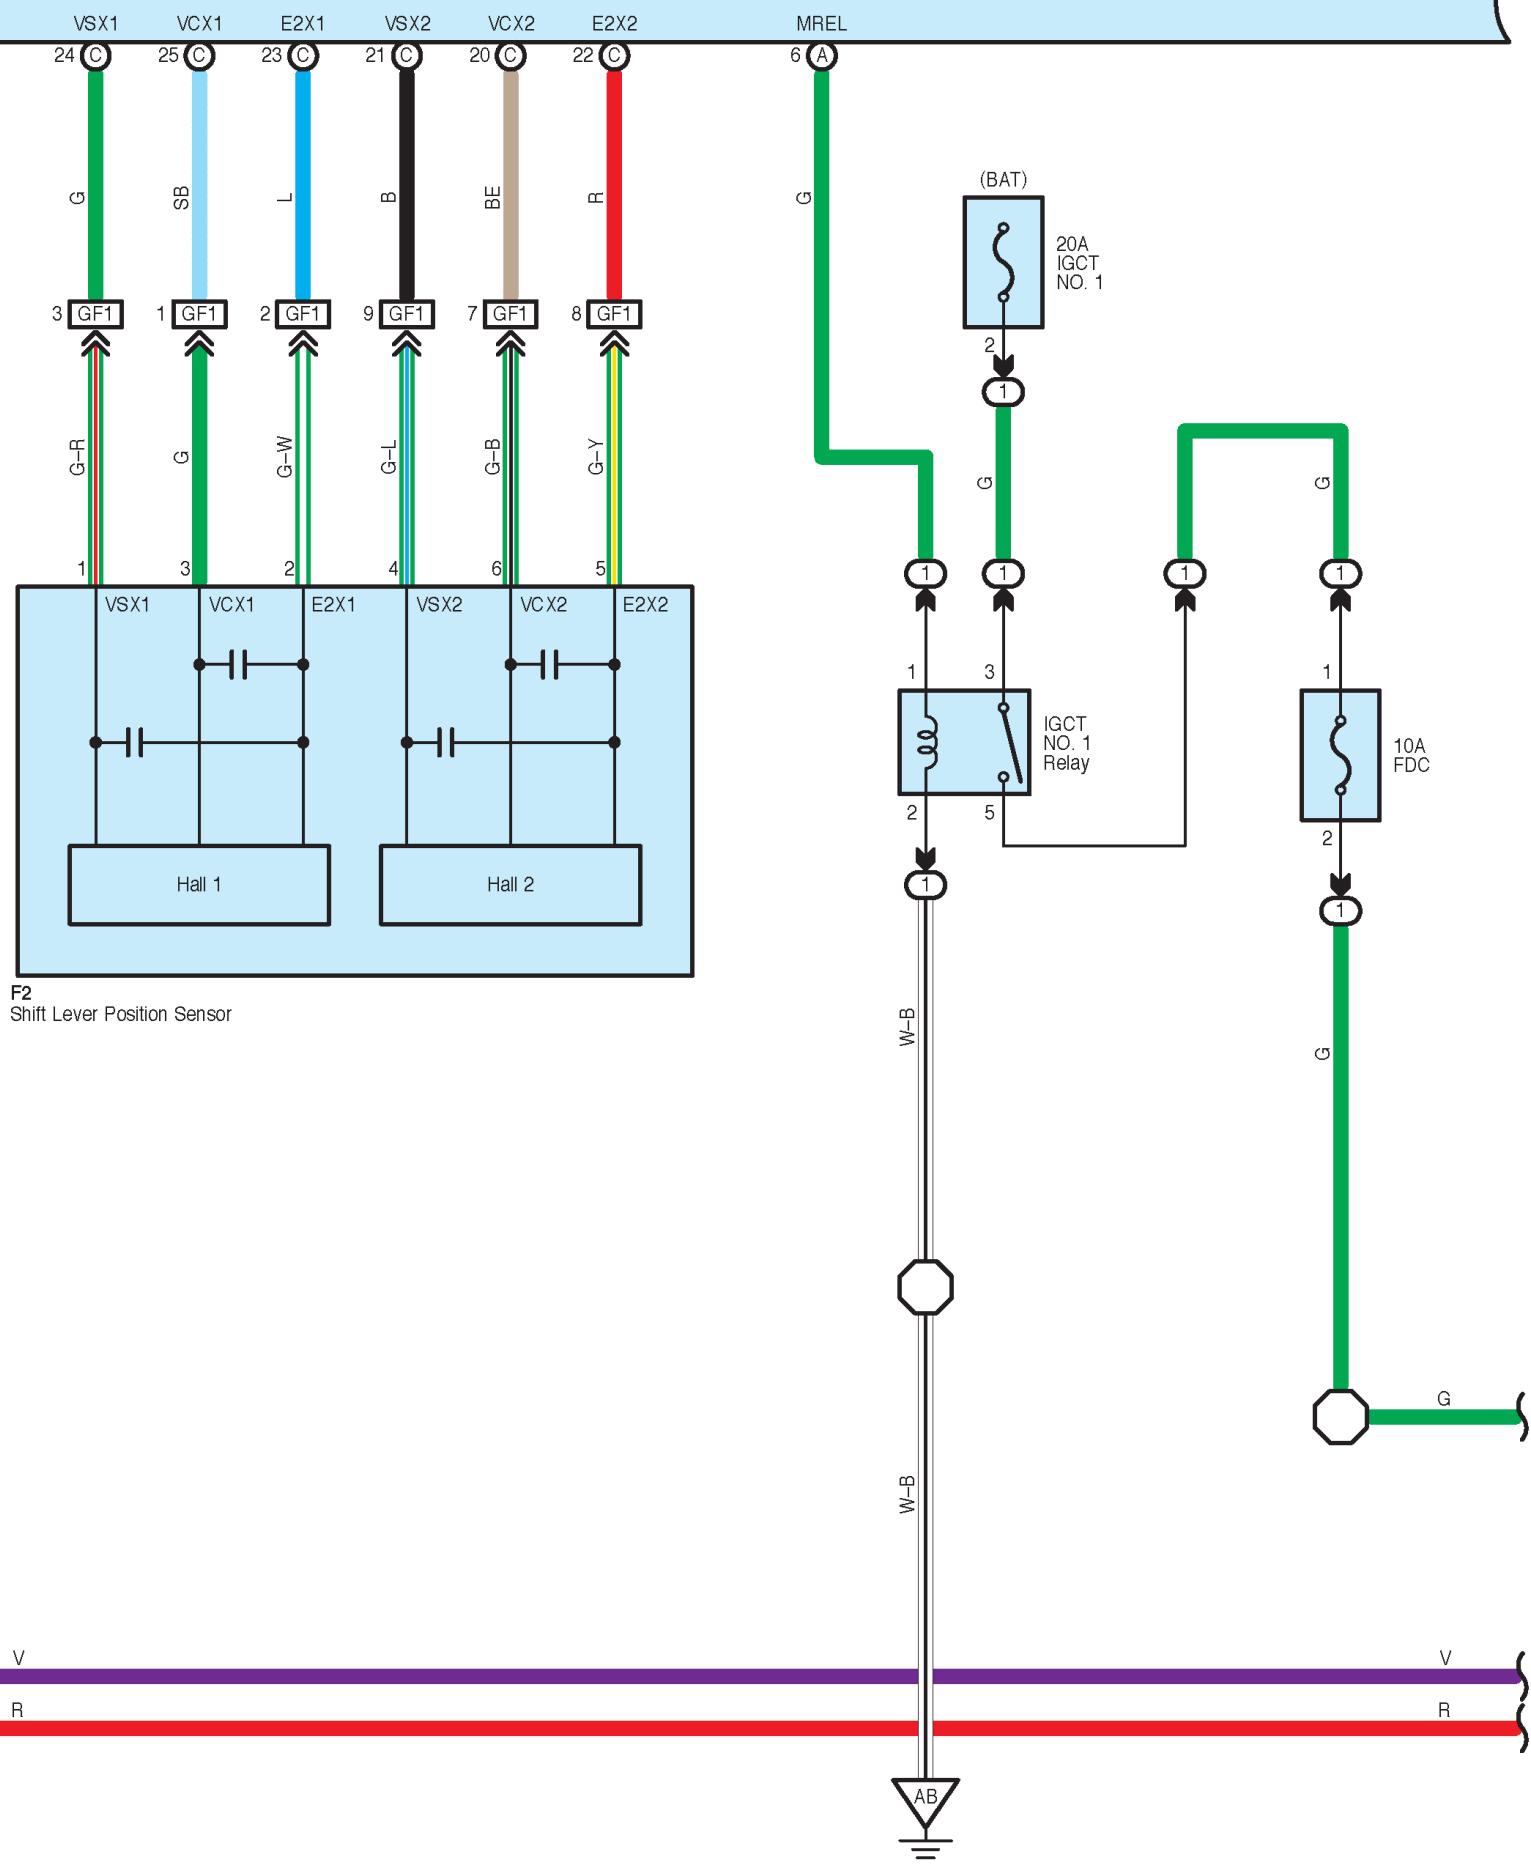

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

A27(A), G45(C), G46(D)
EV Control ECU

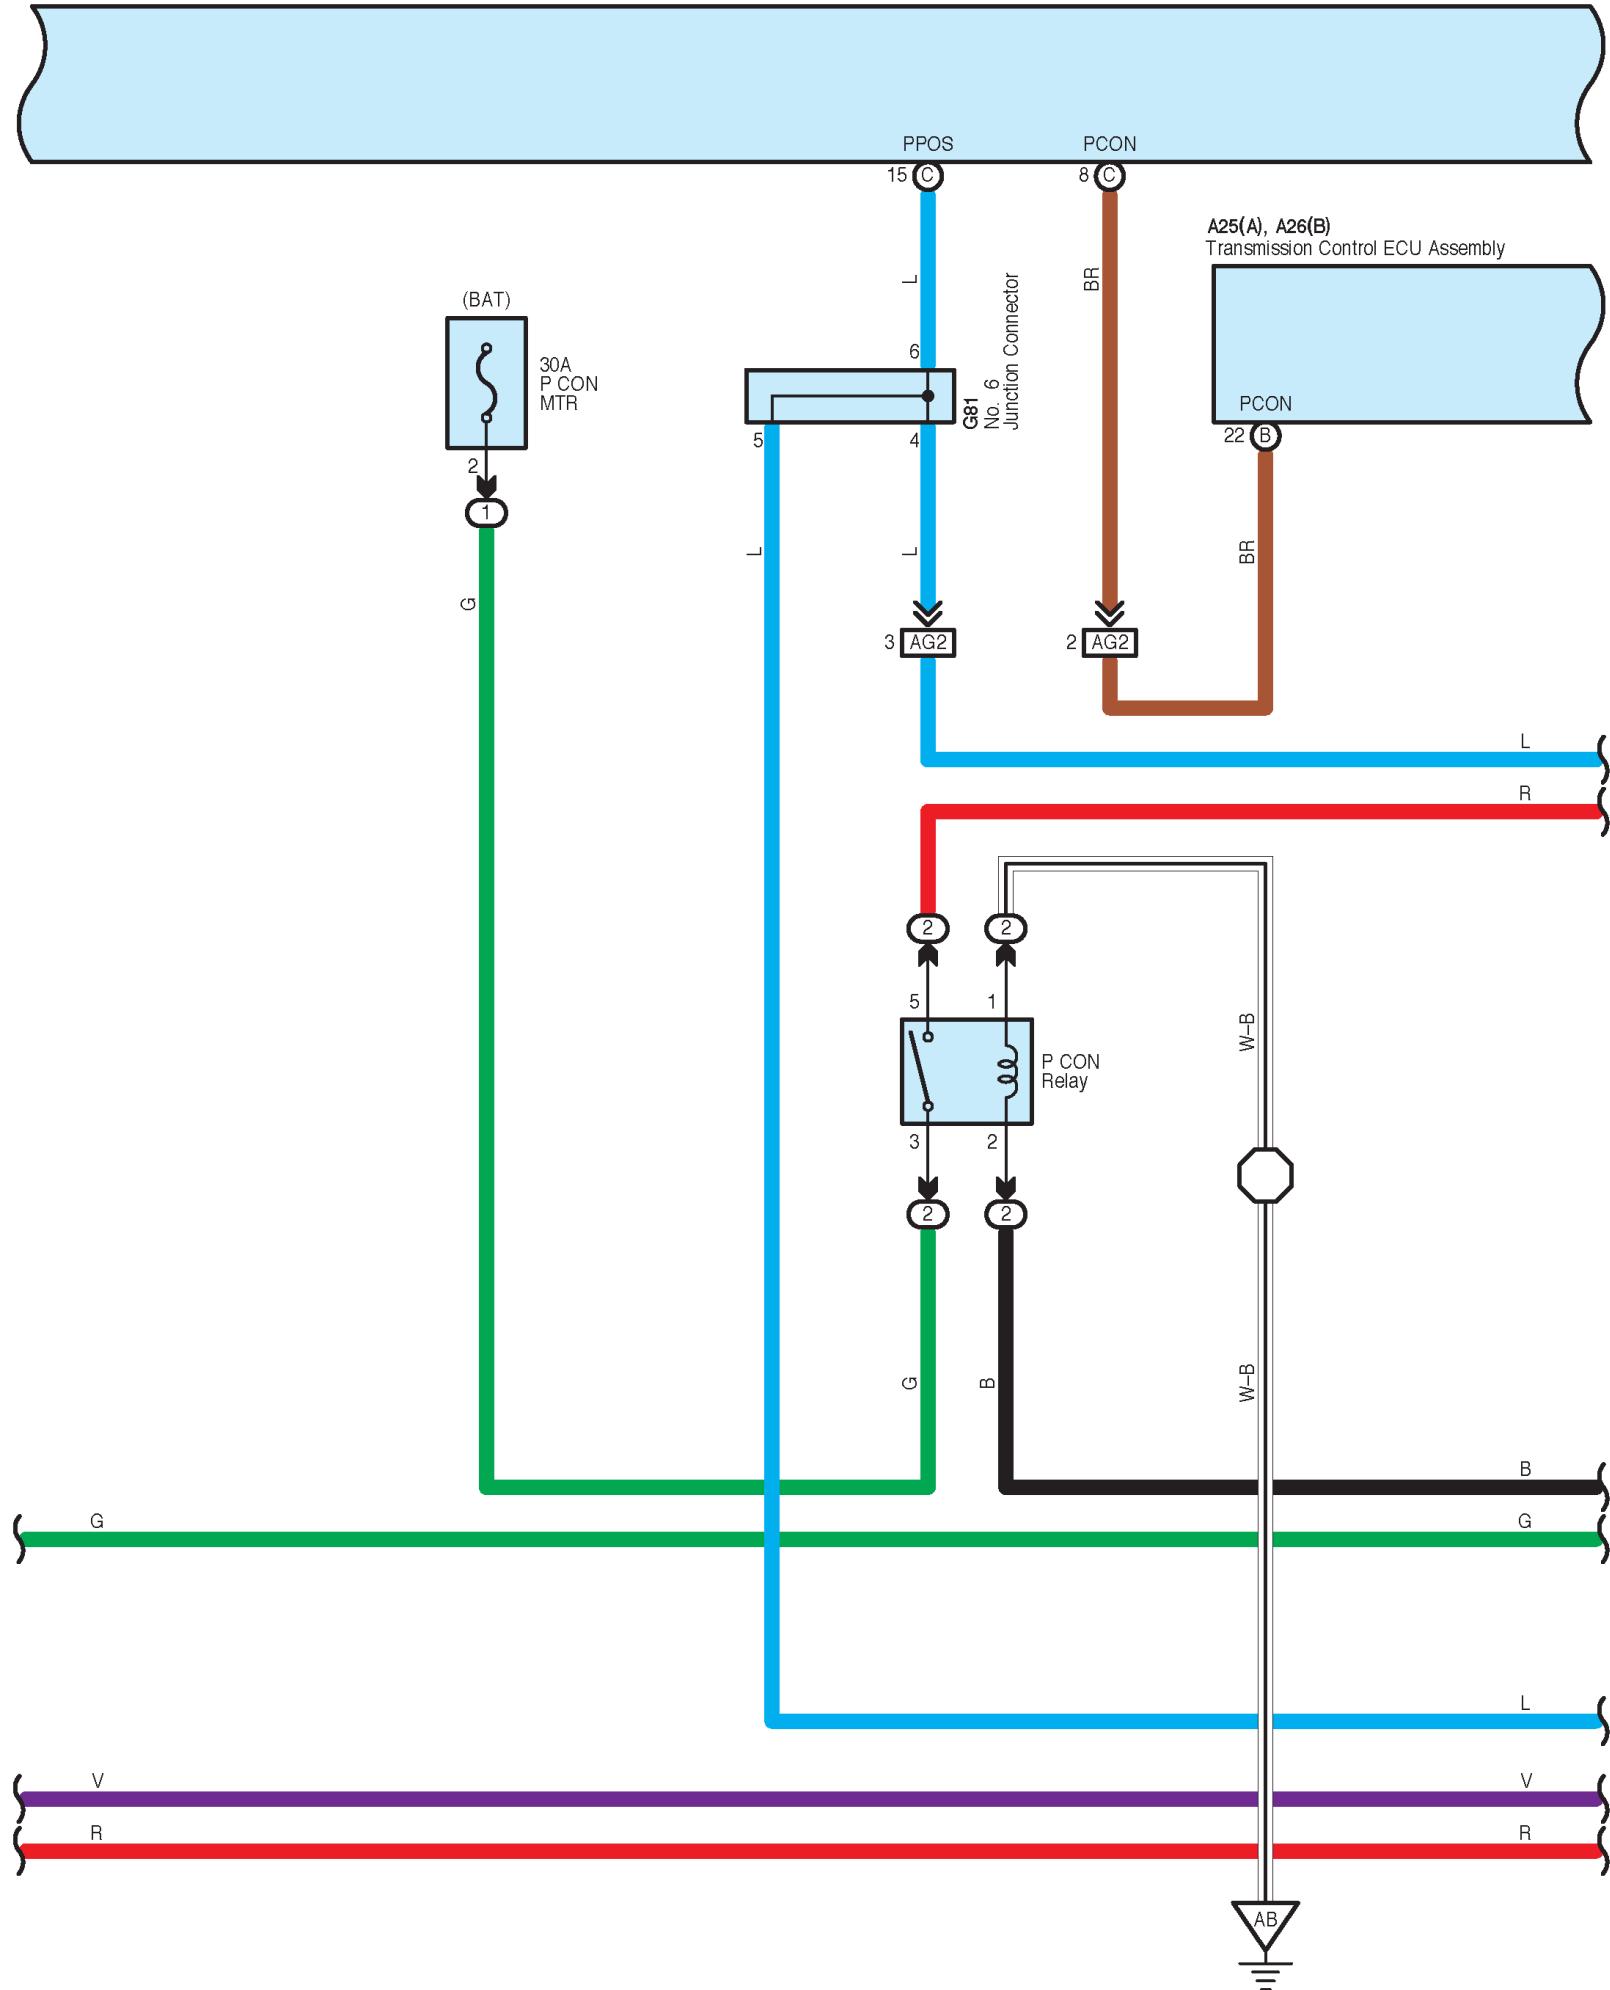

A27(A), G45(C), G46(D)
EV Control ECU

A25(A), A26(B)
Transmission Control ECU Assembly

PPOS MWA MVA MUA VC RB RA E2 BMA +B LIN

23(B) 1(A) 2(A) 5(A) 7(A) 8(A) 17(A) 19(A) 23(A) 16(A) 24(B)

L W L G > Y LG P B G >

L R

1 DA1 25 DA1 17 DA1 9 DA1 4 DA1 3 DA1 2 DA1 5 DA1

R W L G > Y LG P

2 7 6 1 9 5 3 8

BMA MWA MVA MUA RVC RB RA RE2

D8
Shift Control Actuator Assembly

B G

L


V

R


Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

A27(A), G45(C), G46(D)
EV Control ECU


A25(A), A26(B)
Transmission Control ECU Assembly

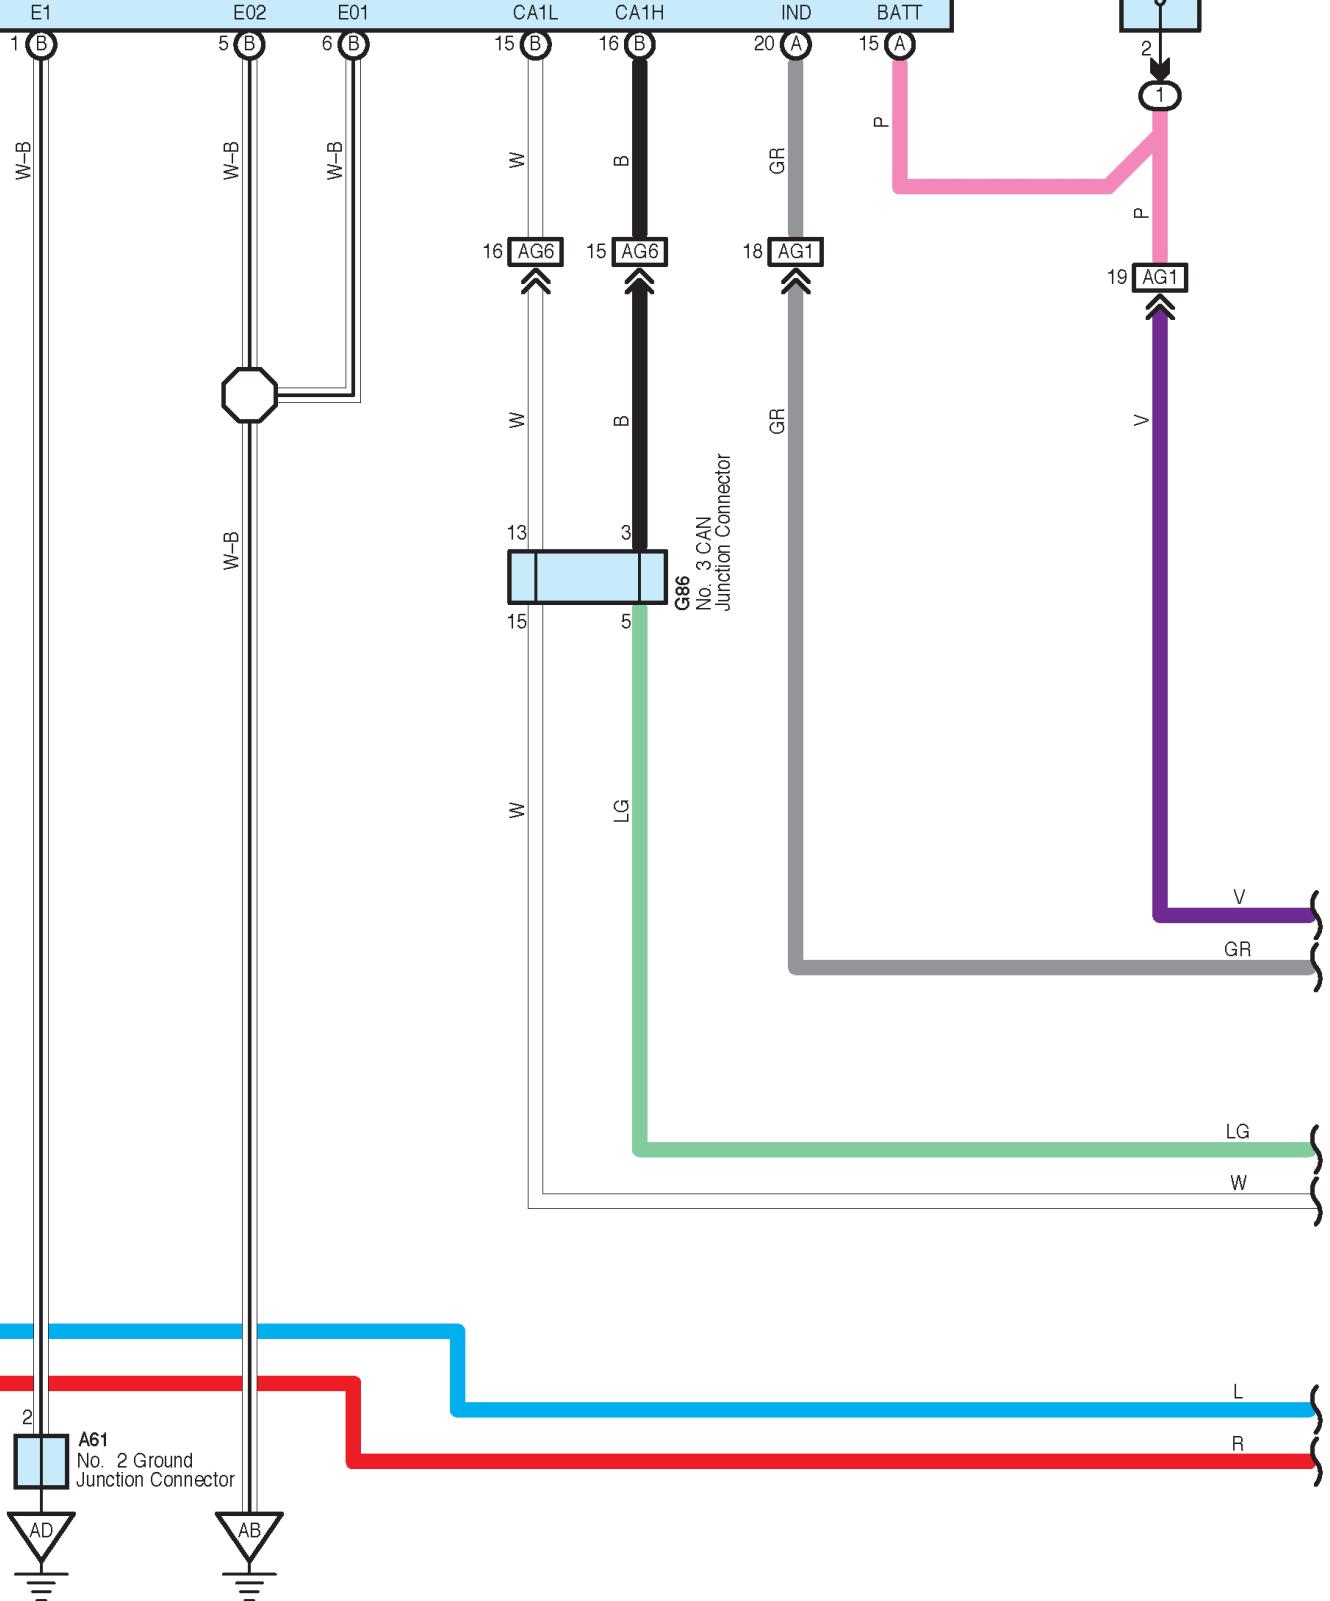


A27(A), G45(C), G46(D)
EV Control ECU

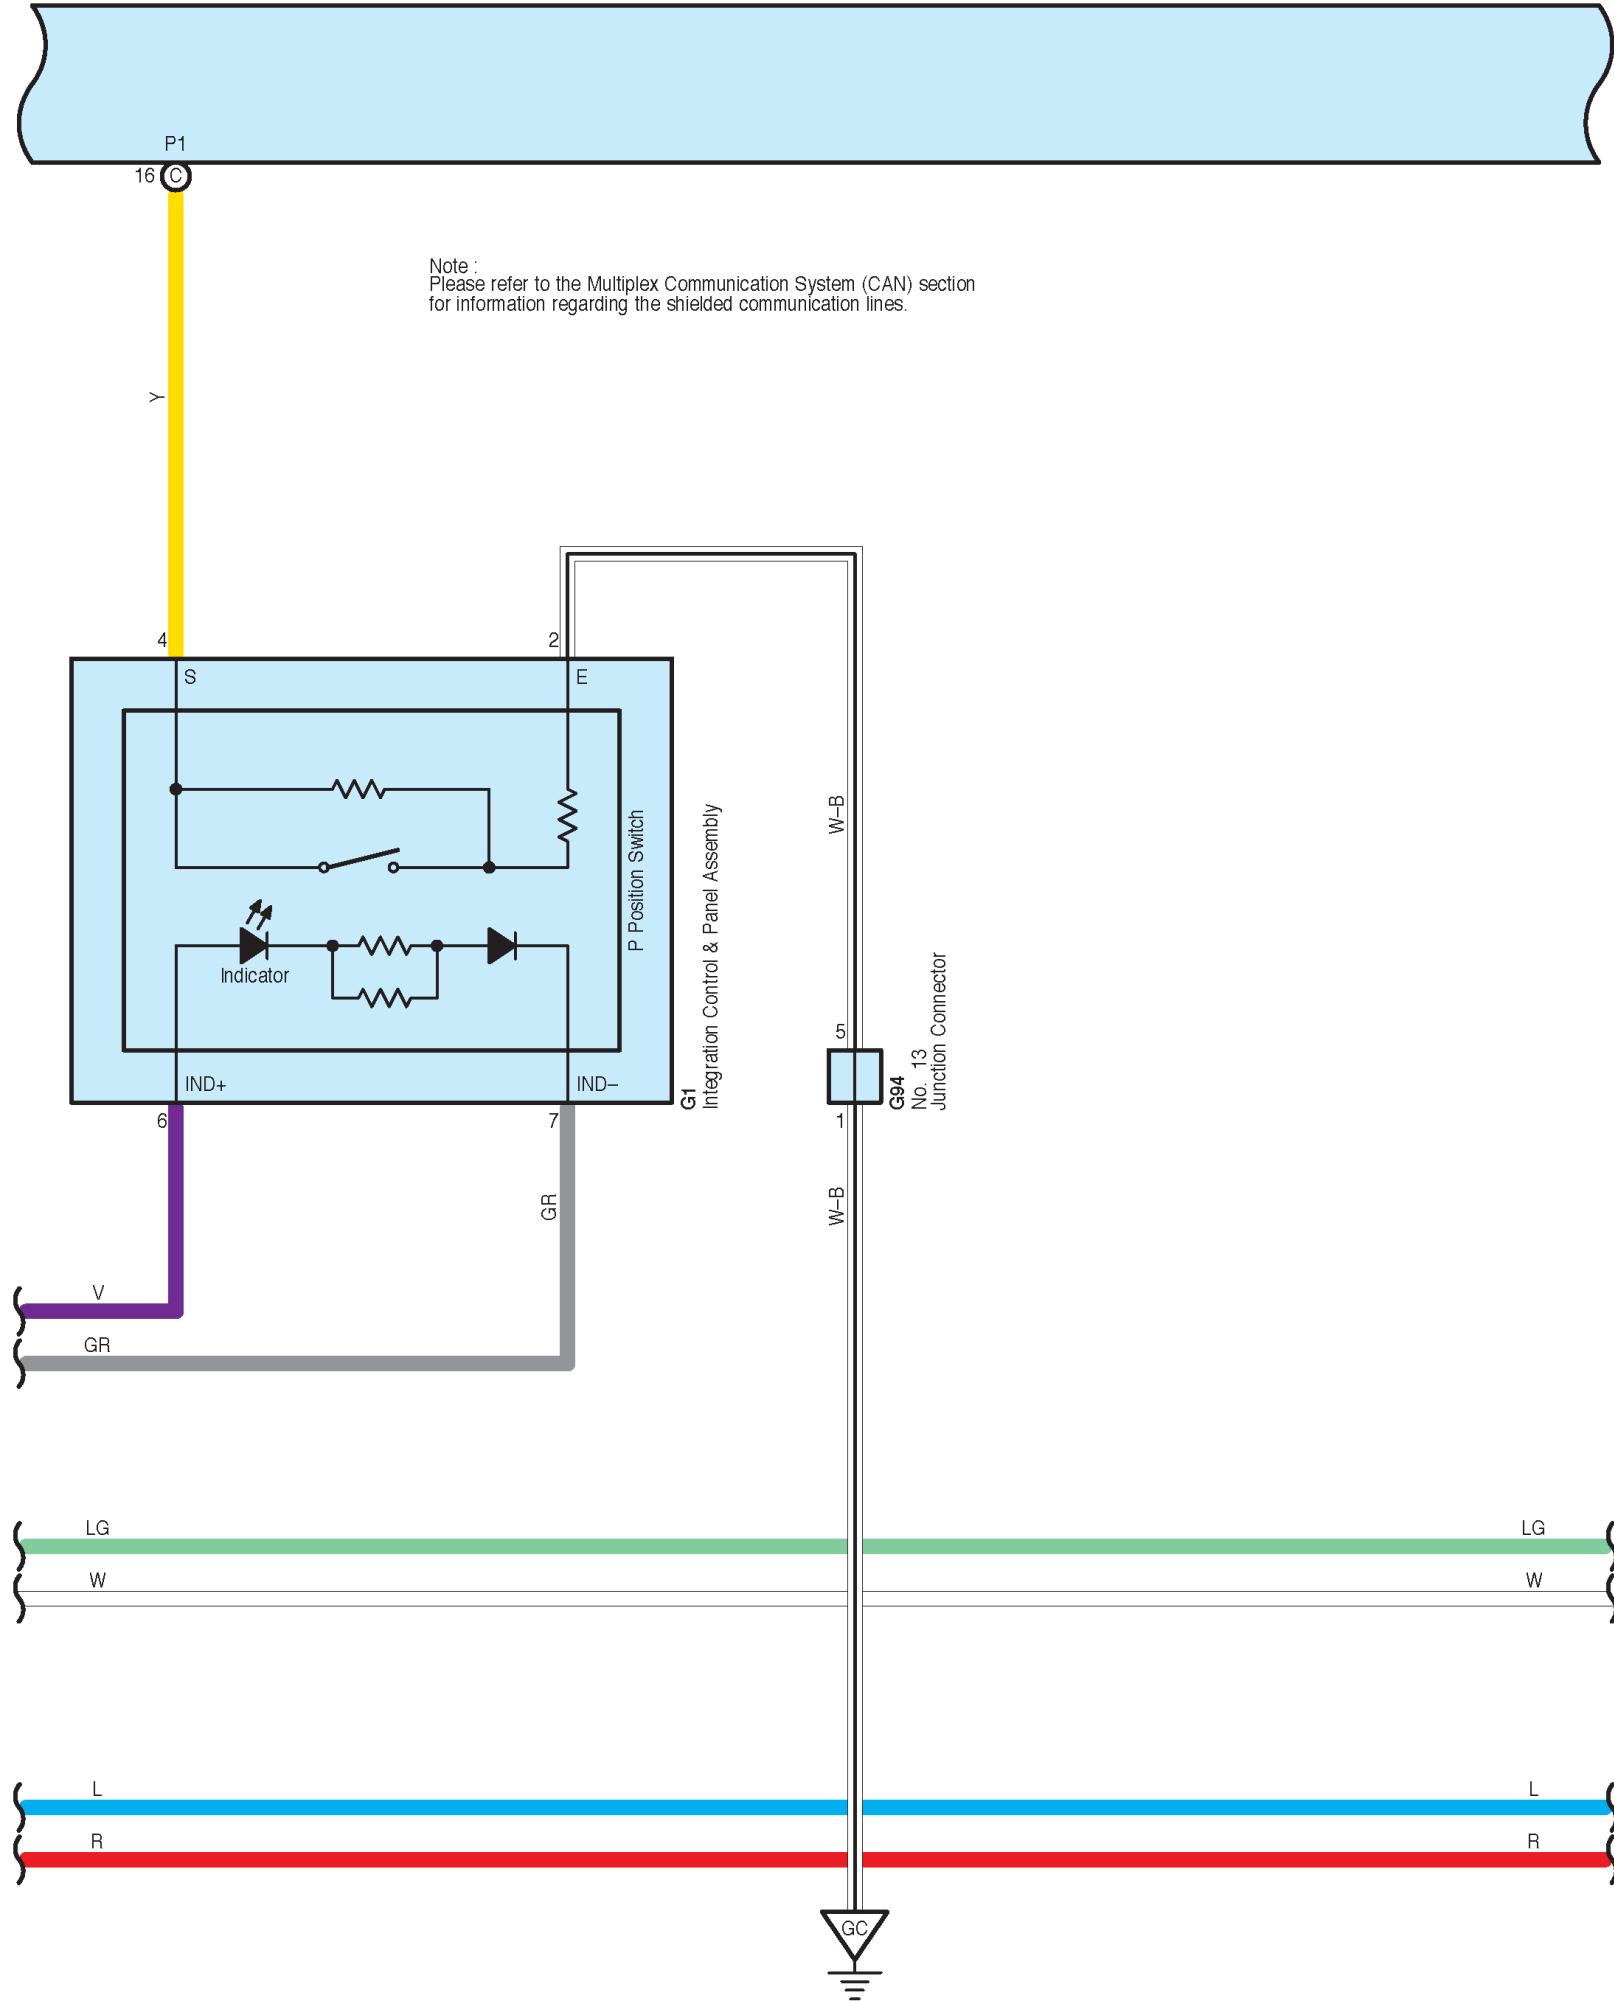


A27(A), G45(C), G46(D)
EV Control ECU

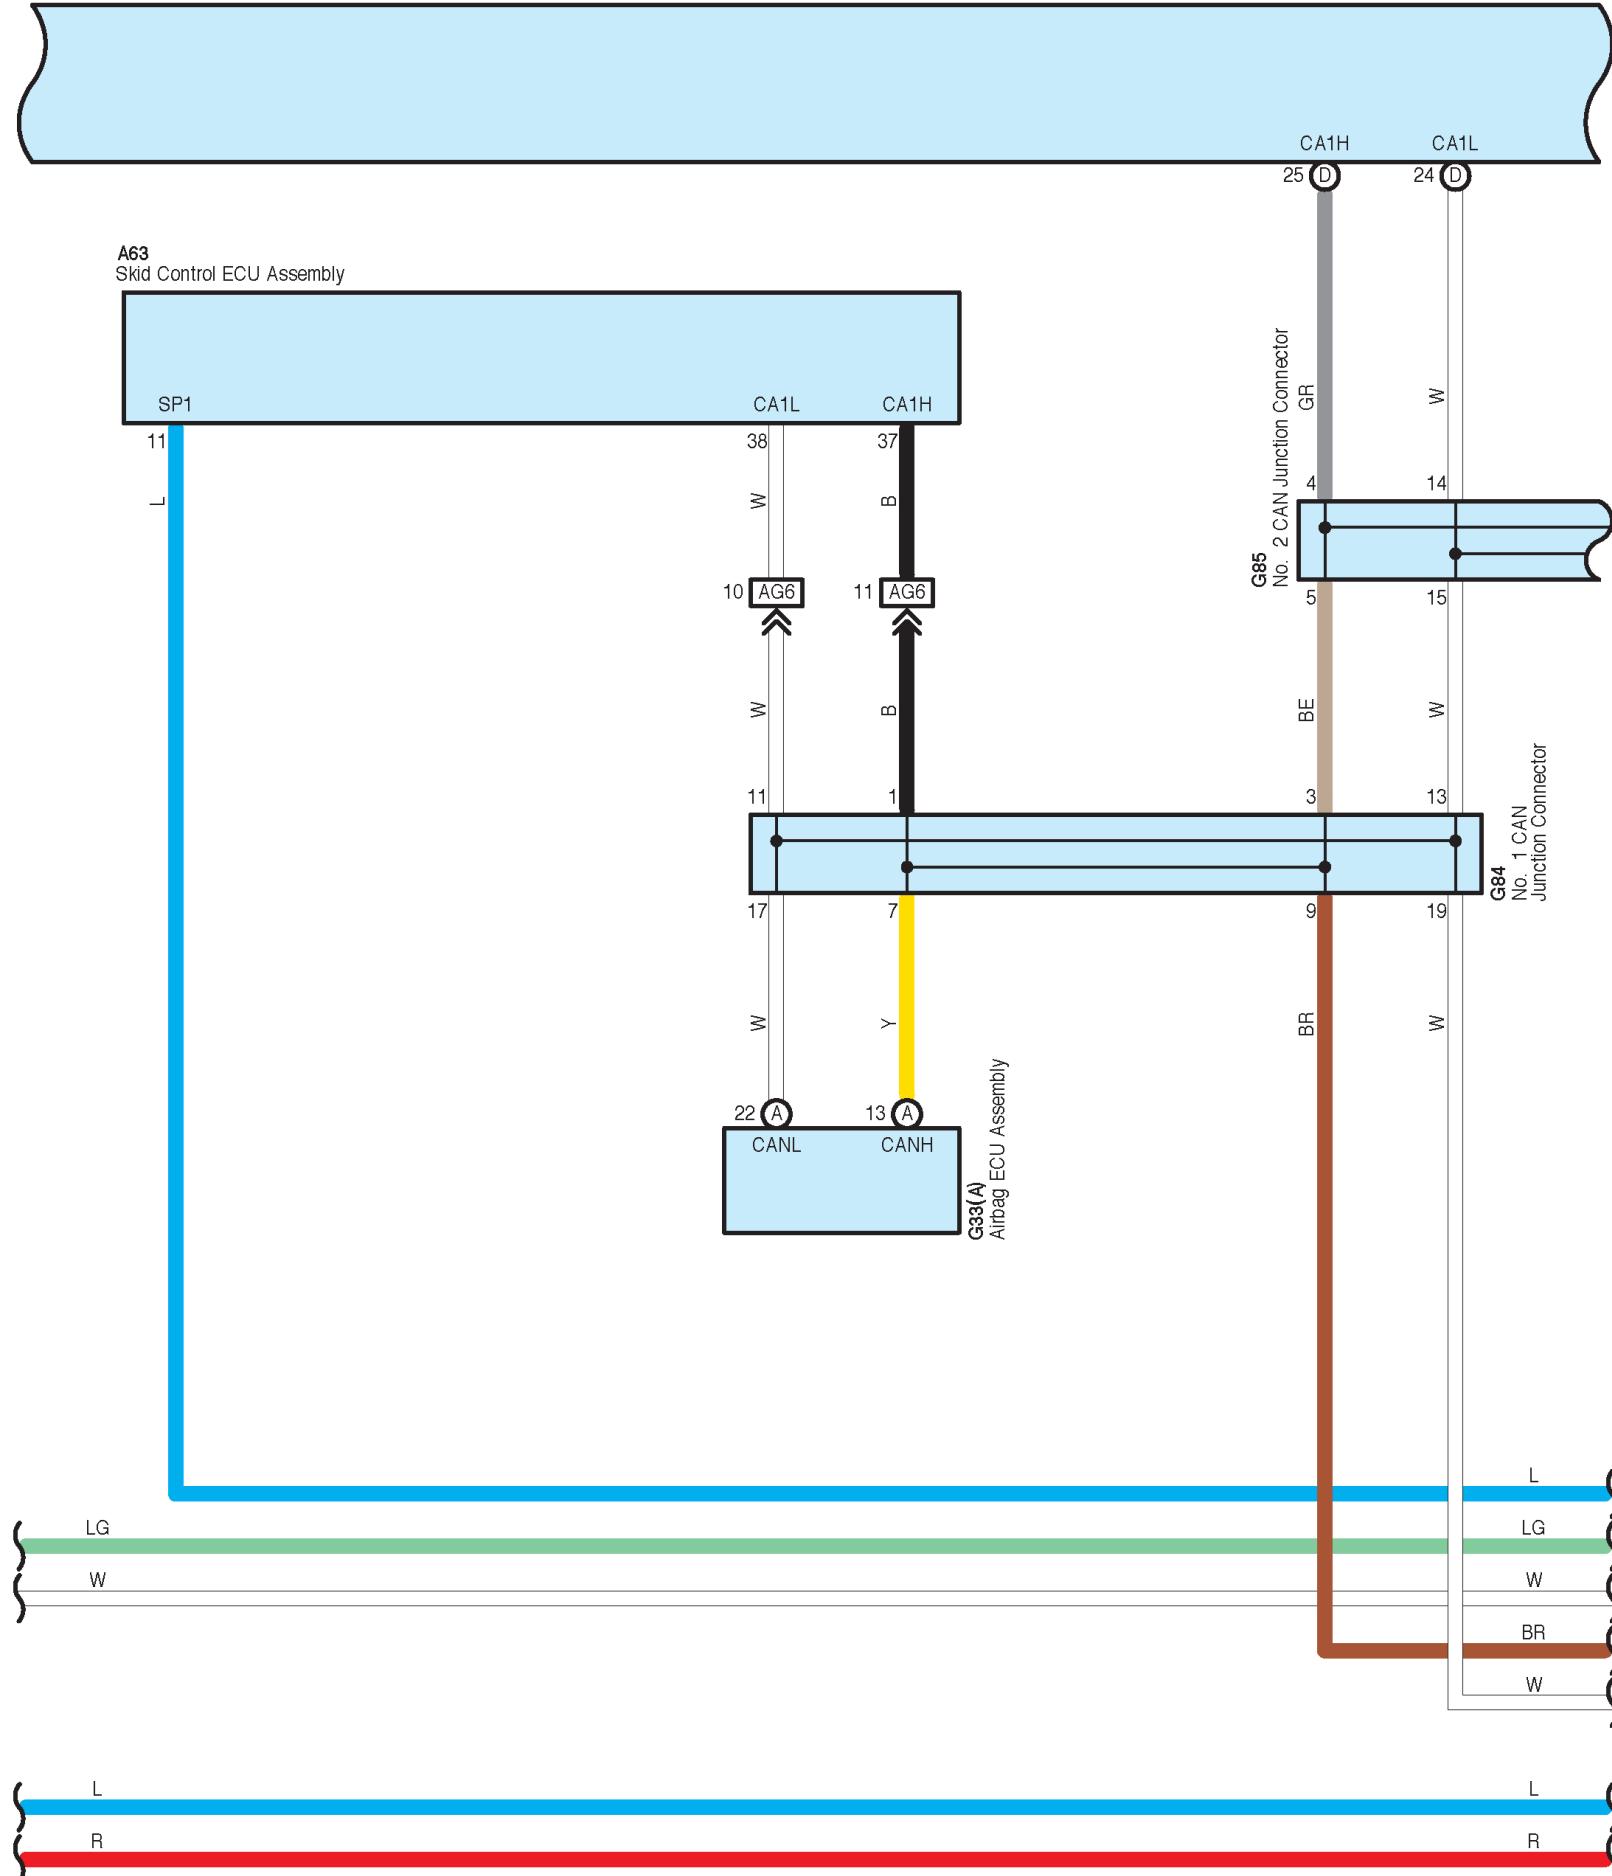


A27(A), G45(C), G46(D)
EV Control ECU

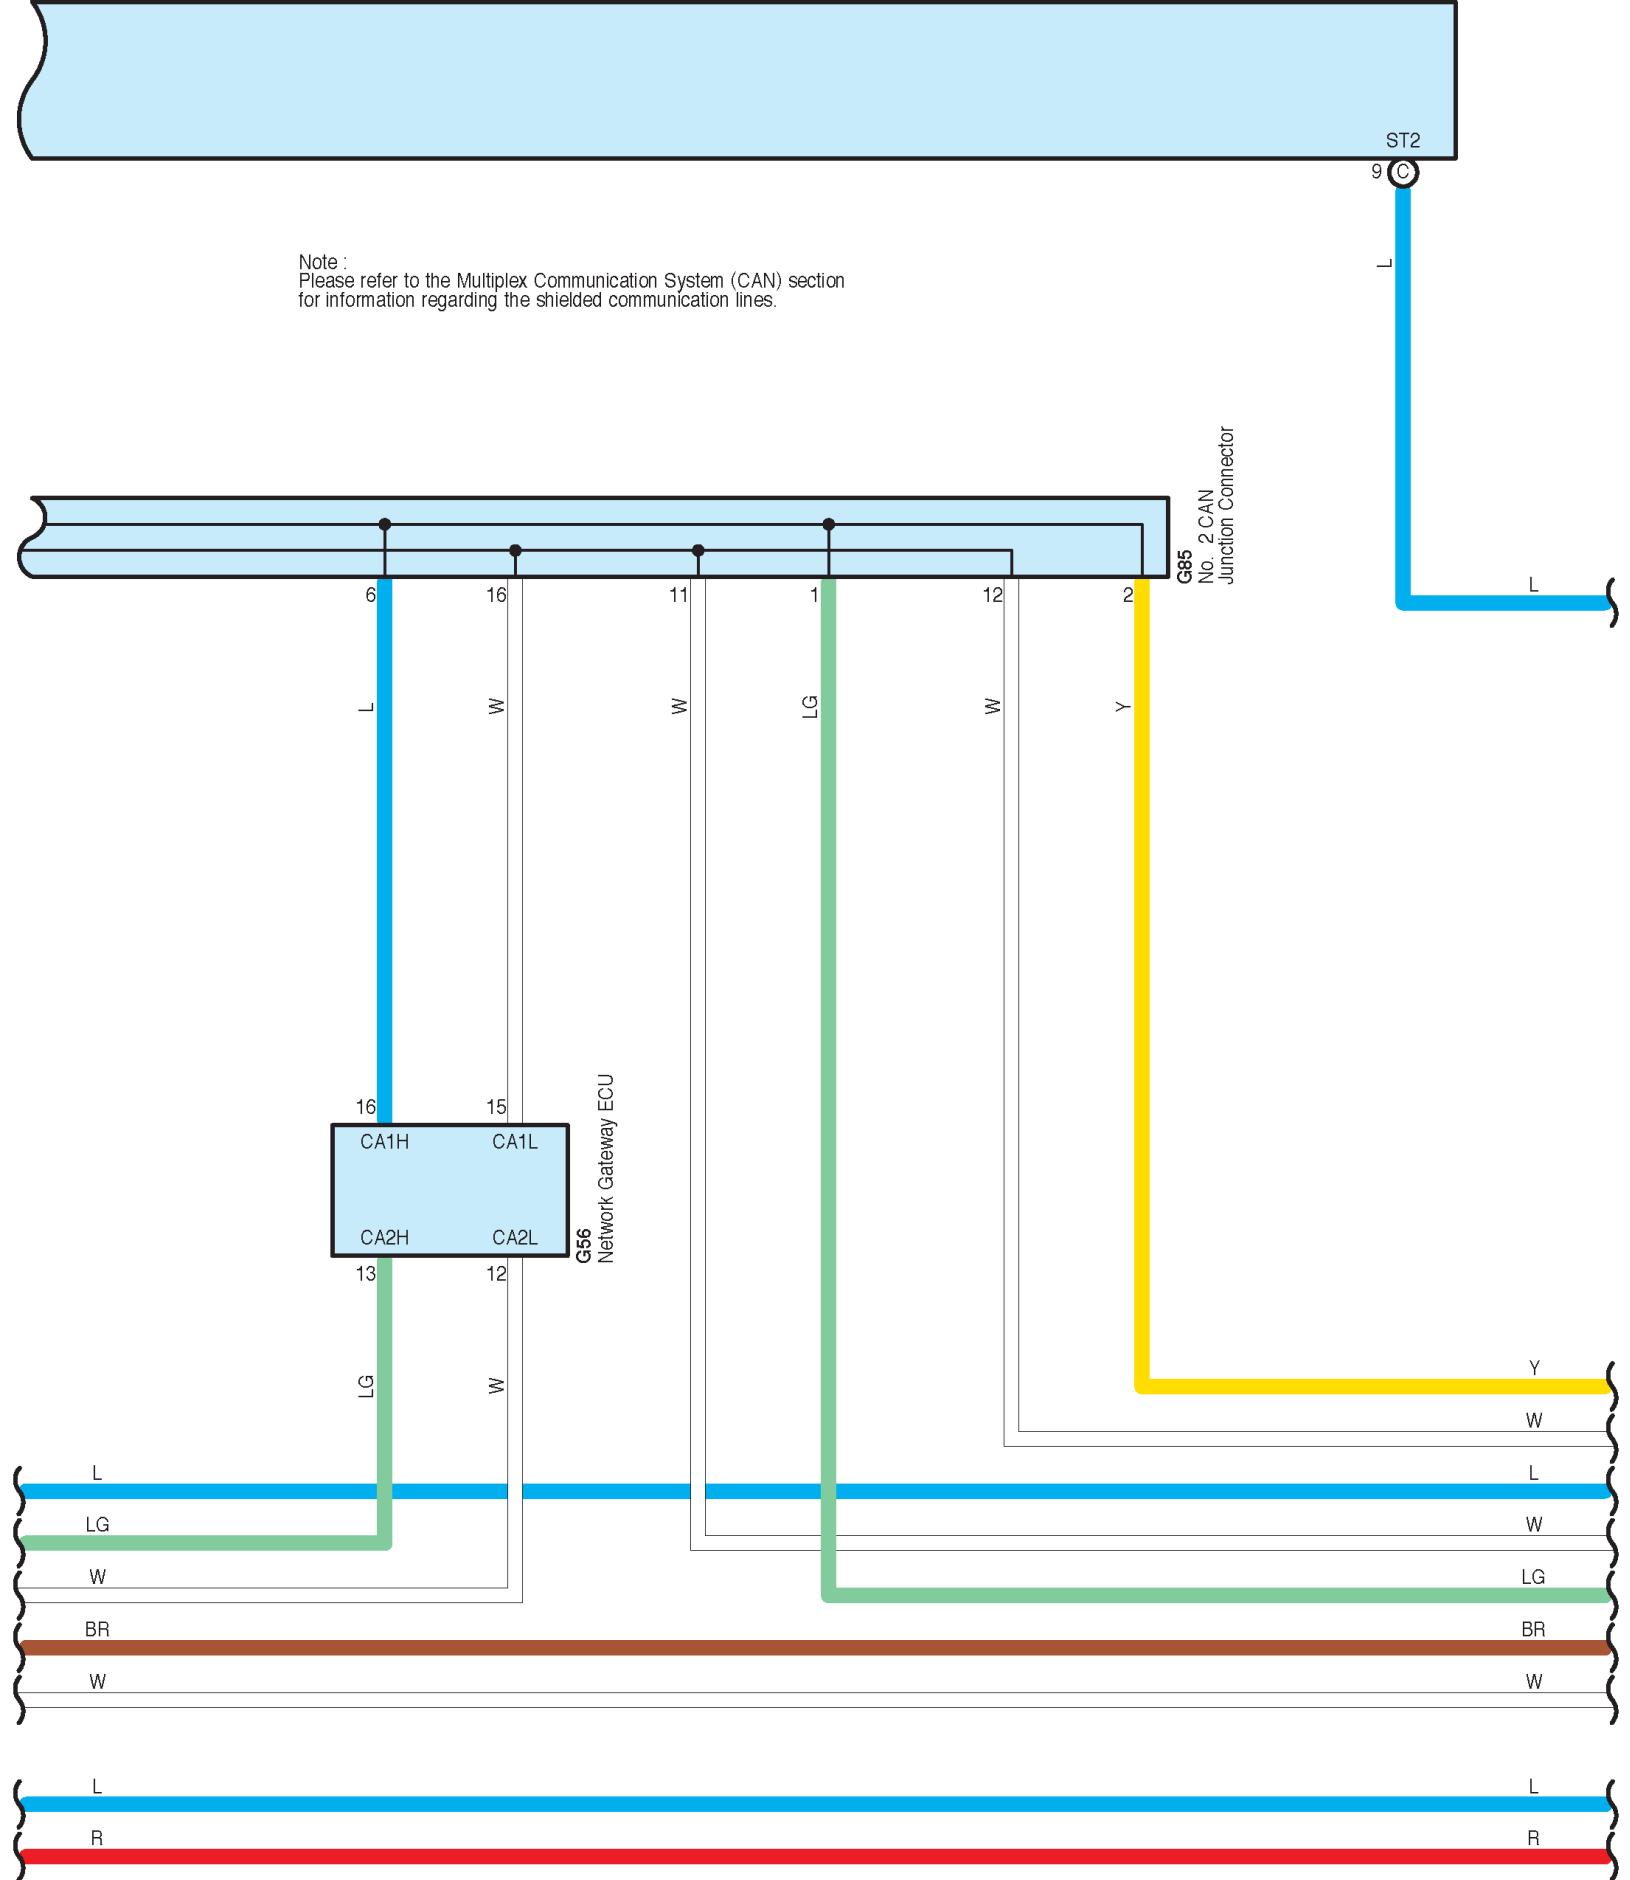



Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

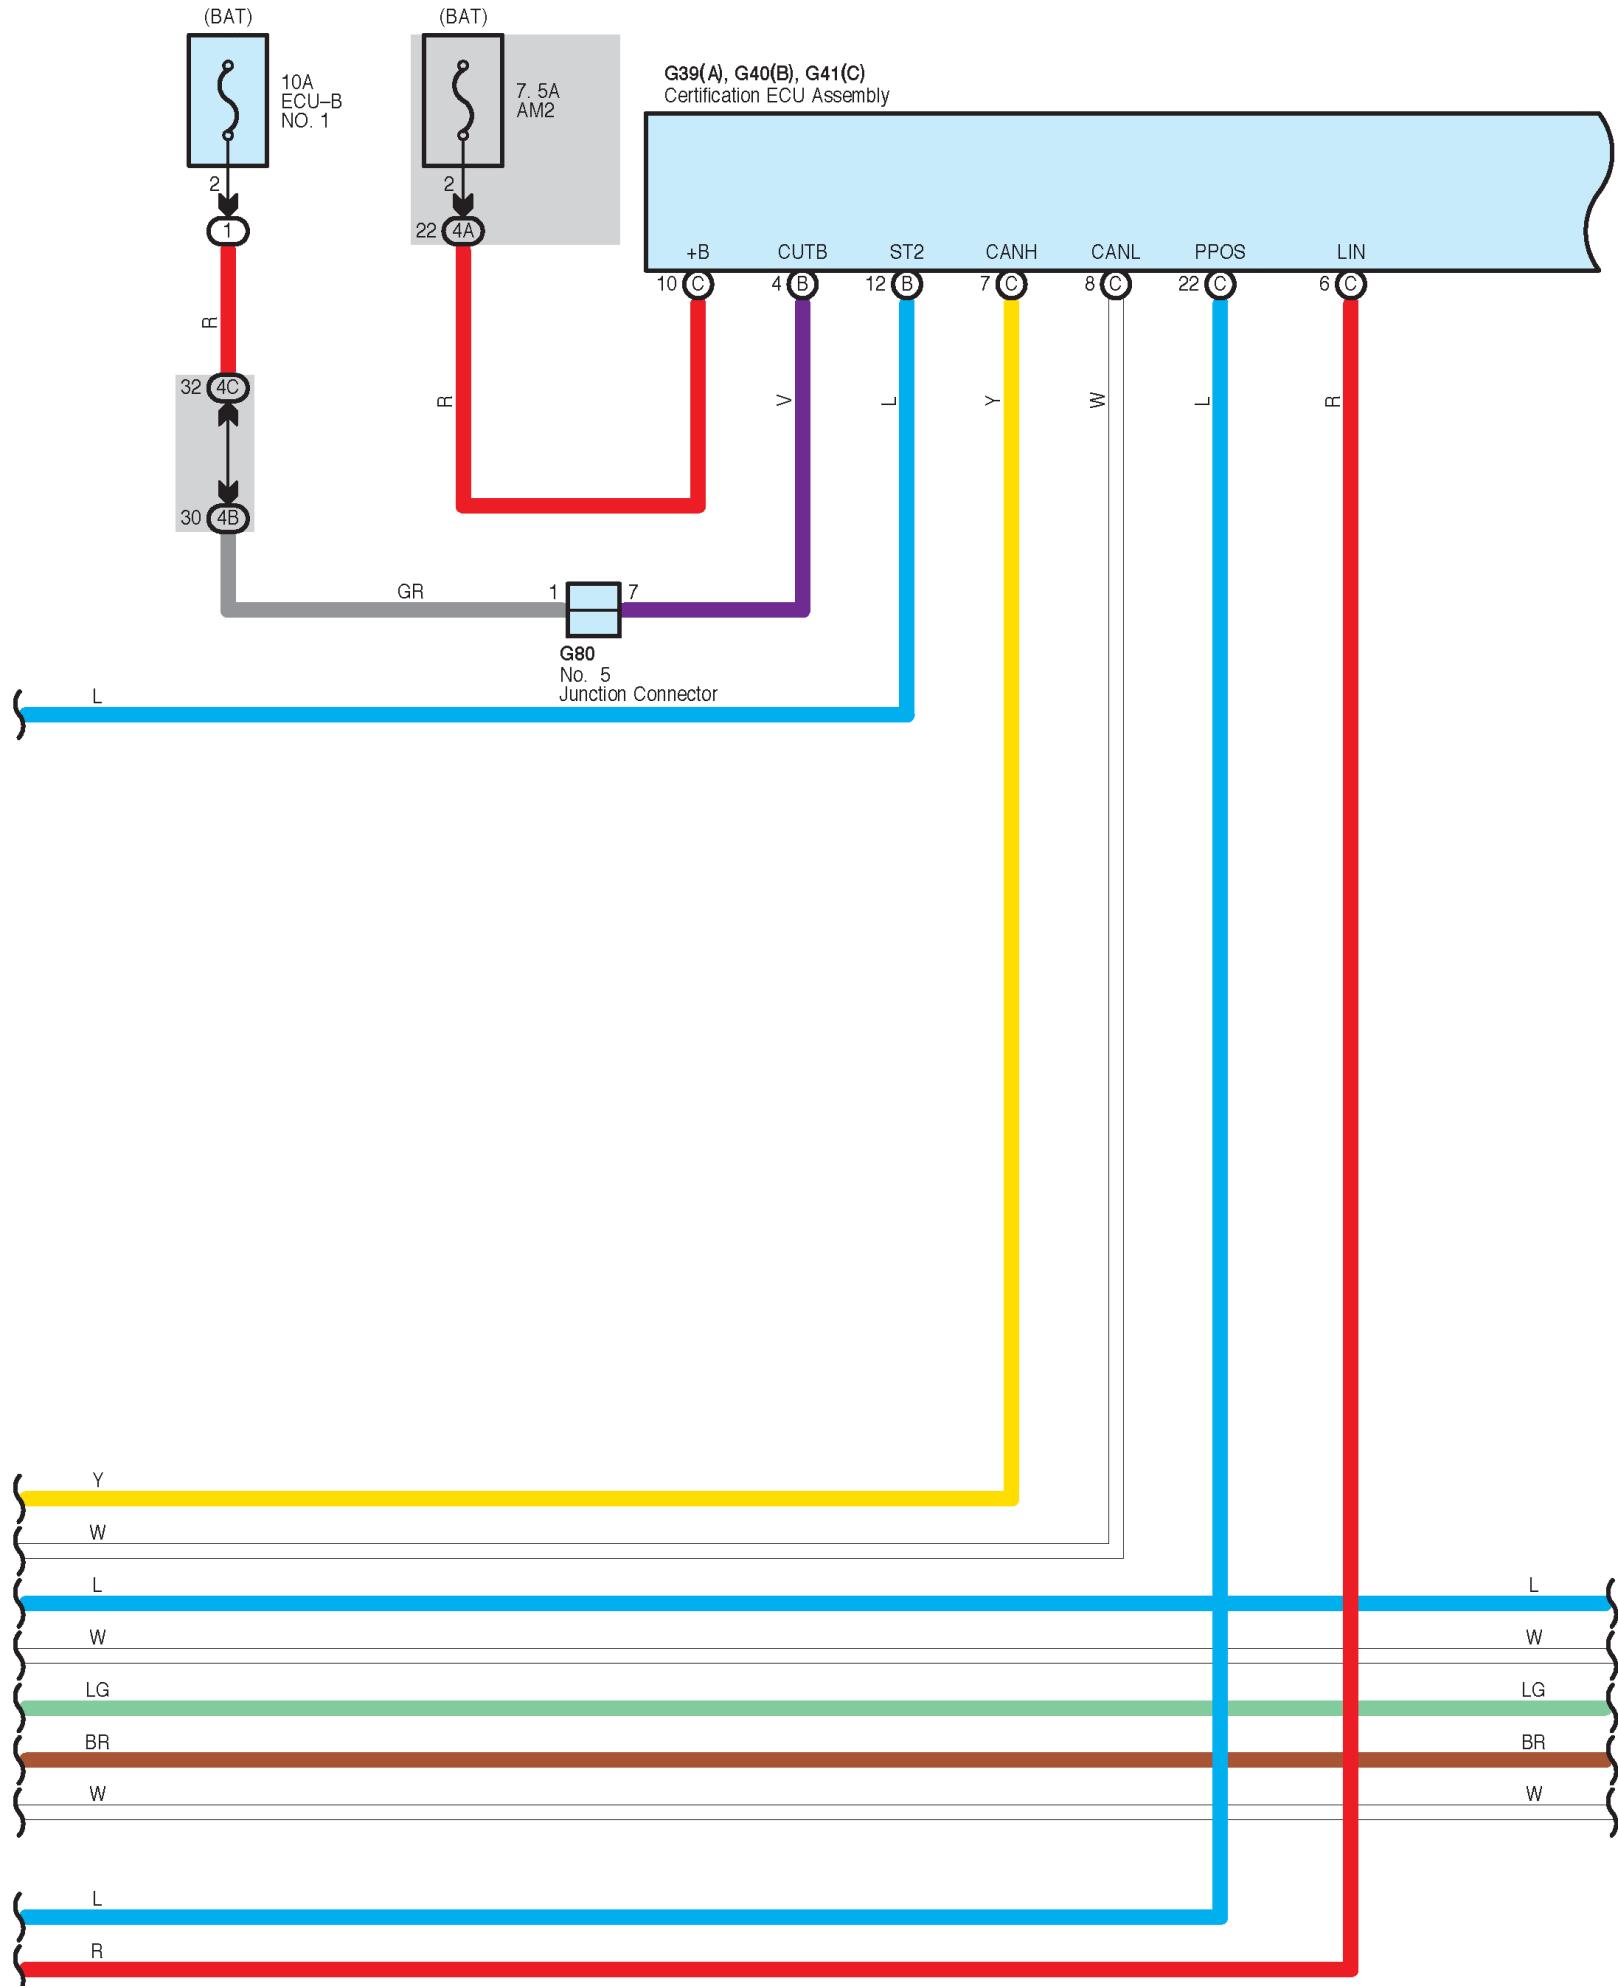


G39(A), G40(B), G41(C)
Certification ECU Assembly

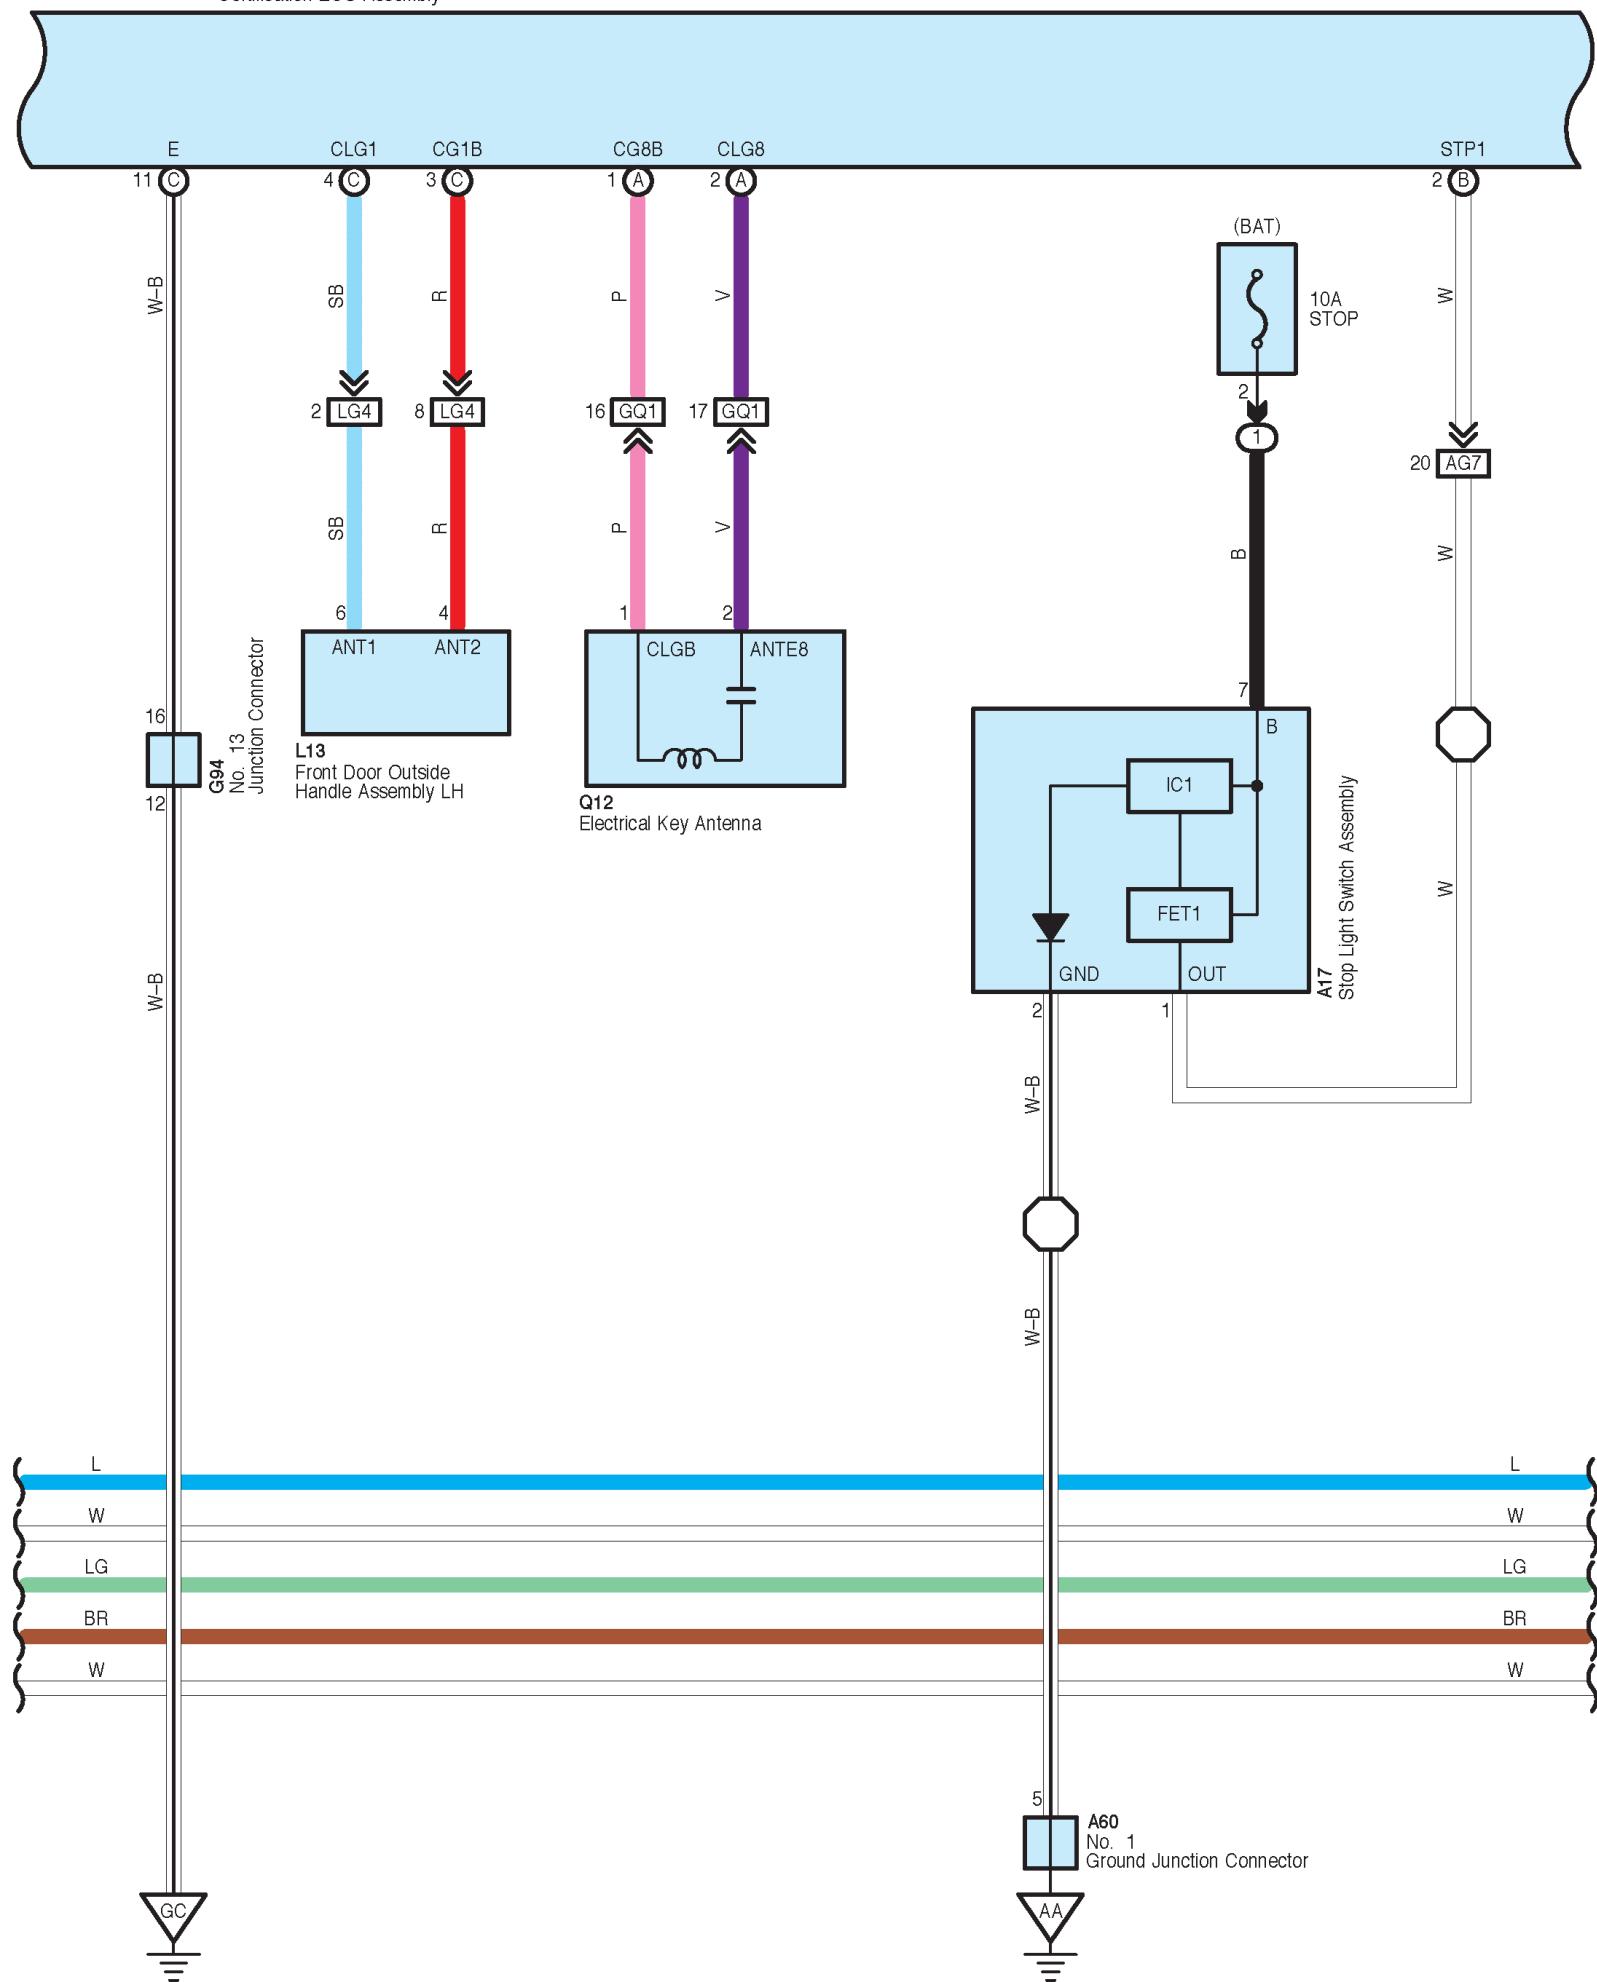


G39(A), G40(B), G41(C)
Certification ECU Assembly

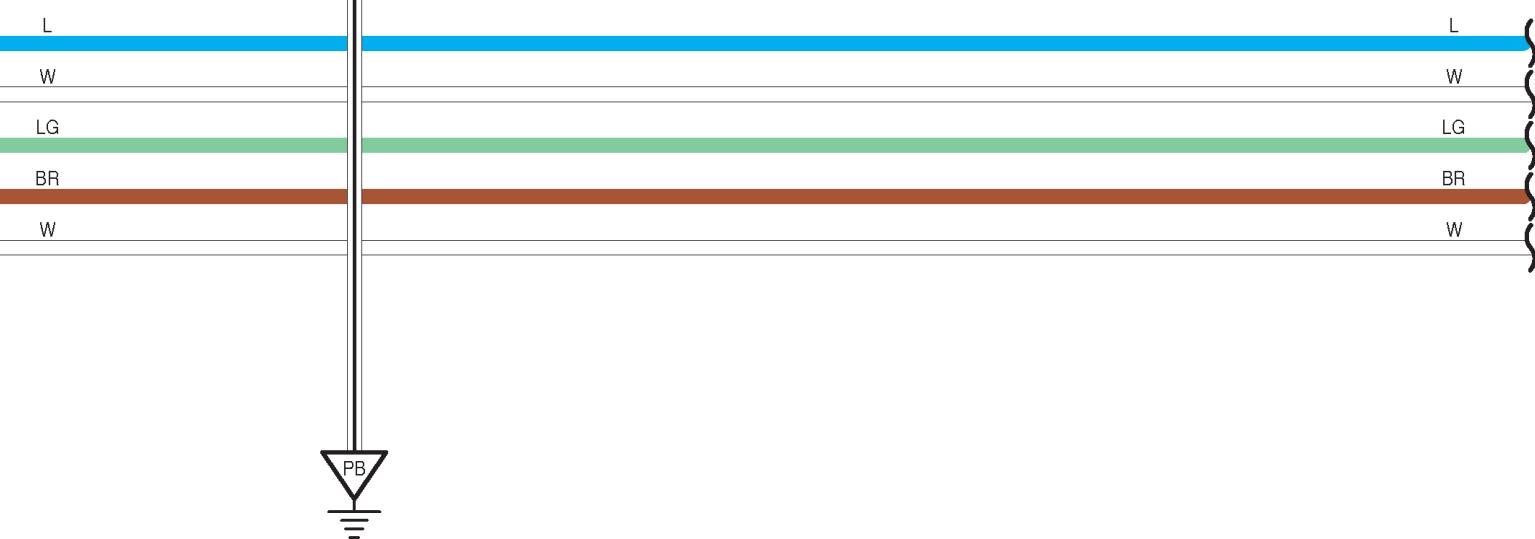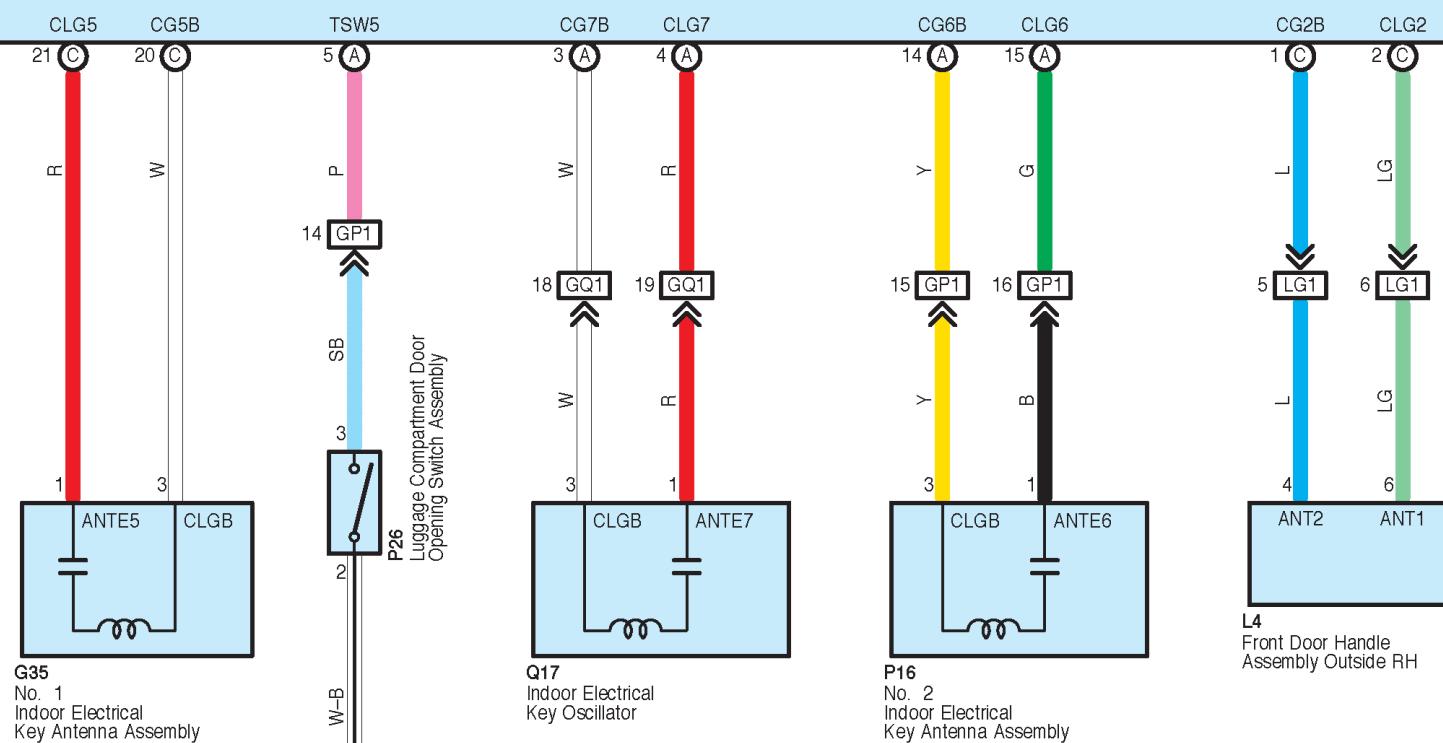

G39(A), G40(B), G41(C)
Certification ECU Assembly

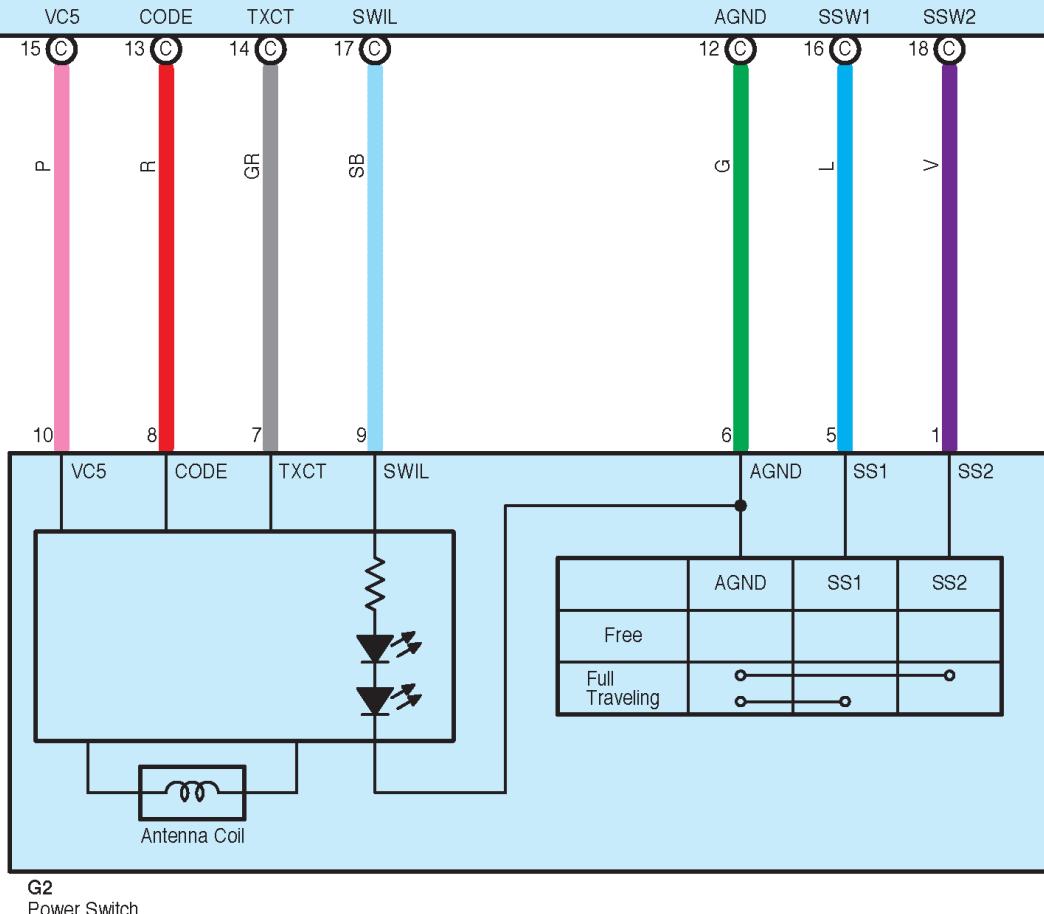


G2
Power Switch

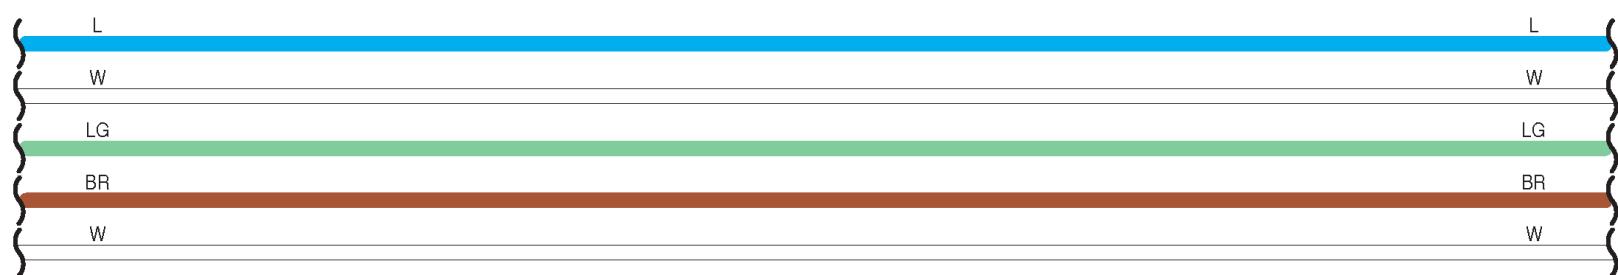

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

G39(A), G40(B), G41(C)
Certification ECU Assembly

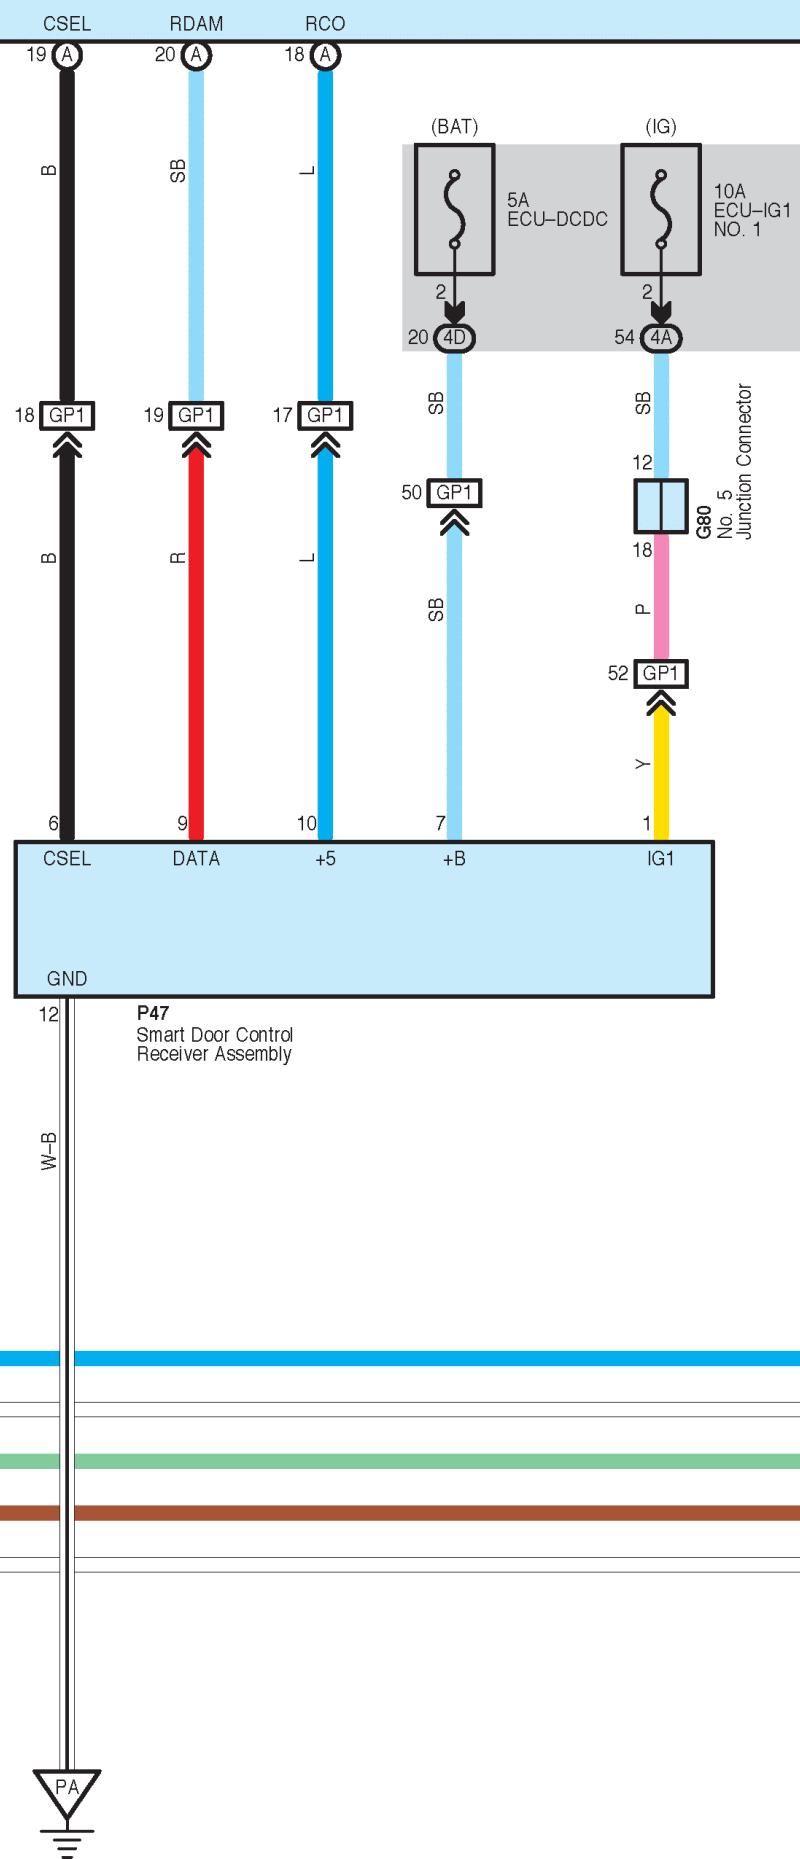

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control


G39(A), G40(B), G41(C)
Certification ECU Assembly

SPD IND

5 C


19 C

G

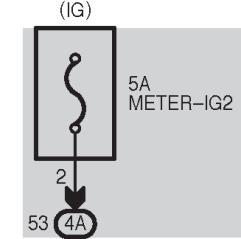

21 A

IG+

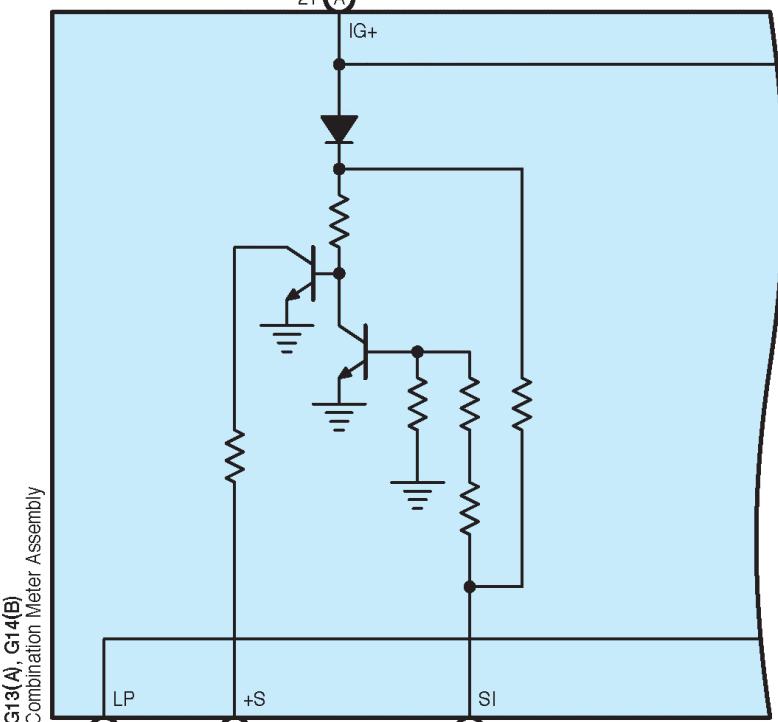

L

W

LG

BR


W

W


LG

BR

W

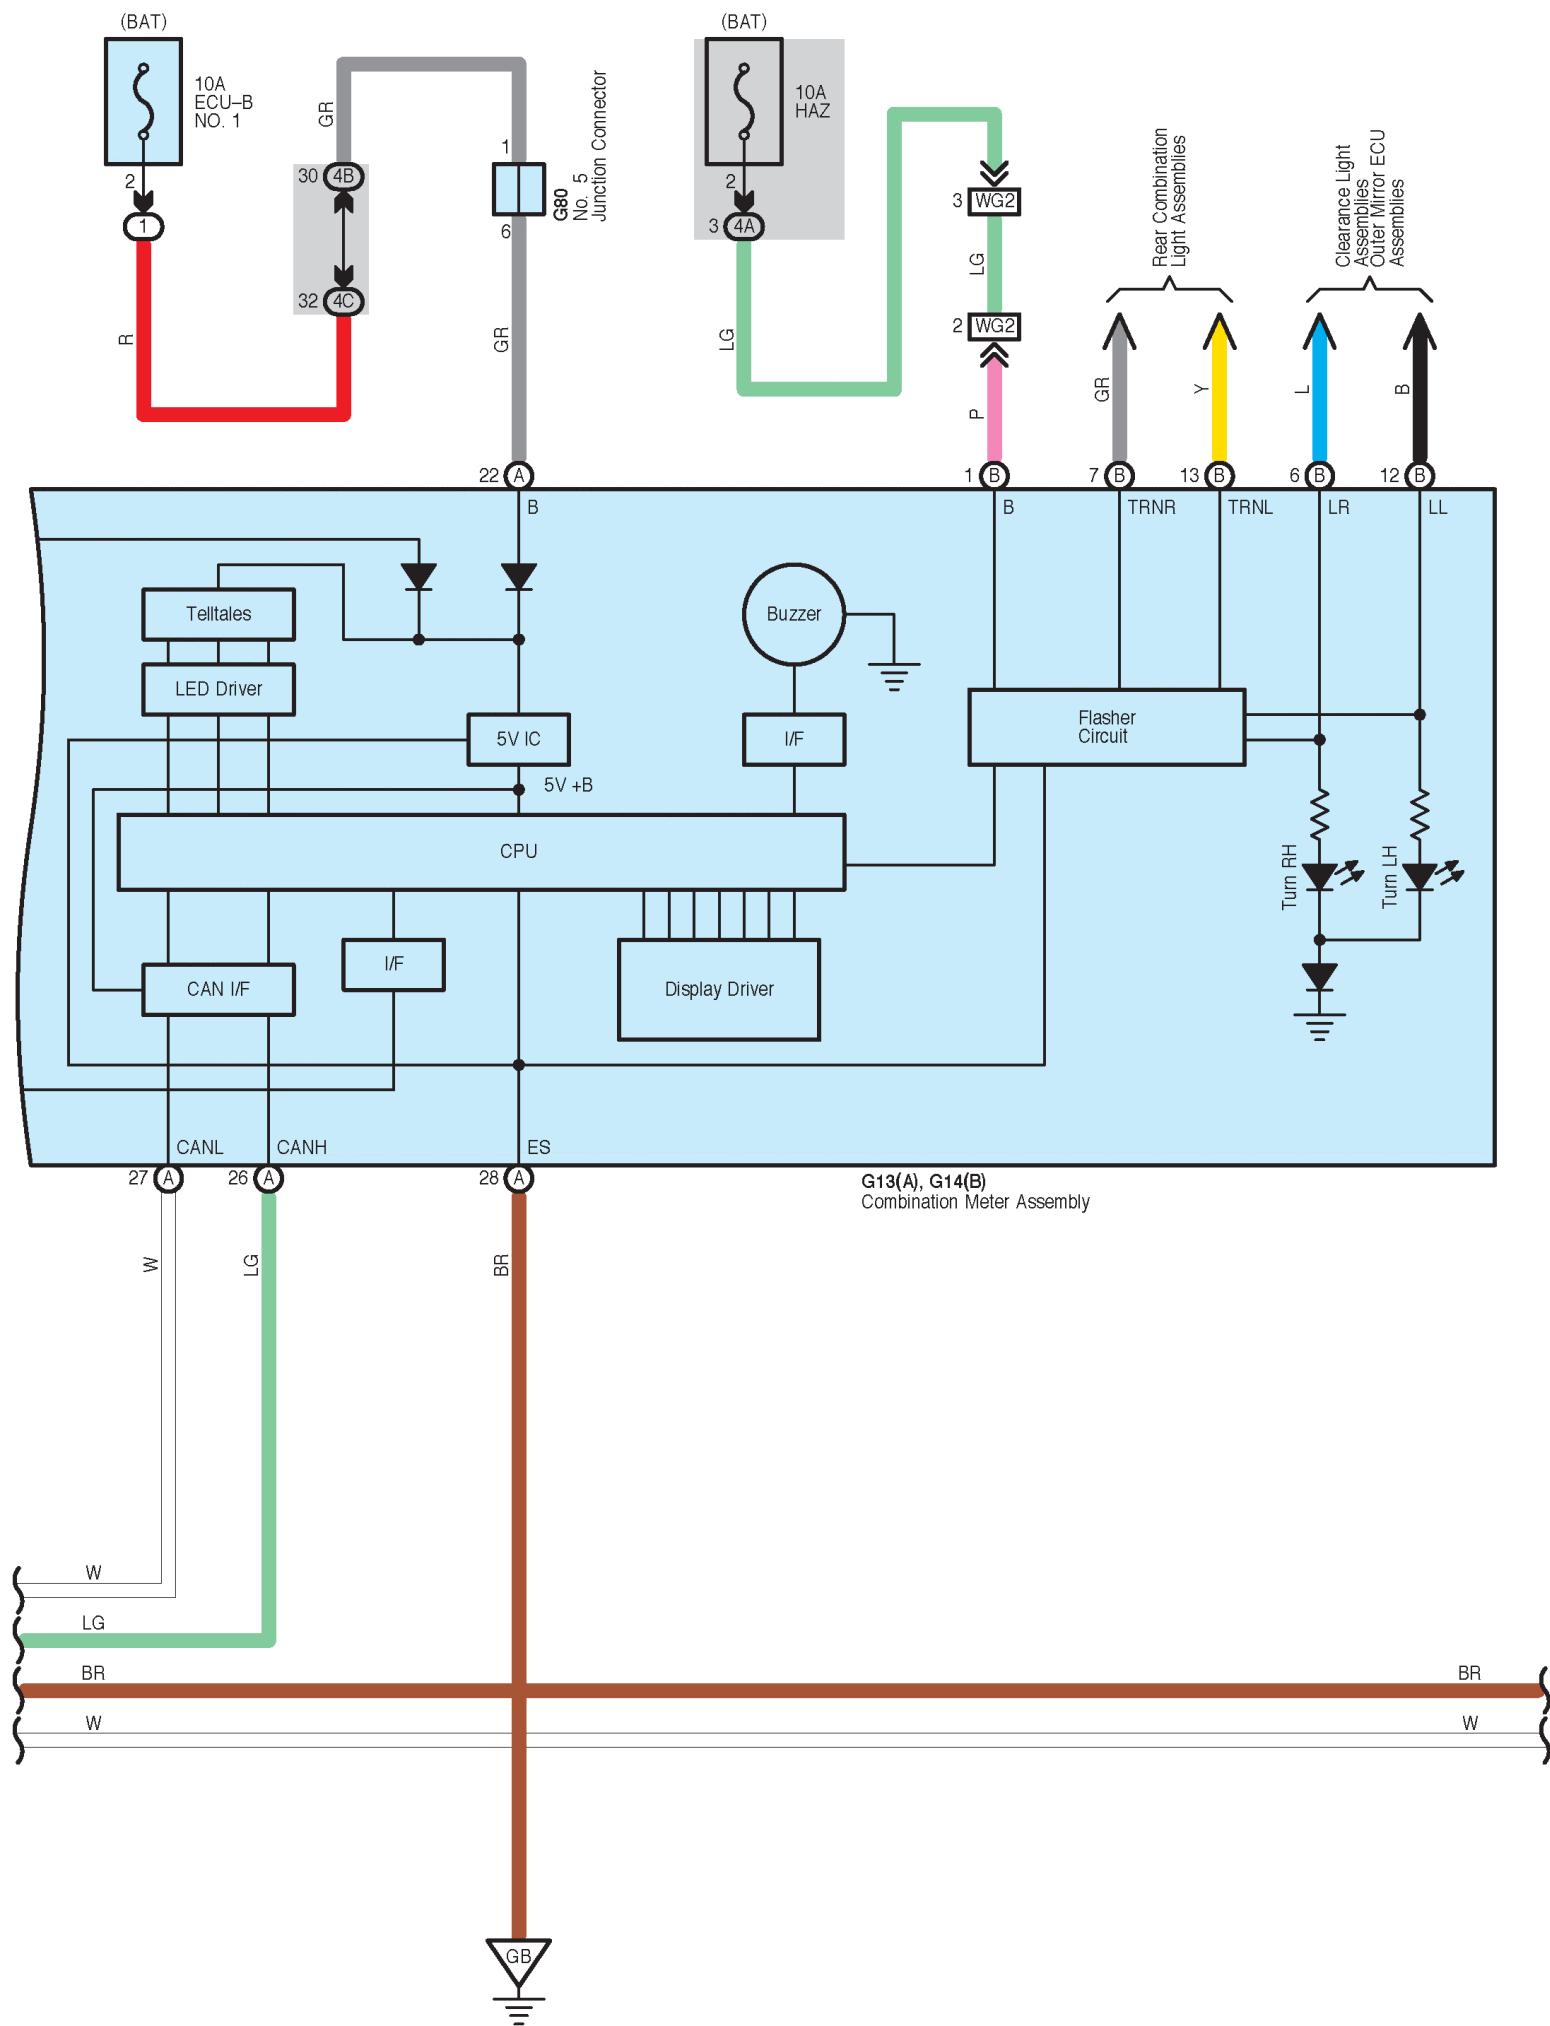


Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

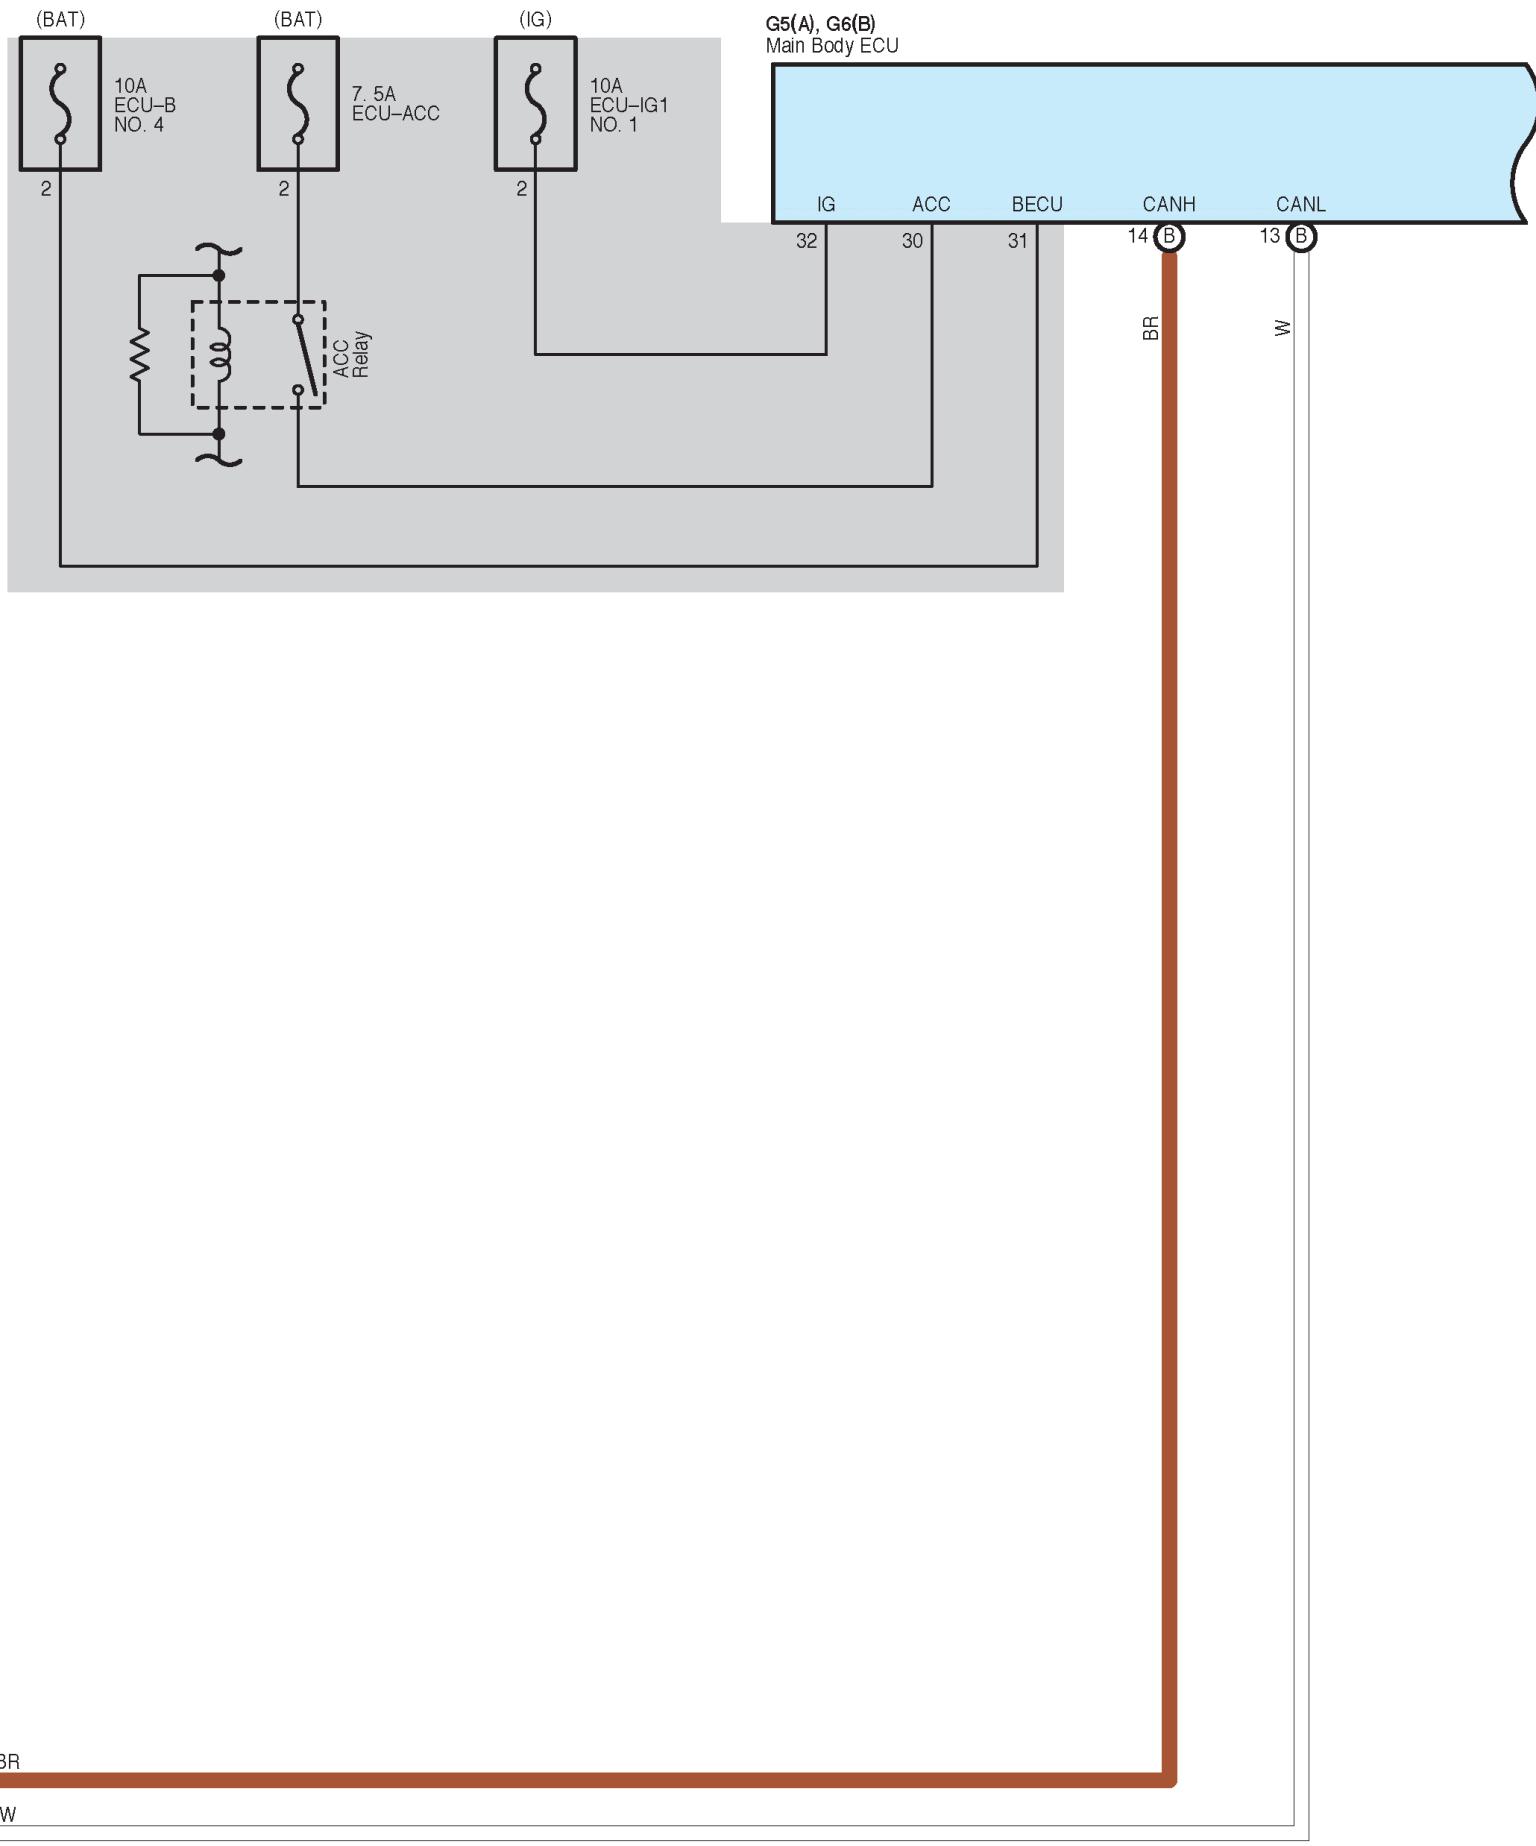


Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control


G5(A), G6(B)
Main Body ECU

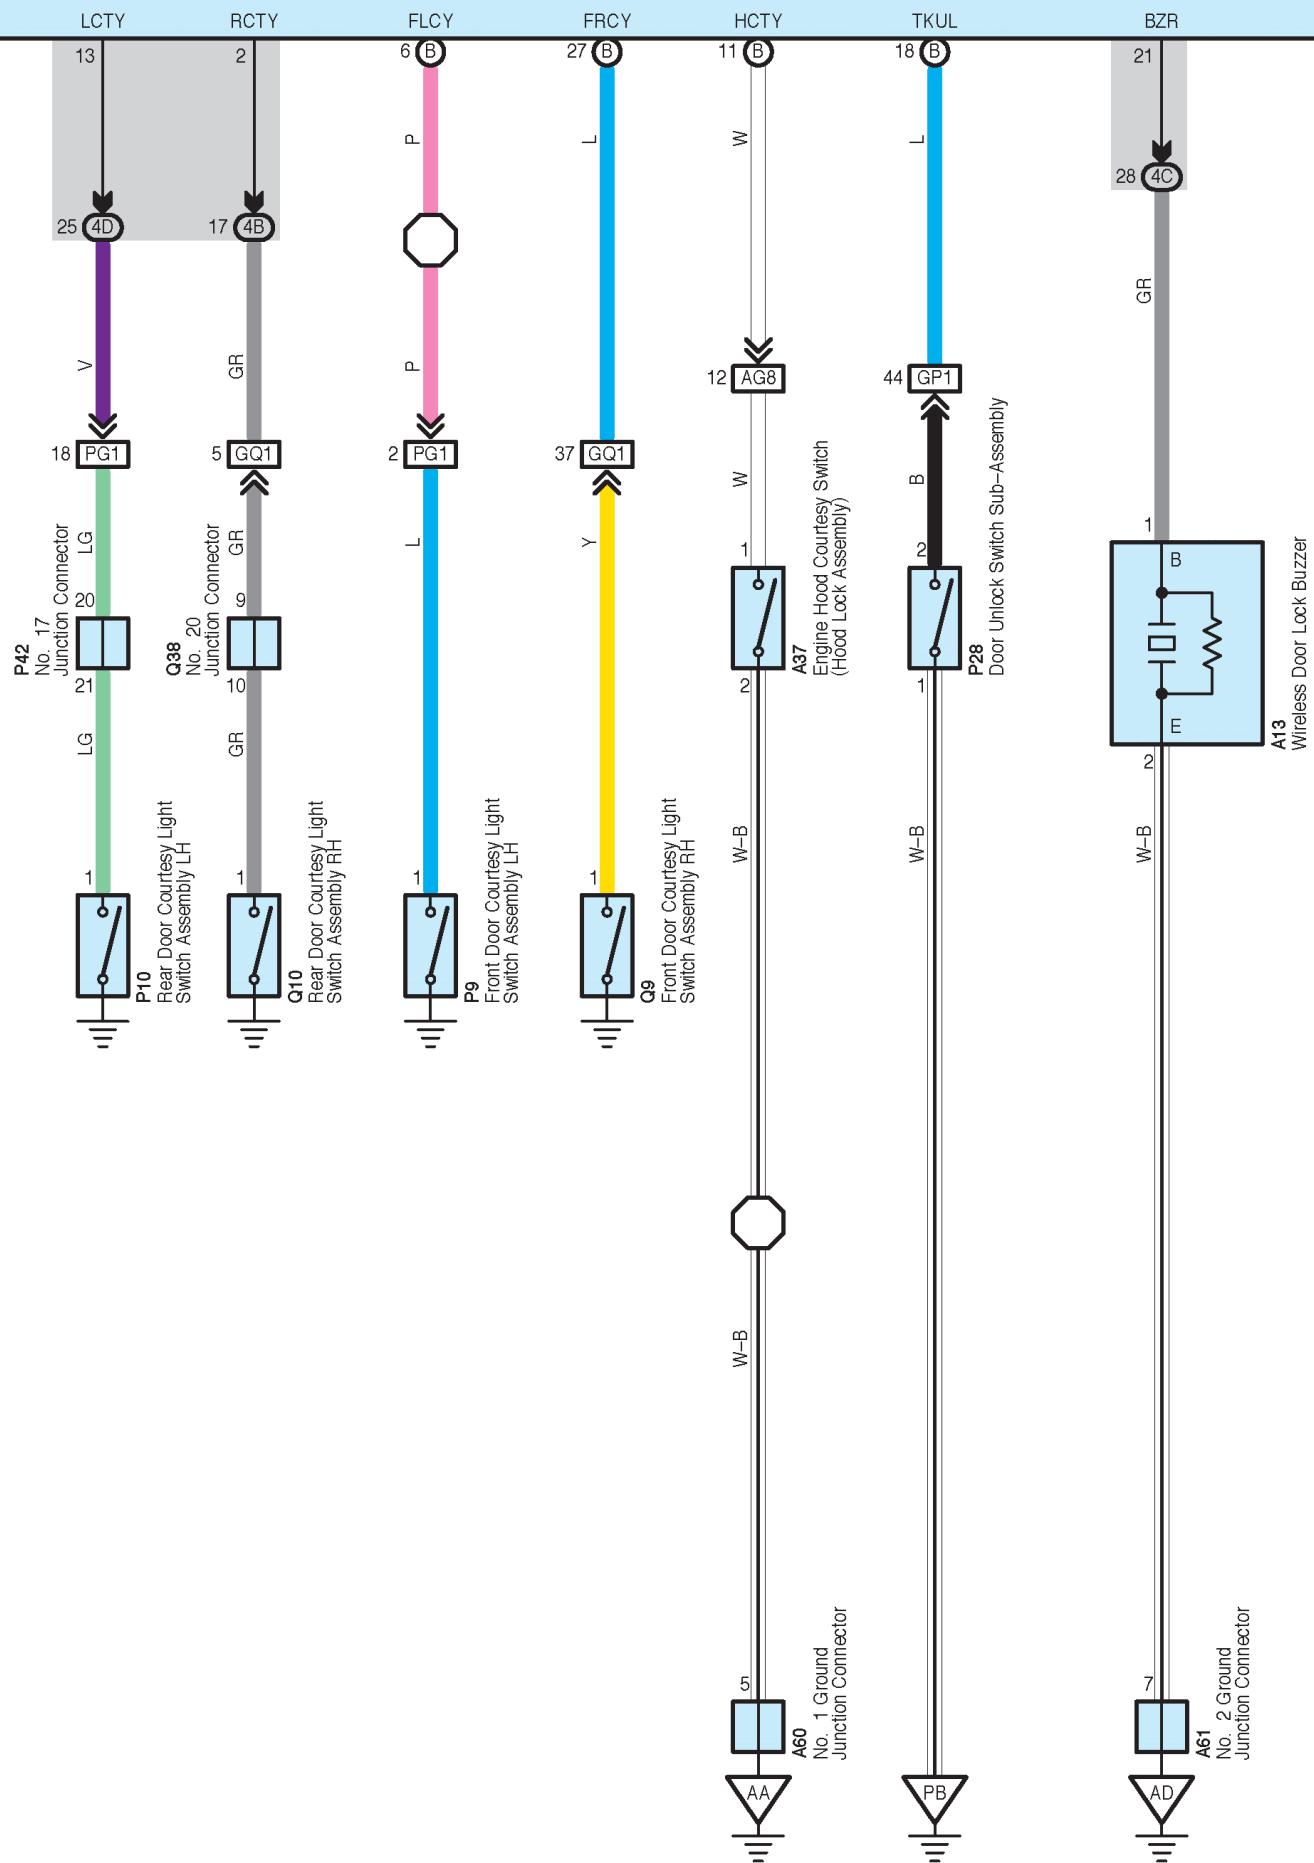

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control


G5(A), G6(B)
Main Body ECU

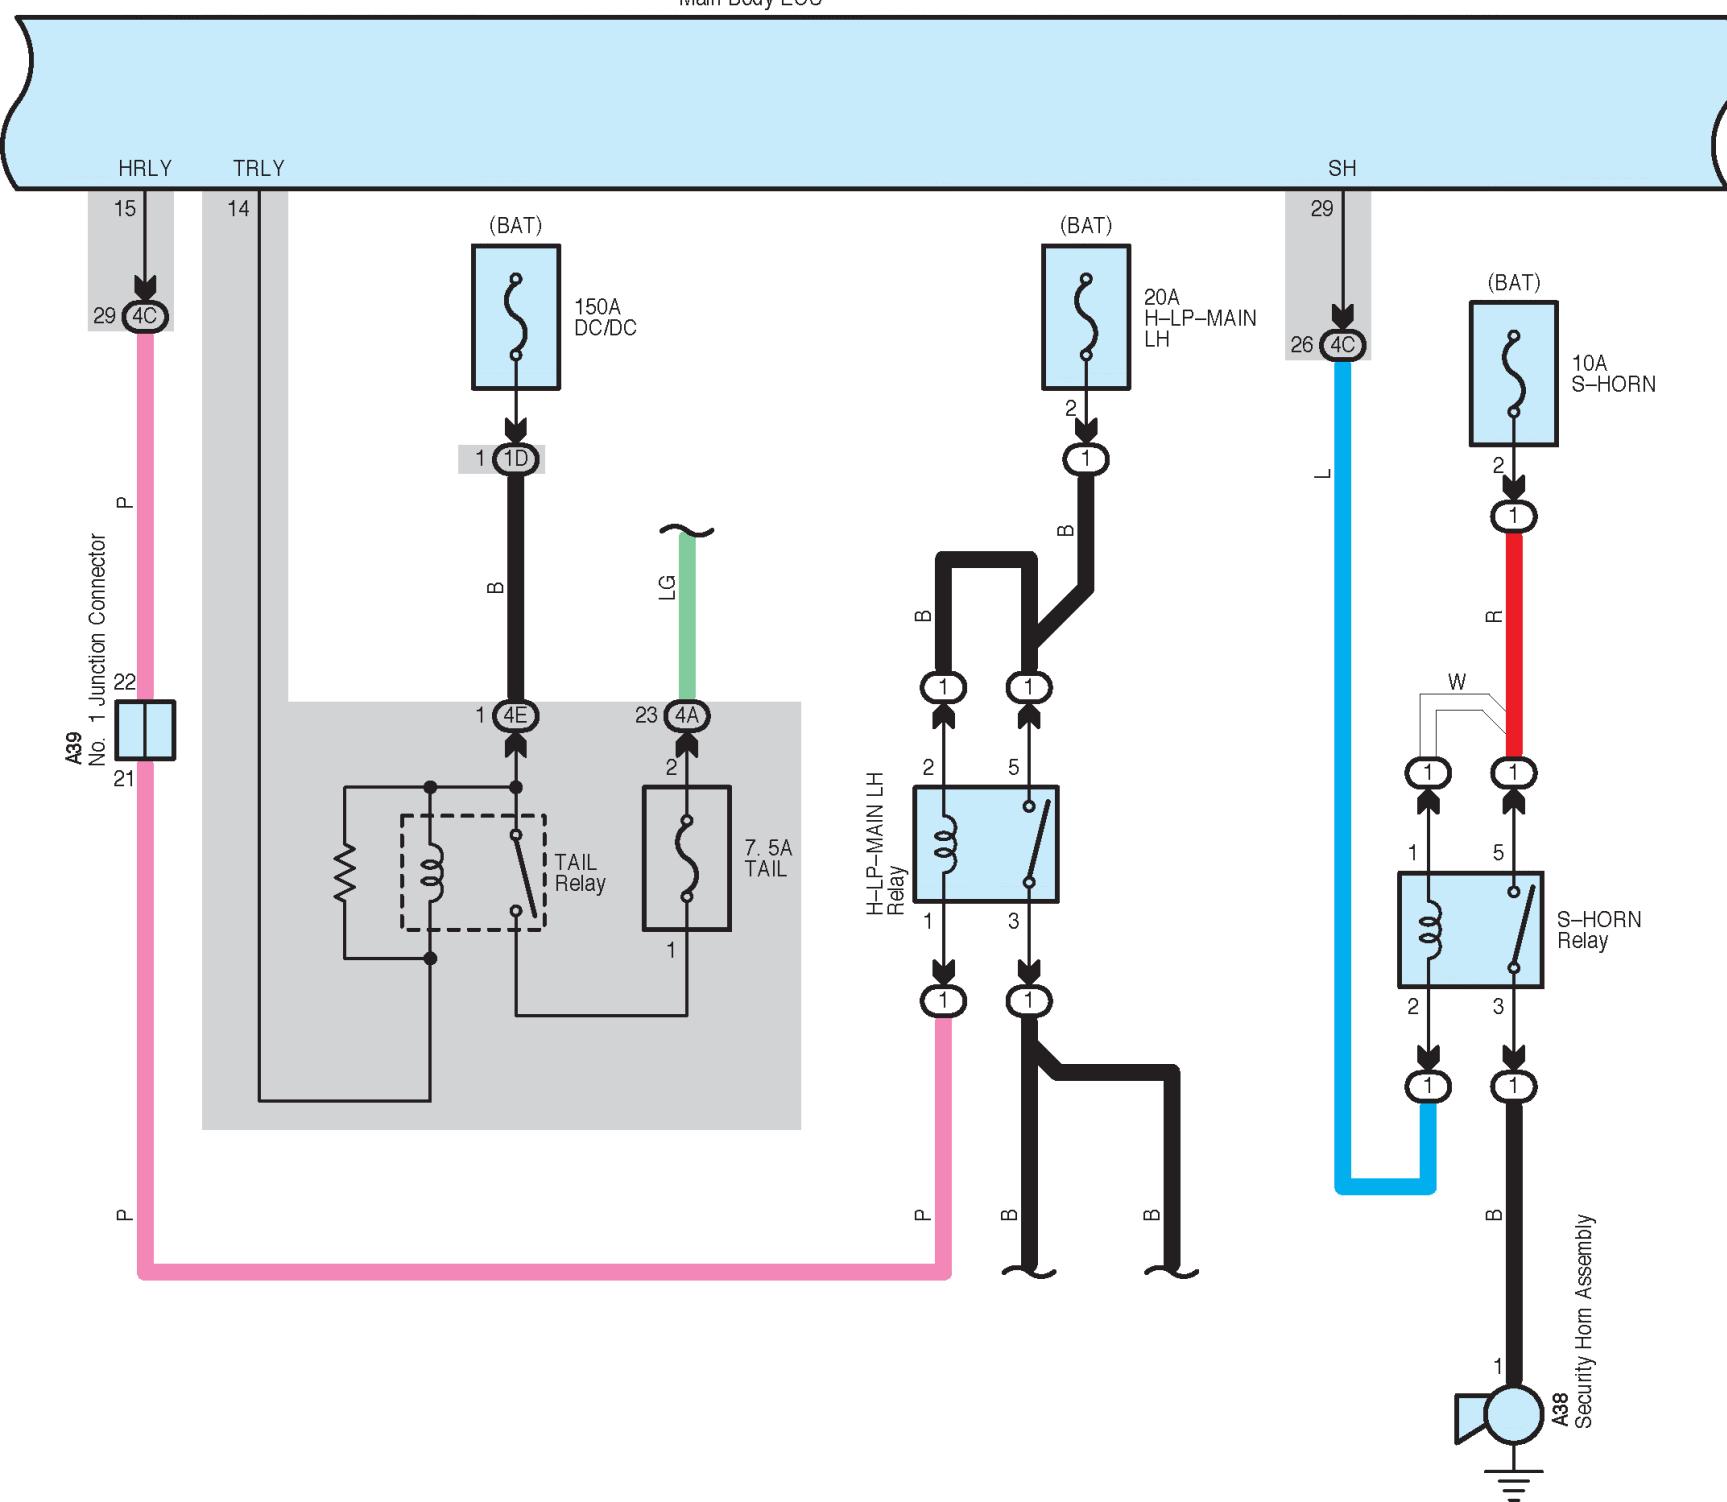

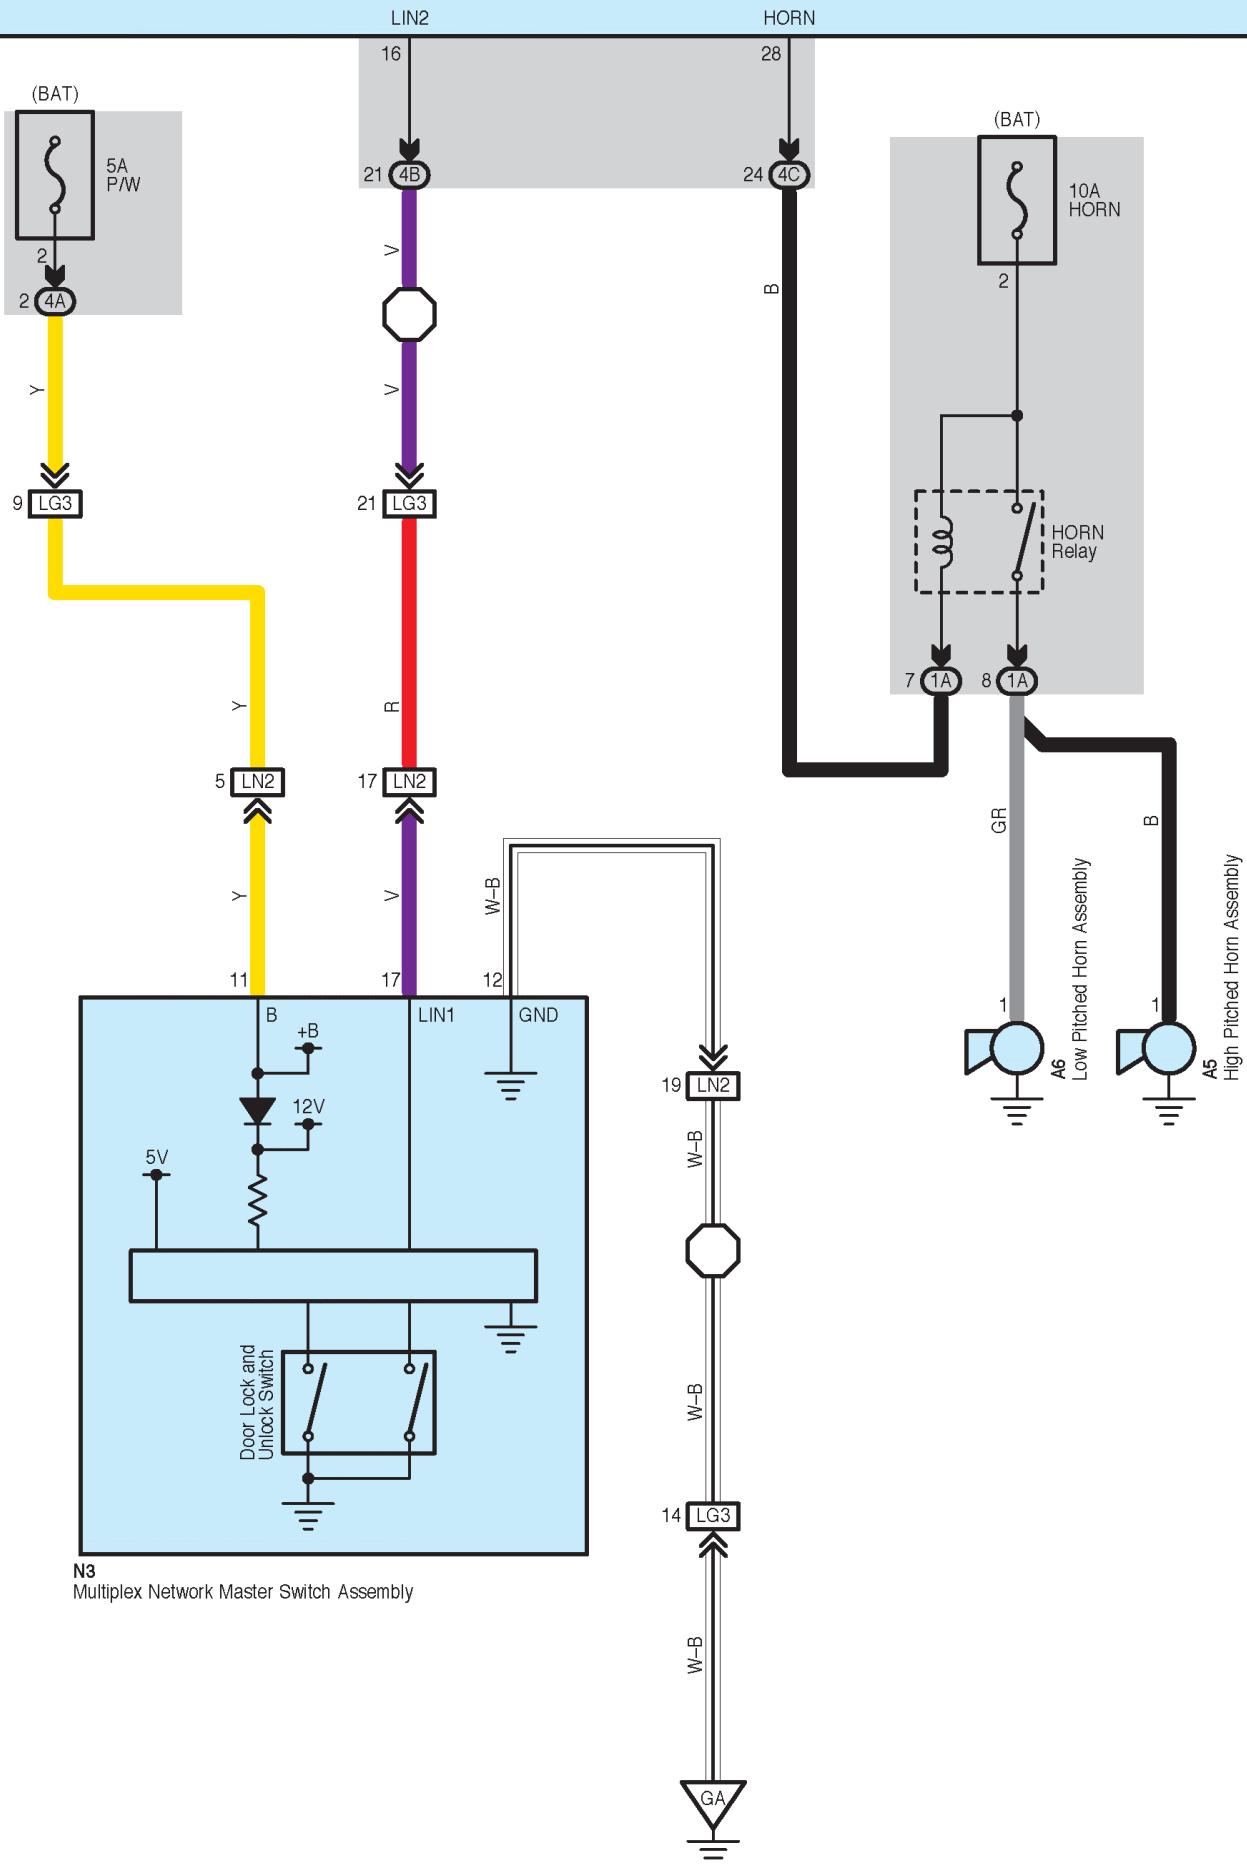
G5(A), G6(B)
Main Body ECU

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

G5(A), G6(B)
Main Body ECU

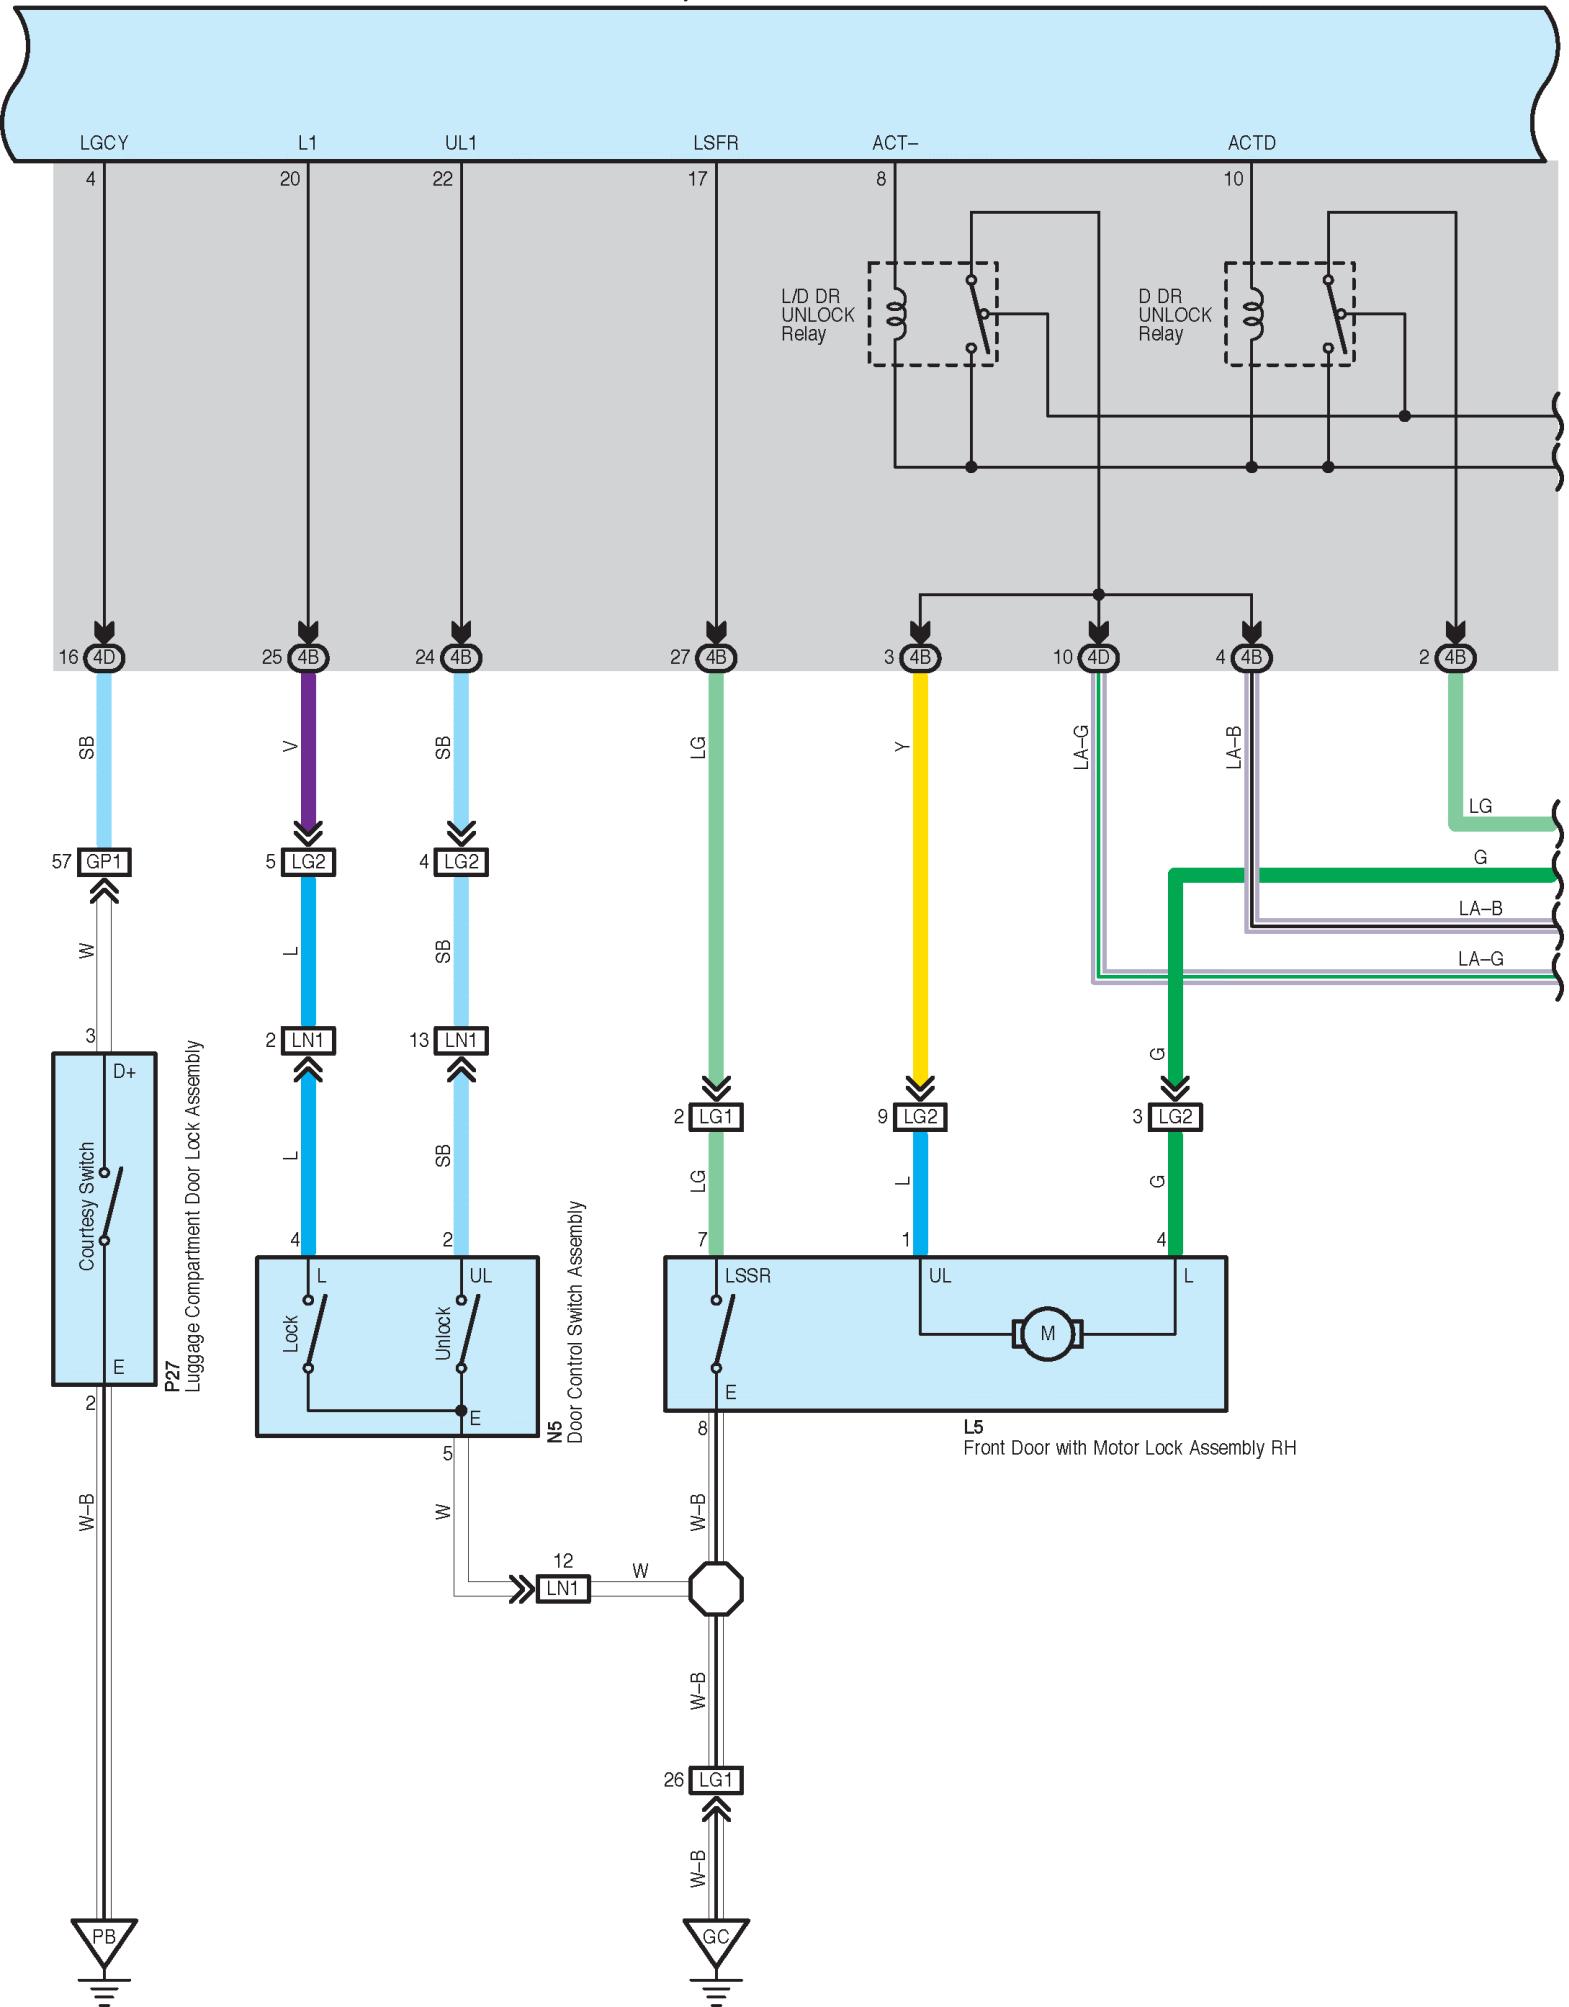


G5(A), G6(B)
Main Body ECU

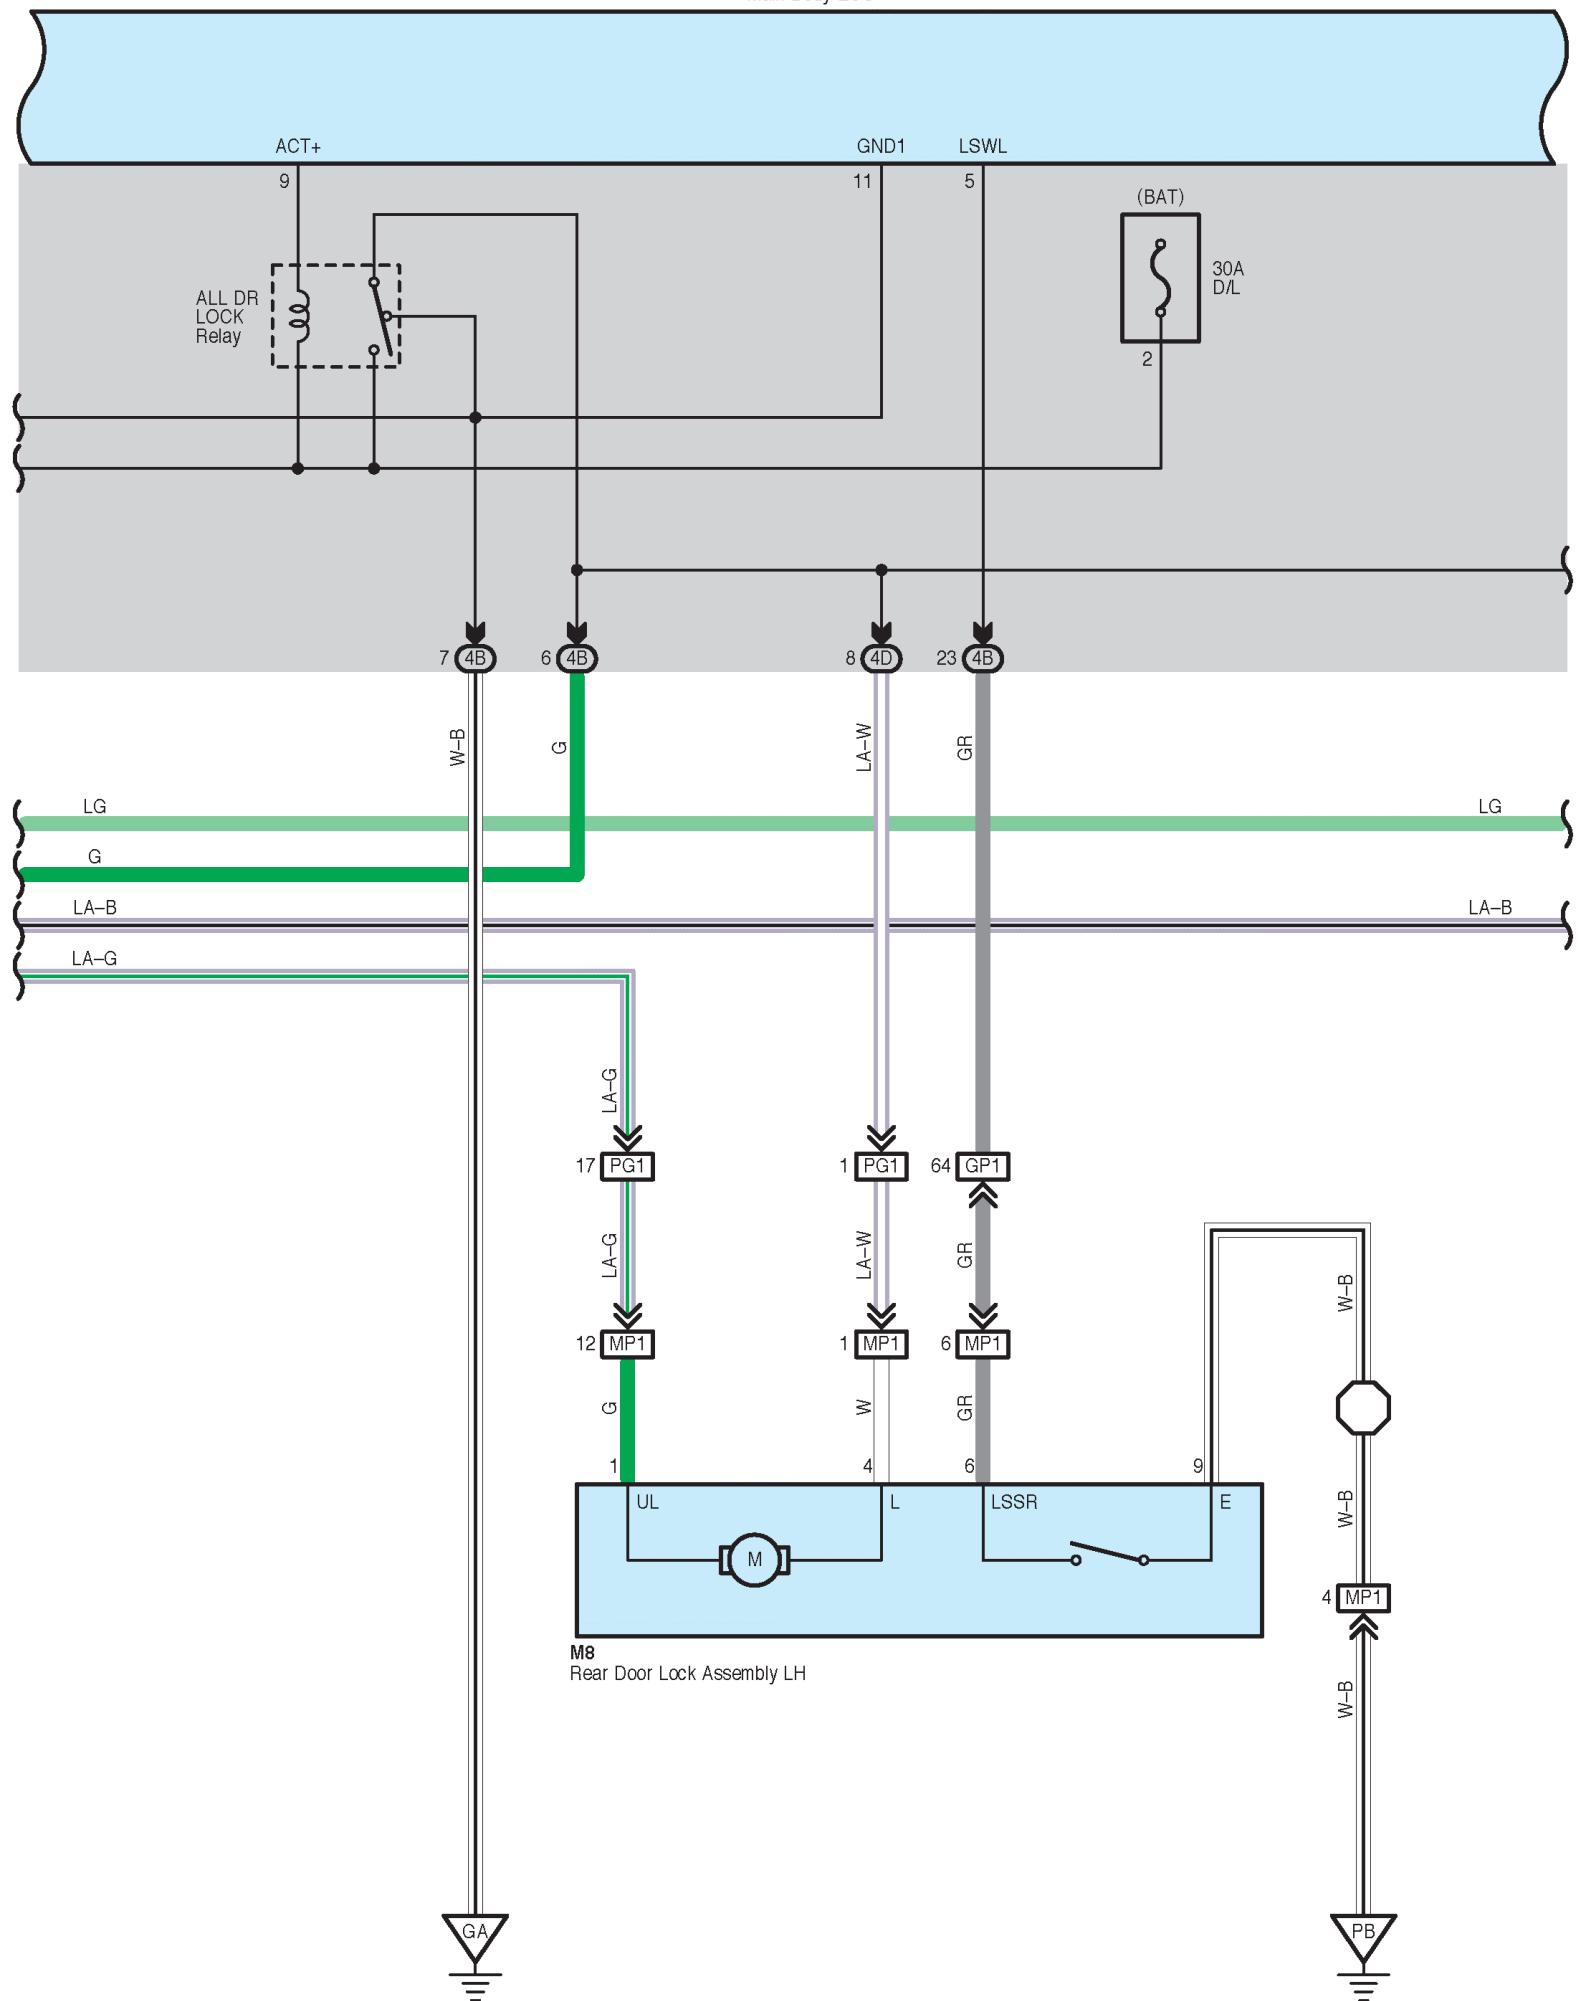

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

G5(A), G6(B)
Main Body ECU

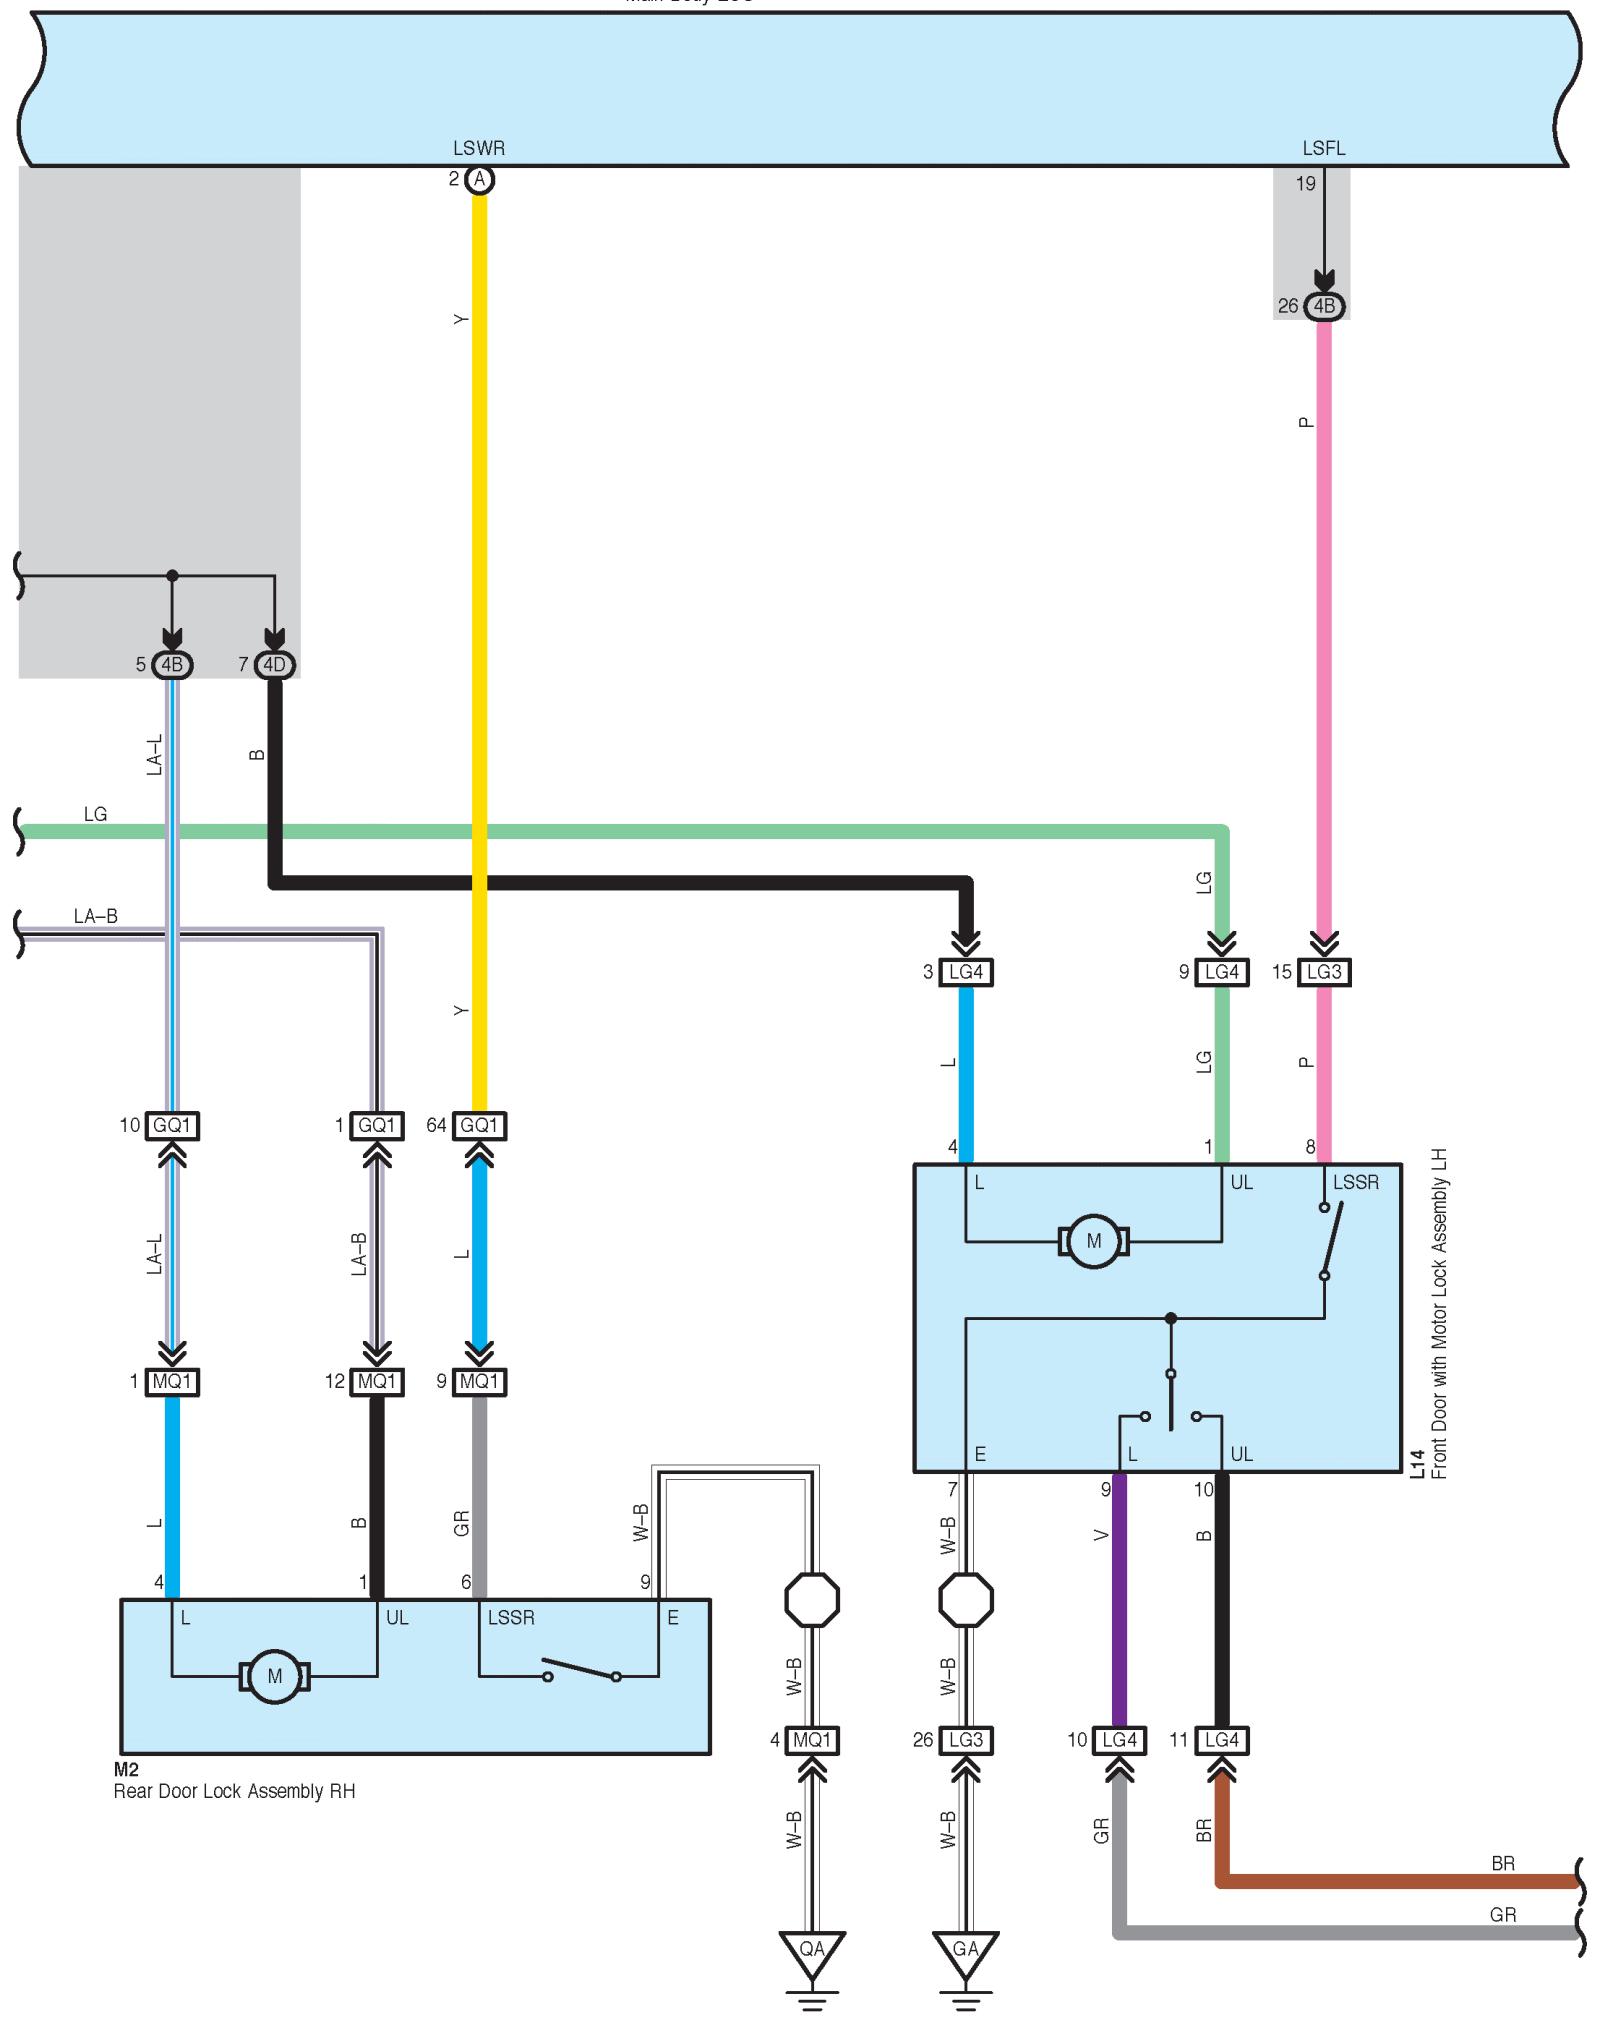

Immobiliser System, Smart Key System, Starting, Steering Lock, Theft Deterrent, Wireless Door Lock Control

G5(A), G6(B)
Main Body ECU

