


## BLOWER MOTOR REMOVAL

ACOP1-01

### 1. REMOVE THESE PARTS :

- (a) Front door scuff plate RH
- (b) Cowl side trim RH
- (c) No.2 under cover  
(See page [BO-83](#))

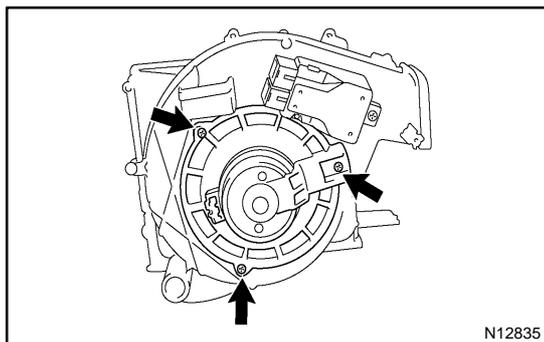

### 2. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.