


REMOVAL

1. REMOVE FRONT PERSONAL LIGHT LENS

2. REMOVE FRONT PERSONAL LIGHT

- (a) Remove the 3 screws.
- (b) Disconnect the 2 connectors.

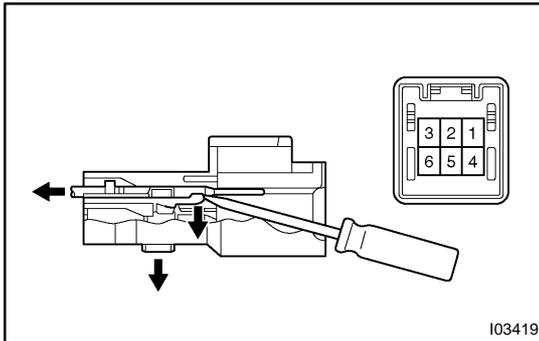

3. REMOVE GARAGE DOOR OPENER

- (a) Remove the 3 screws.
- (b) Remove the garage door opener connector from the personal light.
- (c) Disconnect the secondary locking device.
- (d) Release the locking plug of the terminal 4 and 5, and pull the terminals out from the rear.

HINT:

Use a small screw driver.