


REMOVAL

1. REMOVE THESE PARTS:

- (a) Floor carpet
- (b) Door striker cover
- (c) Trim rear cover
- (d) Trim front cover
- (e) RH side cover

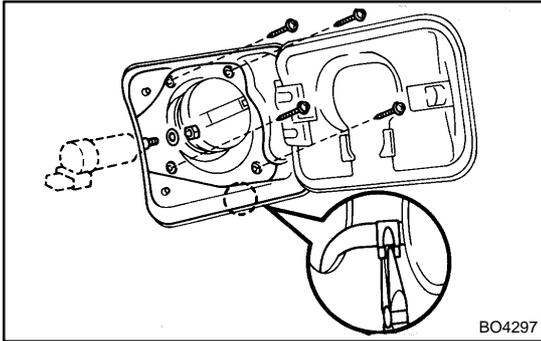


2. REMOVE FUEL FILLER LID SHIELD

- (a) Remove the nut, washer and fuel lid opener solenoid.
- (b) Disconnect the connector from the solenoid.
- (c) Remove the 4 screws.
- (d) Remove the fuel tank cap and lid shield.


CAUTION:

- Always keep the tank cap closed when it is not required to be open.
 - Keep all fire away during the operation.
- (e) Using pliers, disconnect the tube from the shield.
 - (f) Install the cap quickly.

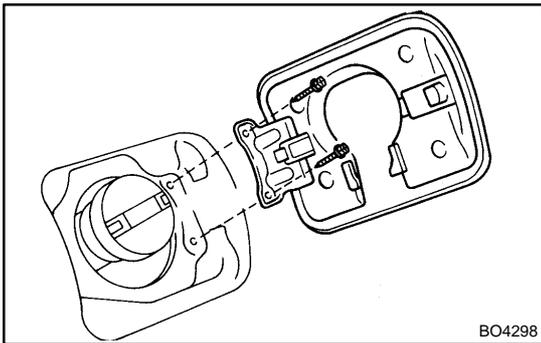

3. REMOVE FUEL FILLER OPENING LID

Remove the 2 screws and lid.

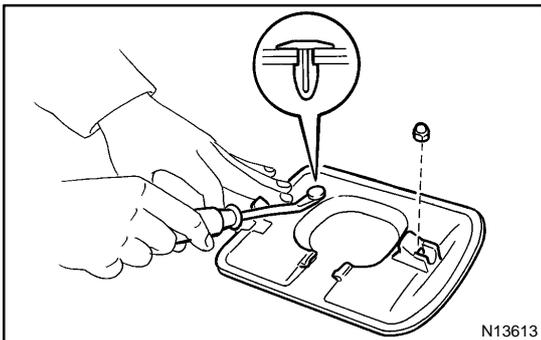

4. REMOVE FUEL FILLER OPENING LID COVER

- (a) Remove the nut.
- (b) Using a clip remover, remove the clip and cover.