


## ADJUSTMENT

### 1. ADJUST FRONT DOOR

- (a) Adjust the front door in forward/rearward and vertical directions.


Using SST, loosen the body side hinge bolts to adjust.  
SST 09812-00010

**Torque: 33 N·m (330 kgf-cm, 24 ft-lbf)**

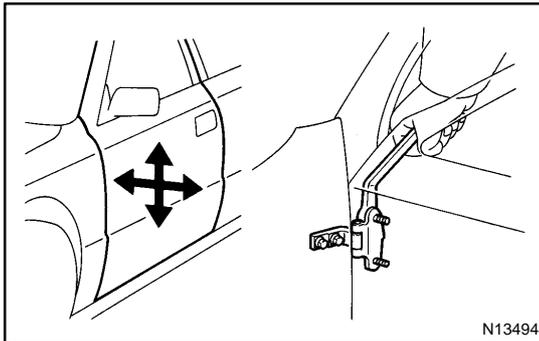

- (b) Adjust the front door in left/right and vertical directions. Loosen the door side hinge bolts to adjust.

**Torque: 26 N·m (260 kgf-cm, 19 ft-lbf)**

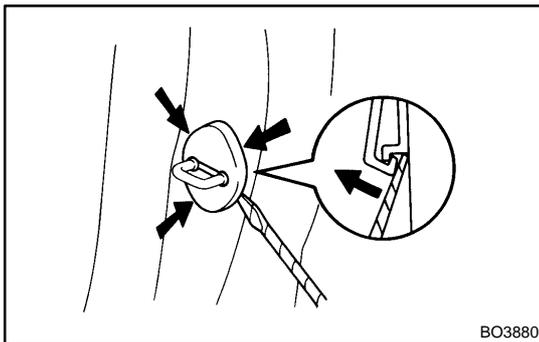


- (c) Adjust the front door lock striker.

- (1) Check that the door fit and door lock linkages are adjusted correctly.

- (2) Using a screwdriver, remove the striker cover.

HINT:

Tap the screwdriver tip before use.

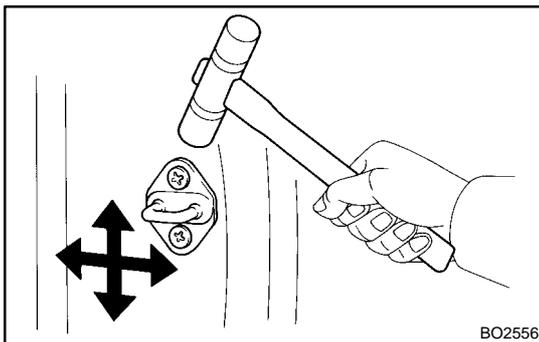

- (3) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screws again.

- (4) Install the striker cover.

### 2. ADJUST FRONT DOOR GLASS

HINT:

Check that there is space between the glass guide and stopper.

- (a) Fully raise the glass and adjust the gap between the glass and door panel.

- (b) After adjustment, immobilize the guide, stoppers and 2 nuts.

HINT:

- Check that the edge of the glass does not come in contact with the bottom part of the weatherstrip when the glass is being raised or lowered.
  - Check that the glass moves up and down smoothly and that the weatherstrip does not get caught by the glass.
- (c) Raise the glass again and check the installation.