



INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE BATTERY CLAMP COVER, AIR CLEANER INLET AND INTAKE AIR CONNECTOR
3. DRAIN ENGINE COOLANT
4. DISCONNECT THROTTLE BODY (See page SF-59)

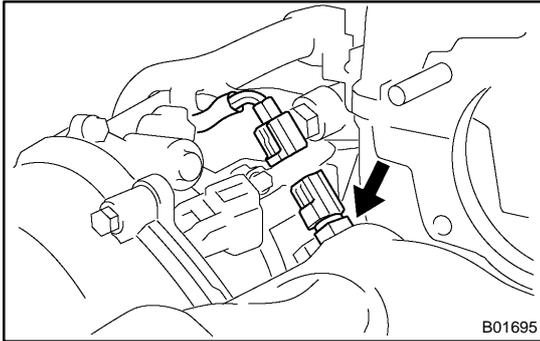

5. REMOVE ECT SENSOR
 - (a) Disconnect the ECT sensor connector.
 - (b) Remove the ECT sensor and gasket.

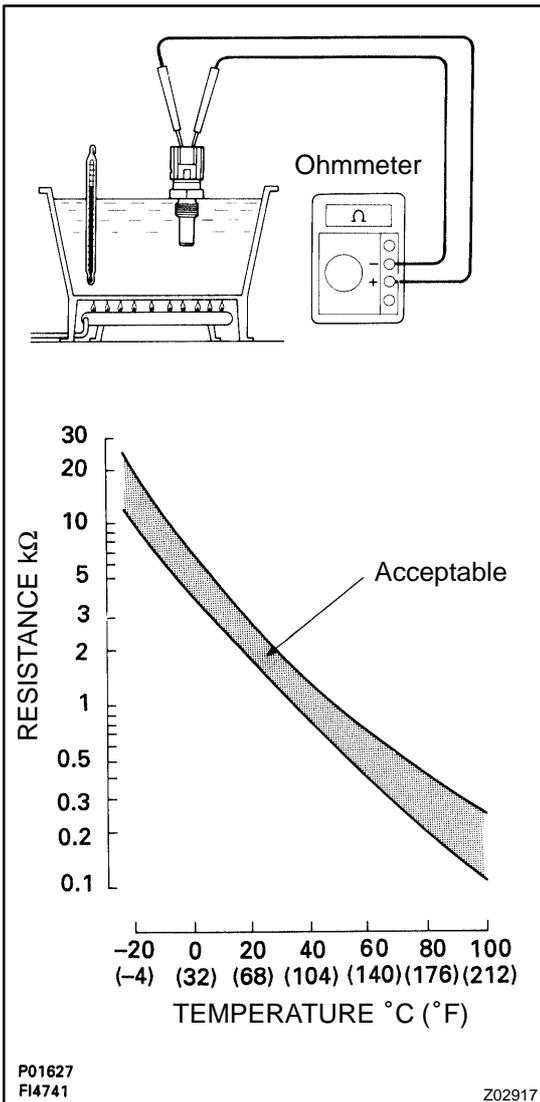

6. INSPECT ECT SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart graph

If the resistance is not as specified, replace the sensor.

7. REINSTALL ECT SENSOR

- (a) Install a new gasket and the ECT sensor.
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)
- (b) Connect the ECT sensor connector.

8. RECONNECT THROTTLE BODY (See page SF-61)

9. REFILL WITH ENGINE COOLANT

10. REINSTALL INTAKE AIR CONNECTOR, AIR CLEANER INLET AND BATTERY CLAMP COVER

11. REINSTALL V-BANK COVER