


ADJUSTMENT

1. ADJUST REAR DOOR


- (a) Remove these parts:
- (1) Front door scuff plate
 - (2) Rear door scuff plate
 - (3) Center pillar garnish
 - (4) Front seat belt retractor bolts

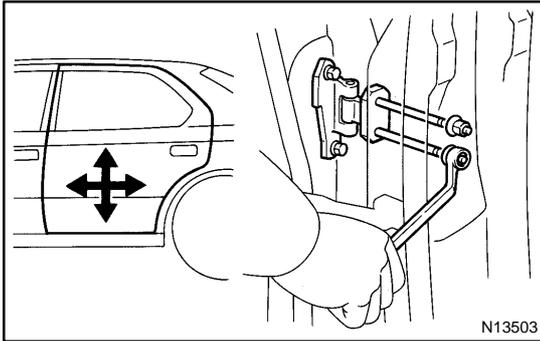

- (b) Adjust the rear door in forward/rearward and vertical directions.

Loosen the body side nuts to adjust.

Torque: 33 N·m (330 kgf·cm, 24 ft·lbf)

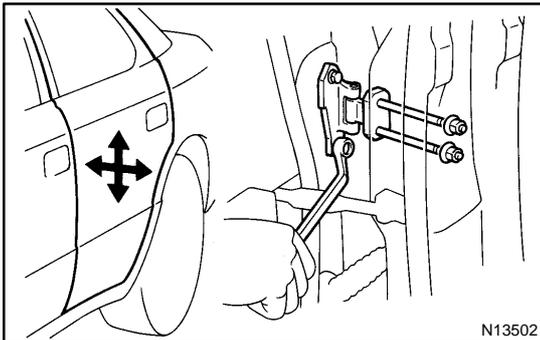

- (c) Adjust rear door in left/right and vertical directions.
Loosen the door side hinge bolts to adjust.

Torque: 26 N·m (260 kgf·cm, 19 ft·lbf)

- (d) Adjust the rear door lock striker.
Adjust the rear striker in the same manner as the front door.

2. ADJUST DOOR GLASS

Adjust the door glass.

HINT:

Check that there is space between the glass guide and stopper.

- (1) Fully raise the glass, and adjust the gap between the glass and door panel.
- (2) After adjustment, immobilize the guide, stoppers and 2 nuts.

HINT:

- Check that the edge of the glass does not come in contact with the bottom part of the weatherstrip when the glass is being raised or lowered.
- Check that the glass moves up and down smoothly and that the weatherstrip does not get caught by the glass.
- (3) Raise the glass again and check the installation.