


LUGGAGE COMPARTMENT DOOR SUPPORT REPLACEMENT

B000E-01

1. REMOVE LUGGAGE COMPARTMENT DOOR SUPPORT

- (a) Remove the door stay bolt from the door hinge.
- (b) Rotate the rear of the support downward and remove the door support from the bracket.

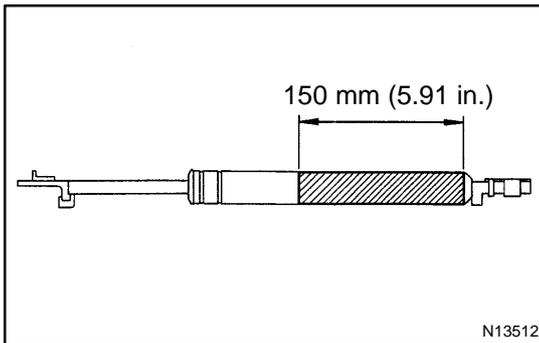


2. IF NECESSARY, REPLACE LUGGAGE COMPARTMENT DOOR SUPPORT

NOTICE:

Handling the support.

- Do not disassemble the support as the cylinder is filled with pressurized gas.
- If the support is to be replaced, drill a 2.0 ~ 3.0 mm (0.079 - 0.118 in.) hole in the area shown in the illustration to completely release the high pressure gas before disposing of it.
- When drilling, chips may fly out so work carefully.
- The gas is colorless, odorless and non - toxic.
- When working, handle the support carefully. Never score or scratch the exposed part of the piston rod, and allow any paint or oil to get on it.
- Do not turn the piston rod and cylinder with the support fully extended.

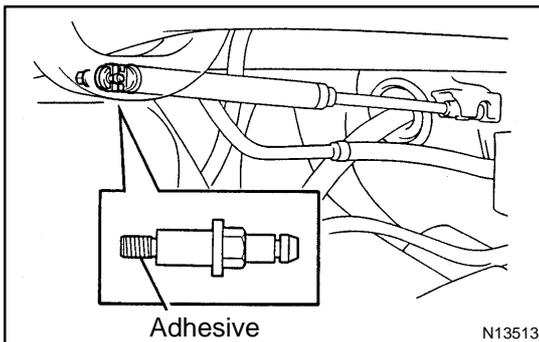

3. INSTALL LUGGAGE COMPARTMENT DOOR SUPPORT

- (a) Apply adhesive to the bolt.
Part No.08833-00070,THREE BOND 1324 or equivalent
- (b) Install the door support.
Torque: 22 N·m (225 kgf·cm, 16 ft·lbf)