


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	2 – 3	Continuity
ON	2 – 3 – 4 6 – 7	Continuity
START	1 – 2 – 4 6 – 7 – 8	Continuity

If continuity is not as specified, replace the switch.

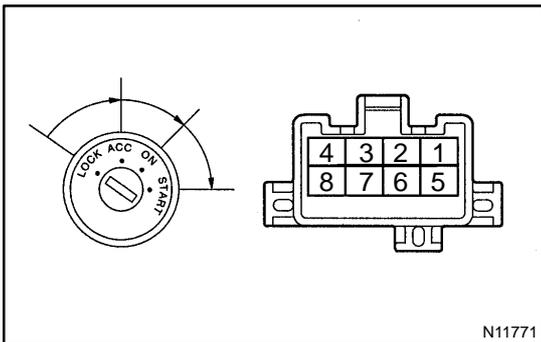


2. INSPECT IGNITION SWITCH CIRCUIT

Connect the switch connector and inspect the connector on the wire harness side from the back side, as shown.

If circuit is not as specified, inspect the switch and circuits connected to other parts.


Tester connection	Condition	Specified condition
1 – Ground	Ignition switch turned to START	Battery positive voltage
2 – Ground	Constant	Battery positive voltage
3 – Ground	Ignition switch turned to ACC or ON	Battery positive voltage
4 – Ground	Ignition switch turned to ON	Battery positive voltage
6 – Ground	Ignition switch turned to ON	Battery positive voltage
7 – Ground	Constant	Battery positive voltage
8 – Ground	Ignition switch turned to START	Battery positive voltage

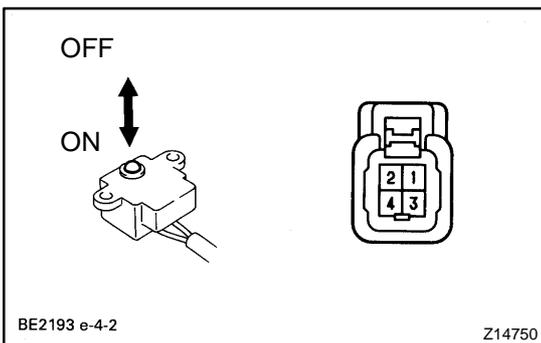

3. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Ignition key removed)	–	No continuity
ON (Ignition key set)	1 – 2	Continuity

If continuity is not as specified, replace the switch.

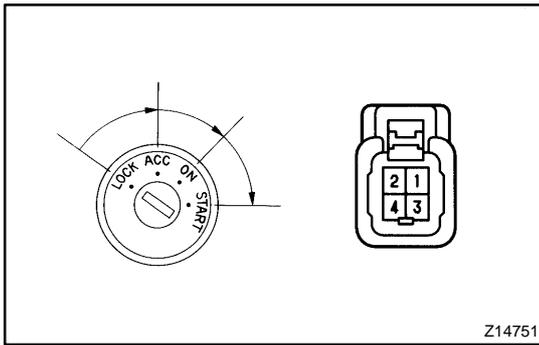

Z14751

4. INSPECT KEY UNLOCK WARNING SWITCH CIRCUIT

Connect the switch connector and inspect the connector on the wire harness side from the back side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Ignition key removed	No continuity
2 – Ground	Ignition key set	Continuity
1 – Ground	Constant	Continuity

If circuit is not as specified, inspect the switch or wire harness.