


**ADJUSTMENT**

**1. REMOVE SLIDING ROOF GARNISHES**

Before making adjustments, remove the left and right sliding roof garnishes.

HINT:

After adjustment, reinstall the sliding roof garnishes.

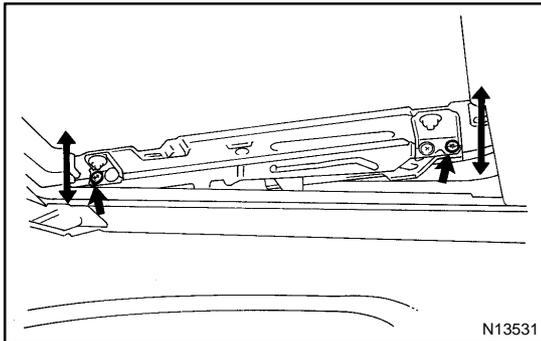


**2. ADJUST SLIDING ROOF GLASS LEVEL DIFFERENCE**

Using a torx driver, adjust the level difference by tightening or loosening the bolts.


**Clearance:**

**0 ± 2.0 mm (0 ± 0.079 in.)**

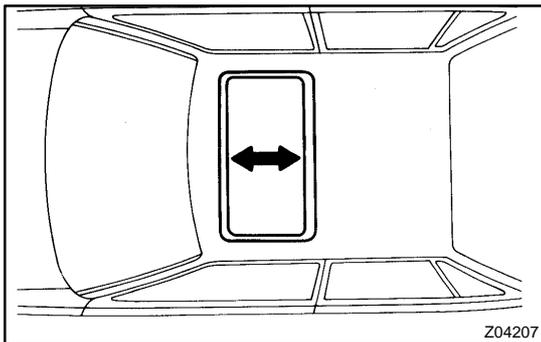

**3. ADJUST SLIDING ROOF GLASS FORWARD OR REARWARD**


(a) Adjust by loosening the sliding roof installation nuts, and move the sliding roof bracket forward and backward.

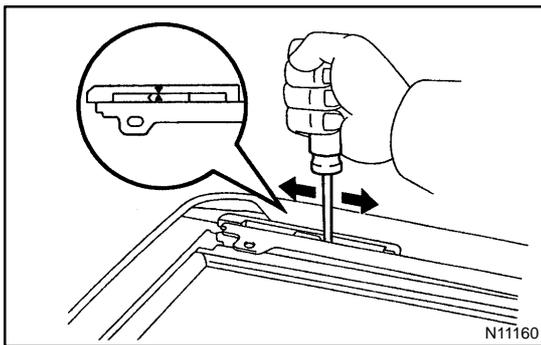

(b) When the front or rear alignment is not correct, remove the glass and adjust the drive rail.


(c) Using a screwdriver, slide the link forward or backward to align the 2 marks as shown.

(d) Slide the bracket to the forefront with your hand.

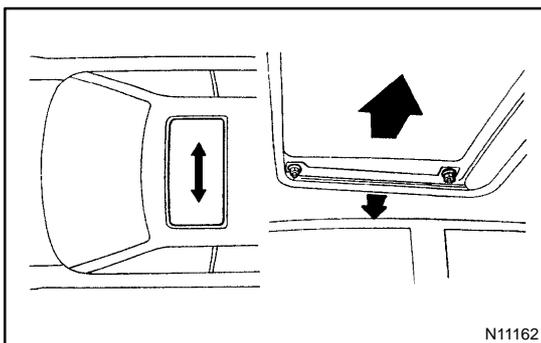

**4. ADJUST SLIDING ROOF GLASS RIGHT OR LEFT**

Adjust by loosening the sliding roof rear shoe installation nuts, and move the sliding roof to the right and left.

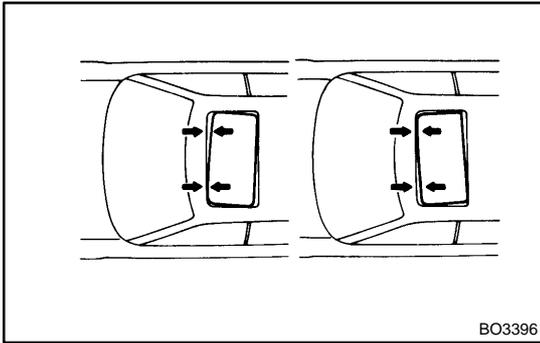


**5. ADJUST SLIDING ROOF GLASS IN CLEARANCE  
(Difference in left and right clearance)**

- (a) When the front or rear alignment is not correct, remove the drive gear and sliding roof glass, then adjust the drive cable.

**NOTICE:**

**Remove the driver gear with the sliding roof full closed.**

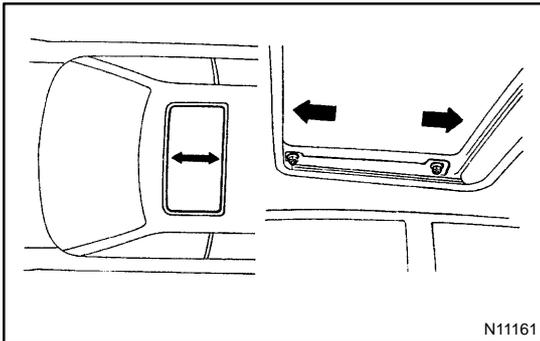

- (b) Adjust by loosening the sliding roof installation nuts and readjust the sliding roof to the proper position.