

BE3546 BE3548


Z08889

INSPECTION

1. INSPECT GLOVE BOX LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Closed)	-	No Continuity
ON (Opened)	1 - 2	Continuity

If continuity is not as specified, replace the relay.

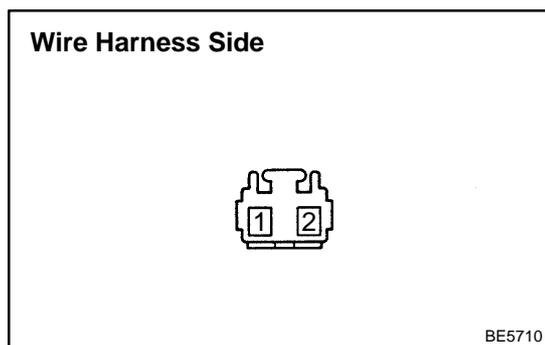

BE5710

2. INSPECT GLOVE BOX LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
1 - Ground	Light control switch position OFF	No voltage
1 - Ground	Light control switch position TAIL or HEAD	Battery positive voltage
2 - Ground	Constant	Continuity

If the circuit is not as specified, inspect the circuits connected to other parts.