


DISASSEMBLY

1. REMOVE NO.1 DEFROSTER NOZZLE GARNISH
2. REMOVE NO.2 SIDE DEFROSTER NOZZLE DUCT
3. REMOVE NO.1 SIDE DEFROSTER NOZZLE DUCT
4. REMOVE DEFROSTER NOZZLE ASSEMBLY

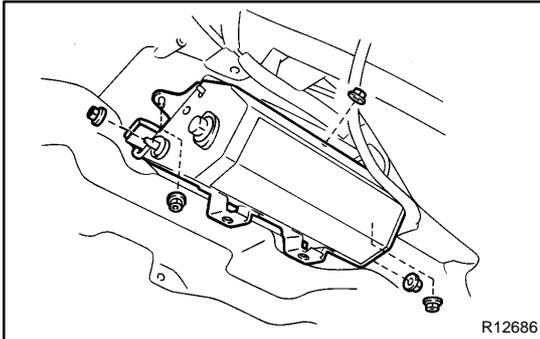


5. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY
(See page [RS-29](#))

Remove the 5 nuts, front passenger airbag assembly and front passenger airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

6. REMOVE NO.3 HEATER TO REGISTER DUCT
7. REMOVE SOLAR SENSOR

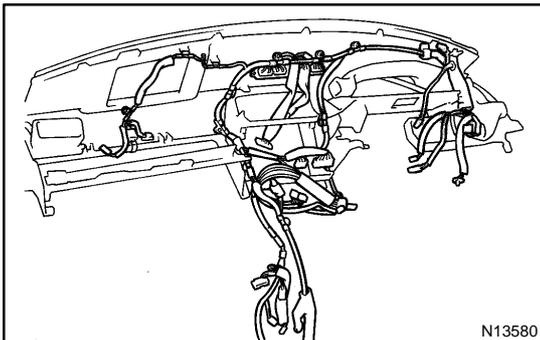

8. REMOVE INSTRUMENT PANEL WIRE HARNESS
9. REMOVE GLOVE COMPARTMENT DOOR LOCK STRIKER PLATE
10. REMOVE NO.3 FINISH PANEL MOUNTING BRACKET
11. REMOVE NO.1 SIDE DEFROSTER NOZZLE
12. REMOVE NO.2 SIDE DEFROSTER NOZZLE
13. REMOVE NO.1 HEATER TO REGISTER DUCT
14. REMOVE NO.4 FINISH PANEL MOUNTING BRACKET
15. REMOVE NO.1 REGISTER ASSEMBLY
16. REMOVE NO.3 REGISTER ASSEMBLY