


REMOVAL

1. REMOVE THESE PARTS:

- (a) Engine under cover
- (b) Radiator support opening cover
- (c) Front fender moulding
- (d) Front fender liner
- (e) Front turn signal light
- (f) Headlight
- (g) Front bumper cover
- (h) Hood lock release lever

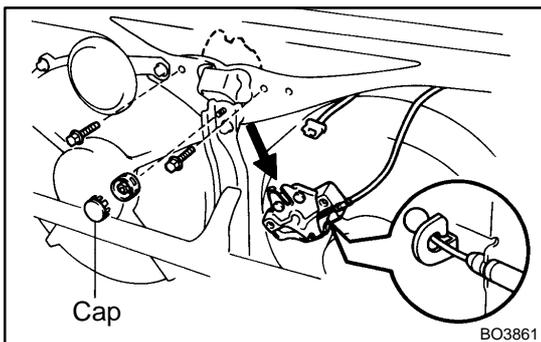

2. REMOVE HOOD LOCK

- (a) Using a screwdriver, pry out the cap.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 2 bolts, nut and hood lock.
- (c) Disconnect the link from the lock.


3. REMOVE HOOD LOCK CONTROL CABLE

- (a) Using a screwdriver, disconnect the cable from the clamps.

HINT:

Tape the screwdriver before use.

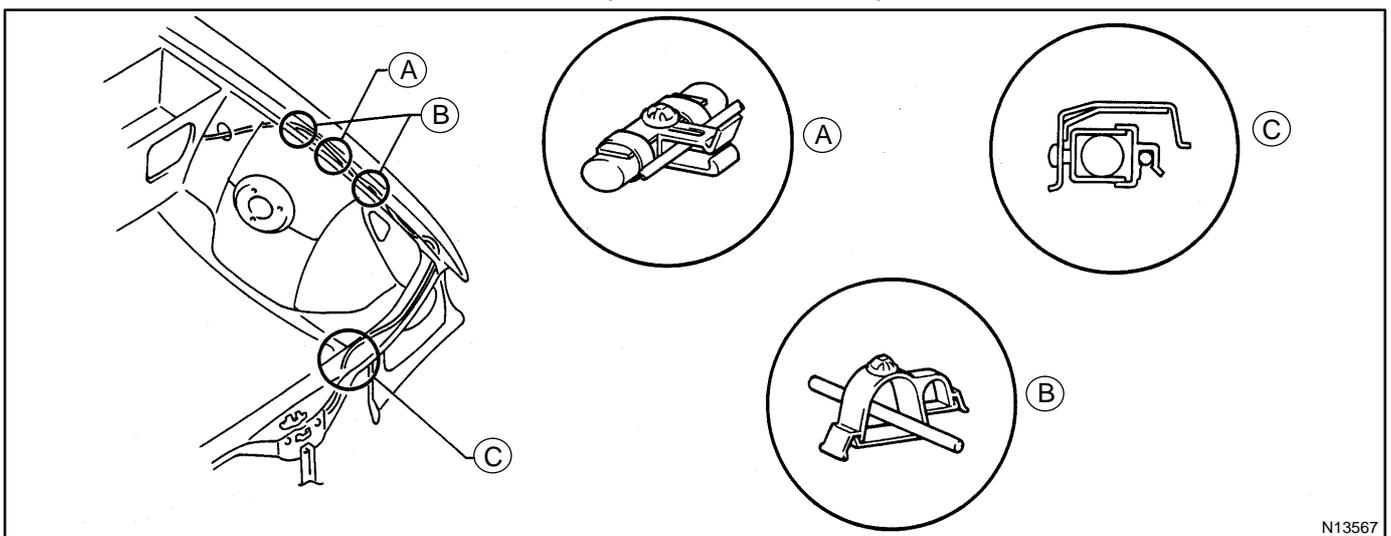


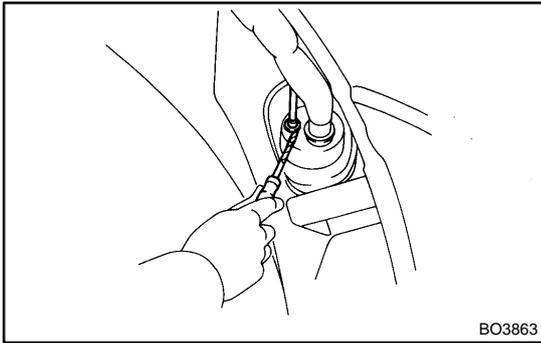

- (b) Using a screwdriver, pry out the cable stopper from the grommet.

HINT:

- Tape the screwdriver tip before use.
- Do not damage the grommet with the screwdriver.

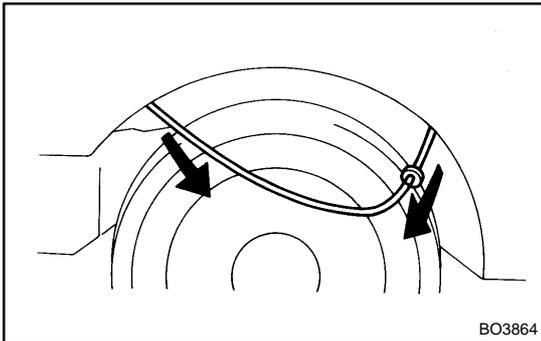

- (c) Pull off the cable from the front wheel housing to remove it.