


REMOVAL


1. REMOVE FRONT FENDER MOULDING

- (a) Using a hexagon wrench, remove the 2 screws.
- (b) Remove the clip.
- (c) Using a moulding remover, pry out the moulding.
- (d) Remove the moulding.

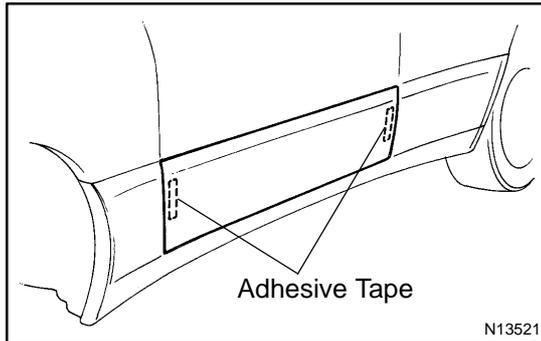


2. REMOVE FRONT DOOR OUTSIDE MOULDING

- (a) Remove the 2 screws and 2 nuts.
- (b) Using a moulding remover, pry out the moulding.
- (c) Pull off the moulding by cutting the adhesive with a knife.
- (d) Remove the moulding.

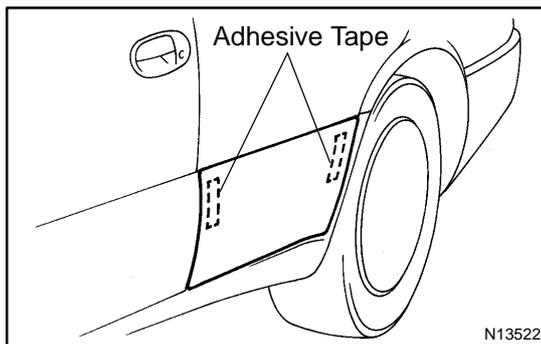

3. REMOVE REAR DOOR OUTSIDE MOULDING

- (a) Remove the 2 screws and 2 nuts.
- (b) Using a moulding remover, pry out the moulding.
- (c) Pull off the moulding by cutting the adhesive with a knife.
- (d) Remove the moulding.

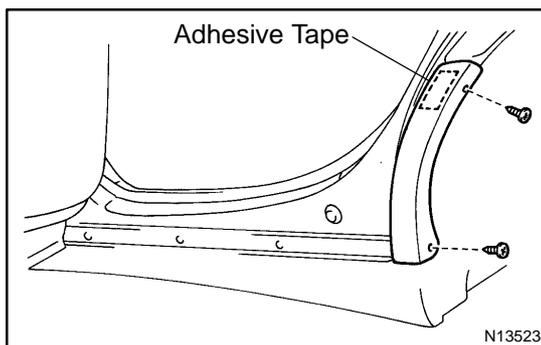

4. REMOVE QUARTER OUTSIDE MOULDING

- (a) Using a hexagon wrench, remove the 2 screws.
- (b) Using a moulding remover, pry out the moulding.