


## REMOVAL

### 1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the trim front cover of the luggage compartment.
- (b) Disconnect the speed sensor connector, and pull out the sensor wire harness with the grommet.

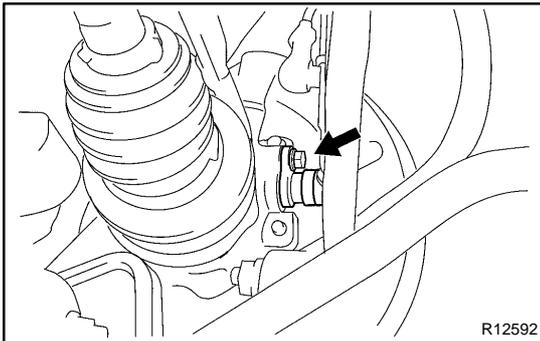

### 2. REMOVE SPEED SENSOR

- (a) Remove the 3 clamp bolts.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
- (b) Remove the 4 clamps from the upper arm and body.
- (c) Right wheel:  
Disconnect the pad wear indicator connector from the speed sensor.
- (d) Remove the speed sensor from the axle carrier.  
**Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)**