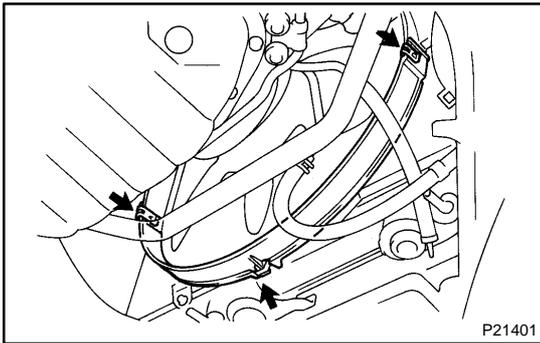


**REMOVAL**


1. REMOVE OIL PAN PROTECTOR
2. REMOVE ENGINE UNDER COVER
3. DRAIN ENGINE COOLANT
4. REMOVE BATTERY CLAMP COVER
5. REMOVE AIR CLEANER INLET
6. REMOVE RADIATOR RESERVOIR HOSE
7. DISCONNECT UPPER RADIATOR HOSE FROM RADIATOR
8. DISCONNECT LOWER RADIATOR HOSE FROM RADIATOR
9. DISCONNECT A/T OIL COOLER HOSES FROM RADIATOR

**10. REMOVE NO.2 FAN SHROUD**


- (a) Remove the 2 clips.
- (b) Disconnect the claw of the No.2 fan shroud from the hook of the No.1 fan shroud, and remove the No.2 fan shroud.

**11. REMOVE RADIATOR ASSEMBLY**

- (a) Disconnect the ECT switch connector for the A/C cooling fan.

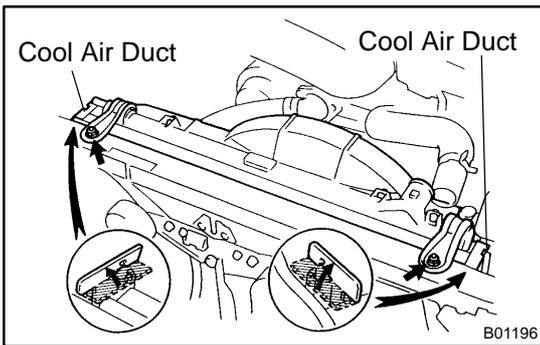

- (b) Disconnect the upper sides of the RH and LH cool air ducts.
- (c) Remove the nut and upper radiator support. Remove the 2 upper radiator supports.
- (d) Lift out the radiator assembly.
- (e) Remove the 2 lower radiator supports from the radiator.

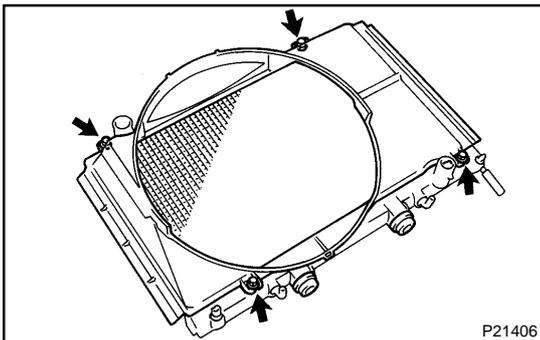**12. REMOVE NO.1 FAN SHROUD FROM RADIATOR**

Remove the 4 bolts and fan shroud.