

HEATER RADIATOR REMOVAL

AC00S-01

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

2. REMOVE THESE PARTS :

- (a) No.1 safety pad
- (b) No.1 under cover
- (c) No.2 heater to register duct

(See page [BO-83](#))

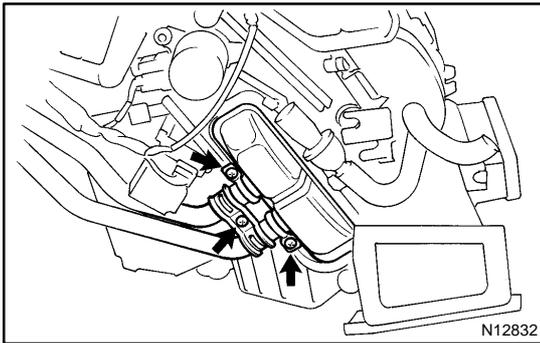

3. REMOVE HEATER RADIATOR

- (a) Remove the screw and clamp.
- (b) Remove the 2 screws, 2 clamps and disconnect the heater radiator pipes.
- (c) Pull out the heater radiator.
- (d) Remove the 2 O-rings.

HINT:

At the time of installation, please refer to the following item.
Do not reuse 2 O-rings.