

ELECTRONIC MODULATED AIR SUSPENSION SYSTEM

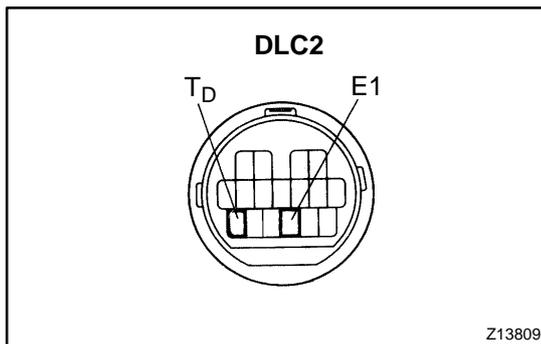
PRECAUTION

SA01K-01

HINT:

The Electronic Modulated Air Suspension is used in the LEXUS LS400.

Observe the following precautions strictly when performing operations on vehicles equipped with the Electronic Modulated Air Suspension.

**1. TURN IGNITION SWITCH OFF WHEN JACKING UP VEHICLE****NOTICE:**

If a vehicle is jacked up with the ignition switch ON (engine running), connect terminals T_D and E₁ of DLC2.

SST 09843-18020

2. REMOVE ALL ITEMS FROM UNDER VEHICLE BEFORE LOWERING JACK**NOTICE:**

When the jack is lowered, the vehicle is extremely low because the air in the pneumatic cylinder escapes.

3. ADJUST VEHICLE HEIGHT TO NORMAL CONDITION BEFORE MOVING VEHICLE**HINT:**

When the ignition switch is turned ON (engine running), the vehicle height is automatically adjusted to normal condition.