

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.


Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount : 700 ± 50 g (29.69 ± 1.76 oz.)

2. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all coolant.

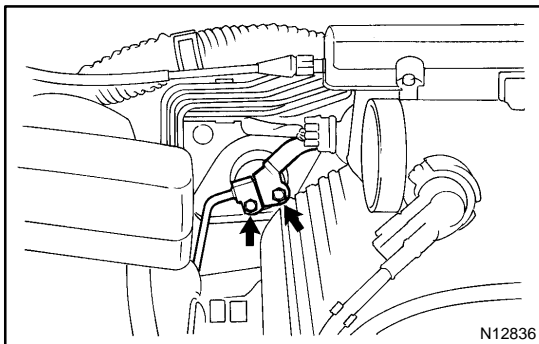

3. DISCONNECT LIQUID AND SUCTION TUBES

Remove the 2 bolts and disconnect the both tubes.

Torque: 10 N·m (100 kgf-cm, 7ft-lbf)


NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install the tubes.

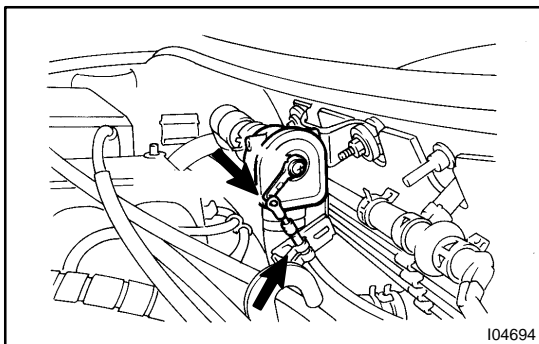


4. DISCONNECT WATER VALVE CONTROL CABLE

HINT:


At the time of installation, please refer to the following item.

After connection, adjust the control cable (See page [AC-63](#)).

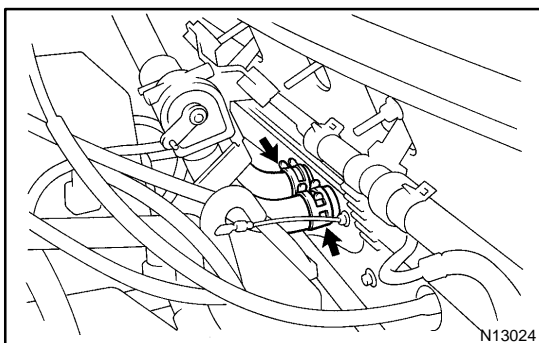

5. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- Using pliers, grip the claw of the hose clip and slide the hose clip along the hose.
- Disconnect the water hoses.

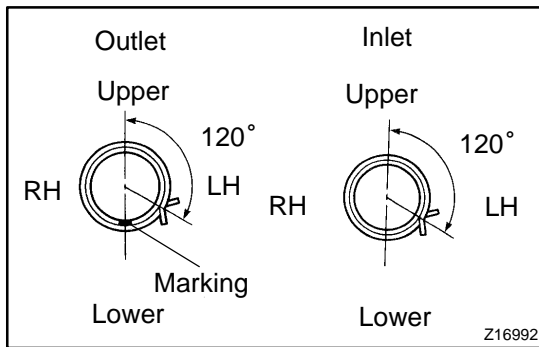**HINT:**

At the time of installation, please refer to the following items.

- Push the water hose onto the heater radiator pipe as far as second ridge on the pipe and install the hose clip.
- Install the hose clip in the position, as shown in the illustration.

6. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-83](#))

7. REMOVE BLOWER UNIT (See page [AC-31](#))

8. REMOVE A/C UNIT

- Disconnect the connectors.
- Remove the rear heater ducts.
- Remove the wire harness set bolts.
- Remove the 2 nuts, bolt and A/C unit.

