


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

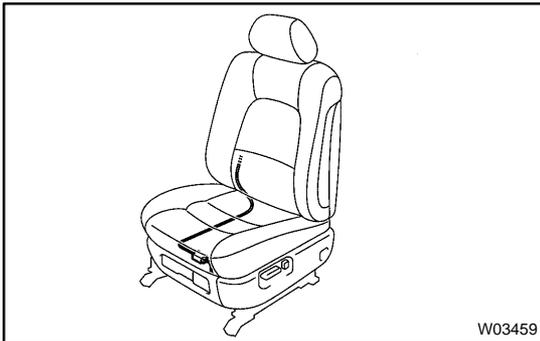


1. REMOVE FRONT SEAT

- Remove the bolt and seat belt lap outer anchor.
- Remove the 4 bolts.
- Disconnect the side airbag connector and power seat connector at the position shown in the illustration.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Remove the front seat.

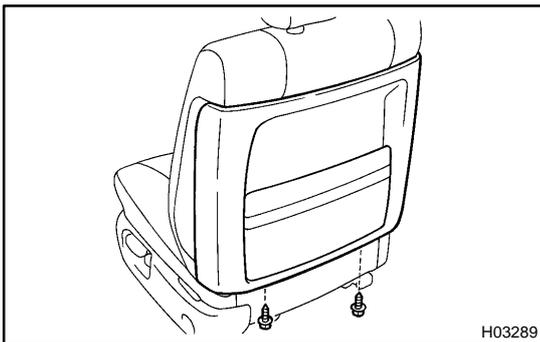


2. REMOVE FRONT SEATBACK BOARD

Remove the 2 screws and front seatback board.

3. w/o Power headrest: REMOVE HEADREST

While pushing the lock button, pull up the headrest to remove it.

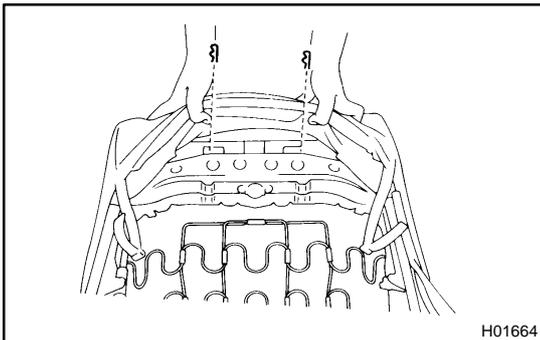


4. w/ Power headrest: REMOVE HEADREST

- Remove the hog rings from the seatback assembly.
- Using a screwdriver, remove the 2 pins shown in the illustration.
- Remove the headrest from the seatback assembly.

HINT:


After the headrest has been removed, install the pins to the adjuster temporarily.

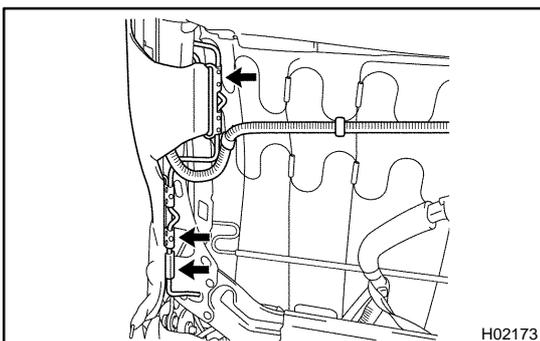


5. REMOVE SEATBACK ASSEMBLY

- Remove the 2 yellow hooks and a black hook at the position shown in the illustration.
- Remove the 2 clamps for wire harness of side airbag installed under the seat, then pull out the wire harness.
- Remove the side airbag connector from the bracket under the seat.

SUPPLEMENTAL RESTRAINT SYSTEM – SIDE AIRBAG ASSEMBLY

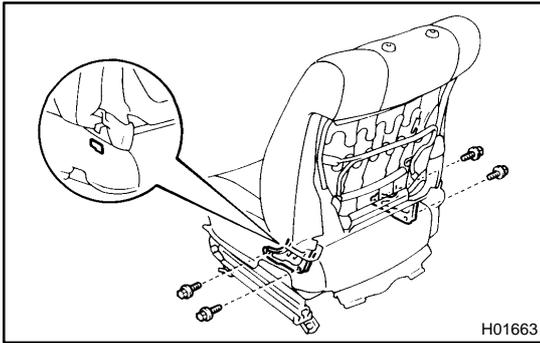

- (d) Remove the 4 bolts and seatback assembly.

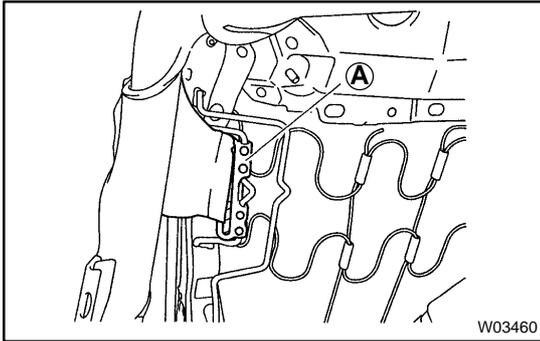

6. REMOVE SEATBACK COVER

- (a) Remove the hook.
The position shown in the illustration is made to be hold by installing the side airbag assembly with the hook shown as "A" hanged onto the seatback frame.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback frame from the seatback cover with pad.