


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace with new parts.

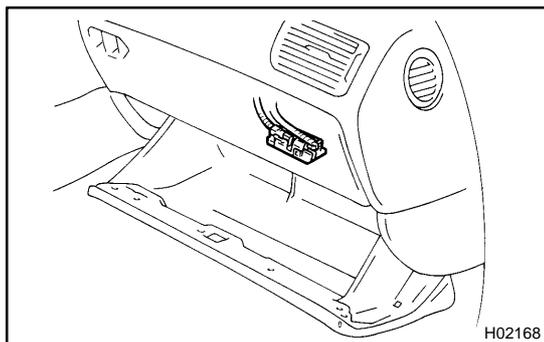


1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the glove compartment door finish plate inside the instrument panel box.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

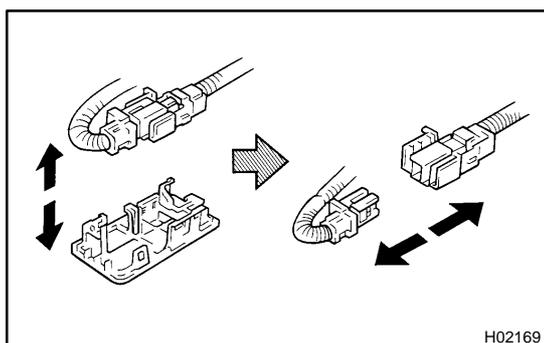

- (b) Pull up the connector.
 (c) Disconnect the front passenger airbag connector.

2. REMOVE INSTRUMENT PANEL

(See page [BO-79](#))

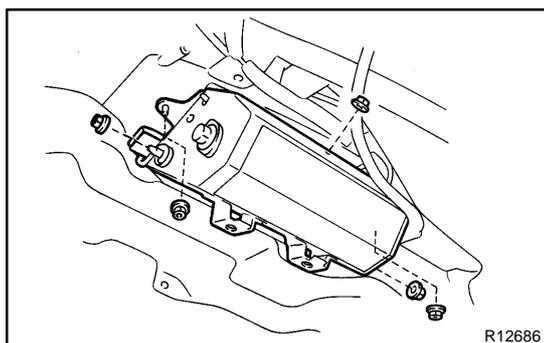

3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the No.2 side defroster nozzle.
 (b) Remove the 5 nuts, then remove the front passenger airbag assembly.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.