


## REMOVAL

### 1. REMOVE UPPER BRACKET GARNISH

Using a screwdriver, remove the garnish.

HINT:

Tape the screwdriver tip before use.

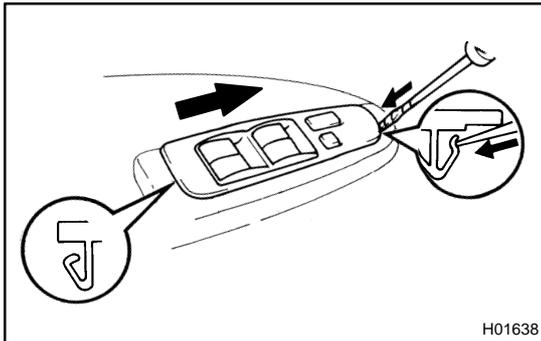


### 2. REMOVE ARMREST BASE PANEL

Using a screwdriver, remove the panel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

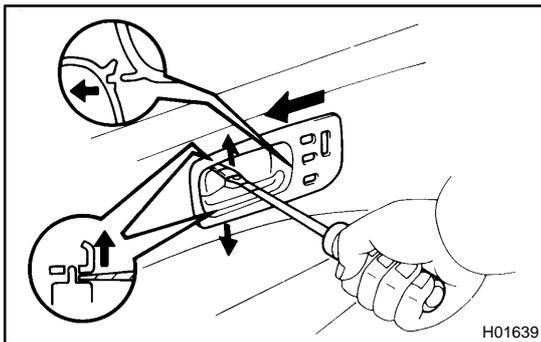

### 3. REMOVE INSIDE HANDLE BEZEL


(a) Using a screwdriver, pry outward where the handle and bezel meet.

HINT:

Tape the screwdriver tip before use.

(b) With the door handle in open position, remove the bezel as shown in the illustration.

(c) Disconnect the connector.

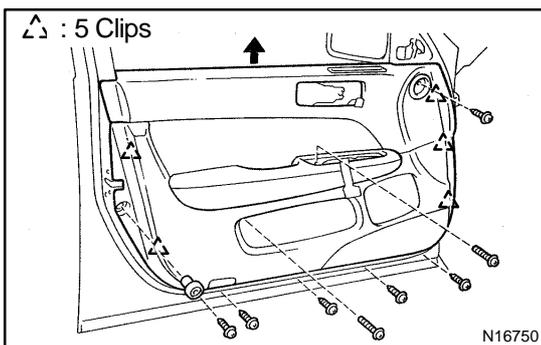

### 4. REMOVE DOOR TRIM

(a) Using a screwdriver, remove the courtesy light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.


(b) Remove the 8 screws.

(c) Insert a screwdriver between the door panel and door trim to pry the trim out.

HINT:

Tape the screwdriver tip before use.

(d) Pull the trim upward to remove the door trim.

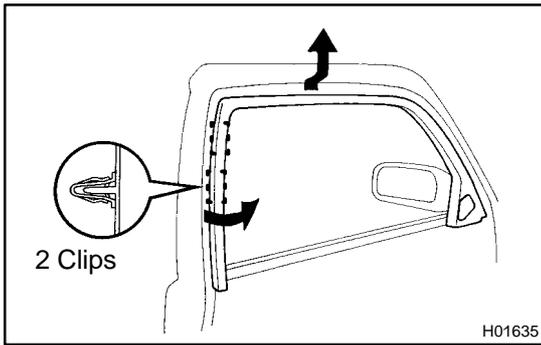**5. REMOVE DOOR FRAME GARNISH**

- (a) Remove the screw.
- (b) Twist the garnish toward the vehicle interior.
- (c) Pull the whole garnish upwards.

**6. REMOVE TWEETER SPEAKER****7. REMOVE OUTSIDE REAR VIEW MIRROR**

- (a) Disconnect the connector.
- (b) Remove the 3 screws and outside rear view mirror.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**