

INSTALLATION

- 1. INSTALL FUEL PRESSURE PULSATION DAMPERS**
Using SST, install 2 new gaskets, the rear fuel pipe and pulsation damper. Install the 2 pulsation dampers.

SST 09612-24014 (09617-24011)


Torque:

39 N·m (400 kgf·cm, 29 ft·lbf)

33 N·m (340 kgf·cm, 24 ft·lbf) for SST


HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81 in.).

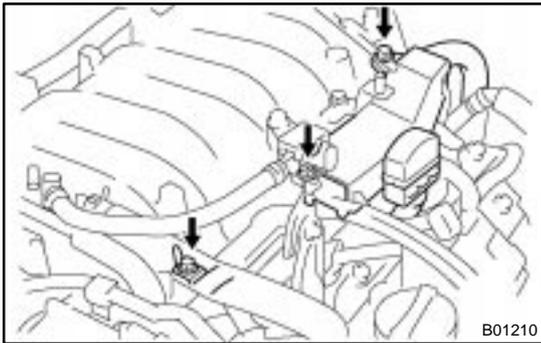

- 2. CONNECT ENGINE WIRE**

- Connect the engine wire with cover and wire clamp bracket with 3 bolts to intake manifold.

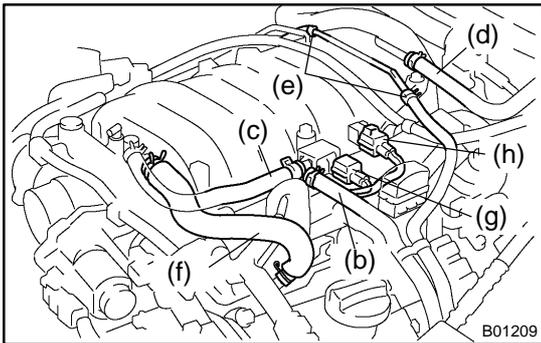

- Connect the EVAP hose (from the charcoal canister).
- Connect the EVAP hose.
- Connect the brake booster vacuum hose.
- Connect the 2 EVAP hoses.
- Connect the PCV hose.
- Connect the VSV connector for EVAP.
- Connect the noise filter connector.

- 3. CHECK FOR FUEL LEAKS (See page SF-1)**
- 4. CONNECT ACCELERATOR CABLE**
- 5. INSTALL V-BANK COVER**