


## ENGINE INSPECTION

### HINT:

Inspect these items when the engine is cold.


1. **REPLACE TIMING BELT**  
(See page [EM-15](#))
2. **INSPECT DRIVE BELT**  
(See page [CH-2](#))
3. **REPLACE SPARK PLUGS**  
(See page [IG-1](#))

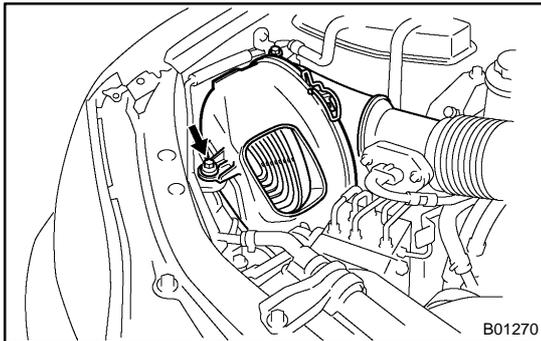

4. **INSPECT AIR FILTER**
  - (a) Remove the battery clamp cover.
  - (b) Remove the air cleaner inlet.
  - (c) Remove the air cleaner case and air filter.
  - (d) Visually check that the air filter is not excessively damaged or oily.

If necessary, replace the air filter.

- (e) Clean the filter with compressed air.  
First blow from the inside thoroughly, then blow off the outside of the filter.

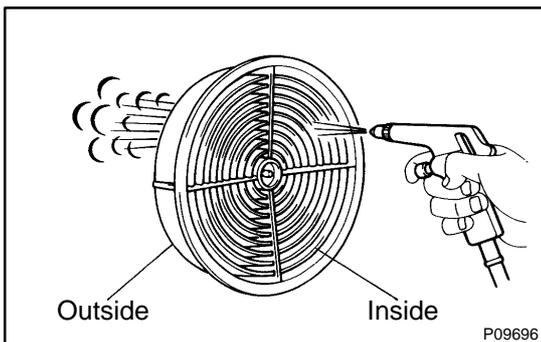

- (f) Reinstall the air filter and air cleaner case.
- (g) Reinstall the air cleaner inlet.
- (h) Reinstall the battery clamp cover.

5. **REPLACE AIR FILTER**

Replace the air filter with a new one.

6. **REPLACE ENGINE OIL AND OIL FILTER**  
(See page [LU-3](#))

7. **REPLACE ENGINE COOLANT**  
(See page [CO-2](#))

8. **INSPECT CHARCOAL CANISTER**  
(See page [EC-7](#))

9. **REPLACE GASKET IN FUEL TANK CAP**  
(See page [EC-7](#))

10. **INSPECT FUEL LINES AND CONNECTIONS**  
(See page [EC-7](#))

11. **INSPECT EXHAUST PIPES AND MOUNTINGS**

12. **ADJUST VALVE CLEARANCE**  
(See page [EM-4](#))