

INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Install the front passenger airbag assembly to the instrument panel.


CAUTION:

- Make sure that no foreign objects are trapped between the airbag bag, and within the module.
- Do not damage the strap when installing the module.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

- (b) Install the No.2 side defroster nozzle.

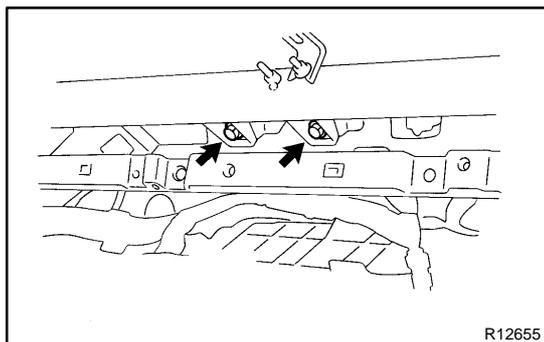

2. INSTALL INSTRUMENT PANEL


(See page [BO-90](#))

Install the 2 bolts to instrument panel reinforcement.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)


NOTICE:

- Make sure the front passenger airbag assembly is installed to the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully put out the airbag wire harness from the glove compartment upper hole.

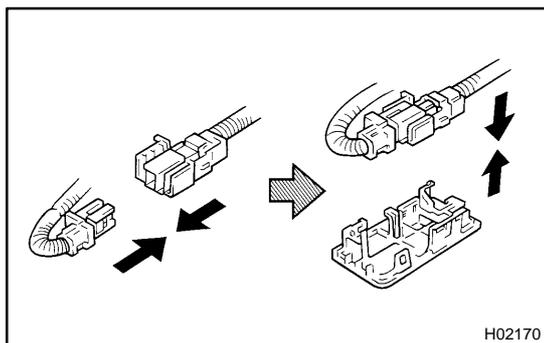

3. CONNECT AIRBAG CONNECTOR

- (a) Connect the airbag connector.

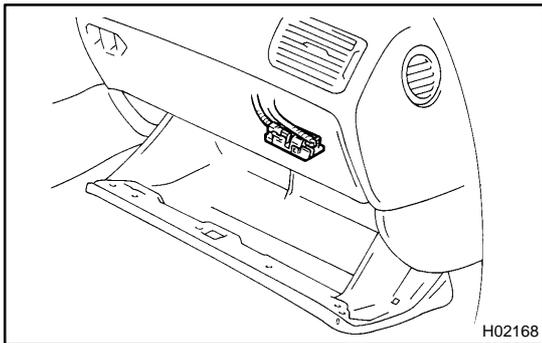

- (b) Put the connector on the glove compartment door finish plate.
- (c) Install the glove compartment door finish plate to the instrument panel box.