

# SEAT BELT PRETENSIONER REMOVAL

BOOPS-01

## NOTICE:

- If the wiring connector of the supplemental restraint system is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.

## 1. REMOVE THESE PARTS:

- Front door scuff plate
- Rear door scuff plate
- Center pillar garnish

## 2. REMOVE FRONT SEAT OUTER BELT

### CAUTION:

Never disassemble the front seat outer belt.

### NOTICE:


When removing the front outer seat belt, take care not to pull the seat belt pretensioner wire harness.

- Remove the bolts and floor anchor.
- Using a screwdriver, remove the anchor caps.

### HINT:

Tape the screwdriver tip before use.

- Remove the bolt and shoulder anchor.

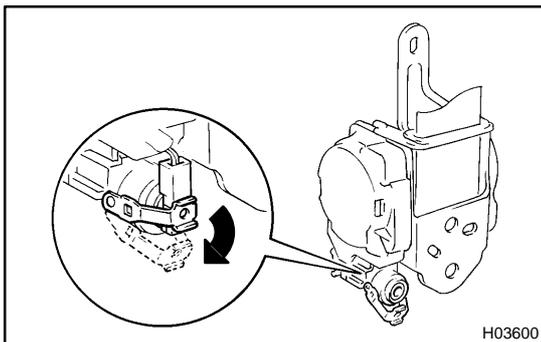

- Disconnect the pretensioner connector as shown in the illustration.
- w/ Seat Belt Warning:  
Disconnect the retractor switch connector.
- Remove the 2 bolts and front seat outer belt.