


## REMOVAL

Installation is in the reverse order of removal.


### 1. REMOVE COLUMN COVER

- (a) Remove the 3 screws.
- (b) Remove the column cover.

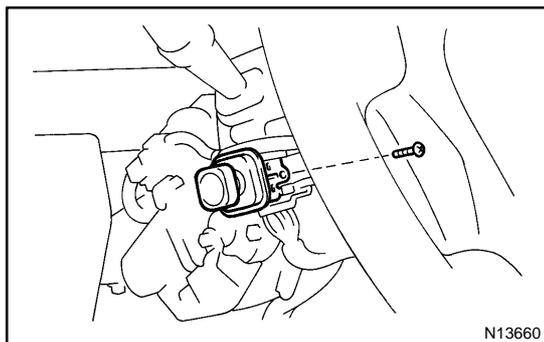


### 2. REMOVE POWER TILT AND TELESCOPIC SWITCH

- (a) Remove the screw.
- (b) Remove the power tilt and telescopic switch.

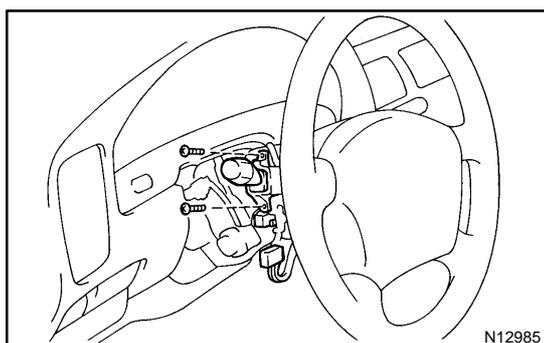


### 3. REMOVE LIGHT CONTROL SWITCH

- (a) Disconnect the light control switch connector.
- (b) Remove the 2 screws.
- (c) Remove the switch.

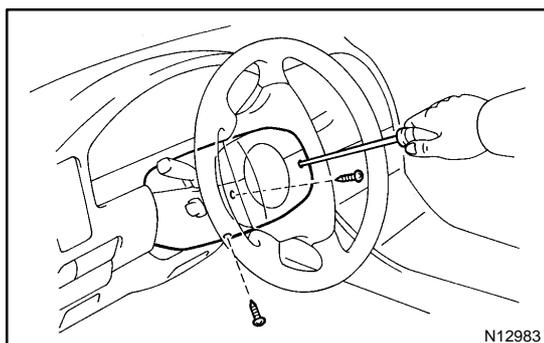

### 4. REMOVE COLUMN COVER

- (a) Remove the 3 screws.
- (b) Remove the column cover.

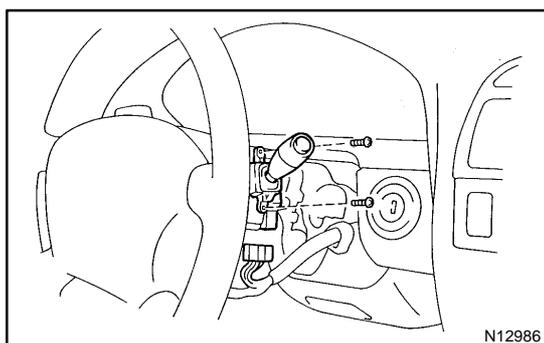

### 5. REMOVE WIPER AND WASHER SWITCH

- (a) Disconnect the wiper and washer switch connector.
- (b) Remove the 2 screws.
- (c) Remove the switch.