


## REMOVAL

### 1. REMOVE SEAT CUSHION ASSEMBLY


Remove the seat cushion assembly.

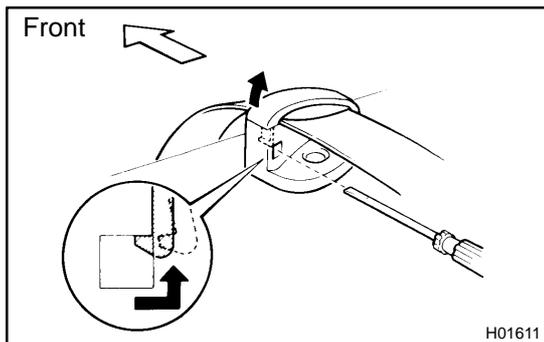

### 2. REMOVE SEATBACK ASSEMBLY

(a) Using a screwdriver, remove the rear seat belt from the belt guide as shown in the illustration.

(b) Remove the LH and RH headrests.

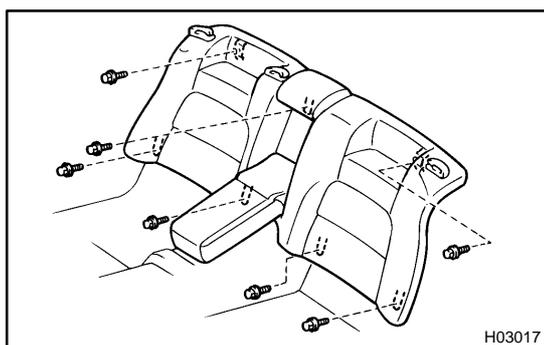

(c) Remove the 7 bolts, then raise the seatback assembly upward to remove the seatback assembly.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**