



REMOVAL

1. REMOVE FRONT ROCKER PANEL MOULDING


- (a) Remove the 8 clips.

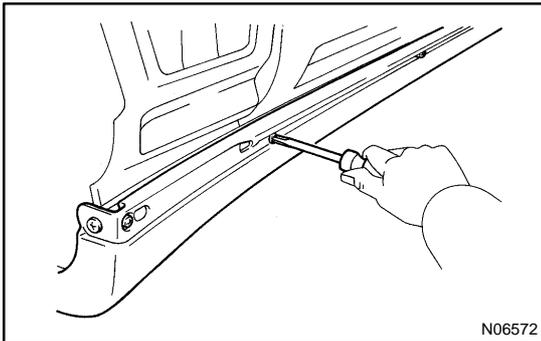

- (b) Remove the 6 screws.

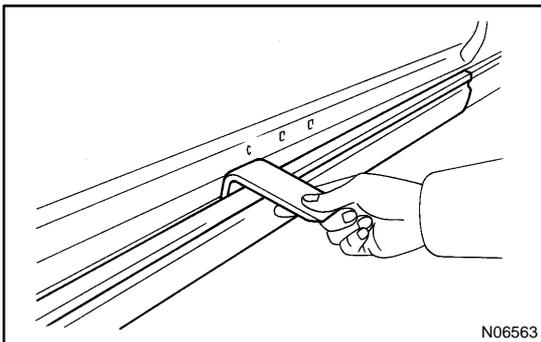


- (c) Remove the moulding remover, pull out the rocker moulding.
 (d) Remove the front rocker moulding.

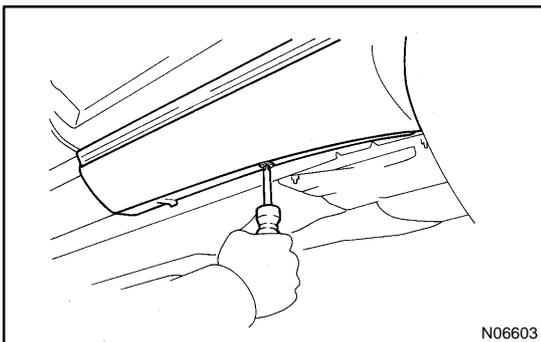


2. REMOVE REAR ROCKER PANEL MOULDING

- (a) Remove the 2 clips and No.5 protector.
 (b) Remove the 4 clips.

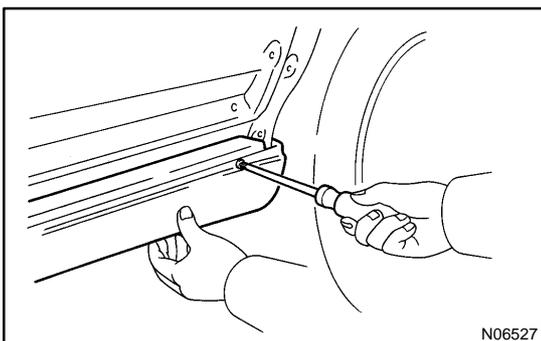

- (c) Remove the 2 screws and clip.

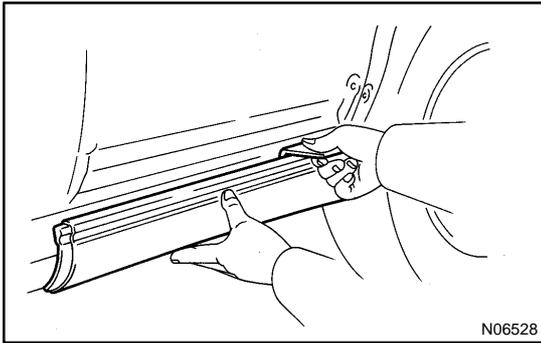

- (d) Remove the moulding remover, pull out the rocker moulding.
- (e) Remove the rear rocker moulding.