


INSTALLATION

1. INSTALL WIPER MOTOR AND LINK ASSEMBLY

- (a) Install the wiper motor cover.
- (b) Install the wiper motor and link assembly.
- (c) Connect the connector.
- (d) Install and torque the 4 bolts.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

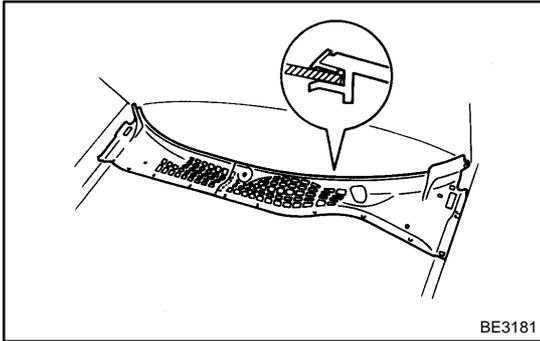

BE3181


2. INSTALL COWL LOUVER

- (a) Install the cowl louver.

HINT:

With the front side of the louver raised, install the protector on the glass, then push the louver down.

- (b) Install the hood to cowl louver weatherstrip.

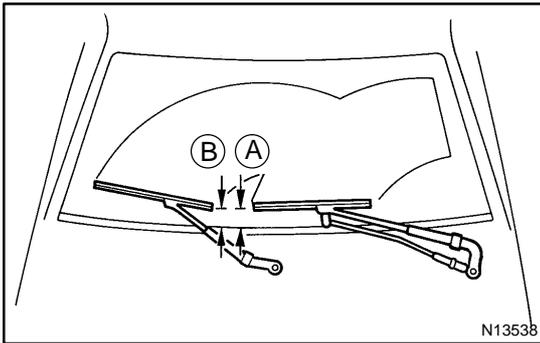

N13538

3. INSTALL WIPER ARM AND BLADE ASSEMBLY

- (a) Install the wiper arms and blades, and operate the wipers once and turn the wiper switch OFF.
- (b) Torque the sub arm stay set bolt.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

- (c) Adjust the installation positions of the wiper arms and blades to the positions shown in the illustration.

A: Driver's blade – Louver seal

Approx. 80.0 mm (3.150 in.)

B: Passenger's blade – Louver seal

Approx. 25.0 mm (0.984 in.)

- (d) Torque the nuts.

Torque: 22 N·m (225 kgf·cm, 16 ft-lbf)