


REMOVAL

1. DISCONNECT CONNECTOR

- (a) Remove the front fender moulding and fender liner.
- (b) Disconnect the speed sensor connector.

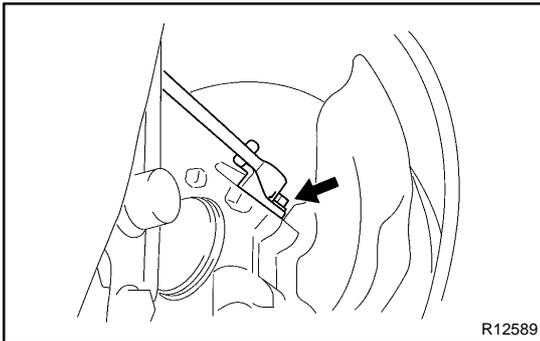

2. REMOVE SPEED SENSOR

- (a) Remove the 3 clamp bolts holding the sensor harness to the body and steering knuckle.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- (b) Right wheel:
Disconnect the pad wear indicator connector from the speed sensor wire harness.
- (c) Remove the speed sensor from the steering knuckle.

Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)