


ADJUSTMENT

1. ADJUST LUGGAGE COMPARTMENT DOOR


(a) Remove the 9 clips and trim.

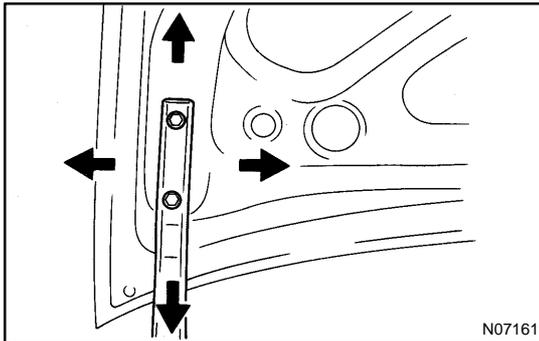

(b) For forward/rearward and left/right adjustment, loosen the bolts.

(c) For vertical adjustment of front end of the door, increase or decrease the number of washers between the hinge and door.

Torque: 11 N·m (115 kgf·cm, 8.3 ft·lbf)

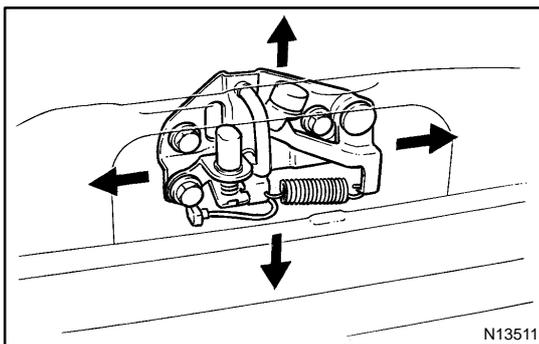

2. ADJUST DOOR LOCK STRIKER

Using a brass bar and hammer, tap the striker to adjust it.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)