


## INSTALLATION

Installation is in the reverse order of removal  
(See page AC-62).

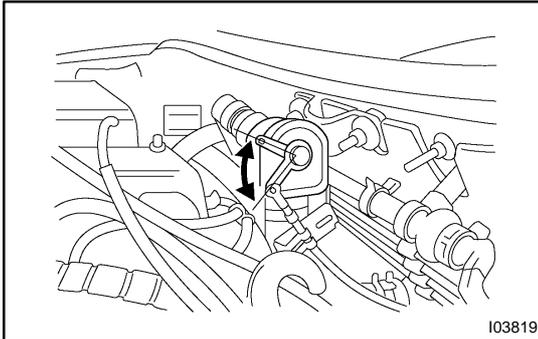


### 1. AFTER INSTALLATION, CHECK WATER VALVE OPERATION

- (a) Turn ignition switch to ON.
- (b) Operate temperature control switches to "MAX. COOL" and "MAX. WARM", then check that water valve operation, as shown in the illustration.

If operation is not as specified, next step.

### 2. ADJUST WATER VALVE CONTROL CABLE

- (a) Turn ignition switch to ON.
- (b) Disconnect the control cable.
- (c) Set temperature control switches "MAX. COOL".

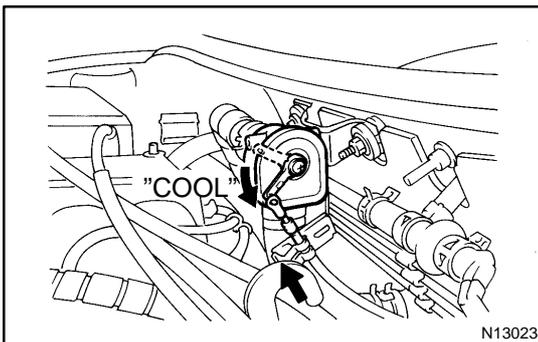

- (d) Set the water valve lever on "COOL" position, connect the control cable and lock the clamp.

#### HINT:

Lock the clamp while lightly pushing the outer cable in the direction, as shown in the illustration by an arrow.