

REMOVAL


1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 nuts and disconnect the both hoses.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

6. REMOVE DRIVE BELT
(See page [AC-15](#))
7. REMOVE ENGINE UNDER COVER

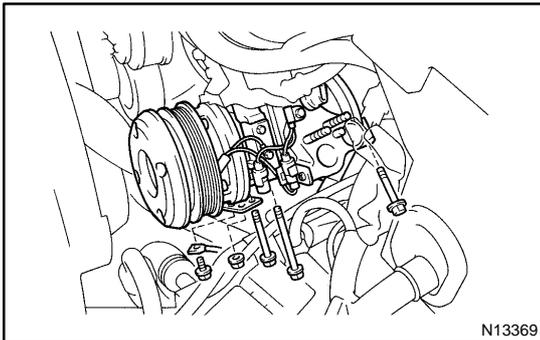

8. REMOVE COMPRESSOR
 - (a) Disconnect the connector.
 - (b) Remove the bolt and disconnect the earth wire.
 - (c) Remove the nut, the 3 bolts, compressor No.1 Stay and the compressor.